

STROBE W/ THUNDER

User Manual



GENERAL INFORMATION:

This product is one of home party series. It uses a xenon tube and can flash quickly and slowly according to the settings by adjusting knob. It is constructed of approved materials and is assembled in agency-inspected facilities. Follow all instructions in the user guide, and observe all warnings carefully for your further protection.

SPECIFICATIONS:

Power supply: 120Vac. 60Hz

Power consumption: 25W

1. Important Safety Instructions

- **WARNING:** RISK OF INJURY, DO NOT PLACE ANY ITEM ON ITS SURFACE
 - **DANGER:** TO REDUCE THE RISK OF ELECTRIC SHOCK: ALWAYS UNPLUG THIS UNIT FROM THE ELECTRICAL OUTLET BEFORE CLEANING
 - Before using this appliance, read and follow all warnings and instructions in this manual, even if you are familiar with this product.
 - It is advisable to keep this instruction manual for future reference
 - To protect against electric shock, do not immerse the unit, cord or plug, in water or other liquid.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - **CAUTION:** Never look directly at light source when in operation, especially persons who suffer from epilepsy as it may bring on an epileptic episode.
 - Do not leave the unit unattended when plugged in.
 - Unplug from power supply when not in use, before cleaning or changing the accessories.
 - Ensure the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
 - Never use any accessories or parts from other manufacturers or that have not been specifically made for this product. Your guarantee will become invalid if such accessories or parts have been used.
 - Do not operate any appliance with a damaged cord or plug or if the appliance malfunctions or has been damaged in any way.
 - If the mains cord of this appliance is damaged, it must always be replaced by a service centre authorized in order to avoid hazardous situations.
 - To disconnect – remove the plug from the outlet. Do not pull plug out by the cord.
 - Do not let cord hang over edge of table or counter, or come in contact with hot surfaces.
 - Do not place on or near a hot gas or electric burner or in a heated oven.
 - The surfaces of the unit may become hot. Avoid touching them.
 - Please open packing and inspect for any damage which may have been caused by transportation. If damage is present, do not use. Return to the supplier for replacement or repair.
 - Do Not use in humid, wet or dusty environments.
 - For indoor use only.
 - If moisture, water or fog liquid gets inside the housing, immediately unplug the unit and contact an qualified service centre for advice before using it again.
 - DO NOT store or use the appliance in or near high temperature areas.
 - Do not operate the Strobe Light without the front glass panel or if the front glass panel is broken.
 - Allow a free air space of at least 20cm around the sides and top of the unit.
 - Ensure there is a minimum distance of 50cm between the front of the strobe light and any object.
 - Do not connect the fixture to any dimmer pack.
 - Do not permit installation, operation or maintenance by unqualified persons.
 - Allow 20 minutes to cool down after removing the power plug before handling or packing away.
- ONLY** for domestic use. Industrial or commercial use invalidates the warranty.

FCC NOTE:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to the equipment. Such modification could void the user's authority to operate the equipment. This product may cause interference to radio equipment and should not be installed near maritime safety communications equipment or other critical navigation or communication equipment operating between 0.45-30MHz.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

2. Components



- 1 Mounting Bracket Screw Knob
- 2 Strobe Light Globe and Reflector
- 3 Mounting Bracket
- 4 Strobe Flash Frequency Adjuster Knob
- 5 On / Off Switch

3. Operation

Remove all packing materials and check that there are no foam and plastic packaging left on the unit.

- Ensure the On / Off switch on the back is in the "0" Off Position.
- Plug in to the mains power point and turn on.
- Switch the On / Off switch to the "I" On position and the strobe will start immediately.
- You can adjust the rate of flash by rotating the adjustment knob on the back of the strobe light body.
- DO NOT stare into the light when in use.
- DO NOT touch the glass front.

4. User Maintenance

WARNING: The plug must be removed from the power socket before any maintenance.

- The light globe **IS NOT** replaceable.
- The unit must be kept by dry.
- Clean exterior with a dry cloth only.

Read and Save These Instructions