




LANCHIYA®

USER MANUAL

MK70

 **Customized Vacuum Tube Bluetooth®**
Wireless & Bluetooth® Streaming for all your digital multi-media devices.

PROPERTY RIGHTS INFORMATION:

The trademark amethyst®lanchiya® and all the developed products with this label are registered patents, and belong to Foshan LANCHIYA digital Technology Co., Ltd. Our company reserves all rights, and not allow reprinting. Other concerned trademarks all belong to their proprietors. As to the constant update and development of the products, our company reserves the right to change and rework our products without notice.

SAFTY INSTRUCTION

To ensure your safety and enjoyment, please read and follow the safety instructions.

WARNING:

- To prevent any fire or electrical hazards, do not disassemble this product.
- Do not expose the speaker to rain, water, moisture.
- Do not place liquid on or close to the speaker.
- Do not expose the speaker under blazing sun for a long time.
- Do not place the speaker on or near the fire.
- Keep away from heat and dust.
- Place the speaker on a stable and level platform.
- Do not place heavy items on top of the speaker.
- Do not use excessive force when pressing the buttons on the speaker.
- Do not attempt to pull the adaptor cable when removing it from power outlet.
- Do not use damaged or defective cables.
- Clean with a soft damp cloth only.
- Adjust the volume to the suitable level in order to avoid harming your hearing sense or damaging the audio system.
- Turn off the speaker and remove the cable from the power outlet when you don't use the speaker.
- Location of Label is at the bottom of product.
- Use only power supplies listed in user manual.

ation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. The antenna (s) used for this transmitter must be installed and operated to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter. Installers must ensure that 20cm separation distance will be maintained between the device (excluding its handset) and users.

"batteries shall not be exposed to excessive heat such as sunshine, fire or the like." "the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus."

"CAUTION


Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type." where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable

FCC ID: P4LMK700020

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


Manufacturer: Foshan LANCHIYA Digital Technology Co., Ltd China
Address : hongtu RD, Songxia Industry Park, Songgang
Nanhai District, Foshan, Guangdong Province, China

※ Package Contents

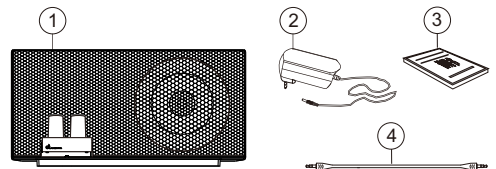

1. Speaker X1 2. AC Adaptor X1 3. User Manual X1
4. Aux Cable X1

※ Control Panel Instruction

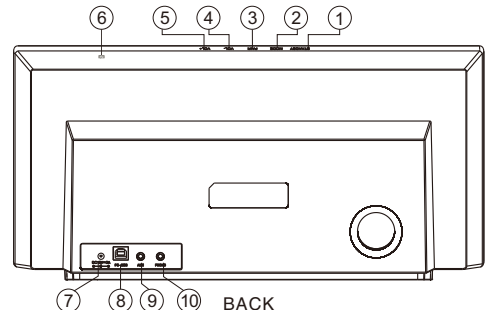

1. STANDBY 2. MODE 3. PAIR 4. VOLUME- 5. VOLUME+
6. NFC 7. DC IN 8. PC-USB 9. AUX 10. PHONO

※IV. Trouble shooting

- If the speaker can't be found under Bluetooth channel, it may be connected to another device. Remove the speaker from any other devices and try again. If the speaker still can't be found, it can be turned off for 5 seconds and be restarted.
- Bluetooth signal is intermittent or becomes no signal: check whether the mobile is within the effective communication distance--30 feet without obstacles. Beyond the effective distance, the Bluetooth signal will be intermittent. It may also lead to intermittent Bluetooth signal that too many apps are running in the mobile so that the system responds slowly. While playing the online music, the signal may become intermittent because of the slow internet speed.
- If your Bluetooth device can search and find many other Bluetooth devices, please choose the speaker MK70 to pair after the Bluetooth device finishes searching.
- Make sure that your Bluetooth device has NFC function, NFC is on, and the screen of the Bluetooth device is unlocked.
- If the Bluetooth device can't be connected to NFC, please check whether the speaker is at Bluetooth channel. Press the button PAIR to make it enter pairing status.
- If the Bluetooth connection has failed several times, turn off the speaker and wait for 3 minutes before restarting it, or restart the mobile and try again.

V. Brief Instructions:

1. Connection

Connect the power through plugging the output end of the adaptor to the DC input port of the speaker, and the other end to AC power outlet.

1.2). Bluetooth quick connection through NFC.

- Select BT mode by touching the button [MODE] . If there is no audio cable connecting with the speaker, the default mode is Bluetooth.

P3

3). PHONO mode(purple indicator light)

- Select Phono mode by touching the button [MODE], and the purple indicator light will be on. Connect the MM type turntable with the speaker through an audio cable with good shielding performance, one end connecting the 3.5mm PHONO input port at the back of the speaker and the other end connecting the turntable output port.
- Turn on the turntable and play the music. Adjust the volume appropriately to enjoy music.

4). PC-USB Mode(blue indicator light)

- Select PC-USB mode by touching the button [MODE], and the blue indicator light will be on. Connect the USB cable to the USB port of the computer, and the computer will install the driver automatically. After the installation, Open the software player to play music, video etc.
- Adjust the volume appropriately to enjoy the music from the computer.

4. Definition of the function button or port

4.1 STANDBY

4.1.1 POWER ON

Plug the power adaptor into the power outlet(AC100-240V), and plug the DC power end into the DC12V ,3A input port at the back of the speaker. Touch the button [STANDBY] on the top of the speaker, and then the vacuum tube and the power indicator light will be on. The speaker starts to work.

4.1.2 POWER OFF

Touch the power button[STANDBY] again , and the speaker will stop working.

4.2 MODE

Touch the button [MODE] to select different modes(Based on that the music source connects the speaker in all channels). The indicator light has a different indicator color for each mode.

Bluetooth mode : Green Light

AUX mode : Red Light

PHONO: Purple Light

PC-USB mode : Blue Light

P5

2.Power-on operation

Turn on the speaker by touching button [STANDBY] . The vacuum tube and power indicator light will be on, and the speaker starts to work.

3.Mode-choice operation

1). Bluetooth mode(green indicator light)

1.1). Connect Bluetooth by hand.

Touch the button [MODE] and select Bluetooth mode. Press [Bluetooth symbol] to enter the pairing status. If there is no audio cable connecting with the speaker, the default mode is Bluetooth.

Search the speaker (MK70) with your mobile phone and connect it. Play the music and adjust the volume appropriately to enjoy music.

1.2). Bluetooth quick connection through NFC.

- Select BT mode by touching the button [MODE] . If there is no audio cable connecting with the speaker, the default mode is Bluetooth.
- Turn on the NFC and Bluetooth function of the mobile phone.
- Touch the button [Bluetooth symbol] on the speaker panel to make sure that the speaker is in the pairing status.
- Move the NFC antenna position of the mobile close to the NFC sensor position on the left back of the speaker.
- The mobile phone detects the speaker, and a confirmation message pops up. Click to confirm and connect.
- The mobile phone detects that there is a pop-up confirmation matching window for mk70, click to confirm and connect.

2). Aux mode(red indicator light)

- Select Aux mode by touching the button [MODE] , and connect the audio cable to the 3.5mm audio input port on the backside of the speaker.
- Play the music , and adjust the volume appropriately to enjoy music.

P4

4.3 BLUETOOTH

In Bluetooth mode, touch the button [Bluetooth symbol] to make the speaker enter the pairing status, and then connect the mobile and the speaker through NFC quick connection or Bluetooth in hand.

4.4 VOL-

Touch the button [VOL-] to reduce the volume.

4.5 VOL+

Touch the button [VOL+] to increase the volume.

The port on the backside:

6.3 PHONO : 3.5mm audio cable input port. It can connect MM type turntable output.

4.7 AUX : 3.5mm audio cable input port.

4.8 PC-USB : PC sound card input port. Connect the computer through this port and play the music from the computer.

4.9 DC IN : Power input port. Plug the DC end of the adaptor to this port.

5.SPECIFICATIONS:

Amplifier output power: Right/Left 6W×2 (RMS),
Bass 25W×1 (RMS)

Amplifier input sensitivity : ≤1%

Amplifier input sensitivity : ≤775mV

SNR: ≥80dB

Frequency response range: 65Hz-20KHz

Input voltage: DC12V --- 3A

Adaptor voltage range: AC100-240V 50/60Hz

Bluetooth: V5.0+EDR

Bluetooth Communication frequency : 2.4GHz

Bluetooth communication distance: 7-10 meters.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular install

P6