

## Caller ID Watch

Congratulations on your purchase of the Caller ID watch with Bluetooth® wireless technology.

 
With the Caller ID watch you are notified when your phone rings and when you receive a text message. A previously saved name or number of the caller is displayed and you can mute or reject incoming calls.\*

You can also use the watch to keep track of time and date in the phone.

The watch is waterproof down to 30 meters.

\*Visit [www.fossil.com](http://www.fossil.com) or [www.abacuswatches.com](http://www.abacuswatches.com) for an overview of which phone models support the Caller ID watch. Not all phones will allow the functionalities listed above.

## Watch Overview

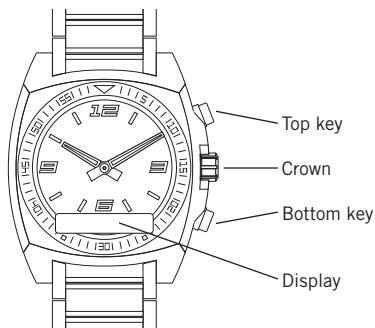

## Icons

### Status icons

	Incoming call
	Incoming phone call muted in the phone
	Message received
	Bluetooth® function on, no connection to phone
	Bluetooth® function on, watch connected to phone
	Bluetooth® function connecting
	Bluetooth® function off
	Battery level low, Bluetooth® function off
	Battery level
	Battery charging
	Pairing succeeded
	Watch is out of range of the phone, or connection cannot be established
	Watch in pairing mode

### Setting icons

	Bluetooth® function on
	Bluetooth® function off
	Message notification on
	Message notification off
	Out of range notification on
	Out of range notification off
	Start pairing mode

## Getting Started

### Kit content

Before you start using the watch, make sure the following items are in the box:

- AC charger
- Charging clip
- The Caller ID watch




### Charging

Make sure your watch battery is fully charged.

Minimum charging time is 3 hours by AC power.

*If the battery does not work properly it needs to be replaced by an authorized service center.*


### To charge the battery


1. Connect the battery charger plug to the charging clip with the symbols on the charger and clip facing in the same direction.
2. Connect the charging clip to the watch by opening the clip and sliding it over the watch. Make sure that the contact pins of the cradle are connected to the hole/gap on the back of the watch.
3. Connect the battery charger to the mains. The  appears. Wait approximately 2 hours or until the battery icon indicates charging is complete.
4. Pull out the charger plug.

Under normal conditions, you should be able to use the watch for at least a week if the battery is fully charged.

### Setting the time

#### To set the time

Gently pull out the crown  and rotate it to set the time. Push the crown back in when the time is set.

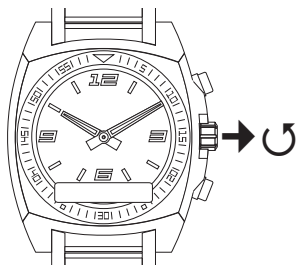


### The Bluetooth® function


The Bluetooth® function makes wireless connection to your phone possible.

 
The first time you turn the Bluetooth® function on, the watch enters pairing mode.


You should turn the Bluetooth® function off, in sensitive areas like airplanes or hospitals.

 If the battery level is low, the Bluetooth® function is automatically turned off. Turn the Bluetooth® function on again when the battery is fully charged.

#### To turn the Bluetooth® function on


Press and hold the bottom key.  appears.

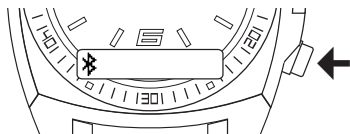


 The first time you turn the Bluetooth® function on, the watch enters pairing mode. If you want to exit the pairing, press and hold the bottom key.

### **To turn the Bluetooth® function off**

 Press and hold the bottom key.  appears.

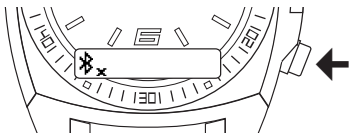

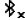

### **To check if the Bluetooth® function is on**

Press the bottom key. If  shows, press the top key to turn the Bluetooth® function on.

## **Pairing Mode**

Your watch has to be paired with your phone before you can use it. Follow instructions in the phone's user guide on how to turn Bluetooth® on in the phone.

### **To set the watch to pairing mode**

Press the bottom key four times to select pairing mode  and then press the top key. The  icon appears.

### **To pair your watch with a phone**

1. Turn Bluetooth® function on in your phone.
2. Turn the Bluetooth® visibility on in your phone. This makes your phone visible to other Bluetooth® devices.
3. Turn the Bluetooth® function on in your watch.
4. Turn the pairing mode function on in your watch.
5. Prepare your phone according to the phone's user guide on how to pair a Bluetooth® device.
6. For some phones you may need to enter a passcode. The default passcode is 0000.

After you have paired your watch with a phone, the watch will automatically connect to the phone as soon as the phone is on and within range.

If the pairing is successful, the pairing icon appears and the watch vibrates.



If the pairing fails, you need to set the watch to pairing mode, and repeat step 5.

## **Using Your Watch**

### **Settings**

Settings are shown as icons in the display.

### **To enter the settings menu**

Press the bottom key.

### **To turn a setting on or off**

1. Press the bottom key repeatedly until the setting is highlighted.
2. Press the top key to turn the setting on or off.

 
### **Calls**

When the phone rings the watch vibrates and a previously saved name or number of the caller is displayed.\* You can mute or reject the call by pressing the top key.

*\*The information displayed will vary depending on your phone model.*


### To mute an incoming call

Press the top key.

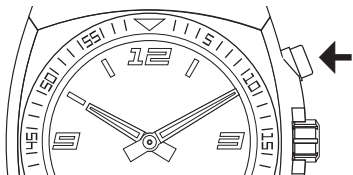


### To reject an incoming call

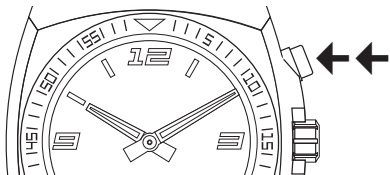 

Press the top key twice.





## Text messages

When message notification is on, the watch vibrates and the  appears when you receive a text message. If you have unread messages in your phone inbox, you will not get additional notifications when you receive new text messages.

### To turn message notification on

1. Press the bottom key repeatedly to select .
2. Press the top key.  appears.


### To turn message notification off

1. Press the bottom key repeatedly to select .
2. Press the top key.  appears.

## Battery status

### To check the watch battery status

Press the top key.

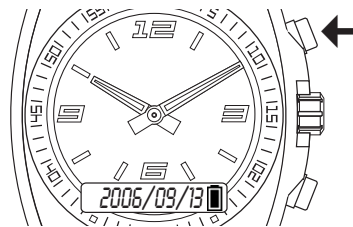

## Date


### To check the phone date

Press the top key once. The watch battery status is also shown.


## Time

### To check the phone time

Press the top key twice. The phone time, watch battery status and Bluetooth® function status are also shown.

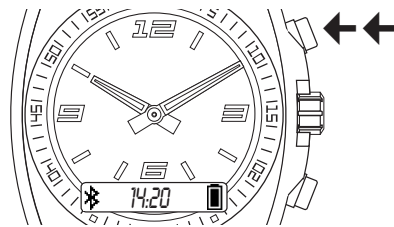

## Out of range

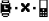

The watch vibrates and the  icon appears when the phone is out of range.

The watch continues searching for the phone for 30 minutes.



*We recommend that your watch and phone are within a range of 2 meters. The connection may be improved if there are no solid objects between your watch and phone.*

### **To turn out of range notification off**

1. Press the bottom key repeatedly to select .
2. Press the top key.  appears.
3. Repeat to turn the notification on again.

## Phone settings

If the phone is out of range of your watch, you are asked if you would like to reconnect again. You can choose between “Always ask” and “Always allow” in your phone.

### **“Always ask”**

If you choose “Always ask,” you will always be asked if you would like to reconnect each time the watch and the phone are within range.

### **“Always allow”**

If you choose “Always allow,” the watch automatically reconnects to the phone each time they are within range of each other.

## Master reset

Set the watch back to factory default settings and delete the changes you have made to the settings.

### **To reset the watch**

1. Enter pairing mode.
2. Press and hold the top and bottom key until the display lights up. After a few seconds it dims again and your watch is reset.

## Troubleshooting

### **Battery capacity**

If the battery does not work properly it needs to be replaced by an authorized service center.

### **Software version**

#### **To check software version:**

1. In pairing mode, press the bottom key 5 times.
2. To stop checking software version, press top key twice. Ignore pairing request in the phone.

### **Dashes on the display**

If dashes (- -) appear on the display when you press the top key, pair your watch with the phone again.

### **Pairing with Dial-Up Networking**

For some phones you may receive a message about dial-up networking. If this happens, press “Yes” to continue.

## **Declaration of Conformity**

**We, Fossil Partners LP of  
2280 N. Greenville Road  
Richardson, TX 75081**

declare under our sole responsibility that our product

### **Caller ID Watch**

to which this declaration relates is in conformity with the appropriate standards EN 300 328, EN 301 489-17, EN 301 489-7 and EN 60950 following the provisions of Radio Equipment and Telecommunication Equipment directive 1999/5/EC with requirements covering EMC directive 89/336/EEC and Low Voltage directive 73/23/EEC.

Richardson, TX September 2006.



Bill Geiser, V.P. Watch Technology

## **FCC and IC Statements**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept harmful interference received, including interference that may cause undesired operation. Compliance Statement (Part 15.19)

### **Warning (Part 15.21)**

Changes or modifications to this product that are not expressly approved by Fossil may void your authority to operate the watch.

### **Industry Canada Statement per Section 4.0 of RSP-100**

The term "IC:" before the certification / registration number only signifies that the Industry Canada technical specifications were met.

### **Section 7.1.5 of RSS-GEN**

Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation.

### **Section 2.6 of RSS-102**

This portable transmitter with its antenna complies with Industry Canada RF Exposure Limits for General Population / Uncontrolled Exposure.

### **FCC Interference Statement [Part 15.105(b)]**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This portable transmitter with its antenna complies with FCC's RF exposure limits for general population / uncontrolled exposure.