

 
Content

<p>Note.....1</p> <p>Overview</p> <p>Player overview.....2</p> <p>LCD overview.....3</p> <p>Earphone overview.....3</p> <p>Features.....4</p> <p>Technical Spec.....5</p> <p>Operational Notes.....6</p> <p>OPERATION NOTES</p> <p>Battery? Turn on or off.....8</p> <p>Three Modes.....9</p> <p>Operation Notes.....10-12</p> <p>Advanced function</p> <p>Music.....15</p> <p>Voice.....15-16</p> <p>FM tuner.....17-18</p> <p>Settings.....19-21</p> <p>Erase Files.....22</p> <p>About /Exit.....23</p> <p>Communication with Computer</p> <p>Connection.....25</p> <p>Driver Installation.....26</p> <p>Download Music Files.....27</p> <p>Disconnect from PC.....28</p> <p>Formatting.....28</p>	<p>General Questions.....29</p> <p>Menu Summary Chart.....30</p> <div style="border: 1px solid black; padding: 10px; margin: 10px 0;"> <p>Thanks for choosing FOXDA' s MP3 player, please read through this user manual before using our MP3 player ,so you can enjoy this quality product and aware of some precaution. We wish our product could satisfy you. We appreciate any suggestion on our product.</p> </div> <div style="border: 1px solid black; padding: 5px;"> <p>Warning This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:(1)this device may not cause harmful interference,and(2)this device must accept any interference received,including interference that may cause undesired operation.</p> </div>
---	---

2

OVERVIEW

MP3 player with removable USB flash disk function, fashionable design, easy operation.
Excellent for enjoying Mp3 music and voice recording, with segment repeat capability.

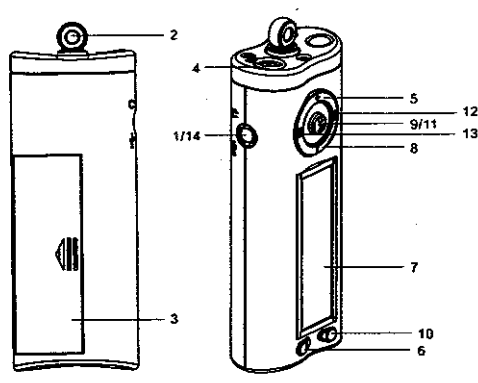


Player overview

1. EAR PHONE SOCKET
2. HANGING STRAP
3. BATTERY LID
4. INTERNAL MIC
5. VOL+
6. A-B/EQ
7. LCD PANEL
8. VOL-
9. PLAY
10. MENU
11. STOP
12. FF
13. RW
14. USB port


Note: Press Buttons 6 & 10 together to serve as "Hold" key.

3

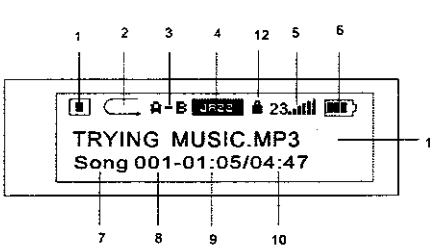

LCD overview

1. Playing state
2. Playing mode
3. Repeat A-B display
4. Equalizer Mode
5. Volume
6. Battery power level
7. Function
8. Song Number
9. Current Music playing time
10. Total playing time
11. Song's informations
12. Holding state

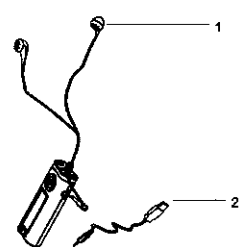

Earphone overview

1. Ear phone
2. USB cable

Accessories

1. USB cable
2. Ear phone
3. User Manual
4. CD-ROM
5. Hanging Strap

Features

- Play back Mp3/WMA multi-format files.
- Six equalize modes :Normal, Class, Jazz, Pop, Rock, DBB.
- LCD display with blue light background.
- A-B segment repeat function.
- 10 hours recording time (for 128Mmemory model).
- Connect to computer using USB cable at 12MB full speed.
- Low power consumption, 12hrs play back time with a single AAA alkaline battery .
- No driver required for windows me/2000/xp(except windows 98)
- Compact and light weight ,stylish design.
- Support multi- languages.

TECHNICAL SPECIFICATIONS

SIZE (L x W x H)	86x31x18.2mm
WEIGHT	29 g
POWER	AAA BATTERY x 1
DECODE	ISO11172-3(MPEG1.0 Layer 3), ADPCM
BIT RATE	64Kdps-320Kdps
SAMPLING FREQUENCY	8KHz-48KHz
FREQUENCY RANGE	20Hz-20KHz
DISTORTION	0.1%(at 1KHz)
SNR	>80db with 20KHz LPF
MP3 sound track separation	>80db
MP3 dynamic range	>93db
RECORDER LENGTH	16bit
USB TRANSFER SPEED	12Mbps
DATA READ/WRITE SPEED	4Mbps
POWER OUTPUT	>5mW per channel

Operational Notes

- If the Mp3 player will not be used for a prolonged period of time, please remove the battery to avoid possible damage caused by chemical leakage.
- The Mp3 player should be kept in areas free from extreme temperature changes, moisture and dust.
- Set the HOLD switch to release position before operation.
- Do not drop the player, which may cause battery fall off or damage its surface.
- Battery life may vary with different usage condition, manufacturer and manufacture date.
- Please change the battery under following conditions :
 1. When the Mp3 player displays a "Low Battery" warning and then shut down itself.
 2. All buttons give no response and are not working even after the battery is taken out and reinstalled.
- To avoid static electricity damage, avoid operating the Mp3 player in extremely dry environment whenever possible.
- If the player stops running under proper operation, please reset it by taking out battery.
- Do not use a Mp3 player when riding bicycle or driving .


OPERATION NOTES

FOXDA

OPERATION NOTES 8


Install battery

Open the battery compartment, insert an AAA size battery with the polarity as indicated.



Change battery

When battery is exhausted, machine display as illustrated, you must replace the Battery. It is recommended that you should turn off the machine before changing new battery.



Turning the power on/off

Press the PLAY/STOP button to turn on the Mp3 player. The LCD will show the "WeWa" logo. The backlight will glow for a few second, depending on user setting.

Pressing PLAY/STOP button continuously until "Power OFF" appears on LCD screen and blank out. It's safe to replace battery only when the Mp3 player is off.

The player can auto turn off if no operation for a certain period, depending on user setting. You can also disable this auto-off function if desired. (Reference page: 20)

FOXDA


power off

OPERATION NOTES 9

Function & Setting


Music Playing, Voice Recording & Playback, Radio Function

Press "menu" to select music mode, press "menu" to confirm playing music (player will resume music playing mode if no button pressed after 5 second), LCD will display music mode as :




MUSIC mode

Press "menu" button into music mode, press "+" button to scroll voice mode and press "menu" button to confirm choice. Use same sequence to go back from "voice mode" to "musicmode". LCD display voice mode as:

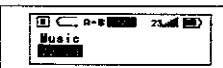

VOICE mode

Press "menu" button into music mode, press "+" button two times to go to FM Tuner mode. Press "menu" to confirm. LCD display for FM Tuner mode as :

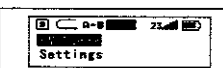


FM Tuner mode

Press menu button into music mode , press "+" "-" button to loop between Music, Voice, FM radio, Settings, Erase files, About and Exit modes. Press "menu" button to confirm.

OPERATION NOTES 10

Music playing functions


When first enter music mode, the player will be in stop state.



■ Play / Pause / Stop / FF / RW


Press Play/Stop >|| button once to start playing the MP3/WMA file, LCD display as:

Under playing music mode, LCD displays will appear as shown

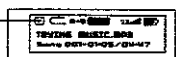


When playing a Mp3, press Play /Stop button >|| again will enter pause state, press the button again will resume playing.. LCD display as:

LCD displays pause mode when music is pause playing




From playing or pause state, press and hold the Play/Stop >|| button for 1-2 second will go back to stop state, LCD display as :

LCD displays stop mode when music is stopped playing

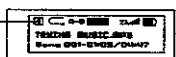

Note : To turn off the Mp3 player, it must first go into stop state, then press play/stop button again for 1-2 second.


Press FF >>> button to skip to next song. Press RW <<< button to go back to last song.

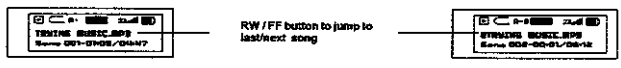

OPERATION NOTES 11


■ VOL+/VOL-

By pressing VOL+/VOL- button ,you can control the volume under PLAY or PAUSE states. The volume level (see illustration)can be adjusted at 28 steps by pressing the VOL+/VOL- button repeatedly.

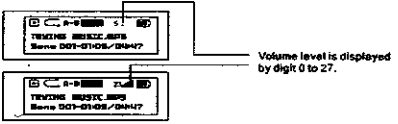

■ Segment Repeat (A-B) function

When playing music/voice, press A-B/EQ button to select the start point of segment, then press A-B/EQ button again to select the end point. The player will repeating the selected segment endlessly until the A-B/EQ button is pressed again to cancel it. LCD display as:



Remark : The function will not work when in stop state. Keep pressing A-B/EQ button for 1-2 second for EQ setting. (Ref page: 19)

ESSENTIAL NOTES 12

■ Equalizer(EQ) setting

When playing music, keep pressing the A-B/EQ button for 1-2 second to toggle the 6 modes of equalizer settings: Normal, DBB, Jazz, Rock, Classical and Pop. The LCD display is as below :

Normal

DBB


Rock

Jazz

Class

Pop

EQ setting is displayed on LCD

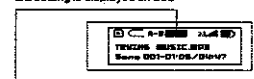


Ref. page19 description of another set method

Press and hold this button for 1-2 second to toggle EQ modes.
Press this button momentarily to use segment repeat(A-B) mode.

■ Music / voice information display:

In play/stop state, the LCD will display the song name in rolling characters :

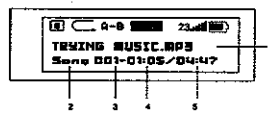

1. Song name information.
2. Music/ Voice
3. Song/ music number
4. Playing time
5. Total playing time

Advanced Function

FOXDA

MP3 Player
14

Advanced function

Following are more advanced functions of our MP3 player, you can press "menu" button to call up these modes.

Music	press "+" "-" button to cycle between these functions, LCD display as:	
Voice		
FM tuner		
Settings		
Erase Files		
About		

Exit

■ **Menu function**

Press MENU button to call up advanced function menu. Press "+", "-" to scroll through the 6 functions. Press "menu" button again to confirm choice and enter its sub-menu, if any.

Note: if no button is pressed for 5 seconds, machine will return to previous setting mode.

MP3 Player
15

■ **Music Function:**

This is the default mode when machine is used the first time.
Function description: playing/stopping/FF/RW/V+,-/EQ setting/A-B repeat (Ref. Page 10)

■ **Voice Function:**

Under music mode, press "Menu" button and then "+" button to scroll to voice mode, press "Menu" button to confirm (Ref. Page 9). Under voice mode, you can select the playing/recording/A-B segment repeat/RW/FF/V+,-/EQ setting (Ref. Page 20)

1. Playing /RW/FF/V+,- (Ref. Page 10)

2. **Recording:** Under voice mode, LCD display as

1 →

2 →

3

4

5

6

1. Stop State

2. Name and track of voice

3. Voice mode

4. Number of voice files

5. Playing time

6. Length of current voice file

Advanced music
16

Start Recording
Under Voice Function, press "A-B/EQ" button to start recording (using internal Microphone), LCD display as:

1.Voice recording function display
2.Name and track of recorded file
3.REC icon to indicate recording
4.Time of current recorded file
5.Maximum recording time allowed

Stop Recording
Press "A-B/EQ" button again to stop recording, LCD display as (Ref. Page 15)

Play back recorded voice file
It is same operations as music play back (Ref. Page 10),LCD display (Ref. Page 15)

NOTE A-B Segment Repeat function only work under playing/pausing state, it is not active under recording/stopping state. To change EQ setting und er playing/pausing/stopping state, keep pressing A-B/EQ button for 1-2 second, it is not active under recording state.

Name your recorded files
When there are many recorded voice files, user is advised to assign meaningful file name to each file, for easy management (Ref. Page 27)

Advanced function

FM tuner function

- Press "menu" button and then "+, -" to scroll to FM tuner, press "menu" to confirm.
(Adjust the position of earphone cable may give better radio reception)

- VOL+/VOL-
Use the VOL+/VOL-button to adjust the volume level between 0 to 27. (see illustration)
Pressing VOL+/VOL-button will increase/decrease volume respectively.

The digit between 0 to 27 indicates volume level.

- FM radio fine tune Press " >>> " or " <<< " to fine tune the frequency.
Press "A-B/EQ" button for 1-2 second to memorize the frequency setting to current channel.

Accessories
13

■ **Auto search**

Press **▶/◀** button to search for all available radio stations automatically, and memorize the frequency of each station in consecutive channel numbers.
(Note : keep pressing **▶/◀** button for 2-3 seconds would turn off the player.)

■ **Loop through the memorized radio channel for selection**

Press **"A-B/EQ"** and **"MENU"** buttons to loop through the memorized radio channels and choosing the desired one.

■ **Exit FM tuner**

Press **MENU** button for 1-2 seconds will return player to previous state.

Accessories

■ **Settings**

Press **"Menu"** button and then **"+"** and **"-"** to scroll to **"Setting"** item, press **"Menu"** button again to confirm. The LCD display is as follow :

EQ

PlayMode


Contrast

PowerSaving

Backlight

Language

Exit



NOTE: You can call up setting menu when in playing or stop states, but not in recording state. If no button is pressed after 5 second, machine automatically return to music/voice playing mode (previous state).

1. EQ Ref. page12 for another method to change EQ setting.

Six EQ mode included: Normal, DBB, Rock, Jazz, Classical, Pop,

press **"+, -"** button to scroll through selection, and press **"menu"** to confirm.

Normal


DBB

Rock

Jazz

Classical


Pop



Accessories
20

2. PlayMode

Five playing modes included: Normal, Repeat single song, Repeat all, Shuffle play and Shuffle repeat. Press “+,-” button to scroll through choices, press “menu” to confirm.



Normal

Repeat Track


Repeat All

Shuffle

Shuffle Repeat

3. Contrast


User can adjust LCD contrast as desired, LCD display as :

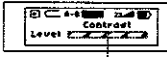

Press “+/-” button to adjust contrast of LCD panel, and press “Menu” button to confirm.

3. Power Saving

Under voice and music mode, player can turn off itself automatically after left idle in stop state for a user selected duration. User “+” and “-” buttons to scroll through the choices of 1 min, 2 mins, 5 mins, 10mins, and Disable, press “menu” button to confirm, LCD display as :



Disable

1Min

2Mins


5Mins

10Mins

Accessories
21

4. BackLight

Three backlight modes included: Disable, 3sec and 10sec. The player will turn on the backlight for the specified duration whenever any button is passed, for using the player at night. Press “+” and “-” buttons to change setting, and “Menu” button to confirm, LCD display as following :

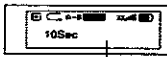


Disables

3Sec

10Sec

5. Language

Press “+” and “-” buttons to scroll between English, Traditional Chinese and Simplified Chinese, press “Menu” button to confirm. LCD display as :

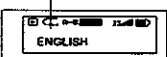


Simplified Chinese



Traditional Chinese


ENGLISH

6. Exit

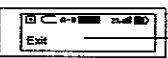

   When LCD display “Exit”, press “Menu” to confirm, and return to setting mode, LCD display as (Ref. Page 19)

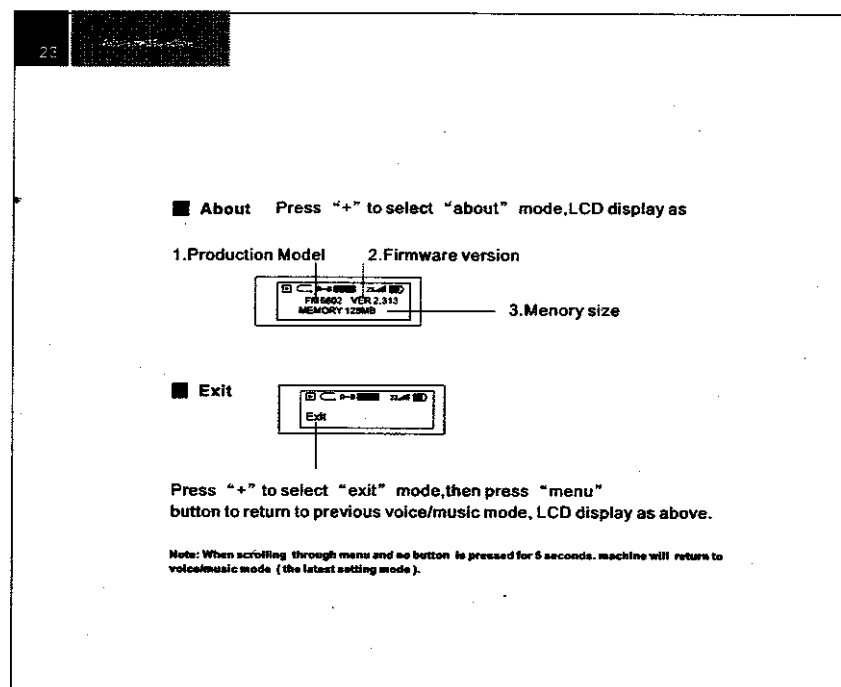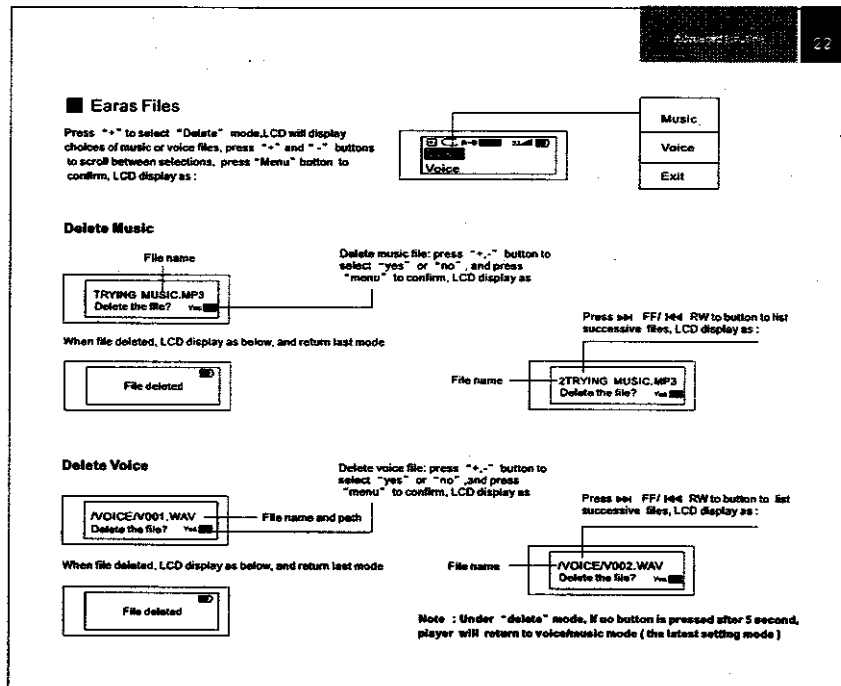

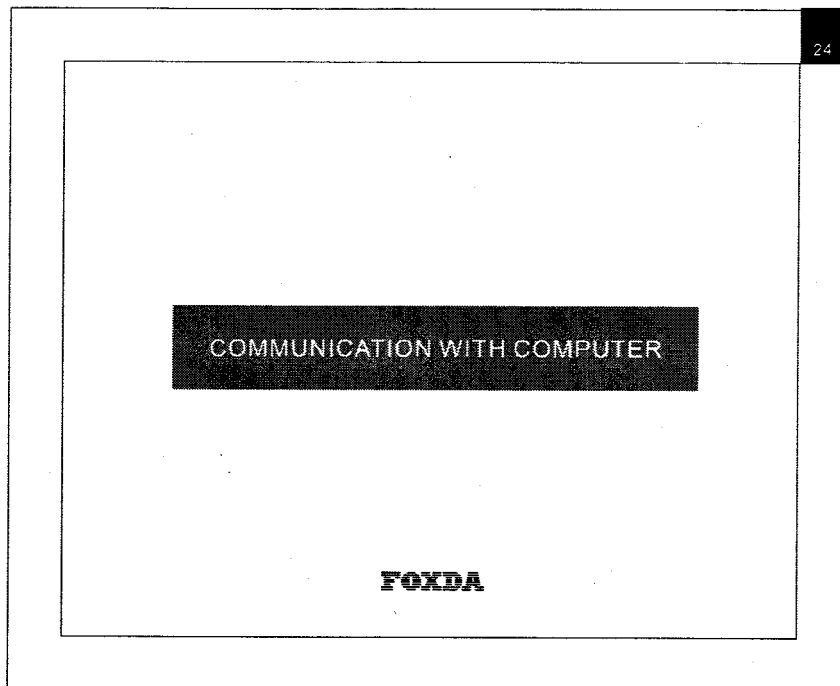

25 COMMUNICATION WITH COMPUTER

■ **System Requirements**

1. Operating systems: Microsoft Windows 98, Windows Me, Windows 2000, Windows XP.
2. CPU: Intel Pentium 3, Pentium 4 CPU or above
3. Memory: 64 MB or more
4. Harddisk: minimum 200MB free space
5. Interface: full speed USB
6. CD-ROM


■ **Connection with computer**

Connect the player to computer using the USB cable provided.

A simple line drawing showing a small, cylindrical MP3 player on the left, connected by a coiled USB cable to a computer monitor on the right. The monitor is depicted with a screen and a base.

COMMUNICATION WITH COMPUTER 26


■ Installation of communication software
 No additional driver software is required for Windows 2000/Me/XP, after connecting the player to computer via USB, it will be recognized automatically as a "Removable drive". For Windows98, please install the driver software from CD-ROM provided.

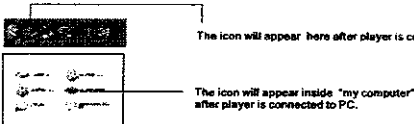

The icon will appear here after player is connected to PC.

The icon will appear inside "my computer" after player is connected to PC.

Windows 98 CD-ROM Installation
 Put bundled CD-ROM into computer, and follow the instruction to finish the installation.

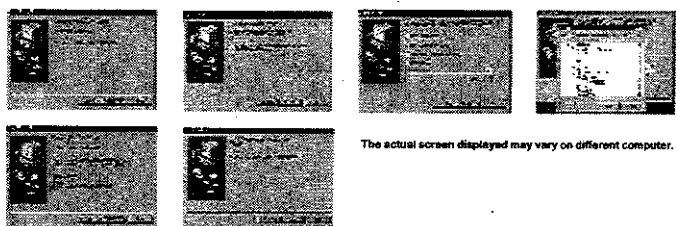


The actual screen displayed may vary on different computer.


COMMUNICATION WITH COMPUTER 27

■ Save and rename downloaded music and voice files

After successful connected the player to the computer, it will appear as a "Removable disk". Double-click on this disk, it will be displayed as:

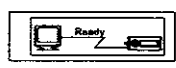


Open

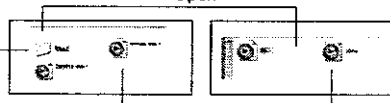

Folder containing voice files

Music file Voice file

Note : This removable drive will function exactly the same as a normal USB flash disk, you can select/ copy/rename/download/delete any files as desired.

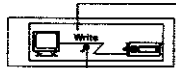


LCD display when the computer is writing data to the player.

Moving graphics indicates that PC is now writing or deleting data.

COMUNICATION WITH COMPUTER 28

■ **Disconnecting Mp3 player from computer**


When the player is connected to PC, the "Play/Stop" button will not function. Firstly, on the computer, right-click the arrow icon on Windows' system tray, bring up dialogue box which shows the Mp3 player as a removable disk, click "Stop" button to disable it.



Warning: DO NOT unplug the Mp3 player from the computer' s USB port until Windows prompt that it is safe to do so, otherwise data loss or even physical damage to the player may occur. The user will be responsible for such damage due to this incorrect usage of the player.

■ **Formating**


From Windows, open "My Computer" , right-click the removable drive corresponding to the Mp3 player to bring up a menu, select "Format" . Choose "FAT" file system to format the device. If you mistakenly selected "FAT32" or "NTFS" file system, please redo the format operation again using "FAT" .




29

General question & answer

1. How to turn on the Mp3 player?	Ref page 8
2. What is meaning of each icon on LCD' s display ?	Ref page 3
3. How to return to initial music playing mode?	Ref page 9
4. How to voice recording and A-B segment repeat?	Ref page 16
5. How to download and delete songs in computer?	Ref page 27

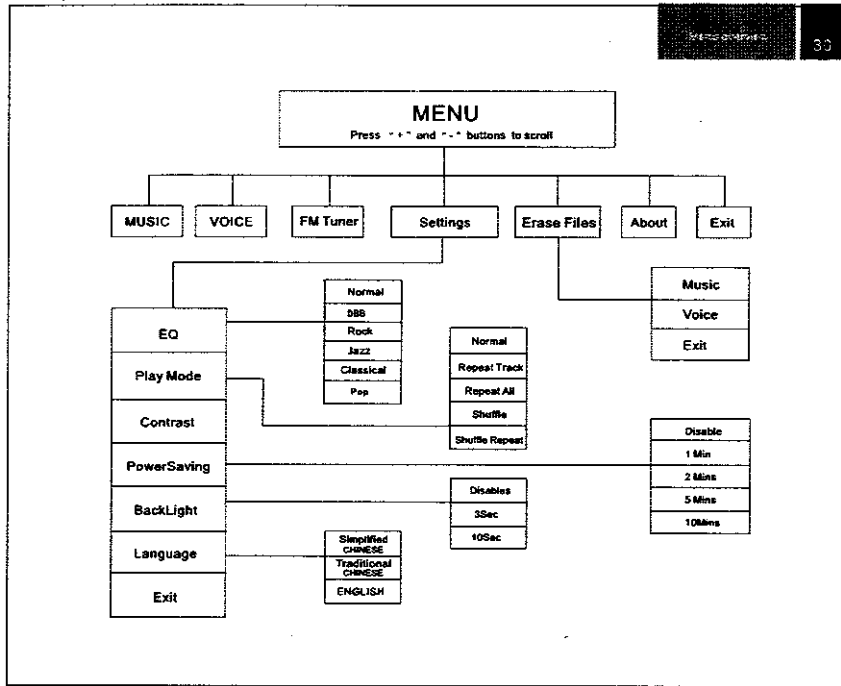 



WWW.FOXDA.COM

Foxda Technology Industrial (shenzhen) co., Ltd.
 Sales office:
 Add: 8/F, Fuding Bldg, Bantang Road, Futian Free Duty Zone,
 Shenzhen, 518033, CHINA
 Tel: 86-755-83599807 Fax: 86-755-83599990
 Factory:
 Add: E/F1st, New Century Industrial Park, Longgang Grand Industrial Zone,
 Shenzhen, 518116, China
 Tel: 86-755-84637535 Fax: 86-755-84637700

Foxda (U.S.A) INC.
 Add: 9480 TELSTAR AVE, SUITE 200, EL MONTE, CA 91731
 Service Tel: 8005273501
 Tel: 001-626-3568031 Fax: 001-626-3501832

Foxda Technology (HK) Company Limited
 Add: Rm 1205, Tower 1, Lippo Centre, Admiralty, Hong Kong
 Tel: (852) 2521-6669 Fax: (852) 2521-2229

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.