

User Manual

FOXPRO[®] High Performance Game Calls

FOXPRO[®] is proud to present the JACK ATTACK[™] electronic decoy. The JACK ATTACK[™] comes standard with a remote control and two toppers (a bird topper which resembles a woodpecker, and a jack topper which imitates a rabbit or rodent). The FOXPRO JACK ATTACK[™] simulates two distressed animals to entice those weary predators in close enough for you to make the shot.



• Two toppers for unbelievable action



• LED for night time use



• Remote control operation allows on/off, variable speed control and LED on/off (decoy can also be operated manually)



• Removable stake and toppers for maximum portability

INSTRUCTIONS

Jack Attack Decoy Instructions

- 1) Carefully remove decoy from packaging.
- 2) Remove the long support wire. Use caution so that the wire doesn't cause personal injury! Do not bend the wire.
- 3) Insert the hexagon magnetic coupler (on the end of the long support wire) through the hole located in the top of the decoy body and into the mating connector on top of the decoy motor. Push the plastic insert on the long support wire into the hole. (See Figure 1)
- 4) Remove the Jack Topper from the packaging. Locate the plastic tube imbedded in the foam block. Insert the hooked end of the long support wire into this plastic tube. (See Figure 2)
- 5) Install four "AA" batteries into the decoy's main body. Observe polarity! (See Figure 3)
- 6) Screw the metal stake into the bottom of the decoy body. (See Figure 4)
- 7) Insert stake firmly into the ground.
- 8) Turn decoy on/off by depressing the Power button located on the front of the main body. (See Figure 5)

To Add the Bird Topper (optional)

- 1) Remove the shorter support wire from the packaging.
- 2) Insert the formed end of the shorter support wire into the cylindrical coupler on the long support wire. (See Figure 6)
- 3) Use a Phillips Screwdriver to tighten and secure the shorter support wire. Please note that the height of the short support wire is adjustable.
- 4) Attach the bird topper to the short support wire. (See Figure 7)



Warranty

The Jack Attack decoy is covered by a Limited 90 Day Warranty. FOXPRO Inc. warrants the Jack Attack decoy to be free from defects in workmanship and material, under normal use and conditions, for a period of 90 days from the original date of purchase. For warranty repair, send the Jack Attack prepaid to:

FOXPRO Inc.
14 Fox Hollow Drive
Lewistown, PA 17044

Please note you are responsible for return shipping. The warranty does not cover products which have been damaged by misuse, negligence, or accident.

FOXPRO Engineered and made to our specifications in China.



Using the Remote Control

- 1) Turn the decoy on using the Power button on the front of the decoy body. The decoy will start to move.
- 2) To stop the action of the decoy, depress the Start/Stop button on the remote control. Depressing this button will start and stop the action of the decoy.
- 3) To increase the speed of the decoy, depress the Fast/Slow button on the remote control. To slow it down, depress this button again.
- 4) For night time hunting, the Jack Attack decoy is equipped with a white LED, making the decoy visible at night. To turn on the LED, depress the Light button on the remote control, and to turn it off, depress the button again.
- 5) The transmitter uses a 12 volt 23A battery (included). To replace, remove the battery compartment cover on the back of the transmitter, and install a new battery.

Please note: The Jack Attack decoy also is equipped with a jack that allows you to connect the decoy into a FOXPRO caller equipped with a decoy jack. This allows you to operate the Jack Attack decoy with your FOXPRO caller remote control. This jack is located on the back of the decoy body, above the battery door. A male to male 3.5mm stereo or mono cable is needed. For more information, contact FOXPRO Inc. at 717-248-2507, or by email at sales@gofoxpro.com

FCC Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation of this device.

WARNING: The user of this product assumes all risks associated with the use of this product. Shoot straight and hunt safe!



www.gofoxpro.com

FOXPRO INC. • 14 Fox Hollow Drive • Lewistown, PA 17044 • Phone: (717) 248-2507 • Fax: (717) 247-3594

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment