

REMOTE CONTROL INSTRUCTIONS

Remote System Description

The antenna is located toward the rear along-side the handle. A local - remote switch is installed opposite the charge jack. This slide switch, when in the "up" position, selects radio remote operation. When this switch is in the "down" position, the caller can be used in the normal mode of operation.

The transmitter is housed in a rugged plastic case, and is powered by a 9-volt battery. Three push-buttons are located on the front panel for Mute, Volume - Up, and Volume - Down. In addition, a BCD push-button switch is located on the top surface to select the sound. Bank A or B selection is made with the toggle switch located near the antenna. A green LED on the top surface illuminates when any of the three push-buttons is depressed.

Operation

On the caller, set the rear panel selector switch to the "0" position. Place the slide switch to the "up" position. Rotate the antenna to the vertical position. Turn on the caller and set the volume to the desired maximum. The volume control setting will limit the maximum sound level while using the remote. Most users will set the control to maximum and then turn down the volume with the remote. On the transmitter, select the sound desired with the pushweel switch. Now push the "MUTE" button to start the sound. Push and hold the "VOL UP" or "VOL DN" to set the volume to the desired level. The sound can be muted or silenced by depressing the "MUTE" button. Push this button again to unmute the sound. To select a different sound, first select the appropriate number on the transmitter sound switch, then briefly depress the "VOL UP" push-button. Bank A is selected with the toggle switch forward, while bank B is selected with the switch to the rear. Greater range will result if you can elevate the caller by setting it on a rock, a stump, a fence post, or a bush. Maximum range occurs with both antennas vertical.

FCC Statement

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this equipment may not cause harmful interference, and (2) this equipment must accept any interference received, including interference that may cause undesired operation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the antenna of the radio or television receiver being interfered with.
- * Increase the separation between the equipment and the radio or television antenna.
- * Consult the dealer or an experienced radio/television technician for help.

The user is cautioned that changes or modifications made to the equipment without the approval of the manufacturer could void the user's authority to operate this equipment.