

FrSky Horus X12S Manual

Introduction

Thank you for purchasing the FrSky Horus X12S digital telemetry radio system. In order to make the best use of your system and to fly safely, please read this manual carefully. If you have any difficulties while using your system, please consult the manual, your hobby dealer, or FrSky technical support.

Due to unforeseen changes in production, the information contained in this manual is subject to change without notice.

Meanings of Special Markings

Pay special attention to safety where indicated by the following marks:


⚠ DANGER- Procedures which may lead to dangerous conditions and cause death/serious injury if not carried out properly.

⚠ WARNING- Procedures which may lead to a dangerous condition or cause death or serious injury to the user if not carried out properly or procedures where the probability of superficial injury or physical damage is high.

⚠ CAUTION- Procedures where the possibility of serious injury to the user is small, but there is a danger of injury, or physical damage, if not carried out properly.

① = Mandatory ⓧ = Prohibited

⚠ Warning: Always keep electrical components away from small children.

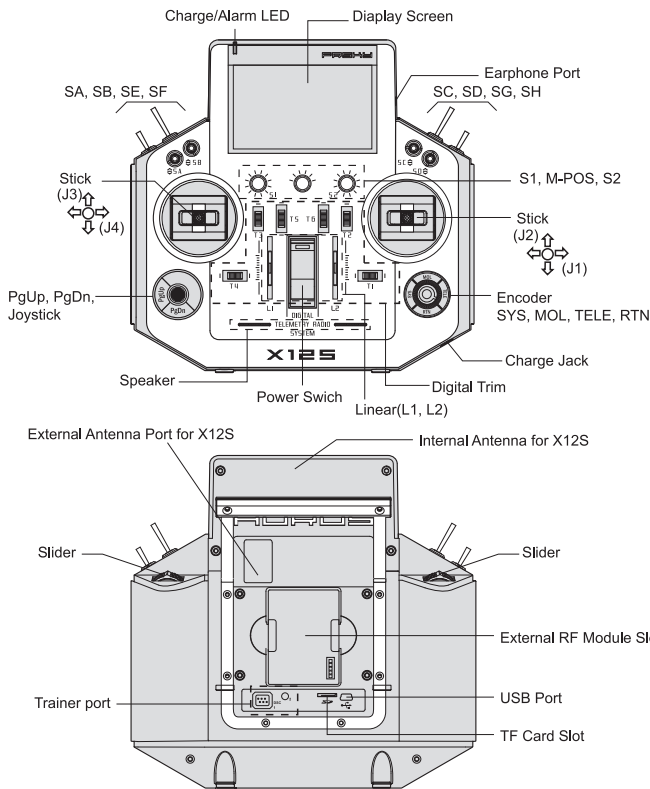

Overview

(Switch Default Settings)

- SA: 3 positions, Short Lever
- SB: 3 positions, Long Lever
- SC: 3 positions, Long Lever
- SD: 3 positions, Short Lever
- SE: 3 positions, Short Lever
- SF: 2 positions, Long Lever
- SG: 3 positions, Short lever
- SH: 2 positions, Momentary; Long Lever

You can choose the Switch and define its positions in the Input and Output Map screen.

FrSky Electronic Co., Ltd
E-mail: frsky@frsky-rc.com

Website: www.frsky-rc.com

Technical Support: sales4tech@gmail.com

⚠ Cautions on handling antenna of External Module

- ⓧ Do not touch the antenna during operation. Doing so could interfere with transmission, causing a crash.
- ⓧ Do not carry the transmitter by the antenna. The antenna wire could break and prevent transmission.
- ⓧ Do not pull the antenna forcefully. The antenna wire could break and prevent transmission.

Specifications

Model Name: Horus X12S

Number of Channels: 16 channels (Up to 32 channels)

Operating Voltage: DC9.6V

Operating Temperature: -10~60 C

Industrial screen: high resolution TFT (480*272), readable outdoor

Compatibility: FrSky X series, D series, L series and V8-II series receivers (plus other receivers if an external module is used)

Features

- Audio Speech Outputs (values, alarms, settings, etc.)
- Full telemetry and real-time data logging
- Antenna detection and SWR warning
- Integrated GPS module and 6-axis sensor (3-axis gyro and 3-axis accelerometer)
- All CNC 6 ball bearings gimbals with accuracy hall sensor and extensible by stick ends
- Safe power switch with integrated strap base
- Two types trainer ports
- Inbuilt wireless trainer system
- 6 position encoder for easier flight modes switch
- FrSky FrTX operation system
- MP3 Player
- Industrial High Resolution TFT Screen Readable Outdoor
- Internal and External Antenna selectable

⚠ Notes and Warnings for Battery & Charger

- ⓧ The eight-cell NiMH battery is for use only in your Horus X12S.
- ⓧ Be sure to use the built-in battery charger to charge the battery.
- ⓧ Be careful not to drop the battery.
- ⓧ Don't pull the battery wires as this could produce, short-circuits and cause the battery to explode.
- ⓧ Do not remove the battery from the Horus X12S transmitter while the voltage warning is blinking as this could cause internal settings and memories to be destroyed.
- ⓧ Be sure to turn off the Horus X12S before charging the battery.
- ⓧ The Power Indicator LED will be on during charging, and be off after the charging is finished.

Model Setup for Horus X12S Internal RF Module


The internal RF module of FrSky Horus X12S is newly developed by FrSky under the name of IXJT. Enter the RF SYSTEM menu (for details, download it from FrSky website).

FrSky Electronic Co., Ltd
E-mail: frsky@frsky-rc.com

Website: www.frsky-rc.com

Technical Support: sales4tech@gmail.com

Step 1: Set the **Mode** for Horus X12S Internal RF. Refer to the table below and set the HORUS X12S to the mode corresponding to your receiver (D8, D16 or LR12).

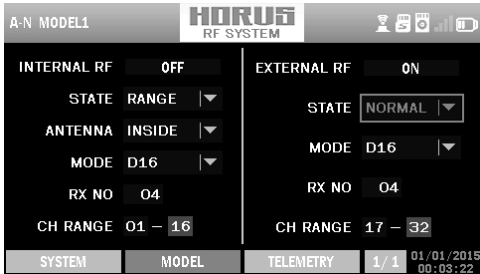

Mode of Horus X12S	Compatible Receivers	Number of Output Channels
D8	V8-II series in D mode (V8FR-II, V8R7-II, V8R4-II, VD5M, etc.) D series (D8R-II plus, D8R-XP, D6FR, D4R-II, etc.)	8 channels
D16	X series (X8R, etc.)	16 channels
LR12	L series (L9R, etc.)	12 channels

Note: older V8 receivers are not supported by the internal module but can be used with an external DJT module in V8 mode.

Step 2: Set the **Channel Range**

The internal RF module of Horus X12S supports 16 channels. The channel range is configurable, and needs double check before use.

Step 3: Set the **Receiver Number**


When you create a new model, the system will assign you a receiver number automatically, but this can be easily changed. The range of the receiver number is 01-64, with the default number being 01. Once the receiver is set to the desired number and is bound to the Horus X12S, the bind procedure will not need to be repeated unless the receiver number is changed. In this case, either set the receiver number to the previous one, repeat the bind procedure.

Step 4: Bind

Bind refers to Horus X12S binding mode. Move the cursor to "STATE", press Encoder button, scroll the Encoder to select "BIND" mode and then press Encoder button again, that the RF module has entered the bind mode. Then put your receiver into binding mode and finish the bind procedure(refer to the receiver's manual for details).Press "STATE"turn to "NORMAL" then exit.

Step 5: Set **Failsafe mode**

There are 3 failsafe modes When enabled :
No Pulse , Hold , Custom.

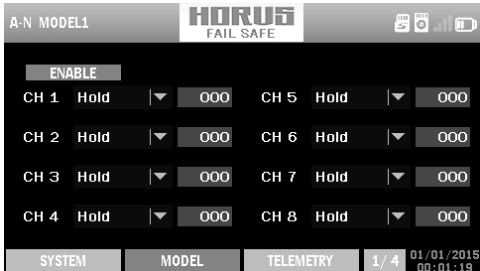

FrSky Electronic Co., Ltd
E-mail: frsky@frsky-rc.com

Website: www.frsky-rc.com

Technical Support: sales4tech@gmail.com


- No Pulse: on loss of signal the receiver produces no pulses on any channel. To use this type, select it in the menu and wait 9 seconds for the failsafe to take effect.
- Hold: the receiver continues to output the last positions before signal was lost. To use this type, select it in the menu and wait 9 seconds for the failsafe to take effect.
- Custom: pre-set to required positions on lost signal. Move the cursor to the failsafe mode of channel and press **Encoder**, then choose the Custom mode. Move the cursor to the channel you want to set failsafe on, and press **Encoder**. Then rotate the **Encoder** to the place you want for failsafe and short press **Encoder** to finish the setting. Wait 9 seconds before the failsafe takes effect.

Notice:

- When failsafe is disabled on X12S Horus side, the failsafe set on receiver side will be used.
- SBUS port always outputs, No Pulse could not perform properly on it. Set "Hold" or "Custom" for SBUS port.
- The above instructions do not apply to D-series and L-series receivers, which require the internal RF module of Horus X12S to be in D8 mode or LR12 mode. For these receivers, failsafe must be set on the receiver side (see receiver instructions).


Step 6: Range

Range refers to Horus X12S range check mode. A pre-flight range check should be done before each flying session. Move the cursor to "STATE", scroll the Encoder to select "RANGE" mode and press Encoder. In range check mode, the effective distance will be decreased to 1/30. Press "STATE"turn to "NORMAL" then exit.

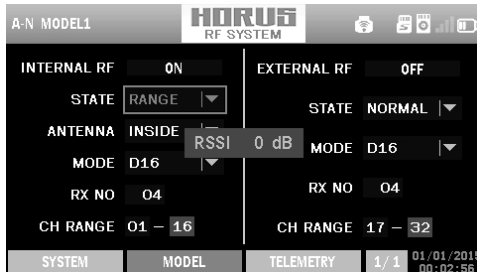

Model Setup for Horus X12S External RF Module

The external RF module can be powered on or off by software. The setup process is the same as that for the internal RF .
If you use other brand RF module than FrSky, please choose PPM mode.

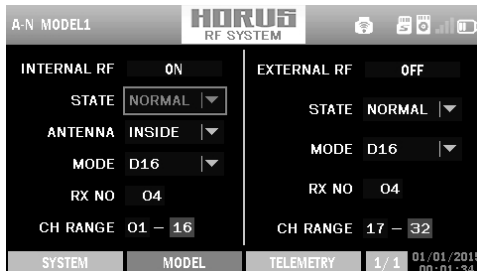

FrSky Electronic Co., Ltd
E-mail: frsky@frsky-rc.com

Website: www.frsky-rc.com

Technical Support: sales4tech@gmail.com

FCC Statement

FCC NOTE :

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

RF exposure statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment .The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

CE

The product may be used freely in these countries: Germany, UK, Italy, Spain, Belgium, Netherlands, Portugal, Greece, Ireland, Denmark, Luxembourg, Austria, Finland, Sweden, Norway and Iceland.

France: the law permits the emission band 2400 to 2483.5 MHz with the limitation of transmission power of 100 mW (reduced to 10 mW between 2454 and 2483.5 MHz for outdoor flying).

FLYING SAFETY

 Warning:

To ensure the safety of yourself and others, please observe the following precautions.

ⓘ Have regular maintenance performed. Although your Horus X12S protects the model memories with non-volatile EEPROM memory (which does not require periodic replacement) and of a battery, it still should have regular check-ups for wear and tear. We recommend sending your system to your FrSky Service Center annually during your non-flying-season for a complete check-up and service.

Battery

ⓘ Charge the batteries! Using the standard Horus battery and charger, always recharge the transmitter and receiver batteries for at least 8 hours before each flying session. A low battery will soon die, causing loss of control and a crash. When you begin your flying session, reset your transmitter's built-in timer, and during the session pay attention to the duration of usage. Also, if your model uses a separate receiver battery, make sure it is fully charged before each flying session.

ⓘ Stop flying long before your batteries become low on charge. Do not rely on your radio's low battery warning systems, intended only as a precaution, to tell you when to recharge. Always check your transmitter and receiver batteries prior to each flight.

Website:www.frsky-rc.comFrSky Electronic Co., Ltd
E-mail:frsky@frsky-rc.comTechnical Support: sales4tech@gmail.com

Where to Fly

We recommend that you fly at a recognized model airplane flying field. You can find model clubs and fields by asking your nearest hobby dealer.

ⓘ Always pay particular attention to the flying field's rules, as well as the presence and location of spectators, the wind direction, and any obstacles on the field. Be very careful flying in areas near power lines, tall buildings, or communication facilities as there may be radio interference in their vicinity.

At the flying field

- ⓘ** To prevent possible damage to your radio gear, turn the power switches on and off in the proper sequence:
1. Pull throttle stick to idle position, or otherwise disarm your motor/engine.
 2. Turn on the transmitter power and allow your transmitter to reach its home screen.
 3. Confirm the proper model memory has been selected.
 4. Turn on your receiver power.
 5. Test all controls. If a servo operates abnormally, don't attempt to fly until you determine the cause of the problem. (For PCM systems only: Test to ensure that the Failsafe settings are correct by waiting at least 2 minutes after adjusting then, turning the transmitter off and confirming the proper surface/throttle movements. Turn the transmitter back on.)
 6. Start your engine.
 7. Complete a full range check.
 8. After flying, bring the throttle stick to idle position, engage any kill switches or otherwise disarm your motor/engine.

If you do not turn on your system on and off in this order, you may damage your servos or control surfaces, flood your engine, or in the case of electric-powered or gasoline-powered models, the engine may unexpectedly turn on and cause a severe injury.

ⓘ Make sure your transmitter can't tip it over. If it is knocked over, the throttle stick may be accidentally moved, causing the engine to speed up. Also, damage to your transmitter may occur.

ⓘ In order to maintain complete control of your aircraft it is important that it remains visible at all times. Flying behind large objects such as buildings, grain bins, etc. must be avoided. Doing so may interrupt the radio frequency link to the model, resulting in loss of control.

ⓘ Do not grasp the transmitter's antenna during flight. Doing so may degrade the quality of the radio frequency transmission and could result in loss of control.

ⓘ As with all radio frequency transmissions, the strongest area of signal transmission is from the sides of the transmitter's antenna. As such, the antenna should not be pointed directly at the model. If your flying style creates this situation, easily move the antenna to correct this situation

ⓘ Before taxiing, be sure to extend the transmitter antenna to its full length.

A collapsed antenna will reduce your flying range and cause a loss of control. It is a good idea to avoid pointing the transmitter antenna directly at the model, since the signal is weakest in that direction.

ⓘ Don't fly in the rain! Water or moisture may enter the transmitter through the antenna or stick openings and cause erratic operation or loss of control. If you must fly in wet weather during a contest, be sure to cover your transmitter with a plastic bag or waterproof barrier. Never fly if lightning is expected.

Website:www.frsky-rc.comFrSky Electronic Co., Ltd
E-mail:frsky@frsky-rc.comTechnical Support: sales4tech@gmail.com

Nickel-metal hydride Battery Safety and Handling instructions

IMPORTANT! The Nickel-Metal Hydride battery (NiMH) batteries included in the Horus X12S transmitter are not to be confused with Lithium-Polymer (LiPo) batteries, or any other type of rechargeable battery (including NiCd and LiFe). NiMH batteries require special charging criteria different than other rechargeable batteries. Use only the FrSky transmitter charger included with this set for, or other chargers approved by FrSky, to charge the NiMH batteries in the HORUS X12S transmitter.

It's important to understand the operating characteristics of Nickel-Metal Hydride battery (NiMH). Read the specifications printed on the label of your NiMH battery and charger prior to use. Failure to follow these precautions can quickly result in severe, permanent damage to the battery and its surroundings and possibly result in a FIRE!

IMPORTANT PRECAUTIONS

- ⓘ** Do not leave a NiMH battery unattended at any time while being charged or discharged.
- ⓘ** Do not attempt to charge NiMH batteries with a charger that is NOT designed for NiMH batteries, as permanent damage to the battery and charger could result.
- ⓘ** Always charge NiMH batteries in a fireproof location. Do not charge or discharge NiMH batteries on carpet, a cluttered workbench, near paper, plastic, vinyl, leather or wood, or inside an R/C model or full-sized automobile! Monitor the charge area with a smoke or fire alarm.
- ⓘ** Do not charge NiMH batteries at currents greater than the "1C" rating of the battery ("C" equals the rated capacity of the battery).
- ⓘ** Do not allow NiMH cells to overheat at any time! Cells which reach greater than 140 degrees Fahrenheit (60°C) should be placed in a fireproof location.
- ⓘ** NiMH cells will not charge fully when too cold or show full charge.
- ⓘ** It is normal for the batteries to become warm during charging, but if the charger or battery becomes excessively hot disconnect the battery from the charger immediately!! Always inspect for potential damage any battery which has previously overheated for potential damage, and do not re-use if you suspect it has been damaged in any way.
- ⓘ** Do not use a NiMH battery if you suspect physical damage has occurred to the pack. Carefully inspect the battery for even the smallest of dents, cracks, splits, punctures or damage to the wiring and connectors. DO NOT allow the battery's internal electrolyte to get into eyes or on skin—wash affected areas immediately if they come in.

Updates

FrSky is continuously adding features and improvements to our radio systems. Updating (via the pre-installed MicroSD card in Horus X12S TF Card Slot) is easy and free. To get the most from your new transmitter, please check the download section of the FrSky website www.frsky-rc.com, for the latest update firmware and how-to guide.

Horus X12S installed the FrSky FrTX operation system. Do not hesitate to contact FrSky if you have ideas and suggestions for current and future radio systems, or if you are willing to join the FrSky developing union to be part of the projects.

* The currently pre-installed firmware of Horus X12S is FrSky FrTX firmware, developed and well tested by FrSky. The transmitter also support the open source firmware.

Website:www.frsky-rc.comFrSky Electronic Co., Ltd
E-mail:frsky@frsky-rc.comTechnical Support: sales4tech@gmail.com