

**HOLY BIBLE**  
**KING JAMES VERSION**

**USER'S GUIDE**

**BOOKMAN® II**

# License Agreement

---

READ THIS LICENSE AGREEMENT BEFORE USING ANY BOOKMAN® PRODUCT.

YOUR USE OF THE BOOKMAN PRODUCT DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE BOOKMAN PRODUCT AND YOUR PURCHASE PRICE WILL BE REFUNDED. BOOKMAN PRODUCT means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

## LIMITED USE LICENSE

All rights in the BOOKMAN PRODUCT remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive license to use the BOOKMAN PRODUCT on a single FRANKLIN BOOKMAN at a time. You may not make any copies of the BOOKMAN PRODUCT or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the BOOKMAN PRODUCT. You may not export or reexport, directly or indirectly, the BOOKMAN PRODUCT without compliance with appropriate governmental regulations. The BOOKMAN PRODUCT contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

# Contents

<b>Using the Special Features .....</b>	<b>4</b>
<b>Installing Batteries .....</b>	<b>5</b>
<b>Installing Book Cards .....</b>	<b>5</b>
<b>Selecting a Book .....</b>	<b>6</b>
<b>Book Card Color Keys .....</b>	<b>6</b>
<b>Key Guide .....</b>	<b>7</b>
<b>Viewing a Demonstration or Tutorial .....</b>	<b>8</b>
<b>Changing the Settings .....</b>	<b>8</b>
<b>Using the Menu .....</b>	<b>9</b>
<b>Hearing Devotional Verses .....</b>	<b>11</b>
<b>Finding Bible Verses .....</b>	<b>12</b>
<b>Searching for Words .....</b>	<b>13</b>
<b>Expanding Your Search .....</b>	<b>15</b>
<b>Highlighting Search Words .....</b>	<b>15</b>
<b>Viewing Footnotes .....</b>	<b>16</b>
<b>Using Bookmarks .....</b>	<b>17</b>
<b>Transferring Words Between Books .....</b>	<b>18</b>
<b>Resetting Your Unit .....</b>	<b>18</b>
<b>Specifications .....</b>	<b>19</b>
<b>Model KJB-1840 .....</b>	<b>19</b>
<b>Limited Warranty (outside U.S.) .....</b>	<b>19</b>
<b>Limited Warranty (U.S. only) .....</b>	<b>20</b>
<b>FCC Notice .....</b>	<b>21</b>
<b>Index .....</b>	<b>22</b>

# Introduction

---

 
Welcome to the world of Franklin. This Franklin model is a powerful, portable electronic Bible, with a slot in the back for a book card. With your *King James Bible*, you can:

- find any book, chapter or verse using the Reference search screen;
- type a keyword to quickly find favorite passages;
- use Franklin's MatchMaker function to help you find completions to words;
- expand your keyword search to include inflections, synonyms and related words;
- let state-of-the-art spell correction help you find the word you're looking for;
- locate chapters quickly using the Index ;
- hear a daily Devotional verse spoken;
- learn a new verse each time you turn the unit on;
- find the meanings of archaic words via Franklin authored footnotes;
- mark up to 50 different passages with bookmarks.

To learn more about your electronic Bible, read this User's Guide.

# Using the Special Features

---

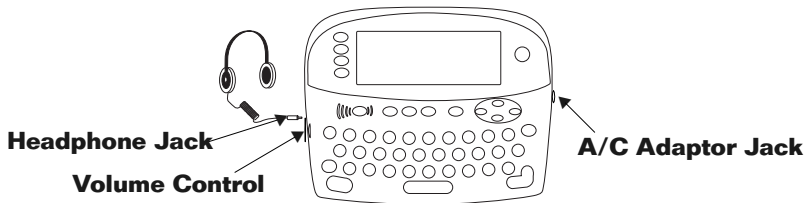


Your unit is equipped with several special features that many, but not all BOOKMAN book cards use. To learn if you can use the special features with a particular book card, read its User's Guide.

**Headphone Jack:** The headphone jack is designed for 3.5 mm, 35 ohm impedance stereo headphones. **Caution:** Monophonic headphones will not work with this unit.

**Volume Control:** The dial, located under the headphone jack, controls the volume of the speaker or headphones.

 **AC Adaptor Jack:** The AC/DC adaptor is in the 9 volt range within a current range of 200 to 300 milliamperes.




This symbol indicates that the inner core of the plug of an AC adaptor is negative and that the outer part of the plug is positive. If the symbol on your AC/DC adaptor does not match the above symbol, confirm its compatibility at its place of purchase.

**Speaker:** The speaker is located on the back of your unit, above the book card slot. For best results, do not cover the speaker with your hand.

## Installing Batteries

 Your unit is powered by four AAA batteries. Follow these easy instructions to install or replace them.

1. **Lift the battery cover on the top right of your unit by pushing up the tab.**

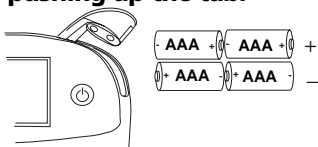

Follow the illustration on the back of the unit when installing the batteries.

2. **Insert the two top batteries with the positive terminal facing out and the two bottom batteries with the negative terminal facing out.**


**Note:** If the battery door does not shut, please check the position of the batteries.

3. **Replace the battery cover.**

**Warning:** If the batteries wear-out completely, or if you take more than approximately a minute while changing the batteries, any information that was entered in the built-in book or book card will be erased. You should always keep written copies of your important information.

## Installing Book Cards

 1. **Turn your unit off.**
2. **Turn your unit over.**
3. **Align the tabs on the book card with the notches in the slot.**

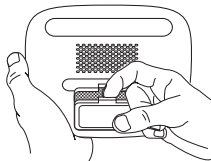

4. **Press the book card down until it snaps into place.**

### ➤ Removing Book Cards

**Warning:** Never install or remove a book card while your unit is on. Any information that was entered in the built-in book or book card will be erased.

### ➤ About Screen Illustrations

Some screen illustrations in this User's Guide may differ slightly from what you see on screen. This does not mean that your unit is malfunctioning.

## Selecting a Book

Once a book card is installed in the unit, you can select which book you want to use.

1. Turn your unit on.
2. Press **CARD**.



These are sample books.

3. Press **▶** or **◀** to highlight your selection.



For information on available Franklin BOOKMAN products, select **INFO**.

 
4. Press **ENTER** to select it.

### ▶ Help is Always at Hand

You can view a help message at any screen by pressing **HELP**. Use the direction keys to read the message. To exit help, press **BACK**.

## Book Card Color Keys

The red, green, yellow, and blue keys on your unit change functions according to the book card you select. Their functions are labelled on individual cards.

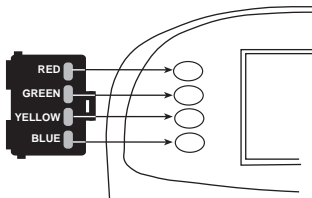

When in your book card:

For

the red key

the green key

the yellow key

the blue key

Press

**MORE**

**MARK**





**SEARCH**

**NOTE**



 






To learn how the color keys on your *book card* correspond to the main keys on your *unit*, press **fn** and wait a few seconds.

## Key Guide



### Color Keys

-  Expands a search.
-  Places a bookmark.
-  Goes to the Word search screen.
-  Displays a footnote.

### Function Keys

-  Turns the unit on or off.
-  Speaks a Devotional verse.
-  Displays a help message.
-  Displays the main menus.
-  Enters a search request, selects an item, or begins a highlight in text.
-  Goes to the Reference search screen.
-  In text, shows book, chapter and verse.
-  At a Search screen, types a \* to stand for one or more letters in a word.
-  Backs up, erases a letter, or turns off the highlight in text.


## Key Guide

-  Shifts to type capital letters and punctuation marks.
-  Exits the book you were reading.


 

 
### Direction Keys



Move in the indicated direction.

-  At menus and text, pages down. At a search screen, types a space.

### Combination Keys\*

-  Transfers a word(s) between books.
-  Pages up or down.
-  At a menu, goes to the first or last item. In Bible text, goes to the start or end of the next or previous chapter.
-  Displays the next or previous verse.

\*Hold the first key while pressing the second.



## Viewing a Demonstration or Tutorial

You can view a demonstration or tutorial of this Bible any time you want.

1. Press **MENU**.
2. Use the arrow keys to highlight **Setup**.
3. Press **ENTER** to select **Tutorial** or use **↓** to highlight **View Demo** and press **ENTER**.

To stop the demonstration or exit from the *Tutorial* press **CLEAR**.

When a book card is installed in your Franklin platform, select *View Demo* from the Setup menu to see the demonstration for that card.

### ► Learn-a-Verse

 
Your Bible comes with a *Learn-a-Verse* feature. Each time you turn your Bible on, you can hear a Devotional verse. If you wish to turn this feature on, press **MENU**. Highlight **Setup**, Use **↓** to highlight *Learn-a-Verse on* and press **ENTER**.

To turn the feature off, highlight *Learn-a-Verse off* and press **ENTER**.

## Changing the Settings

When using this Bible, you can activate the *Learn-a-Verse* feature, adjust the type size, the shutoff time, and the screen contrast. The shutoff time is how long your unit stays on if you forget to turn it off.

1. Press **MENU**.
2. Use the arrow keys to highlight **Setup** and press **ENTER**.



4. Use **↑** or **↓** to move the highlight to **Set Contrast**, **Set Shutoff** or **Set Type Size**.
5. Press **ENTER**.
6. Use **↑** or **↓** to change the setting.
7. Press **ENTER** to store your changes.


Press **BACK** to exit without making a change.

## Using the Menu

 
Using the menu, you can select the Old or New Testament, search the Index for a particular chapter or read a daily Devotional verse.

### Reading the Bible

#### 1. Press **MENU**.



 
2. Use **↑** or **↓** to highlight the **Old Testament** or **New Testament**, and press **ENTER** to select it. For example, select **New Testament**.



3. Use **↑** or **↓** to highlight a **book** and press **ENTER** to select it. For example, select **Romans**.

Note: You can also type the name of a Book to highlight it.


## Using the Menu

 

4. Use **↑** or **↓** to highlight a **Chapter**, or type its number and press **ENTER** to select it.

For example, to highlight *Chapter 5*, type 5.

 To type numbers, hold **fn** and press *q-p*.




5. Use **↓**, **fn+↓** or **SPACE** to scroll down.
6. Use **fn+→** or **←** to go to the next or previous verse.
7. Press **MENU** to return to menu or press **CLEAR** to clear your selection.

## Using the Menu
 
### Using the Index

*Index* contains a list of popular chapters with their titles, arranged in the order that they appear in the Bible.

1. Press **MENU**.
2. Use **↓** or **↑** to highlight *Index* and press **ENTER** to select it.




Index  
Genesis 1:1 The History of  
Creation  
Genesis 2:4 Adam and Eve  
Genesis 3:1 The Temptation and  
Fall of Man

3. Use **↓** or **↑** to highlight a selection, or type the name of the book, chapter and verse that you wish to view.

For example, to highlight *Isaiah 25:1*, type *isaiah251*.

To type numbers, hold **(n)** and press *q-p*.

 4. Press **ENTER** to select it.




*The Prophet's Song of Praise*  
25:1 ◀◀◀ LORD, thou art my  
God: I will exalt thee, I will praise  
thy name; for thou hast done won-  
derful things: thy counsels of old  
are faithfulness and truth.  
25:2 For thou hast made of a city  
an heap; of a defenced city a ruin: a

## Using the Menu

 5. Press **MENU** to return to the menu or press **CLEAR** to clear your selection.

### ► Where in the Bible Am I?

At any Bible verse, you can view its book, chapter, and verse number by pressing **(?)**.



*The Birth of Moses*  
2:1 And there went a man of the  
house of Levi, and took to wife a  
daughter of  
2:2 And the Exodus 2:1 lived, and  
bare a son: and when she saw him,  
that he was a goodly child, she hid  
him three months.

### ► Resuming Where You Left Off

 
You can turn your electronic Bible off at any passage. When you turn it on again, the last passage that you viewed appears, unless you had previously turned on the *Learn-A-Verse* feature. If *Learn-A-Verse* is on, you will to hear a Devotional verse and go to its text.

*Note:* If you have *Learn-A-Verse* on, and wish to return to your last viewed passage, place a bookmark in your text before you turn your electronic Bible off.

## Hearing Devotional Verses


*Devotional* contains a list of inspirational verses.

1. Press **MENU**.
2. Use **↓** to highlight **Devotional** and press **ENTER** to select it.



3. Use **↓** or **↑** to highlight a selection, or type the name of the month (abbreviated) and the day whose selection you wish to hear, and press **SAY** or **ENTER** to hear it read.

 For example, to hear the Devotional verse for Oct. 7, type *oct7*. There is no need to type the period and space.



## Hearing Devotional Verses

The icon means that this is a verse that you can hear read. Whenever you see this icon, you can press **SAY** to hear the verse.

4. Press **CLEAR** when done.

### ► Understanding Say

When you press **SAY** in a menu or at a search screen, your Bible will go to the Devotional menu. To hear a verse of your choice, follow the steps outlined above.

When more than one verse on the screen is marked with , each verse so marked will be read in the order that it appears.

## Finding Bible Verses

---

To go directly to a specific Bible verse, enter its book title, chapter number, and verse number.

If you enter only a book title and chapter number, you will go to the start of the chapter. If you enter only a book title, you will go to the start of that book.

### 1. Press **CLEAR**.

Type reference, press **ENTER**.

◀

Book / Chapter / Verse

### 2. Type a book title, chapter number, and verse number.

Type reference, press **ENTER**.

II Corinthians 5 1◀

Book / Chapter / Verse

Note: Type the initial letters of a book and the title will be completed for you. For example, type *la* for *Lamentations*, *le* for *Leviticus* or *lu* for *Luke*.

## Finding Bible Verses

---

To find a book that has more than one volume, you need to type the numeral first. For example, to find // *Corinthians 5 1*, type *2co51*.

To type numbers, hold **fn** and press *q-p*.

### 3. Press **ENTER** to read.

*This Earthly Tabernacle*

**5:1** ☺) For we know that if our earthly house of *this* tabernacle were dissolved, we have a building of God, an house not made with hands, eternal in the heavens.  
**5:2** For in this we groan, earnestly desiring to be clothed upon with our

### 4. Use **↓**, **fn**+**↓** or **SPACE** to scroll down.

### 5. Press **CLEAR** when done.

## Searching for Words

Just as if you were using a concordance, you can search for almost any word or phrase in this Bible. Simply enter search words to find their occurrences, or matches.

1. Press **SEARCH**.
2. Type your search word(s). For example, type *kingdom of God*.

You can type up to 35 letters. To type a space, press **SPACE**.

Note: You cannot search for common words such as *and* and *the* on their own.

3. Press **ENTER** to start the search.

Type words, press **ENTER**.

kingdom of 366 Matches

Press **MENU** for other options.

[366] Holy Bible (KJV)	Setup
Old Testament	[274]
New Testament	[90]
Devotional	[2]

After a word search, only those books with matches are listed in the Menu.

## Searching for Words

4. Use **↑** or **↓** to highlight the menu item you want, and press **ENTER** to see the name(s) of the book(s) with the matches. For example, select *New Testament*.

[90] New Testament	
Matthew	[5]
Mark	[15]
Luke	[32]
John	[3]
Acts	[9]

You may also hold **m** and press **ENTER** to go directly to the text. You will go to the first match.

5. Use **↑** or **↓** to highlight the book you want, and press **ENTER** to see the name(s) of the chapters with the matches. For example, select *Luke*.

[32] Luke
Chapter 4
Chapter 6
Chapter 7
Chapter 8
Chapter 9

## Searching for Words

6. Use **↑** or **↓** to highlight the chapter you want, and press **ENTER** to see the text. For example, select **Chapter 6**.

*The Beatitudes*

**6:20** And he lifted up his eyes on his disciples, and said, Blessed be ye poor: for yours is the kingdom of heaven.

**6:21** Blessed are ye that hunger now: for ye shall be filled. Blessed are ye that weep now: for ye shall

Note that the main search words are boxed.

7. Press **(fn)+→** or **(fn)+←** to see the next or previous match (if any).
8. Press **(CLEAR)** when done.

### ▶ If You Misspell Words

If you enter a misspelled word, or enter a word not in this Bible, spelling corrections appear. Select the correction that you want from the list, or press **(BACK)** to change your request.

## Searching for Words

### ▶ Using MatchMaker

Your Bible has a MatchMaker feature to help you find words. If you are unsure of the spelling or completion of a word, use **\*** to stand for one or more letters in a word. For example, to find *Zaphnathpaaneah*, type *zaph\**.

Matches for **zaph\***

Zaphnathpaaneah  
Zaphon

Press **(ENTER)** to select the highlighted word.

You can either continue to highlight a menu item and press **(ENTER)** till you come to text, or you can hold **(fn)** and press **(ENTER)** to go directly to the text.

**41:45** And Pharaoh called Joseph's name Zaphnathpaaneah: and he gave him to wife Asenath the daughter of Potipherah priest of On. And Joseph went out over all the land of Egypt.

**41:46** And Joseph was thirty years old when he stood before Pharaoh

## Expanding Your Search

You can expand your search to find inflections, synonyms and similar words.

1. Press **SEARCH**.
2. Type your search word(s) and press **ENTER**. For example, type **benefit**.

Type words, press **ENTER**.

benefit 8 Matches

Press **MENU** for other options.

3. Press **MORE** to expand the search.

[8] Holy Bible (KJV) Setup  
Old Testament [5]  
New Testament [3]  
1302 Matches

[1302] Holy Bible (KJV) Setup  
Old Testament [903]  
New Testament [386]  
Index [7]  
Devotional [6]

To learn how to view the matches, please see "Searching for Words." You will find that your matched words include *good*, *profit*, *sake*, *serve* and so on.

## Highlighting Search Words

You can also search for a word by highlighting it in a verse. Try this example.

1. Go to **Isaiah 12:2**.

To learn how, see "Finding Bible Verses."

2. Press **ENTER** to start the highlight.

12:2 ☺) **Benefit** God /s/ my salvation; I will trust, and not be afraid; for the LORD JEHOVAH /s/ my strength and my song; he also is become my salvation.  
12:3 Therefore with joy shall ye draw water out of the wells of salvation.

To turn the highlight off, press **BACK**.

3. Use the arrow keys to highlight **salvation**.
4. Press **ENTER** to search for the highlighted word.

[167] Holy Bible (KJV) Setup  
Old Testament [115]  
New Testament [43]  
Index [4]  
Devotional [5]

To learn how to view the matches, please see "Searching for Words."

5. Press **CLEAR** when done.



## Viewing Footnotes

Whenever you see a **[N]** after a word in a verse, that word has a footnote. You can easily view these footnotes. Try this example.

### 1. Go to *Psalms 18:2*.

To learn how, see “Finding Bible Verses.”

**18:2** ☺ The LORD *is* my rock, and my fortress, and my deliverer; my God, my strength, in whom I will trust; my buckler **[N]**, and the horn of my salvation, *and* my high tower.

**18:3** I will call upon the LORD, *who is worshipped*: so shall I

Notice the footnote marker.

### 2. Press **(NOTE)**.

*buckler*: shield, hand-shield

### 3. Press **(BACK)** to return to the verse.

## Understanding Footnotes

The footnotes in this Bible have been added by Franklin Electronic Publishers to clarify the meaning of archaic English words. These footnotes are not part of the original King James Bible.

## Viewing Footnotes

### ► When More Than One Footnote Marker Appears

Sometimes more than one **[N]** appear on the screen.

branches of the same, according to the six branches that proceed out of the candlestick **[N]**.  
**25:36** Their knobs **[N]** and their branches shall be of the same: all it *shall be* one beaten work of pure gold.  
**25:37** And thou shalt make the

Pressing **(NOTE)** highlights the first **[N]**. Press **(NOTE)** repeatedly until it highlights the **[N]** that you want.

branches of the same, according to the six branches that proceed out of the candlestick **[N]**.  
**25:36** Their knobs **[N]** and their branches shall be of the same: all it *shall be* one beaten work of pure gold.  
**25:37** And thou shalt make the

Press **(ENTER)** to view its footnote.

*knop*: ornamental knob

Press **(BACK)** to go back to the verse.

 
## Using Bookmarks

### Adding and Viewing Bookmarks

You can add up to 50 bookmarks to the text of this book for quick reference.


**1. Press **MARK** at any verse to place a bookmark.**

You will see a menu with “Add bookmark” highlighted. Press **ENTER** to add the bookmark.



The **M** marks its placement.

 - 2. Press **MARK** to view your bookmark list.**
- 3. Press **↓** to highlight a verse.**



This is a sample list.

- 4. Press **ENTER** to view its verse.**

## Using Bookmarks

 
### Deleting a Bookmark

You can delete any bookmark you want. Note: If you reset your unit, all your bookmarks will be lost.

- 1. Press **MARK** to view your list of bookmarks.**
- 2. Select and go to the verse whose bookmark you wish to remove. For example, if you had *John 1* on your bookmark list, go to the text of *John 1*.**

To learn how, please see “Adding and Viewing Bookmarks.”

- 3. Press **MARK** again.**



Remove: ..., (the last viewed bookmark) appears as the first list item, and is highlighted.

- 4. Press **ENTER** to remove the bookmark.**

## Transferring Words Between Books

This Bible can transfer words to certain BOOKMAN book cards. To send a word to another book, you must first install a book card in your unit, and that book card must be able to send or receive words. To learn if a book card can send or receive words, read its User's Guide.

### 1. Highlight a word in this Bible.

To highlight a word in Bible text, press **ENTER** to start the highlight, and use the arrow keys to move the highlight to the word you want.

### 2. Hold **fn** and press **CARD**.

### 3. Highlight the icon of the other book.

### 4. Press **ENTER**.

The word you highlighted appears in the other book.

### 5. Press **ENTER** again if needed to search for that word.

## Resetting Your Unit

If the keyboard fails to respond, or if the screen performs erratically, follow the steps below.

 
### 1. Hold **CLEAR** and press **ON/OFF** (on/off).

If nothing happens, try Step 2.

### 2. Use a paper clip to gently press the reset button on your unit.

The reset button is recessed in a pin-sized hole to the right of the book card slot.

**Warning!** Pressing the reset button with more than light pressure may permanently disable your unit. In addition, resetting your unit erases settings and information entered in its built-in book, and in an installed book card.

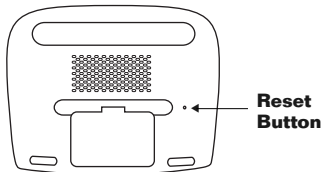

## Specifications

---

### **Model KJB-1840**

- Batteries: 4 AAA
- Size: 15 x 11.8 x 3.0 cm.
- Weight: 7 oz. without batteries

© 1999 Franklin Electronic Publishers, Inc., Burlington, NJ 08016-4907 USA.

All rights reserved.

Scripture taken from the Holy Bible, King James Version.

U.S. Patents: 4,406,626; 4,490,811;  
4,830,618; 4,891,775; 5,113,340;  
5,203,705; 5,218,536; 4,982,181;  
5,295,070; 5,153,831; 5,497,474;  
5,249,965; 5,321,609; 5,396,606;  
5,627,726 5,640,552.

German Pat.: M9409744.5.

European Patent: 0 136 379.

PATENTS PENDING.

ISBN 1-56712-534-4


## Limited Warranty (outside U.S.)

---

This product, excluding batteries, is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

This unit may change operating modes due to Electrostatic Discharge. Normal operation of this unit can be re-established by pressing the reset key,  (on/off), or by removing/replacing batteries.

# Limited Warranty (U.S. only)

---

## **LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY**

**(A) LIMITED WARRANTY.** FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

**(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY.** EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS FRANKLIN IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT. YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

**(C) WARRANTY SERVICE:** UPON DISCOVERING A DEFECT, YOU MUST CALL FRANKLIN'S CUSTOMER SERVICE DESK, 1-800-266-5626, TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PRODUCT (TRANSPORTATION CHARGES PREPAID) TO:

FRANKLIN ELECTRONIC PUBLISHERS, INC.  
ATTN: SERVICE DEPARTMENT  
ONE FRANKLIN PLAZA  
BURLINGTON, NJ 08016-4907

IF YOU RETURN A FRANKLIN PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA, YOUR NAME, ADDRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ORIGINAL DATE OF PURCHASE. YOU MAY ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT. OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.

## FCC Notice

---

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

# Index

---

**\* 7, 14**

**? 7, 10**

**AC Adaptor Jack 4**

**Book card color keys 6**

**Bookmarks**

adding 17

deleting 17

viewing 17

**CARD key 7, 18**

**Color Keys 7**

**Demonstration, viewing the 8**

**FCC Notice 21**

**Finding verses 12**

**Footnotes 16**

**Headphone Jack 4**

**Hearing Devotional verses 11**

**Help 6**

**Highlighting Words 15**

**Index, using the 10**

**Installing**

batteries 5

book cards 5

**Key Guide 7**

**Limited Warranty**

outside U.S. 19

U.S. only 20

**MARK key 7, 17**

**MatchMaker 14**

**Menu, using the 9**

**MORE key 7, 15**

**NOTE key 7, 16**

**Resetting Your Unit 18**

**Resuming 10**

**SAY key 11**

**Screen illustrations 5**

**Search**

expanding your 15

for words 13

**SEARCH key 7, 13**

**Selecting a book 6**

**Settings, changing the 8**

**Speaker 4**

**Special Features 4**

**Specifications 19**

**Transferring Words 18**

**Tutorial, viewing the 8**

**Volume Control 4**

**Where am I 10**



**Franklin**®  
Electronic Publishers  
[www.franklin.com](http://www.franklin.com)