
BAXTER 3 Door Credenza

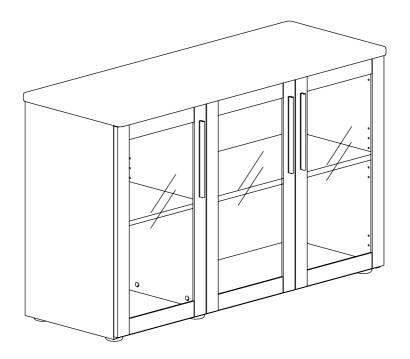

Please write down the Model & Serial number(s) from each carton in the space provided below and retain this manual for future reference.

Model No.:	 	
Serial No.:		

IMPORTANT

Please follow these assembly instructions.


This will save time, make assembly easier and prevent possible damage to your Unit.

Assistance may be required for some assembly procedures, correct assembly is your responsibility.

It is recommended that the Unit is assembled on a soft surface such as carpet.

For improvement purposes, design and specifications are subject to change without notice.


Unpack & Identify Parts

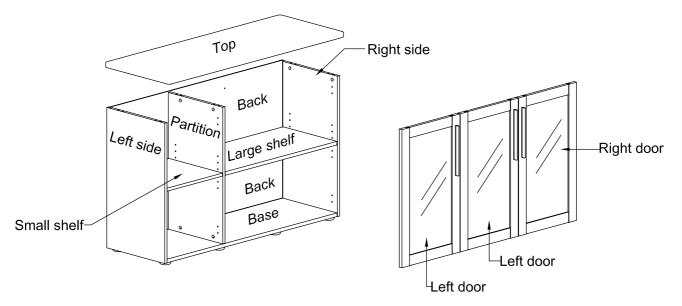

Carton contents

Part Description	Quantity	Part Number Oak Chocolate
Тор	1	M23461A1LH
Base	1	M23462A1LH
Left side	1	M21331A2LH
Right side	1	M21332A2LH
Partition	1	M21336A2LH
Large shelf	1	M19366A4LH
Small shelf	1	M19448A4LH
Left doors	2	M23452A1LH
Right door	1	M23470A1LH
Backs	2	M23463A1LH
Joining strip	1	M23464A0U0
Glides	6	P815048
Handles	3	P816246
Door hinges	6	P816262
Hardware pack	1	MH1596A0

 Tool Required:



Customer Service

www.criterionfurniture.com

AUSTRALIA - CALL 1800 629 580 OR FAX 1800 639 580 NEW ZEALAND - CALL 0800 274 837 OR FAX 0800 119 444

FOR MISSING OR FAULTY PARTS: PLEASE RECHECK YOUR PACKAGING TO ENSURE THAT PARTS ARE MISSING, THEN CONTACT YOUR CLOSEST SERVICE CENTER, PROVIDING THE DETAILS 1 - 6 BELOW:-

- 1. MODEL NUMBER OF THE UNIT PURCHASED
- 2. COPY OF YOUR PURCHASE SLIP
- 3. DESCRIPTION OF THE MISSING PART
- 4. PART NUMBER OF THE MISSING PART
- 5. QUANTITY OF THE PARTS MISSING
- 6. SERIAL NUMBER OF THE UNIT PURCHASED (LOCATED UNDER SHELF)

POST DETAILS AS REQUESTED IN 1 - 6 INCLUSIVE TO:-

AUSTRALIA HELP DESK NEW ZEALAND HELP DESK

P.O.BOX 4666 P.O. BOX 58 646
MILPERRA BOTANY
NSW 1891 MANUKAU 2163
AUSTRALIA NEW ZEALAND.

MAKE SURE YOU INCLUDE YOUR ADDRESS

IMPORTANT: - MISSING PARTS WILL NOT BE REPLACED UNLESS THE INFORMATION REQUESTED IS FULLY SUPPLIED.

 
Hardware Contents:



Cam P820015T x 12



Connector rod P820016T x 12



Dowel P800201 x 6



Screw P860036 x 10



Screw CSK P860008A x 12



(C)

Screw P860249 x 6



Hinge mount P816260 x 6

 


Shelf Supports P840048 x 8




Bump-on P840022 x 6


Loose Hardware:



Glide P815048 x 6

 


Door hinge P816262 x 6

 



Handle P816246 x 3

 
Tools Required:




Phillips No.2 Screwdriver

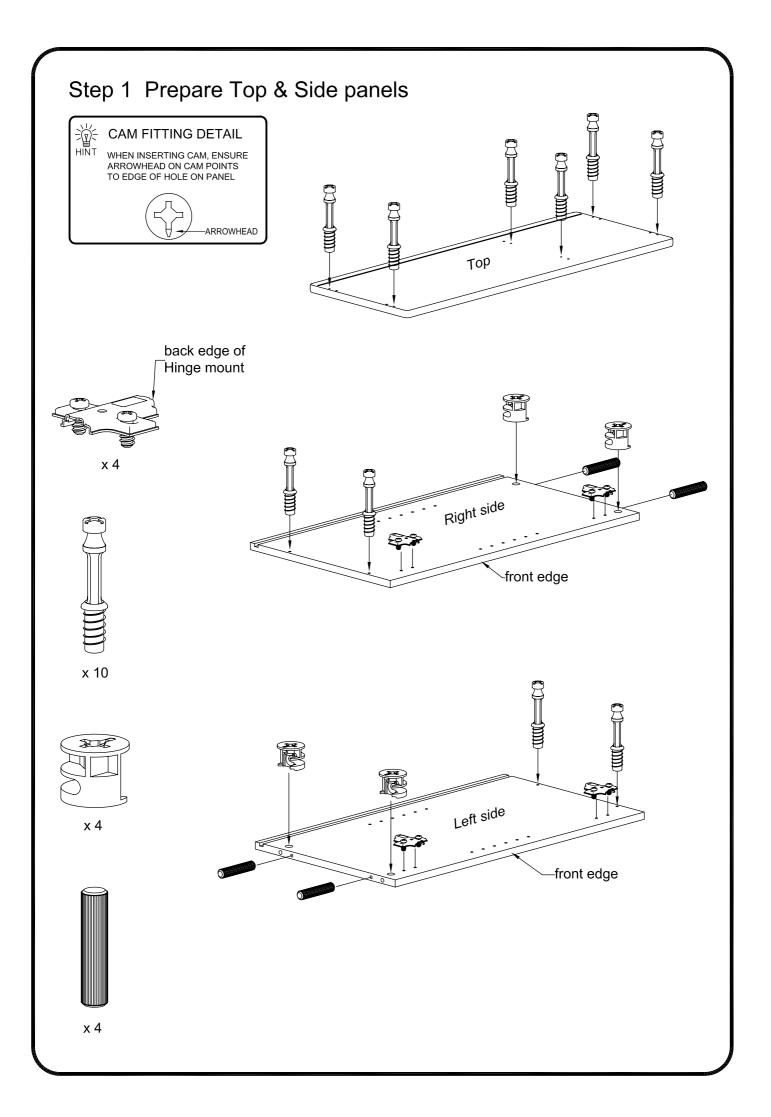

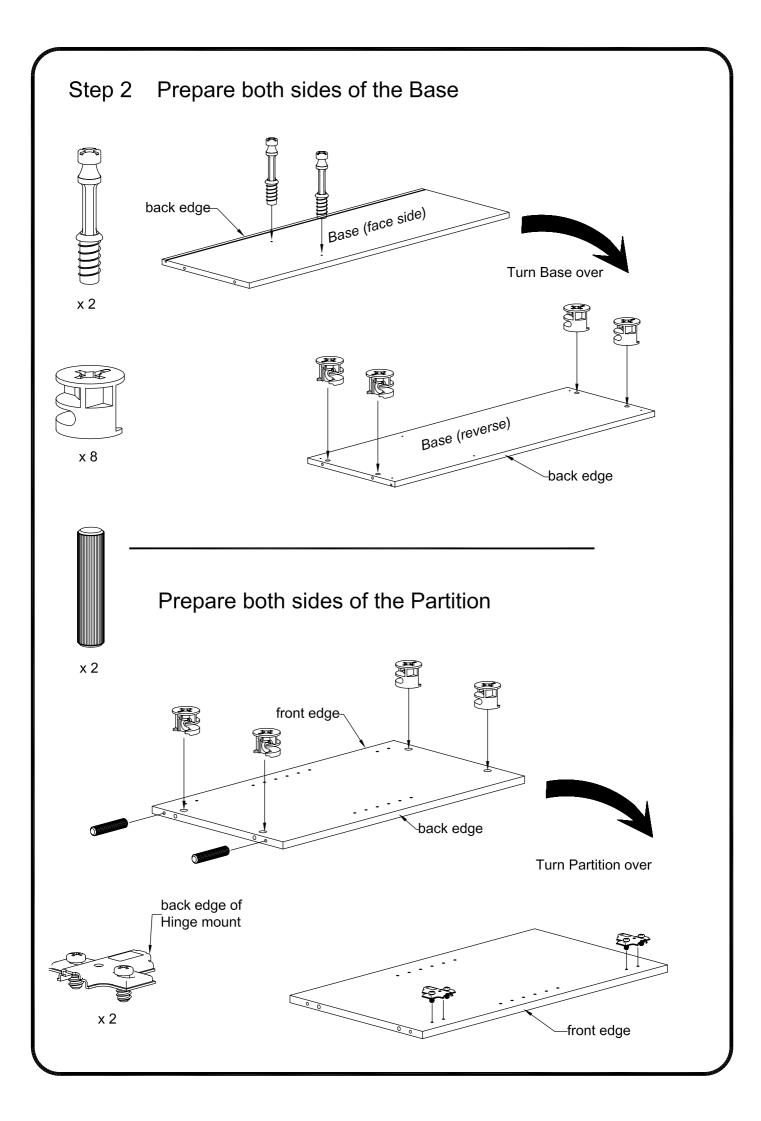

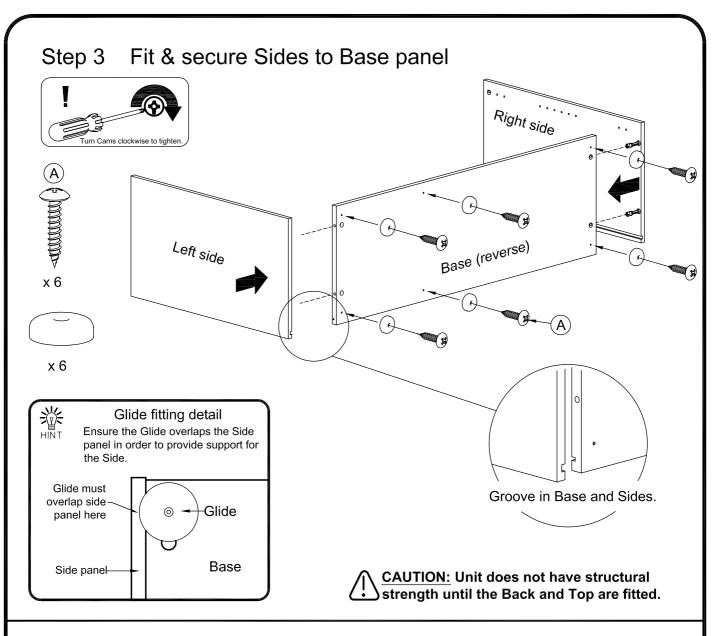

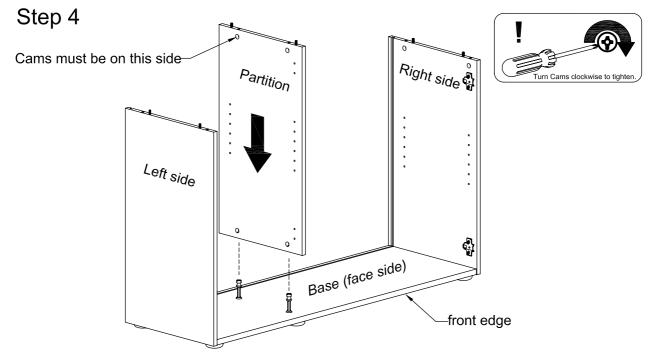


Carefully lift assembly into upright position, taking care to avoid placing any unnecessary strain on either


Side panel.


Step 5 Fit Backs to Unit

CAUTION: Unit does not have structural strength until the Backs and Top are fitted.

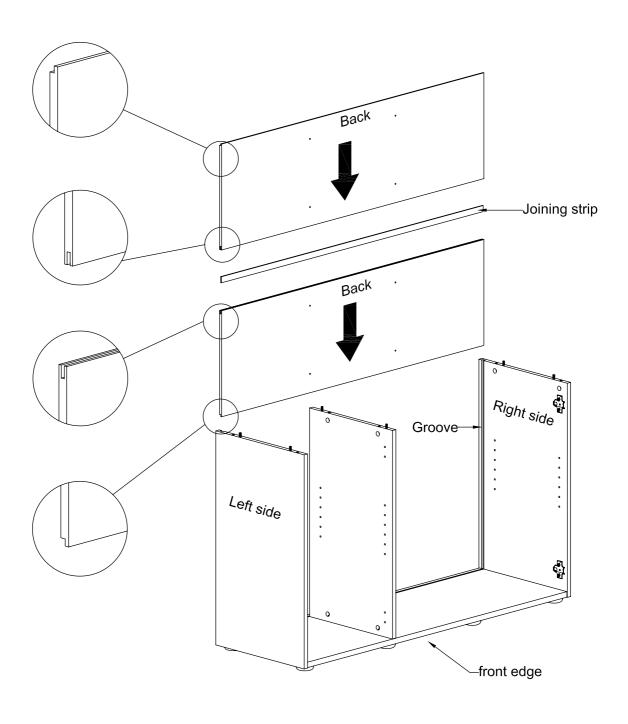

Step 6 Secure Top to Unit

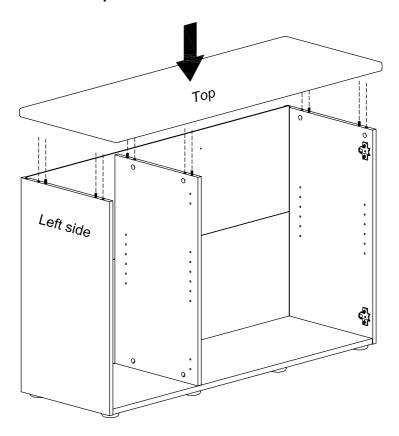


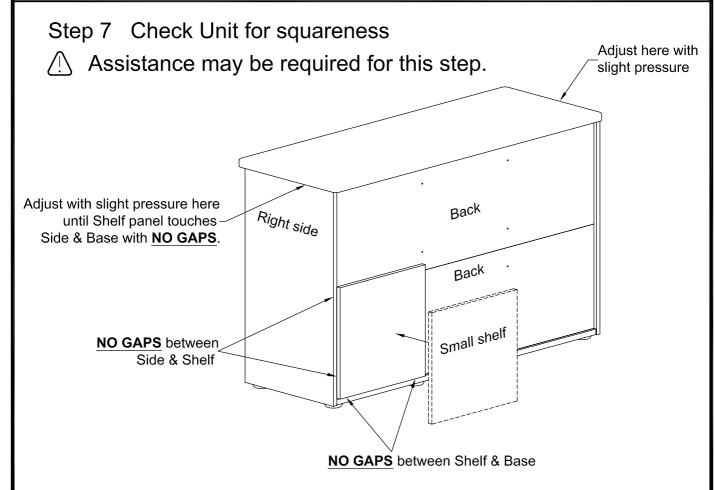

Use the Small shelf to test for squareness before securing the Backs to the Unit in Step 9.

Step 8 Secure Backs to Partition




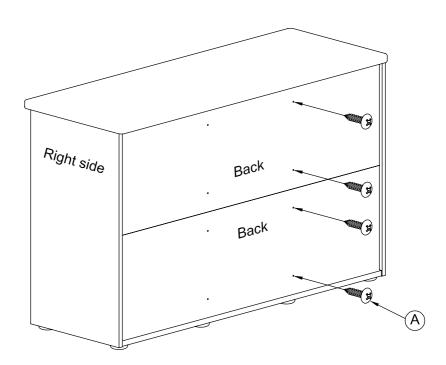


Step 9 Fit Shelf supports & Shelves





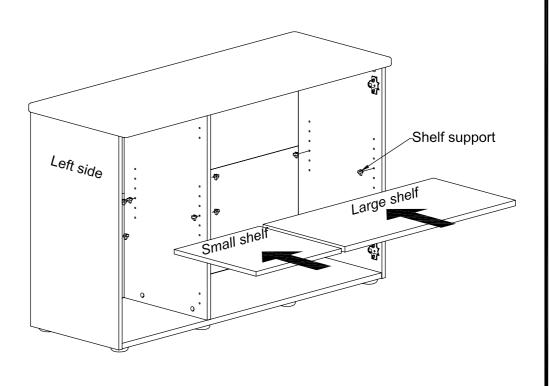


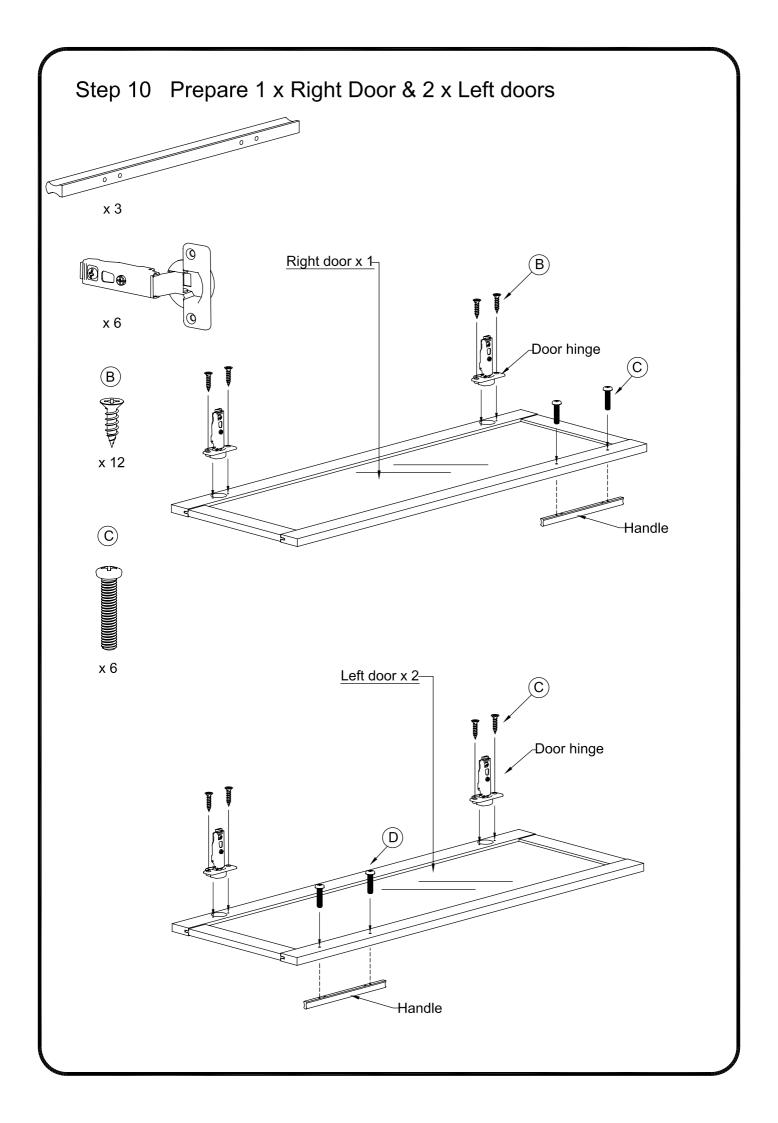

Step 11 Fit Doors to Unit



x 6

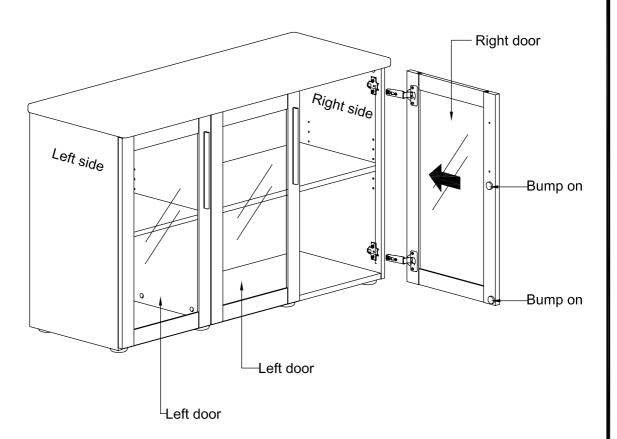


Ensure the Bump ons are in line with the Shelves and Base when the Doors are closed. Refer to Door attachment & adjustment overleaf.

<u>CAUTION:</u> We recommend that all contents stored in or on this item of furniture be removed before shifting it. The Manufacturer will not be held liable for damage caused when furniture is shifted without first removing the contents. Do not drag the furniture while shifting.

HINGE & DOOR ATTACHMENTS


- Position the Door Hinge onto the Hinge Mount.
- Push the Door Hinge toward the Hinge Mount until it clicks into position.

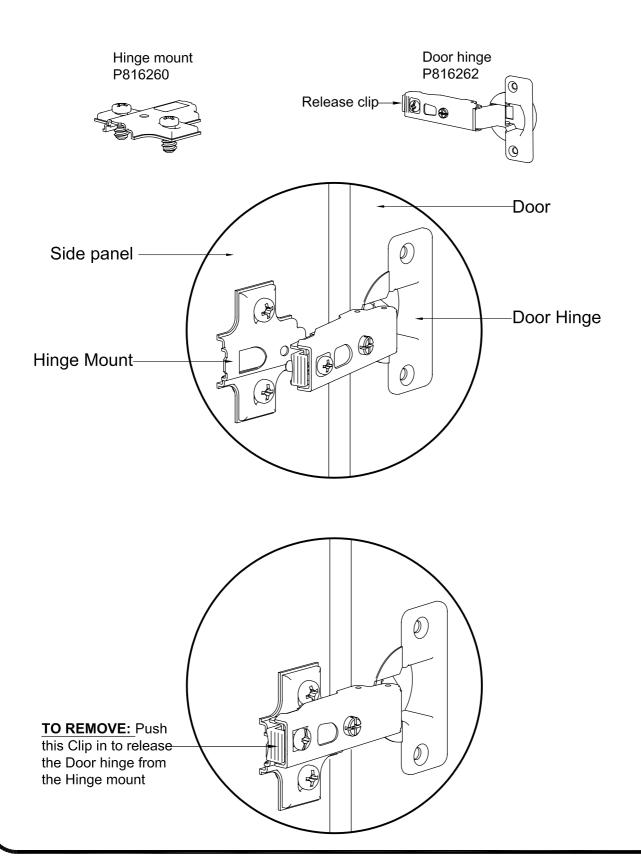

H I N G E & D O O R


ADJUSTMENTS


• <u>NOTE:</u> Before each adjustment step, please ensure that you open and close each Door to check for any obstructions between the Door and vertical panels of the Unit.

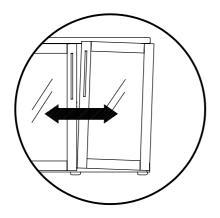

Lateral adjustment Side to side


The adjustment is made turning the screw on the hinge arm.

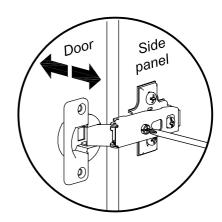


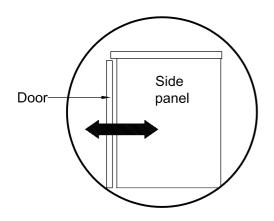

Horizontal adjustment In & Out


This is done by turning the adjustment screw

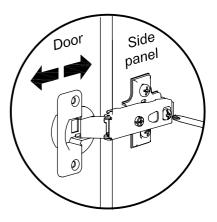

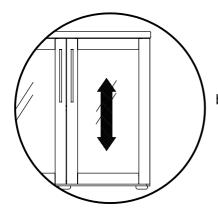

Vertical adjustment Up-Down

The adjustment requires that the mounting screws be loosened, the door moved and the screws re-tightened.

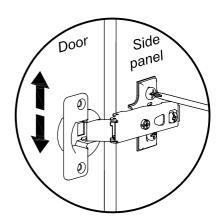

Surface Care Instructions

A little care and attention will extend the life and good looks of your furniture. Take care when using materials which might spill or sharp or abrasive objects which could damage the surface of your furniture.

Normal Cleaning

For normal dusting use a soft, dry, clean cloth.

Glass Cleaning For Frosted Glass

Do not use glass cleaner or solvent based cleaners on the surface of the glass that has the frosting effect.

Spills and Soiling

Most spills and soiling maybe removed with a non-abrasive multi surface household cleaner. Apply a small amount onto the surface then remove with a soft, clean cloth.

NB: It is recommended that your multi-surface cleaner is first tested on an unseen patch prior to cleaning.

Marks, Scratches and Surface damages

As with all furniture, these can never be properly repaired.

CAUTION

Under no circumstances must any form of abrasive be used as this will damage the surface.

Do not use solvents, solvent based cleaners, scouring pads, steel wool, furniture wax or scrubbing brushes.

As with all indoor furniture, this unit should not be exposed to direct sunlight, extreme temperatures or moisture, as this can result in serious irreparable damage.

NB: The sooner a stain or spill is cleaned, the easier it will be to remove.

PLEASE KEEP THIS INFORMATION FOR FUTURE REFERENCE.