


Assembly Instructions

Hinge Adjustment


- Follow instructions closely as deviation from them may void your warranty and present a possible safety risk.
- If you experience any problems with your new purchase please phone Freedom Customer Service (FCS) on 1300 135 588 (Customers outside Australia should contact their closest Freedom store.)

Lateral Movement

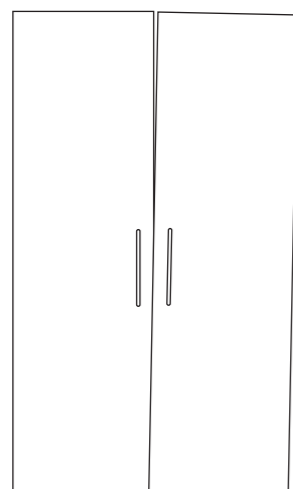

What it looks like

- The door will not be flush with the side panel.

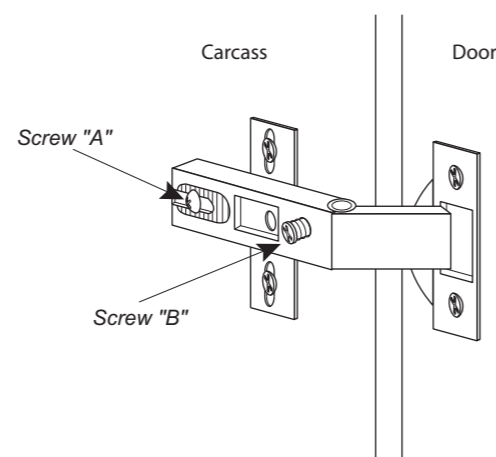


How to fix it

- To move the door towards the centre of the unit, loosen Screw "A". Adjust the door and then tighten Screw "B".
- To move the door away from the centre of the unit, loosen Screw "B". Adjust the door and then tighten Screw "A".

Assembly Instructions


Hinge Adjustment

Vertical Movement

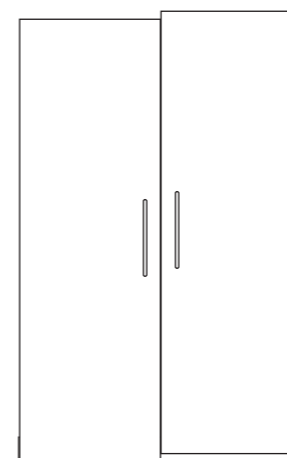

What it looks like


- The door will not be flush with the vertical panel.

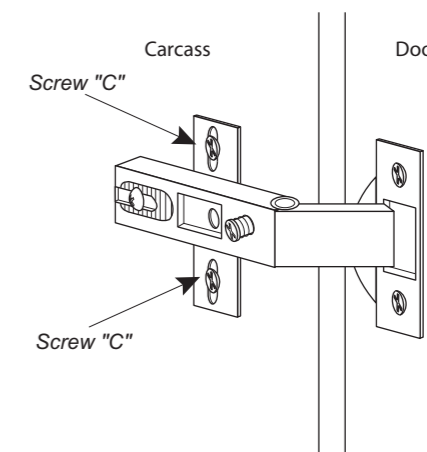

How to fix it


- To move the door towards or away from the horizontal panels, loosen Screws "C". Adjust the door and then tighten Screws "C".

 Horizontal Movement



What it looks like

- The door will appear too far or too close from the front edge of the side panel.

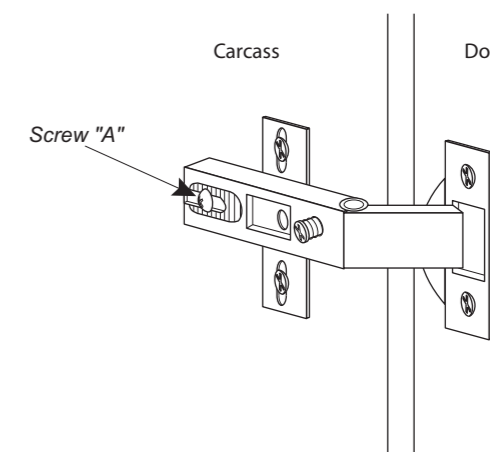

How to fix it

- To move the door towards or away from the unit, loosen Screw "A". Adjust the door forwards or backwards until there is an even gap between the door and the front edge of the side panel.
- Tighten Screw "A" once the adjustment has been made.