



DIGITAL CAMERA

FinePix 4800 Zoom

digital
Tools for the Imagination.



OWNER'S MANUAL

This manual will show you how to use your FUJIFILM DIGITAL CAMERA FinePix4800ZOOM correctly. Please follow the instructions carefully.

Getting Ready **1**

Basic Photography **2**

Advanced Features
Photography **3**

Advanced Features
Playback **4**

Settings **5**


PC Connection **6**

BL00007-200 (1)



Warning

 To prevent fire or shock hazard, do not expose the unit to rain or moisture.



CAUTION : TO REDUCE THE RISK OF ELECTRIC SHOCK,
DO NOT REMOVE COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The graphical symbols are located on the bottom
of the case.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For customers in the U.S.A.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Grant:

To comply with Part 15 of the FCC rules, this product must be used with a Fujifilm-specified ferrite-core video cable, USB cable, and DC supply cord.

For customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

Please read the Safety Notes (P.127)
and make sure you understand them
before using the camera.

Contents

Warning	2
Preface	6
Camera Features and Accessories	7
Nomenclature	8

1 Getting Ready

PREFACE	15
Selecting the Language	15
Attaching the Strap	15
SETTING UP THE CRADLE	16
LOADING THE BATTERY	17
CHARGING THE BATTERY	18
USING THE AC POWER ADAPTER	19
LOADING THE SmartMedia™	20
REMOVING THE SmartMedia™	21
SWITCHING ON AND OFF	22
SETTING THE DATE AND TIME	23

2 Basic Photography

TAKING PICTURES (AUTO MODE)	25
Number of Available Frames	30
USING AF/AE LOCK	31
FRAMING GUIDELINE FUNCTION	33
VIEWING YOUR IMAGES (PLAYBACK)	34
FAST FORWARDING IMAGES	35
PLAYBACK ZOOM	36
Saving Trimmed Images	37
MULTI-FRAME PLAYBACK	38
ERASING SINGLE FRAME	39
4 USING A TV MONITOR	41

3 Advanced Features Photography

ADVANCED FEATURES PHOTOGRAPHY	42
■ Photography mode specifications	42
[PHOTOGRAPHY MODE]	
[] AUTO/SP SCENE POSITION	43
[] PORTRAIT SCENE (LANDSCAPE)	44
[] NIGHT SCENE BLACK AND WHITE	44
[] MANUAL	45
[] CONTINUOUS SHOOTING	46
[] MOVIE (VIDEO)	47
[] AUDIO RECORDING	50
FLASH PHOTOGRAPHY	52
[] Auto Flash Mode	53
[] Red-Eye Reduction	53
[] Forced Flash	54
[] Slow Synchro	54
[] Suppressed Flash	55
[] MACRO (CLOSE-UP) PHOTOGRAPHY	56
DIGITAL ZOOM	57
[PHOTOGRAPHY MENU]	
PHOTOGRAPHY MENU OPERATION	58
Switching Pages	58
[] SELF-TIMER PHOTOGRAPHY	59
[] VOICE CAPTIONING	61
[] AUTO BRACKETING	63
[] WHITE BALANCE	64
[] SENSITIVITY	65
[] MANUAL FOCUS	65
[] SHARPNESS	66
[] FLASH (FLASH BRIGHTNESS ADJUSTMENT)	67
[] EV (EXPOSURE COMPENSATION)	67

[] MULTI-EXP	68
[] PHOTOMETRY	70

4 Advanced Features Playback

ADVANCED PLAYBACK	71
■ Playback mode menu	71
MOVIE (VIDEO)	72
PLAYING BACK AUDIO RECORDINGS	74
PLAYING BACK VOICE MEMOS	76
[PLAYBACK MENU]	
[] ERASING SINGLE • ALL FRAMES/FORAMTING	78
[] PLAYBACK (AUTOMATIC PLAYBACK)	80
[] SETTING AND REMOVING	
SINGLE FRAME PROTECTION	81
SETTING AND REMOVING PROTECTION	83
FOR ALL FRAMES	83
[] HOW TO SPECIFY PRINT OPTIONS	85
[] DPOF DATE SETTING	86
[] DPOF SET FRAME	87
[] DPOF REVIEW/RESET	89
[] DPOF RESET ALL	90

5 Settings

IN SETTINGS	92
■ List of Settings	92
■ SET-UP menu options	92
USING THE OPTION MENU	93
Using SET-UP	93
[] SETTING THE FILE SIZE AND QUALITY	
(COMPRESSION RATIO)	94
[] LCD MONITOR BRIGHTNESS/VOLUME	95

SET-UP

IMAGE DISPLAY	96
Preview Zoom	96
Selecting Recorded Images	97
AUTO POWER SAVE	98
SETTING THE STARTUP SCREEN	99
FRAME NO. MEMORY	100

6 PC Connection

IN PC CONNECTION	101
CONNECTING AT DSC MODE	102
CONNECTING AT PC-CAMERA MODE	104
DISCONNECTING FROM THE PC	106
CAMERA CUSTOMIZING	107

System Expansion Options	108
Accessories Guide	109
Notes on Using Your Camera Correctly	111
Notes on the Power Supply	112
Notes on Using the Battery	112
AC Power Adapter	114
Notes on the SmartMedia™	115
Warning Displays	117
Troubleshooting	120
Specifications	124
Explanation of Terms	126
Safety Notes	127
EC Declaration of Conformity	131

Preface

■ Test Shots Prior to Photography

For particularly important photographs (such as weddings and overseas trips), always take a test photograph and view the image to make sure that the camera is functioning normally.

- Fuji Photo Film Co., Ltd. cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photography) incurred as a result of faults with this product.

■ Notes on Copyright

Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless intended only for personal use. Note that some restrictions apply to the photographing of stage performances, entertainments and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

■ Liquid Crystal

If the LCD monitor or display panel is damaged, take particular care with the liquid crystal in the monitor or panel. If any of the following situations arise, take the urgent action indicated.

- If liquid crystal comes in contact with your skin
Wipe the area with a cloth and then wash thoroughly with running water and soap.
- If liquid crystal gets into your eye
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed
6 Flush your mouth thoroughly with water. Drink large

quantities of water and induce vomiting. Then seek medical assistance.

■ Notes on Electrical Interference

If the camera is to be used in hospitals or aircrafts, please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations.

■ Handling Your Digital Camera

This camera contains precision electronic components. To ensure that images are recorded correctly, do not subject the camera to impact or shock while an image is being recorded.

■ Trademark Information

- IBM PC/AT is a registered trademark of International Business Machines Corp. of the U.S.A.
- iMac and Macintosh are registered trademarks of Apple Computer, Inc.
- Windows is a registered trademark of the Microsoft Corporation of the U.S., registered in the U.S.A. and other countries. Windows is an abbreviated term referring to the Microsoft Windows Operating System.
- SmartMedia is a trademark of Toshiba Corporation.
- Other company or product names are trademarks or registered trademarks of the respective companies. Trademark Information.

■ Explanation of Color Television System

NTSC: National Television System Committee, color television telecasting specifications adopted mainly in the U.S.A., Canada and Japan.

PAL: Phase Alternation by Line, a color television system adopted mainly by European countries and China.

Camera Features and Accessories

Features

- The newly developed "Super CCD" (featuring a total of 2.4 million pixels) used in the FinePix4800 ZOOM provides ultra-high resolution image file with 4.32 million (2400 x 1800) pixels.
- Built-in 3x zoom lens with a low-dispersion aspherical lens for superb optical performance
- Compact and lightweight aluminum-magnesium alloy body
- New camera design by F. A. Porsche
- Quick, responsive operation with 2 seconds startup and 1-second between shots
- Auto focus with macro function (manual focus also available)
- Automatic shooting modes that can be tailored to subjects in different photography conditions
- Convenient preview function for quickly checking of your shots
- Maximum 4.4x seamless digital zoom at VGA mode
- Playback zoom function (up to 15x)
- Continuous shooting function even at maximum resolution
- Movie shooting function (320 x 240 pixels with sound)
- Voice Captioning function for easy photography information recording
- Audio Recording function
- 2-inches 130,000-pixels low-temperature polysilicon TFT LCD monitor
- Dot-matrix display panel simplifies camera operation
- Recharge or connect to your PC simply by placing the FinePix4800 ZOOM in its cradle
- Easy high-speed image file transfer via the USB connection
- Supports DPOF (Digital Print Order Format) for simple print ordering
- Conforms to the new standard for digital camera file system*
* Design rule for Camera File System

Accessories

- SmartMedia (16MB, 3.3V) (1)
Supplied with:
 - Anti-static case (1)
 - Index label (1)



- NP-80 Rechargeable Battery (1)



- AC Power Adapter AC-5V/AC-5VH (approx. 2 m (6.6 ft.) connection cord) (1)



- Cradle (Picture Cradle) (1)



- Video Cable (approx. 1.5 m (4.9 ft.), mini-plug (3.5 mm dia.) to pin-plug cable) (1)





- Hand strap (1)

- Interface Set (1)
 - CD-ROM (1)
 - Special USB cable with Noise Suppression core (1)
 - Software Quick Start Guide (1)

- Owner's Manual (this manual) (1)

Nomenclature

* Refer to the pages in parentheses for more details.

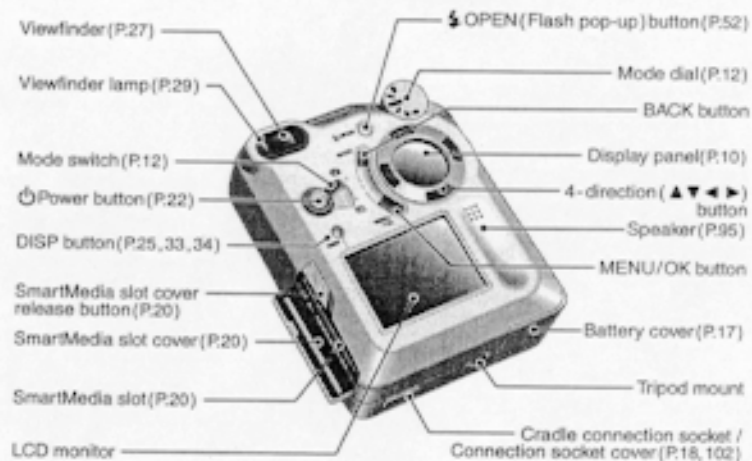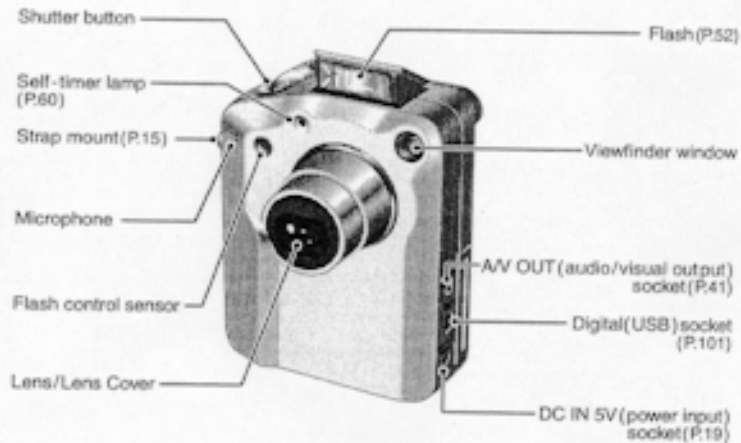

Nomenclature

Display Panel

The display panel uses icons to show the camera's operation status as an aid to the camera user. Use the 4-direction button as indicated by the displayed icons.



* The display panel can be used to check and modify camera settings such as the photography or playback mode, the number of available shots, the flash settings and the macro setting.


* The display panel glows orange for 5 seconds when you are taking pictures (except when you press the shutter button) and green for 5 seconds when you are playing back images or sounds.

Display Details

Photography	Mode	Auto • Portrait • Scene • Night Scene • Black and White • Manual • Continuous shooting • Movie • Audio recording • Option • Zoom
	4-direction button	▲ Up • ▼ Down • ◀ Left • ▶ Right
	Zoom	Telephoto • Wide-angle
	Preview Zoom	Zoom Up • Zoom Down
	Flash	Auto • Red-Eye Reduction • Forced Flash • Slow Synchro • Suppressed Flash
	Macro	ON • OFF
Playback	Manual Focus	Moves the focus closer • Moves the focus further away
	Mode	Still images • Movie • Audio recording • Zoom/Trimming • Playback progress • Pause • Option
	Frame Advance	Previous Image • Next Image
	Playback Zoom	Zoom Up • Zoom Down
	Movie Playback	Play/Pause • Fast forward • Rewind • Stop • Movie frame advance
	Audio recording/Voice captioning	Play/Pause • Fast forward • Rewind • Stop • Skip playback

Nomenclature


Mode switch

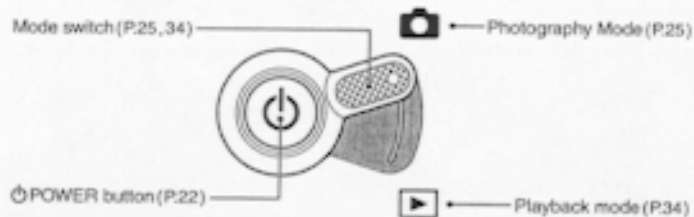


Mode dial



Example of Monitor Text Display: Shooting

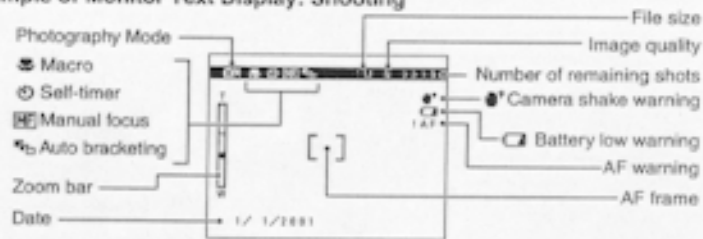


Example of Monitor Text Display: Playback

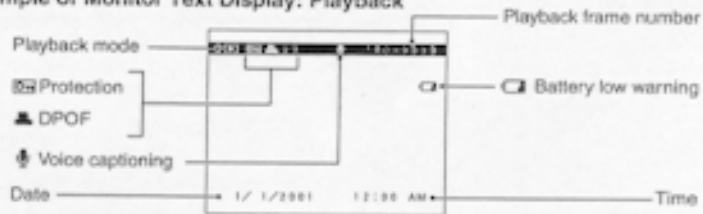

Nomenclature

Cradle

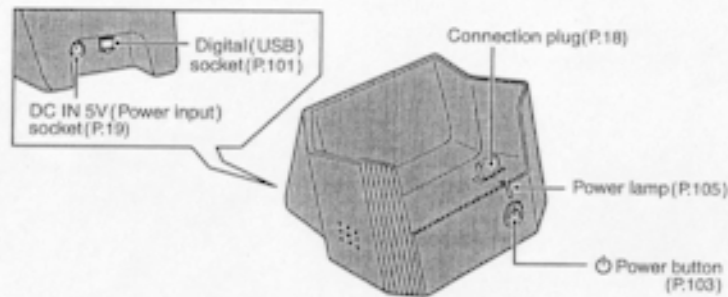

◆ The Cradle ◆

The cradle is a powerful tool for expanding the functionality of your camera:

- When you are not using the camera, you can place it in the cradle to charge the battery (⇒P.18).
- You can use the cradle's USB interface to quickly transfer image files to your PC (⇒Card Reader Mode on P.102).
- Use the cradle for videoconferencing via the Internet (⇒"PC-Camera Mode" on P.104).
- You must connect the AC power adapter and the special USB cable provided in the USB Interface Set to the cradle (⇒P.16, 101).

Selecting the Language




You can use the "SET-UP" screen on this camera to select ENGLISH or FRENCH as the LANGUAGE used for screen display (⇒P.92). The screens in this manual are shown in ENGLISH.

Attaching the Strap




SETTING UP THE CRADLE

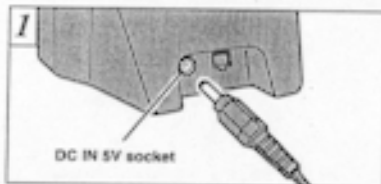

Connect the AC-5V/AC-5VH AC Power Adapter to the cradle.

AC-5V : U.S.A. and Canada model
AC-5VH: other countries model

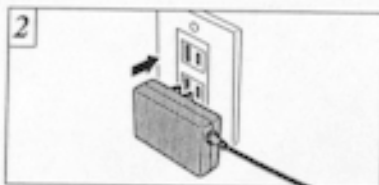

Plug the AC-5V/AC-5VH AC Power Adapter into the main power outlet.

- ① See P.101 for information on connecting the cradle to your PC.
- ② Problems arising from the use of products other than genuine FUJIFILM products are not covered by your warranty.

- ③ The socket-outlet shall installed near the equipment and shall be easily accessible.
- ④ The shape of the plug and socket-outlet depends on the country of use.

LOADING THE BATTERY



- ① Slide the battery cover out to open it.
- ② Insert the battery in the direction indicated by the arrow "▼" on the battery.



- ① Hold the battery in, ② and close the battery cover.

- ③ Do not use excessive force to open the battery cover.
- ④ When replacing the battery, always switch the camera off beforehand. If you open the battery cover without switching the camera off, the camera settings may revert to the factory defaults.


◆ Battery Type ◆

NP-80 rechargeable battery.




- ③ The battery is not fully charged at shipment. You must charge the battery before you use it.
- ④ See P.112 - 113 for more information on the battery.

CHARGING THE BATTERY

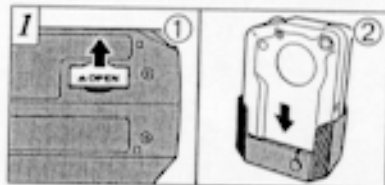

- ① Open the connector cover on the bottom of the camera.
- ② Check that the camera is switched off and then place it in the cradle.

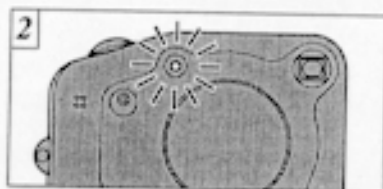

The self-timer lamp lights and battery charging begins. When charging is completed, the light goes off.

- Push the cradle connection plug firmly into the camera socket.


You do not need to press the power button on the cradle.

- Charging a fully depleted battery takes approximately 5 hours.
- Switching the cradle on during charging interrupts the charging.
- You can charge the battery more quickly by using the Battery Charger BC-80 (sold separately) (→P.109).

USING THE AC POWER ADAPTER

You can connect the AC-5V/AC-5VH AC Power Adapter directly to the DC IN 5V socket on the camera without using the cradle. This is useful when you travel since it allows you to charge the battery and to take pictures and play back images (using a TV connection, etc.) without worrying about depleting the battery.

- **Compatible AC power adapters**
Model: AC-5V/AC-5VH (provided as an accessory or sold separately)

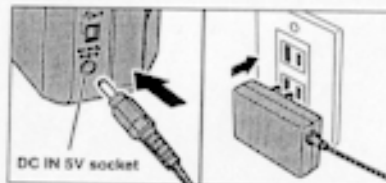

Check that the camera is switched off. Plug the AC power adapter connector into the DC IN 5V socket on the camera and then plug the adapter itself into the main power outlet.

- The socket-outlet shall installed near the equipment and shall be easily accessible.


- Problems arising through the use of products other than genuine FUJIFILM products are not covered by your warranty.
- See P.114 for additional notes on the AC power adapter.
- The shape of the plug and socket-outlet depends on the country of use.

LOADING THE SmartMedia™

SmartMedia™

■ Only use 3.3V SmartMedia


MG-4S (4MB), MG-16SW (16MB, ID)
MG-8S (8MB), MG-32SW (32MB, ID)
MG-16S (16MB), MG-64SW (64MB, ID)
MG-32S (32MB), MG-128SW (128MB, ID)
MG-64S (64MB)

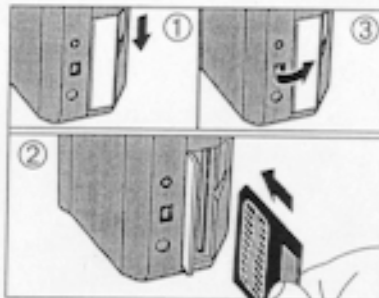

- ① Check that the camera is switched off and open the slot cover.
- ② Push the SmartMedia firmly into the SmartMedia slot as far as it will go.
- ③ Close the slot cover.
- ④ If you open the slot cover while the camera is switched on, the camera is automatically switched off to protect the SmartMedia.
- ⑤ The SmartMedia will not slide fully into the slot if it is inserted facing the wrong way. Be careful not to apply undue force to the SmartMedia.

- ① Images cannot be recorded or erased if a write-protect sticker is affixed to the SmartMedia.
- ② Operation of this camera is only guaranteed when it is used with FUJIFILM SmartMedia.
- ③ Some 3.3V SmartMedia are labelled as "3V" cards.
- ④ See P.115 for more information on SmartMedia.

REMOVING THE SmartMedia™

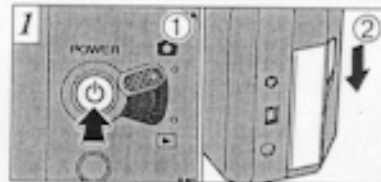

- ① Check that the indicator in the viewfinder is green and then switch the camera off.
- ② Release the SmartMedia cover lock as shown in the figure.

- ③ See P.22 for information on switching the camera on and off.

Never open the SmartMedia slot cover while the camera is switched on. This could destroy the image data or damage the SmartMedia itself.



- ① Push the SmartMedia into the slot slightly and allow it to pop back out. It can then be pulled out easily.

- ② To protect the SmartMedia, always store it in the special anti-static case.

◆ Printing Images and Downloading Images to a PC ◆

- See P.86, 108 for information on printing images.
- See P.101 – 108 for information on downloading images to a PC.

SWITCHING ON AND OFF



Press the "O" (power) button to switch the camera on and off. When you switch the camera on, the viewfinder lamp lights (green). If the date has been cleared, a confirmation message appears. To set the date, press the "MENU/OK" button (→P.24).

● If you switch the camera on when the Mode switch is set to "O", the lens cover opens and the lens moves out. For this reason, take care to avoid touching the lens when you switch the camera on.

2 LCD Monitor		Display Panel	
①	Blank	①	
②	Lit white	②	
③	Lit red	③	
④	Blinking red	④	

You can check the remaining battery charge on the LCD monitor by pressing the "DISP" button to switch the LCD monitor on.

- ① Battery has ample charge. (No indicator displayed.)
- ② The battery is approximately half charged.
- ③ Battery charge low. Replace or recharge the battery as it will run out shortly.
- ④ The battery is exhausted. The display will shortly go blank and the camera will stop working. Replace or recharge the battery.

● The display panel icons ① and ② are only shown for 2 seconds when the camera is switched on.

◆ Auto Power Save Function ◆


When this function is enabled, the LCD monitor switches off to conserve battery power if the camera is not used in any way for 30 seconds (See P.96 for details).

SETTING THE DATE AND TIME




- ① Press the "MENU/OK" button to display the menu screen.
- ② Use "←", "→", "▲" or "▼" to select "SET-UP" from the "OPTION" menu.
- ③ Press the "MENU/OK" button.

If the date was cleared and you selected "SET DATE/TIME", proceed from step ② (→P.24).

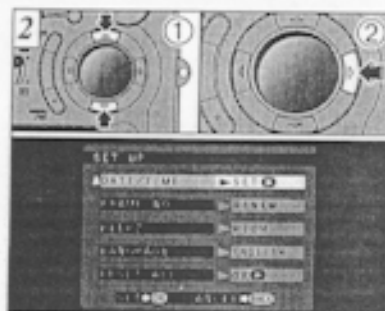


- ① The "SET-UP" screen appears. Use "▲" or "▼" to select "DATE/TIME".
- ② Press "→".
- See P.92 for more information on the "OPTION" menu.
- If at least 3 hours have passed since the AC power adapter was connected or the battery inserted and date and time set, then those settings will be maintained for roughly 1 hour even when the camera has no power supply (when the AC power adapter is disconnected and the battery is removed).

SETTING THE DATE AND TIME

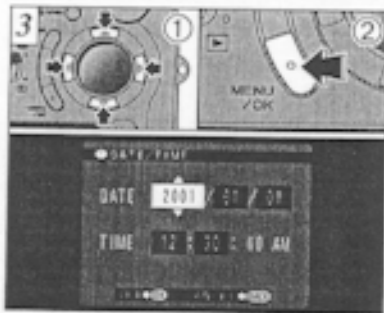

- ① Use the "◀▶" button to select the desired item and then use the "▲" and "▼" buttons to correct the setting.
- ② When you have finished setting the date and time, press the "MENU/OK" button to confirm the setting.
- ③ If you hold down the "▲" or "▼" button, the numbers change continuously.
- ④ When the time displayed passes "12:00:00", the AM/PM setting automatically switches.
- ⑤ To set the time precisely, press the "MENU/OK" button when the time is at zero seconds.

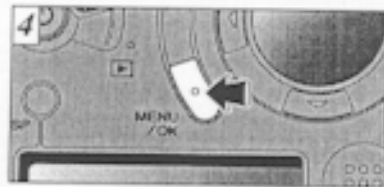


The "SET-UP" screen reappears. Press the "MENU/OK" button to exit the settings screen.

If the date was cleared and you selected "SET DATE/TIME", the camera switches to photography or playback mode without returning to the "SET-UP" screen.

2 Basic Photography

TAKING PICTURES (AUTO MODE)

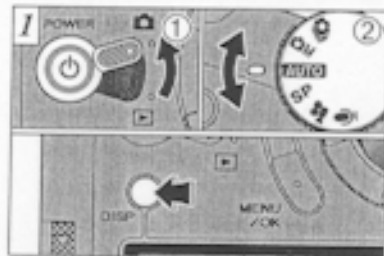

① Set the Mode switch to "📷". ② Set the Photography Mode dial to "AUTO". For viewfinder photography (other than Macro mode), press the "DISP" button to switch the LCD monitor off.

• **Photography range:** Approx. 60 cm (2 ft.) to infinity

• If "1.000.000", "1.000.000.000" or "1.000.000" is displayed, first wipe the contact surface on the SmartMedia (gold-colored area) thoroughly with a soft, dry cloth and then reload the SmartMedia. In some cases, you may have to format the SmartMedia (P.76).




Loop the strap over your wrist, brace your elbows firmly against your body and hold the camera with both hands.

- For subjects closer than 60 cm (2 ft.), use Macro photography (P.56).
- To minimize power consumption, you should use the viewfinder (switch the LCD monitor off) to take pictures.
- Automatic flash mode is recommended for ordinary photography (P.53).
- The image will be blurred if the camera moves when you take the picture (camera shake). When you are shooting in low-light conditions, use the flash (P.52) or a tripod to prevent blurred images due to camera shake.

TAKING PICTURES (AUTO MODE)




Be careful to ensure that the lens, microphone and flash control sensor are not obscured by your hands or the camera strap.

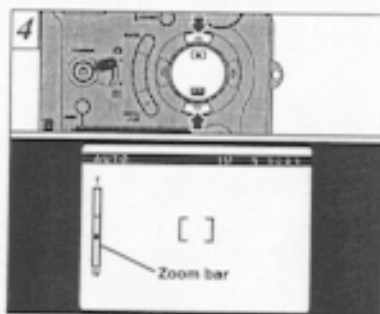

To zoom in on the subject, press "▲" (TEL). To zoom out, press "▼" (WIDE). A "zoom bar" appears on the LCD monitor when you zoom in or out.


- ① Zooming stops briefly when the camera switches between optical zoom and digital zoom (P.57).
- ② Equivalent to a 3x optical zoom lens with a focal length of 36 mm – 108 mm on a 35 mm camera. When you switch the camera on, the focal length is equivalent to 44mm.

- ③ The camera may not be able to take successful pictures if your fingers or the strap are in the way.
- ④ Check that the lens is clean. If it is dirty, clean the lens as described on P.111.

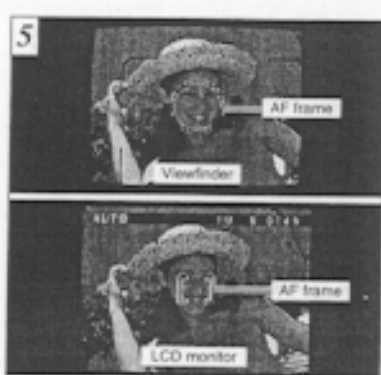

Using the viewfinder or LCD monitor, frame your shot so that the subject fills the entire AF (Auto Focus) frame.

- ① If your subject is not in the center of the picture, use AF lock to take the picture (P.31).
- ② For dimly lit scenes where the subject is difficult to see in the LCD monitor, you should use the viewfinder.

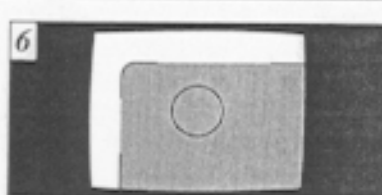

When you are using the viewfinder to take a picture at a distance of 0.8 m to 1.5 m (2.6 ft. to 4.8 ft.), only the shaded area in the figure is photographed.

- ③ If the image on the LCD monitor is difficult to see, adjust the monitor brightness.


TAKING PICTURES (AUTO MODE)



Press the shutter button down half way. The image is focused when the AF frame on the LCD monitor becomes smaller and the shutter speed and aperture setting appear (and the green viewfinder lamp stops blinking and remains lit).

- ① When you press the shutter button down halfway, the video image on the LCD monitor freezes briefly. However, this is not the image that is recorded.

② If the shot is too dark to focus, try standing about 2 m (6.6 ft.) from your subject to take the picture.

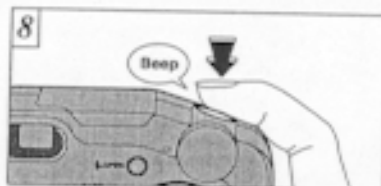

To take the picture, press the shutter button down fully without lifting your finger off it. The camera beeps and takes the picture, and the data is then recorded.

- ③ If you press the shutter button down fully in one motion, the shot is taken without the AF frame changing.
- ④ When you take a picture, the viewfinder lamp lights orange (camera not ready) before switching back to green to indicate that the camera is again ready for shooting.
- ⑤ The viewfinder lamp flashes orange while the flash is charging.
- ⑥ Since the amount of image data recorded is not fixed and varies depending on the subject (level of image detail, etc.), the number of available shots may not decrease after the image is recorded, or may decrease by 2.
- ⑦ See P.117 - 119 for information on the warning displays.

Viewfinder Lamp Display

When the LCD monitor is switched on, more detailed warning messages are displayed (→P.117).

Display	Status	Camera Operation
Lit green	Ready to shoot.	All camera operations are possible.
Blinking green	AF/AE in progress or camera shake warning.	All camera operations are possible.
Blinking green and orange alternately	Recording to SmartMedia.	Only zooming and picture taking are possible.
Lit orange	Image being recorded onto the SmartMedia.	No camera operations are possible.
Blinking orange	Flash charging, PC communication in progress	No camera operations are possible.
Blinking red	• SmartMedia warning. • No SmartMedia loaded, SmartMedia not formatted, incorrect format, write-protect sticker used, SmartMedia full, SmartMedia error. • Lens operation error.	No camera operations are possible.

Subjects Not Suitable for Autofocus

Though the FinePix4800 ZOOM uses an accurate autofocus mechanism, it may have difficulty focusing or not be able to focus at all for the types of subject and situation listed below. In such cases, the image may be out of focus.

- Very shiny subjects such as a mirror or car body.
- Subjects photographed through glass.
- Subjects that do not reflect well, such as hair or fur.
- Subjects with no substance, such as smoke or flames.
- When the subject is dark.
- When there is very little contrast between the subject and the background (such as white walls or subjects dressed in the same color as the background).
- When there are objects in front of or behind the subject (such as an animal in a cage or a person in front of a tree).
- Subjects moving at high speed.

TAKING PICTURES (AUTO MODE)

Number of Available Frames

The number of available shots is displayed on the LCD monitor or display panel.

- See P.94 for information on changing the File size and Quality setting.
- At shipment, the default settings are "1M" (file size) and "NORMAL" (quality).



Standard number of shots per SmartMedia™

The number of shots that can be recorded onto a SmartMedia card varies slightly depending on the type of subject. Also, the difference between the standard number of shots and the actual number of available shots increases for SmartMedia with a higher capacity.

File Size	2400 x 1800			1600 x 1200		1280 x 960		640 x 480
Quality Mode	FINE	NORMAL	BASIC	FINE	NORMAL	FINE	NORMAL	NORMAL
Image Data Size	Approx. 1700KB	Approx. 800KB	Approx. 320KB	Approx. 760KB	Approx. 380KB	Approx. 620KB	Approx. 320KB	Approx. 90KB
MG-45 (4M)	2	4	11	4	9	6	12	44
MG-65 (6M)	4	9	23	10	19	12	25	89
MG-115 (11M)	8	19	46	20	39	25	49	163
MG-325 (32M)	18	38	94	41	79	50	99	330
MG-645 (64M)	36	77	189	82	159	101	198	663
MG-1285 (128M)	74	156	379	166	319	204	398	1330

* The numbers of available shots are shown for formatted SmartMedia.

USING AF/AE LOCK



In a shot with this type of composition, the subjects (two people in this case) are not in the AF frame. If the shot is taken at this point, the subjects will not be in focus.



Move the camera slightly so that one of the subjects in the AF frame.

AF/AE Lock

On the FinePix4800 ZOOM, when you press the shutter button down half way, the focus and exposure settings are fixed (AF/AE lock). If you want to focus on a subject that is off to one side of the image or if you want to set the exposure before you compose the final shot, lock the AF and AE settings and then compose and shoot your picture to get the best results.

USING AF/AE LOCK




Keep holding the shutter button down halfway (AF/AE lock). Check that the AF frame on the LCD monitor shrinks and that the shutter speed and aperture setting are displayed (the viewfinder lamp (green) changes from blinking to steady).



Continue to hold the shutter button down halfway. Move the camera back to the original image and then fully press down on the shutter button.

- ③ You can reapply the AF/AE lock as many times as you like before releasing the shutter.
- ④ The AF/AE lock operates in all photography modes and can be used to ensure excellent results.

FRAMING GUIDELINE FUNCTION

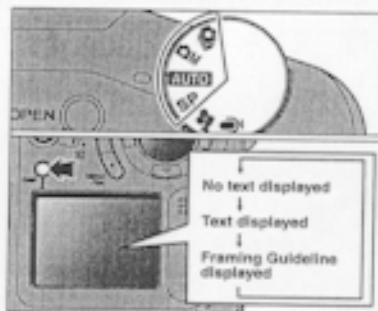

The photography mode can be set to "AF" • SP • OM or OM. The mode shown on the LCD monitor switches each time you press the "DISP" button. Press the "DISP" button to display the framing guideline.

- ① The framing guideline is not recorded on the image.
- ② The lines in the scene frame roughly divide the recorded pixels into three equal parts horizontally and vertically. When the image is printed, the resulting print may be shifted slightly from the scene frame.

Scene


Use this frame when you want to position your main subject in the center of the frame or when you want to align your shot with the horizon. This feature allows you to compose a shot that captures the moment while focusing on the subject size and the overall balance of the shot.




◆ Important ◆

Always use the AF/AE lock to compose your picture.
Failing to use the AF/AE lock may result in the image being out of focus.

VIEWING YOUR IMAGES (PLAYBACK)

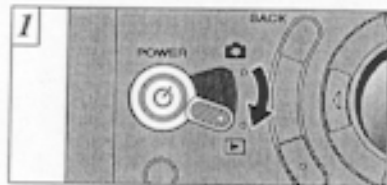

Set the Mode switch to "P".

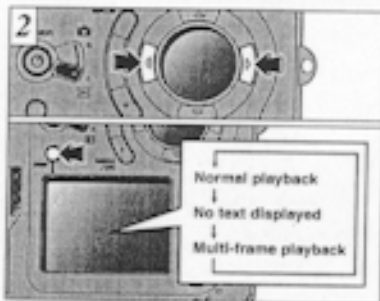

You can use "◀" and "▶" button to move forward and backward respectively through your images. The monitor display changes each time you press the "DISP" button.

④ When you set the Mode switch to "P", the last image shot is displayed.

⑤ If image on the monitor is difficult to see, adjust the monitor brightness (→P.93, 95).

◆ Images That Can be Viewed on the FinePix4800 ZOOM ◆

You can use this camera to view (excluding some uncompressed data) images recorded on an FinePix4800 ZOOM or images recorded onto a 3.3V SmartMedia using a FUJIFILM FinePix series, MX series and DX series digital camera.

FAST FORWARDING IMAGES



You can fast forward through the frames by holding down "◀" or "▶" button for about 1 second during playback.



During fast forward, 3 frames are shown together in miniature on the monitor. When you stop fast forward, the image enclosed in the cursor (the orange box) is displayed on the monitor as a single image.

④ A progress bar is displayed to show the approximate playback position on the SmartMedia.

PLAYBACK ZOOM



Pressing the "▲" or "▼" button during single-frame playback zooms in (enlarges) or out on a still image. When you use this function, a zoom bar is displayed.

• Zoom scales:

- 2400 × 1800 pixel images: Max 15x
- 1600 × 1200 pixel images: Max 10x
- 1280 × 960 pixel images: Max 8x
- 640 × 480 pixel images: Max 4x

Pressing the "◀" or "▶" button during zooming cancels zooming and moves to the next image.




After you have zoomed in on your image,

- ① Press the "DISP" button.
- ② Use the "▲▼" and "◀▶" buttons to zoom in on different parts of the image.
- ③ Press the "DISP" button again to revert to zoomed display.


Press the "BACK" button to return to normal unscaled display.

Saving Trimmed Images

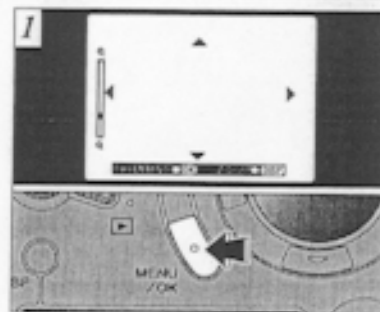

After using playback zoom, press the "MENU/OK" button to trim the image.

The size of the saved image varies depending on the zoom scale. In VGA mode, "TRIMMING" is displayed in yellow. At resolutions below VGA, "TRIMMING" is no longer displayed.

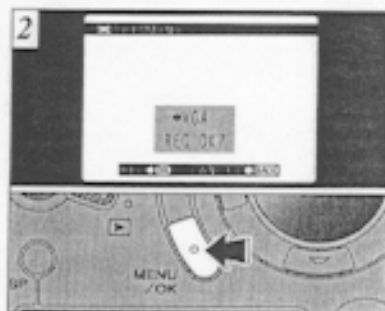


Check the size of the image being saved and then press the "MENU/OK" button. The trimmed image is saved as a separate file.

Image Sizes

2400 × 1800	Best for prints
1600 × 1200	Good for prints
1280 × 960	"TRIMMING" is displayed in yellow since the quality is too low for printing.

Lower than 1280 × 960: "TRIMMING" is no longer displayed and images cannot be saved trimmed as the quality is not suitable for printing.

MULTI-FRAME PLAYBACK

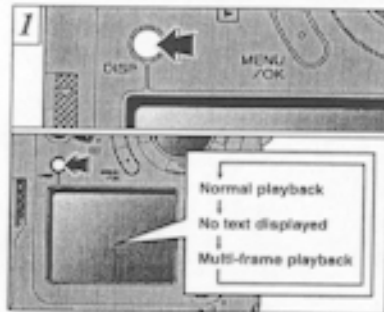

In playback mode, the display shown on the LCD monitor switches each time you press the "DISP" button. Press the "DISP" button until the multi-frame playback screen (9 frames) appears.

- ① The LCD monitor text display disappears after approximately 3 seconds.
- ② Playback zoom cannot be used with multi-frame playback.



- ① Select a frame by using "<", ">", "▲" and "▼" button to move the cursor (the orange box) to the desired frame. Press the "▲" or "▼" button several times to switch to the previous page or the next page.
- ② You can enlarge the selected image by pressing the "DISP" button again.
- ③ Multi-frame playback is also useful for specifying erase, protect and DPCF settings for single frames and for selecting images when you want to check or cancel DPCF settings.

ERASING SINGLE FRAME




- ① Set the Mode switch to "P".
- ② Press the "MENU/OK" button to display the Menu screen on the monitor.

- ③ See P.78 for more information on the Erasing all frames and Formatting.
- ④ Multi-frame playback (P.38) is an easy way to select images to be protected.



Select "FRAME" in the "ERASE" menu and press the "MENU/OK" button.

ERASING SINGLE FRAME

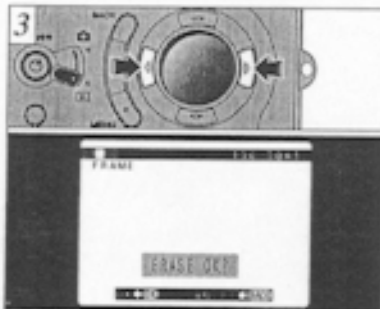

Press the "◀" or "▶" button to display the image to be erased.

- ④ To cancel single-frame erase, press the "BACK" button to return to the menu. To exit the menu screen, press the "BACK" button again.




Press the "MENU/OK" button to erase the displayed image. When erasing is complete, the next image appears and the "1:00 3:01" message is displayed.

- ⑤ If "1:00 3:01" is displayed, the image protection must be removed to erase the image (→P.61).
- ⑥ If the "DPOF 1:00 3:01" message is displayed, DPOF is specified. When you press the "MENU/OK" button, the image is erased and the DPOF settings are updated.


To continue erasing images, repeat the procedure from step ③.

USING A TV MONITOR

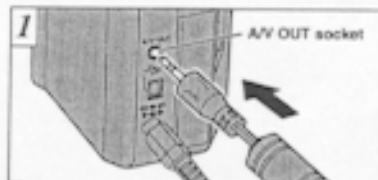

Switch off the camera and TV. Plug the A/V cable (accessory) into the A/V OUT (audio-visual output) socket on the camera.

- ① If you connect the A/V cable during playback, you will not hear the sound from the camera.
- ② The image continues to be displayed on the LCD monitor.
- ③ If you disconnect or reconnect the A/V cable while the power is switched on, the sound may not be output correctly.
- ④ If there is a power outlet available, connect the AC-5V/AC-5VH AC Power Adapter.

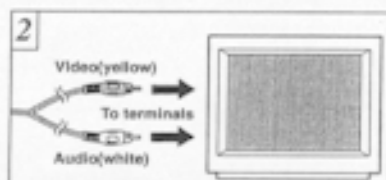

Plug the other end of the cable into the audio/video input socket on the TV. Then switch the camera and TV on and take pictures or play back images as you would normally.

- ⑤ If your TV has stereo audio input sockets, plug the cable into the left (white) socket.
- ⑥ Refer to the instructions provided with your TV for more information on audio and A/V input for your TV.