



digital
Foto für die digitale Zukunft

Digital Camera
FinePix 6800 ZOOM



仮表紙

Getting Ready **1**

Basic Photography **2**

Advanced Features **3**

Advanced Features
Playback

Settings **5**

PC Connection **6**


OWNER'S MANUAL

This manual will show you how to use your FUJIFILM DIGITAL CAMERA
FinePix6800 ZOOM correctly. Please follow the instructions carefully.

BL00001-200 (1) **E**

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

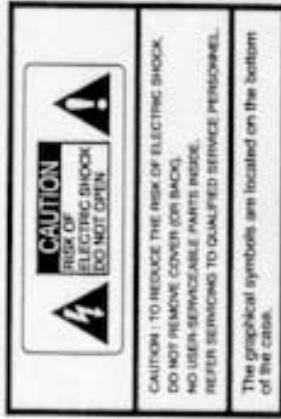

⚠ This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

⚠ This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For customers in the U.S.A.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Relocate or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void the user's authority to operate the equipment.

Notes on the Back:

To comply with part 15 of the FCC rules, this product must be used with a Fujifilm-specified ferrite-core video cable, USB cable, and DC supply cord.

For customers in Canada

CAUTION

This Class B digital apparatus complies with Canadian ICES-003.

Please read the Safety Notes (→ P.127) and make sure you understand them before using the camera.

Contents

Warning	2
Prelace	6
Camera Features and Accessories	7
Normadatum	8

3 Advanced Features Photography	
ADVANCED FEATURES PHOTOGRAPHY	42
■ Photography mode specifications	42
[PHOTOGRAPHY MENU]	
PORTRAIT & SCENE (LANDSCAPE)	43
NIGHT SCENE [BLACK AND WHITE]	44
CHINAMAN	
CONTINUOUS SHOOTING	45
MOVIE (VIDEO)	46
AUDIO RECORDING	47
FLASH PHOTOGRAPHY	50
AS Auto Flash Mode	52
Red-Eye Reduction	53
Forced Flash	54
Slow Syncro	54
Suppressed Flash	55
MACRO (CLOSE-UP) PHOTOGRAPHY	56
DIGITAL ZOOM	57
[PHOTOGRAPHIC MENU]	
PHOTOGRAPHY MENU OPERATION	58
Selbstzeit. Photo	58
SELF-TIMER PHOTOGRAPHY	59
VOICE CAPTIONING	61
FRAMING GUIDELINE FUNCTION	61
VIEWING YOUR IMAGES (PLAYBACK)	64
FAST FORWARDING (IMAGES)	65
PLAYBACK ZOOM	66
Saving Trimmmed Images	67
MULTI-FRAME PLAYBACK	68
ERASING SINGLE FRAME	69
4 Using A TV Monitor	70

2 Basic Photography	
TAKING PICTURES (AUTO MODE)	25
Number of Available Frames	30
USING AF/AE LOCK	31
FRAMING (GUIDELINE FUNCTION)	33
VIEWING YOUR IMAGES (PLAYBACK)	34
FAST FORWARDING (IMAGES)	35
PLAYBACK ZOOM	36
Saving Trimmmed Images	37
MULTI-FRAME PLAYBACK	38
ERASING SINGLE FRAME	39
4 Using A TV Monitor	41

6 PC Connection	
IN PC CONNECTION	101
CONNECTING AT DISC MODE	102
CONNECTING AT PC-CAMERA MODE	104
DISCONNECTING FROM THE PC	106
CAMERA CUSTOMIZING	107
IN PLAYBACK MODE	108
CONNECTING SINGLE + ALL FRAMES/FORMATTING	108
PLAYBACK (AUTOMATIC PLAYBACK)	109
■ ERASING SINGLE	110
■ GETTING AND REMOVING	110
■ SINGLE FRAME PROTECTION	111
■ SETTING AND REMOVING PROTECTION	111
FOR ALL FRAMES	112
HOW TO SPECIFY PRINT OPTIONS	113
DPOF DATE SETTING	113
DPOF SET FRAME	114
DPOF REVIEW/RESET	115
DPOF RESET ALL	116
IN SETTINGS	117
■ List of Settings	117
■ SET-UP menu options	118
USING THE OPTION MENU	119
Using SET-UP	120
■ SETTING THE FILE SIZE AND QUALITY	121
■ (COMPRESSION RATIO)	122
■ LCD MONITOR BRIGHTNESS/VOLUME	123
■ EV (EXPOSURE COMPENSATION)	124
■ Declaration of Conformity	125

IMAGE DISPLAY	96
Previous Zoom	96
Selecting Recorded Images	97
AUTO POWER SAVE	98
SETTING THE STARTUP SCREEN	99
FRAME NO. MEMORY	100
IN PC CONNECTION	101
CONNECTING AT DISC MODE	102
CONNECTING AT PC-CAMERA MODE	104
DISCONNECTING FROM THE PC	106
CAMERA CUSTOMIZING	107
IN PLAYBACK MODE	108
CONNECTING SINGLE + ALL FRAMES/FORMATTING	108
PLAYBACK (AUTOMATIC PLAYBACK)	109
■ ERASING SINGLE	110
■ GETTING AND REMOVING	110
■ SINGLE FRAME PROTECTION	111
■ SETTING AND REMOVING PROTECTION	111
FOR ALL FRAMES	112
HOW TO SPECIFY PRINT OPTIONS	113
DPOF DATE SETTING	113
DPOF SET FRAME	114
DPOF REVIEW/RESET	115
DPOF RESET ALL	116
IN SETTINGS	117
■ List of Settings	117
■ SET-UP menu options	118
USING THE OPTION MENU	119
Using SET-UP	120
■ SETTING THE FILE SIZE AND QUALITY	121
■ (COMPRESSION RATIO)	122
■ LCD MONITOR BRIGHTNESS/VOLUME	123
■ EV (EXPOSURE COMPENSATION)	124
■ Declaration of Conformity	125

Preface

- Test Shots Prior to Photography
For particularly important photographs (such as weddings and overseas trips), always take a test photograph and view the image to make sure that the camera is functioning normally.
- Full Photo Film Co., Ltd cannot accept liability for any incidental losses (such as the costs of photography or the loss of income from photographs) incurred as a result of faults with this product.
- Notes on Copyright
Images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner, unless intended only for personal use. Note that some restrictions apply to the photographing of stages, performances, exhibitions and exhibits, even when intended purely for personal use. Users are also advised to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.
- Liquid Crystal
If the LCD monitor or display panel is damaged, take particular care with the liquid crystal in the monitor or panel. If any of the following situations arise, take the urgent action indicated.
 - If liquid crystal comes in contact with your skin:
Wipe the area with a cloth and then wash thoroughly with running water and soap.
 - If liquid crystal gets into your eye:
Flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
 - If liquid crystal is swallowed:
Flush your mouth thoroughly with water. Drink large

quantities of water and induce vomiting. Then seek medical assistance.

- Notes on Electrical Interference
Please note that this camera may cause interference to other equipment in the hospital or aircraft. For details, please check with the applicable regulations in that place.
- Handling Your Digital Camera
This camera contains precision electronic components. To ensure that images are recorded correctly, do not subject the camera to impacts or shocks while an image is being recorded.
- Trademark Information
 - IBM PC/AT is a registered trademark of International Business Machines Corp. of the U.S.A.
 - Mac and Macintosh are registered trademarks of Apple Computer, Inc.
 - Windows is a registered trademark of the Microsoft Corporation of the U.S. registered in the U.S.A. and other countries. Windows is an abbreviation term referring to the Microsoft Windows Operating System.
 - SmartMedia is a trademark of Toshiba Corporation.
 - Other company or product names are trademarks or registered trademarks of the respective companies.
- Explanation of Color Television System
 - NTSC: National Television System Committee, color television broadcasting specifications adopted mainly in the U.S.A., Canada and Japan.
 - PAL: Phase Alternation by Line, a color television system adopted mainly by European countries and China.

Camera Features and Accessories



Features

Accessories

- The newly developed "Super CCD HONEYCOMB" (featuring a total of 3.3 million pixels in a honeycomb array) used in the FreshPhoto 2000 ZOOM provides superb image quality with 8.0 million recorded image pixels.
- Built-in 2x zoom lens with a low dispersion aspherical lens for superb optical performance.
- Compact and lightweight aluminum-magnesium alloy body.
- New ergonomic design by Practical Quick responsive operation with 2-second startup and 1 second between shots.
- Auto focus with macro function (macro zoom also available).
- Automatic shooting modes that can be selected to subjects in different photographic conditions.
- Convenient preview function for quickly checking of your shots.
- The 8x telephoto zoom maximizes the potential of the Super CCD Honeycomb (2x optical zoom coupled with an ultra-wide multi-level digital 4x zoom function with up to 2.2x magnification for telephoto shots).
- Playback zoom function (up to 16x).
- Continuous shooting function (200D/240 pixels with interlaced).
- Movie shooting function for easy photography information recording.
- Sound recording using the Audio Recording function.
- 2.4 inch 130,000 pixel low temperature polycrystalline TFT LCD monitor.
- Rechargeable or connected to your PC simply by plugging the FreshPhoto 2000 in its cradle.
- Easy high-speed image file transfer via the USB connection.
- Supports DCF (Digital Photo Order Format) for simple price ordering.
- Conforms to the new standard for digital cameras the system.
- Design rule for Camera File System.

Nomenclature

* Refer to the pages in parentheses for more details.

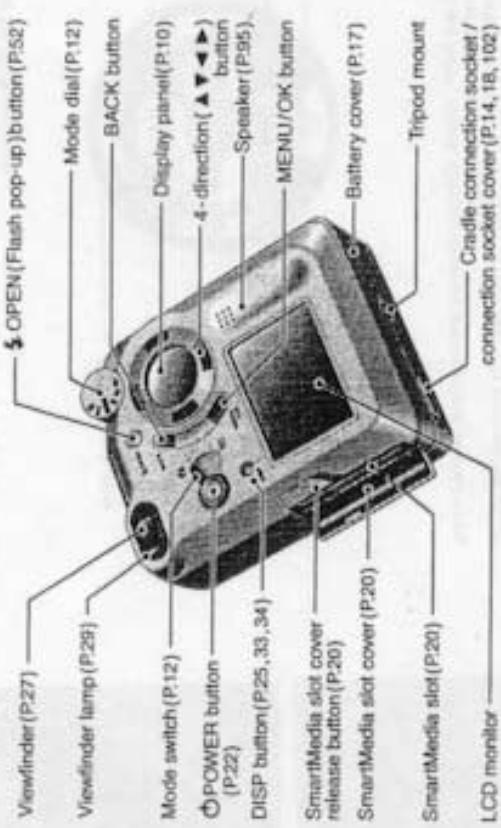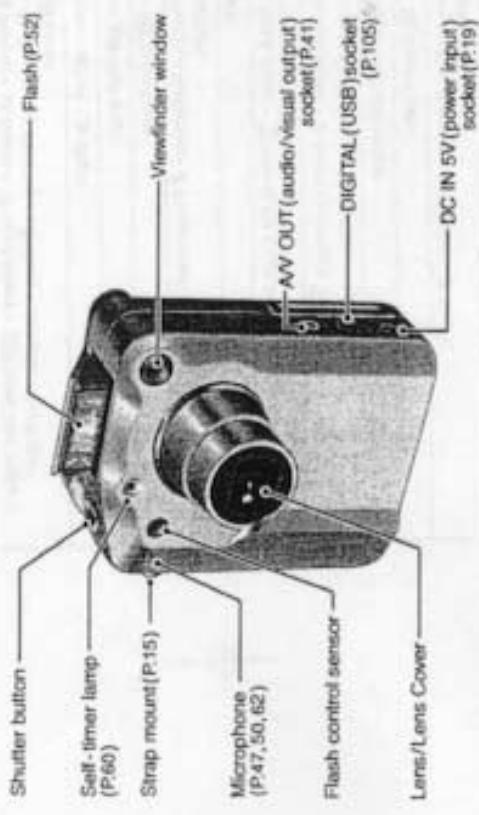

Nomenclature

Display Panel

The display panel uses icons to show the camera's operation status as an aid to the camera user. Use the 4-direction button as indicated by the displayed icons.




Number of remaining shots

Display Details	
Mode	Auto • Portrait • Scene • Night Scene • Black and White • Manual • Continuous shooting • Movie • Audio recording • Option • Zoom
4-direction button setting display	Up • Down • Left • Right
Zoom	Telephoto • Wide angle
Power Zoom	Zoom Up • Zoom Down
Fast Shutter	Auto • Red-Eye Reduction • Flash Syncro • Suppressed Flash
Macro	ON • OFF
Macro Focus	Moves the focus closer • Moves the focus further away
Movie	All images • Movie • Audio recording • Zoom/Trimming
Playback	Playback progress • Pause • Option
Freeze	Previous image • Next image
One Step Zoom	Zoom Up • Zoom Down
Movie Playback	Play/Pause • Fast forward • Rewind • Stop • Movie frame advance
Audio recording	Play/Pause • Fast forward • Rewind • Stop • Skip playback
Voice recording	

- * The display panel can be used to check and modify camera settings such as the photography or playback mode, the number of available shots, the flash settings and the macro setting.
- * The display panel glows orange for 5 seconds when you are taking pictures (except when you press the shutter button) and green for 5 seconds when you are playing back images or sounds.

Nomenclature

Mode switch

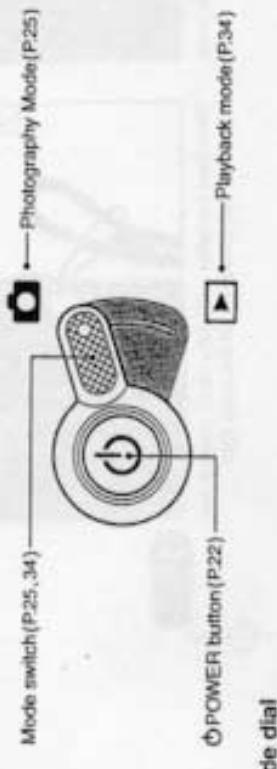

Photography Mode(P25)

Playback mode(P34)

Continuous shooting(P45)

Movie (Video)(P47)

Manual(P45)

Auto(P23, 43)

Scene position(P43)

DPOF

Voice captioning

File size

Image quality

Number of remaining shots

Camera shake warning

Battery low warning

AF warning


AF frame

Zoom bar


Date

Time

Example of Monitor Text Display: Shooting

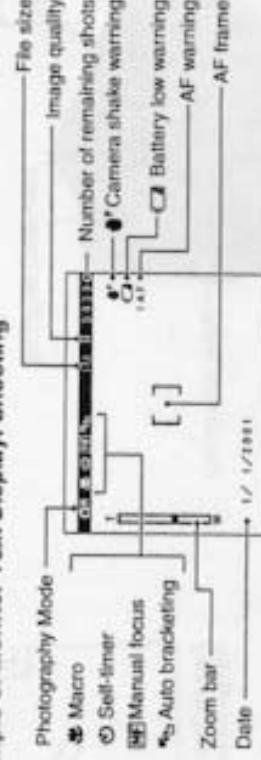


Example of Monitor Text Display: Playback

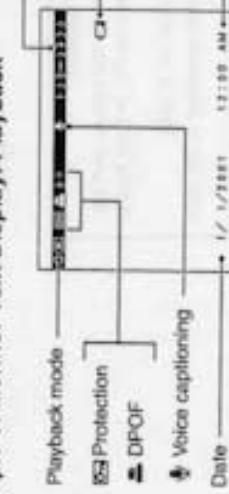

Nomenclature

Cradle

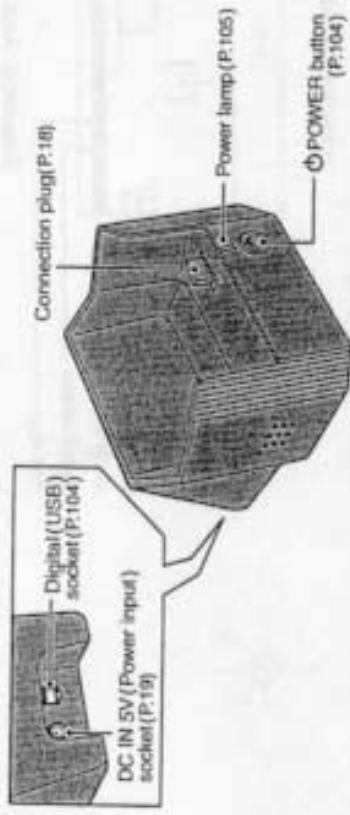


The Cradle ♦

The cradle is a powerful tool for expanding the functionality of your camera:

- When you are not using the camera, you can place it in the cradle to charge the battery. (→ P.18)
- You can use the cradle's USB interface to quickly transfer image files to your PC. (→ Card Reader Mode on P.102.)
- Use the cradle for videoconferencing via the Internet. (→ "PC-Camera Mode" on P.104.)
- You must connect the AC power adapter and the special USB cable provided in the USB Interface Set to the cradle. (→ P.16)

1 Getting Ready ATTACHING THE STRAP

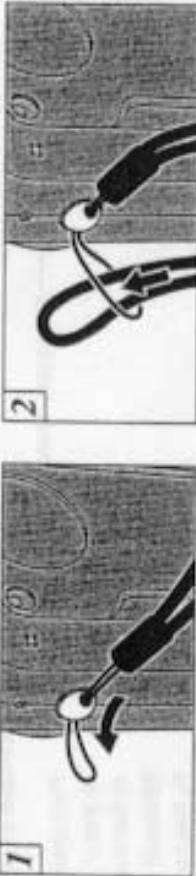

Pass the loop of this cord on the end of the strap through the strap mount.

Then pass the other end of the strap through the loop of the thin cord and pull the strap tight.

SETTING UP THE CRADLE




Connect the AC-5V/AC-5VH AC Power Adapter to the cradle.

Plug the AC-5V/AC-5VH AC Power Adapter into the mains power outlet.

LOADING THE BATTERY



- ① Open the battery cover.
- ② Insert the battery in the direction indicated by the arrow ▶ on the battery.

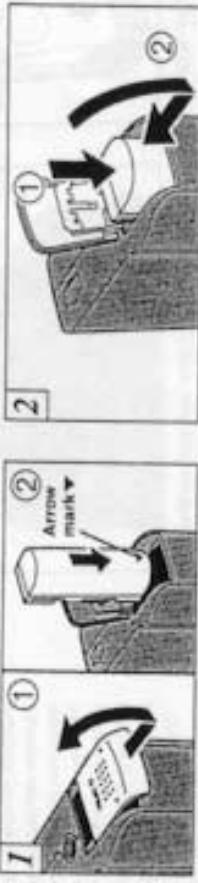

- ① Hold the battery in. ② and close the battery cover.

- See P.101 for information on connecting the cradle to your computer.
- Problems arising through the use of products other than genuine FUJIFILM products are not covered by your warranty.
- The shapes of the plug and socket-outlet depends on the country of use.


- Do not use excessive force to open the battery cover.
- When replacing the battery, always switch the camera off beforehand. If you open the battery cover without switching the camera off, the camera settings may revert to the factory default.

Battery Type

NP-60 rechargeable battery.

- The battery is not fully charged at shipment. You must charge the battery before you use it.
- See P.112 - 113 for more information on the Battery.

CHARGING THE BATTERY

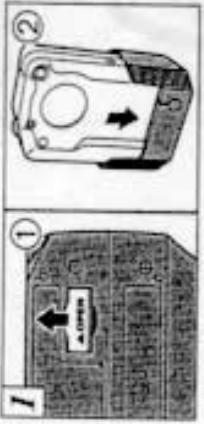

- ① Open the connector cover on the bottom of the camera.
② Check that the camera is switched off and then place it in the cradle.




- The self-timer lamp and battery charging begins. When charging is completed, the light goes off.

- Push the cradle connection plug firmly into the camera's bottom socket.

You do not need to press the power button on the cradle. If you have pressed the power button, refer to the Software Quick Start Guide booklet and perform the installation (for Windows). Then see "Disconnecting from the PC" on P.106

- Charging a fully depleted battery takes approximately 5 hours.
- Switching the cradle on during charging interrupts the charging.
- You can charge the battery more quickly by using the Battery Charger BC-80 (sold separately) (→P.109)

USING THE AC POWER ADAPTER

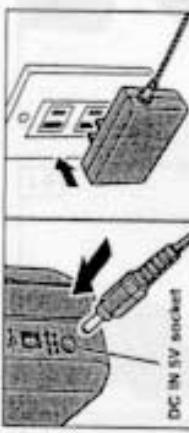

You can connect the AC-5V/AC-5VH AC Power Adapter directly to the DC IN 5V socket on the camera without using the cradle. This is useful when you travel since it allows you to charge the battery and to take pictures and play back images (using a TV connection, etc.) without worrying about depleting the battery.

● Compatible AC power adapters


Model: AC-5V/AC-5VH (provided as an accessory or sold separately).

- Problems arising through the use of products other than genuine FUJIFILM products are not covered by your warranty.
- See P.114 for additional notes on the AC power adapter.
- The shapes of the plug and socket-outlet depends on the country of use.

LOADING THE SmartMedia™

SmartMedia

- Only use 3.3V SmartMedia
MG-4S (4MB), MG-16SW (16MB, ID)
MG-8S (8MB), MG-32SW (32MB, ID)
MG-16S (16MB), MG-64SW (64MB, ID)
MG-32S (32MB), MG-128SW (128MB, ID)
MG-64S (64MB)

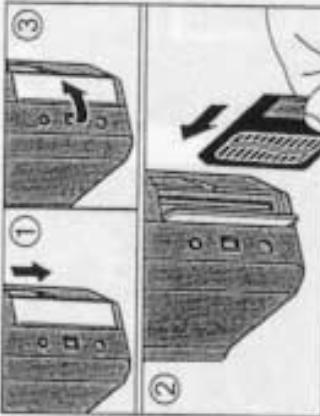

- ① Check that the camera is switched off and open the slot cover.
- ② Push the SmartMedia firmly into the SmartMedia slot as far as it will go.
- ③ Close the slot cover.

- Images cannot be recorded or erased if a write-protect sticker is attached to the SmartMedia.
- Operation of this camera is only guaranteed when it is used with FUJIFILM SmartMedia.
- Some 3.3V SmartMedia are labelled as "2V" cards.
- 20 ● See P.115 for more information on SmartMedia.

REMOVING THE SmartMedia™

SmartMedia



- ① Check that the indicator in the viewfinder is green and then switch the camera off.
- ② Release the SmartMedia cover lock as shown in the figure.

- See P.22 for information on switching the camera on and off.

Never open the SmartMedia slot cover while the camera is switched on. The camera is automatically switched off to protect the SmartMedia.
● To protect the SmartMedia, always store it in the special anti-static case.
● See P.85, 108 for information on protecting images.
● See P.101 - 108 for information on downloading images to a personal computer.

SWITCHING ON AND OFF

	2 LCD monitor	Display Panel
①	Blank	①
②	Li white	②
③	Li red	③
④	Blinking red	④

You can check the remaining battery charge on the LCD monitor by pressing the "DISP" button to switch the LCD monitor on.
 ① Battery has ample charge. (No indicator displayed.)
 ② The battery is approximately half charged.
 ③ Battery charge low. Replace or recharge the battery as it will run out shortly.

④ The battery is exhausted. The display will shortly go blank and the camera will stop working. Replace or recharge the battery.

● The display panel icons ① and ② are very shown for 2 seconds when the camera is switched on.


◆ Auto Power Save Function ◆

When this function is enabled, the LCD monitor switches off to conserve battery power if the camera is not used in any way for 30 seconds. (See P. 30 for details.)

Press the "O" (power) button to switch the camera on and off. When you switch the camera on, the viewfinder lamp lights (green). If the date has been cleared, a confirmation message appears. To set the date, press the "MENU/OK" button. (→P. 24)

● If you switch the camera on when the Mode switch is set to "O", the lens cover opens and the lens moves out. For this reason, take care to avoid touching the lens when you switch the camera on.


SETTING THE DATE AND TIME

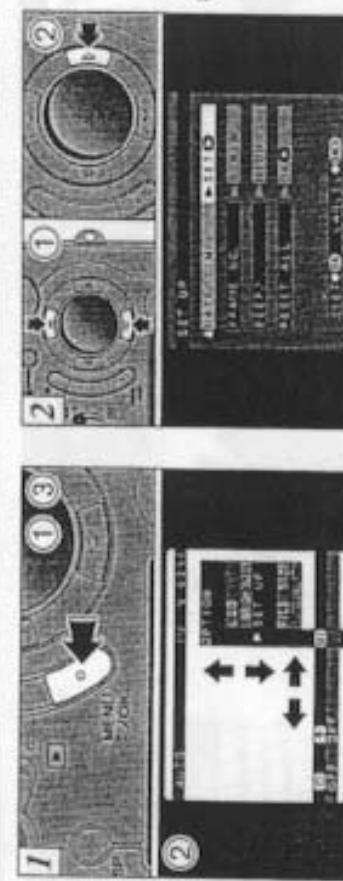

- ① The SET-UP screen appears. Use "▲" or "▼" to select "DATE/TIME".
- ② Press "►".
- See P. 26 for more information on the "OPTION" menu.
- At least 3 hours have passed since the AC power adapter was connected or the battery was inserted. The date and time settings are maintained for roughly 1 hour even when the camera has no power supply (when the AC power adapter is disconnected and the battery is removed).
- ③ Press the "MENU/OK" button to display the menu screen.
- ④ Use "►", "▼", "▲", or "▼" to select "SET-UP".
- ⑤ Press the "MENU/OK" button.

If the date was deleted and you selected "SET-UP", proceed from step ①. (→P. 24)

SETTING THE DATE AND TIME

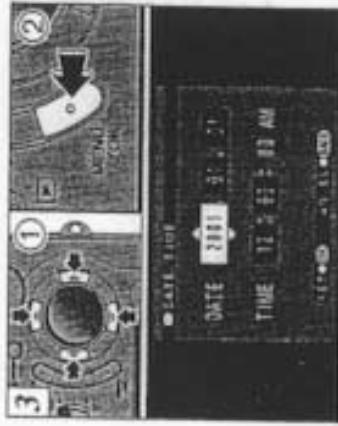

- ① Use the "▲" or "▼" button to select the desired item and then use the "▲" and "▼" buttons to correct the setting.
② When you have finished setting the date and time, press the "MENU/OK" button to confirm the setting.

● If you hold down "▲" or "▼", the numbers change continuously.

- When the time displayed passes "22:00:00", the AM/PM setting automatically switches.
● To set the time precisely, press the "MENU/OK" button when the time is at zero seconds.

If the date was cleared by hand, you must select "SET DATE/TIME". When "SET DATE/TIME" or "TIME SETTING" is displayed, first wipe the contact surface on the SmartMedia (gold-colored area) thoroughly with a soft, dry cloth and then record the SmartMedia. If this does not resolve the problem, format the card.



The "SET-UP" screen reappears. Press the "MENU/OK" button to exit the settings screen.

2 Basic Photography

TAKING PICTURES (AUTO MODE)



- ① Set the Mode switch to "■" ② Set the Photography Mode dial to "■".
For viewfinder photography (other than Macro mode), press the "DISP" button to switch the LCD monitor off.

● Photography range: Approx. 60 cms to infinity

● If "TIME SETTING" or "TIME SETTING" is displayed, first wipe the contact surface on the SmartMedia (gold-colored area) thoroughly with a soft, dry cloth and then record the SmartMedia.

● To minimize power consumption, you should use the viewfinder (switch the LCD monitor off) to take pictures.

● Automatic flash mode is recommended for ordinary photography. (→P.53)

● The image will be blurred if the camera moves when you take the picture (camera shake). When you are shooting in low-light conditions, use the flash (→P.52) or a tripod to prevent blurred images due to camera shake. 25



Loop the strap over your wrist, brace your elbows firmly against your body and hold the camera with both hands.

● For subjects closer than 60 cm, use Macro photography. (→P.56)

● To minimize power consumption, you should use the viewfinder (switch the LCD monitor off) to take pictures.


● Automatic flash mode is recommended for ordinary photography. (→P.53)

● The image will be blurred if the camera moves when you take the picture (camera shake). When you are shooting in low-light conditions, use the flash (→P.52) or a tripod to prevent blurred images due to camera shake. 25

TAKING PICTURES (AUTO MODE)



Be careful to ensure that the lens, microphone and flash control sensor are not obscured by your hands or the camera strap.

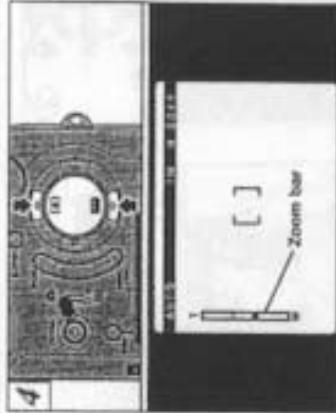


To zoom in on the subject, press ***** ([ZOOM]). To zoom out, press **▼** ([WIDE]). A "zoom bar" appears on the LCD monitor when you zoom in or out (►P.57).

- The camera may not be able to take successful pictures if your fingers or the strap are in the way.
- Check that the lens is clean. If it is dirty, clean the lens as described on P.111.

● The lens on the FinePixF600 ZOOM is a 3x zoom lens with a focal range equivalent to 38–108mm on a 35mm camera. When you switch the camera on, the focal length is equivalent to 44mm.

- If your subject is not in the center of the picture, use AF lock to take the picture (►P.31).
- Fix firmly at scenes where the subject is difficult to see in the LCD monitor. You should use the viewfinder.
- If the image on the LCD monitor is difficult to see, adjust the monitor brightness.

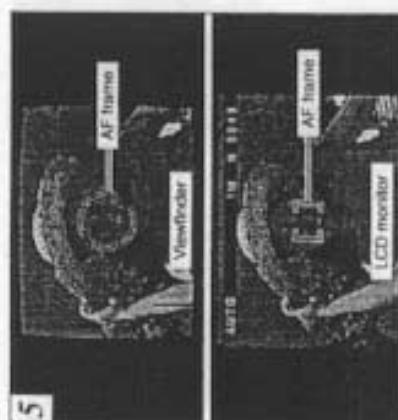


Using the viewfinder or LCD monitor, frame your shot so that the subject fills the entire AF (Auto Focus) frame.



When you are using the viewfinder to take a picture at a distance of 0.8 m to 1.5 m (2.6 ft to 4.8 ft.), only the shaded area in the figure is photographed.

TAKING PICTURES (AUTO MODE)

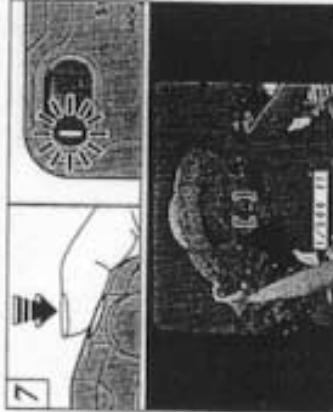

Press the shutter button down half way. The image is focused when the AF frame on the LCD monitor becomes smaller and the shutter speed and aperture setting appear [and the green viewfinder lamp stops blinking and remains lit].

- When you press the shutter button down halfway, the video image on the LCD monitor freezes briefly. However, this is not the image that is recorded.
- If it is too close for the camera to focus, move at least 2 m (6.6 ft) away from your subject before taking the picture.



To take the picture, press the shutter button down fully without lifting your finger off it. The camera beeps and takes the picture, and the data is then recorded.

- If you press the shutter button down half way one motion, the shot is taken without the AF frame changing.
- When you take a picture, the viewfinder lamp lights orange (camera is not ready) before switching back to green to indicate that the camera is again ready for shooting.
- The viewfinder lamp blinks orange while the flash is charging.
- Since the amount of image data recorded is not fixed and varies depending on the subject (level of image detail, etc.), the number of available shots may not increase after the image is recorded, or may decrease by 2.

● See P.117 for information on the warning displays.

Indicator Lamp Display		Display	Status	Camera Operation
Lt. green	Ready to shoot.			All camera operations are possible.
Blinking green	AF/AE in progress or camera shake warning.			All camera operations are possible.
Blinking green and orange alternately	Recording to SmartMedia.			Only zooming and picture taking are possible.
Lt. orange	Image being recorded onto the SmartMedia.			No camera operations are possible.
Blinking orange	Flash charging, PC communication in progress.			All camera operations are possible.
Blinking red	SmartMedia warning. No SmartMedia inserted, SmartMedia not formatted, incorrect format, write-protect sticker used, SmartMedia full, SmartMedia error.			No camera operations are possible.
	• Lens operation error.			

- Indicator Lamp Display * When the LCD monitor is switched on, more detailed warning messages are displayed. (→P.117)

- ◆ Subjects Not Suitable for AutoFocus ◆
- Though the FinePix4800 ZOOM uses an accurate autofocus mechanism, it may have difficulty focusing or not be able to focus at all for the types of subject and situation listed below. In such cases, the image may be out of focus.
- Very shiny subjects such as a mirror or car body.
- Subjects photographed through glass.
- Subjects that do not reflect well, such as hair or fur.
- Subjects with no substance, such as smoke or flames.
- When the subject is dark
- Subjects moving at high speed.

TAKING PICTURES (AUTO MODE)

Number of available shots

The number of available shots is displayed on the LCD monitor or display panel.

② See P.94 for information on changing the File size and Quality setting.

③ At shipment, the default settings are "FINE" (file size) and "NORMAL" (quality).

Standard number of shots per SmartMedia

The number of shots that can be recorded onto a SmartMedia card varies slightly depending on the type of subject. Also, the difference between the standard number of shots and the actual number of available shots increases for SmartMedia with a higher capacity.

File 1280 x 960

Quality Mode	FINE	NORMAL	BASIC	FINE	NORMAL	FINE	NORMAL	1280 x 960	640 x 480
SmartMedia 1280 x 960	Approx. 240000	Approx. 120000	Approx. 40000	Approx. 130000	Approx. 65000	Approx. 23000	Approx. 9000	1280 x 960	640 x 480
Memory Card 1280 x 960	1	3	8	2	6	6	12	44	
Memory Card 1024 x 768	3	6	17	6	13	12	25	89	
Memory Card 800 x 600	6	13	33	12	26	25	46	163	
Memory Card 640 x 480	13	26	68	25	53	50	99	300	
Memory Card 320 x 240	26	56	137	50	107	101	198	693	
SmartMedia 640 x 480	53	113	275	102	215	204	398	1290	

* The numbers of available shots are shown for formatted SmartMedia.

USING AF/AE LOCK



In a shot with this type of composition, the subjects (two people in this case) are not in the AF frame. If the shot is taken at this point, the subjects will not be in focus.

① See P.94 for information on changing the File size and Quality setting.

② At shipment, the default settings are "FINE" (file size) and "NORMAL" (quality).




Move the camera slightly so that one of the subjects in the AF frame,

◆ AF (Autofocus)/AE (Autoexposure) Lock

On the FinePix500 200M, pressing the shutter button down half way locks the focus and exposure settings (AF and AE lock). If you want to focus on a subject that is not centered in the frame or change the picture composition after the exposure is set, you can obtain good results by changing the composition after the AF and AE settings are locked.

USING AF/AE LOCK

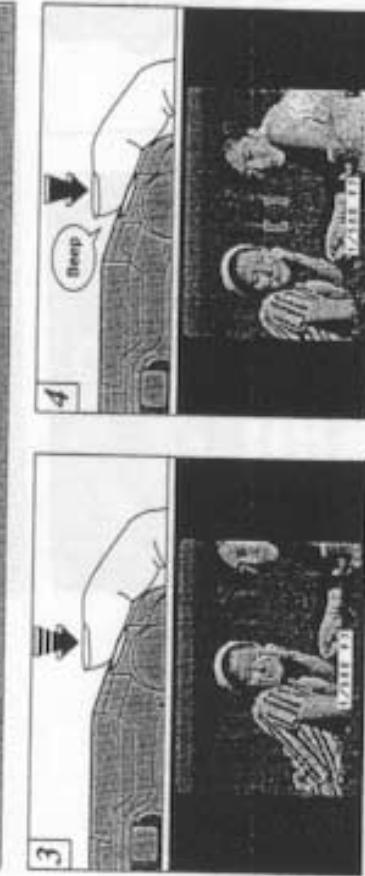


Keep the shutter button held down halfway (AF/AE lock). Check that the AF frame on the LCD monitor shrinks and that the shutter speed and aperture setting are displayed (the viewfinder lamp (green) changes from blinking to steady).

With the shutter button still held down halfway (AF/AE lock), move the camera back to the original image and press the shutter button down fully.

- ◆ You can simply the AF/AE lock are many times as you like before releasing the shutter.
- ◆ The AF/AE lock operates in all photography modes and can be used to ensure excellent results.

FRAMING GUIDELINE FUNCTION

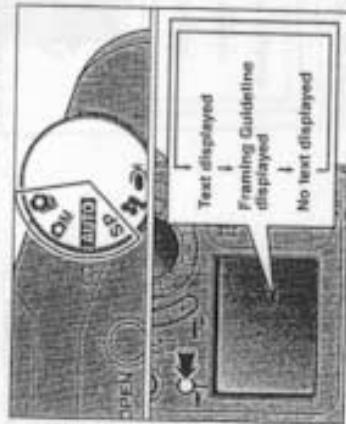

Use this frame when you want to position your main subject in center of the frame or when you want to align your shot with the horizon. This feature allows you to compose a shot that captures the moment while focusing on the subject size and the overall balance of the shot.

2




- ◆ Important ♦ Always use the AF/AE lock to compose your picture.
- ◆ Failing to use the AF/AE lock may result in the image being out of focus.

33

VIEWING YOUR IMAGES (PLAYBACK)




Set the Mode switch to "PLAY".

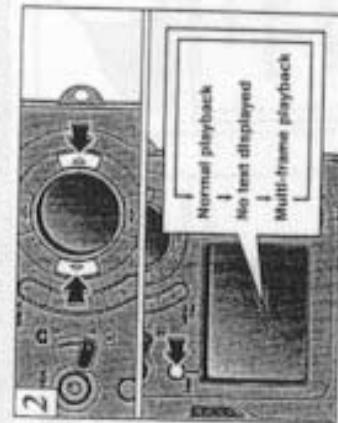

- When you set the Mode switch to "PLAY", the last image shot is displayed.
- Images That Can be Viewed on the FinePix5800 ZOOM

You can use this camera to view (excluding some uncompRESSED data) images recorded on an FinePix5800 ZOOM or images recorded onto a 3.3V SmartMedia using a FUJIFILM FinePix series, MX series and DX series digital camera.

FAST FORWARDING IMAGES

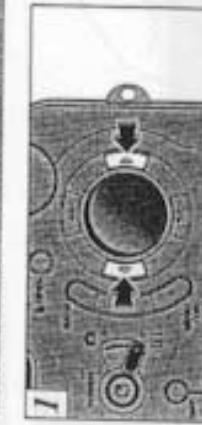


You can fast forward through the frames by holding down "◀" or "▶" button for about 3 seconds during playback.



During fast forward, 3 frames are shown together in miniature on the monitor. When you stop fast forward, the image enclosed in the frame is displayed on the monitor as a single image.

- A progress bar is displayed to show the approximate playback position on the SmartMedia.

PLAYBACK ZOOM

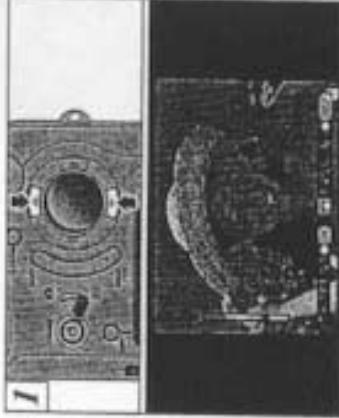

Pressing "▲" or "▼" during single-frame playback zooms in (enlarges) or out on a still image. When you use this function, a zoom bar is displayed.

• Zoom scales:

- 653** 2832 × 2128 pixel images: Max 16x
- 633** 2048 × 1536 pixel images: Max 13x
- 610** 1280 × 960 pixel images: Max 8x
- 602** 640 × 480 pixel images: Max 4x

- Pressing "◀" or "▶" during zooming cancels zooming and moves to the next image.



After you have zoomed in on your image,

- ① Press the "DISP" button.
- ② Use the "▲" and "▼" buttons to zoom in on different parts of the image.
- ③ Press the "DISP" button again to revert to zoomed display.

- ④ Press the "BACH" button to return to normal unzoomed display.



After using playback zoom, press the "MENU/OK" button to trim the image.

The size of the stored image (pixel/bounding box) on the zoom scale (16:9 VGA mode) "TRIMMING" is displayed in yellow since "TRIMMING" is no longer displayed and images cannot be stored trimmed as the quality is not suitable for printing.




Check the size of the image being saved and then press the "MENU/OK" button. The trimmed image is saved as a separate file.

• Image Sizes

653	Best for prints.
610	"TRIMMING" is displayed in yellow since the quality is too low for printing.
602	"TRIMMING" is no longer displayed and images cannot be stored trimmed as the quality is not suitable for printing.
Lower than 602	Image sizes cannot be set.

MULTI-FRAME PLAYBACK

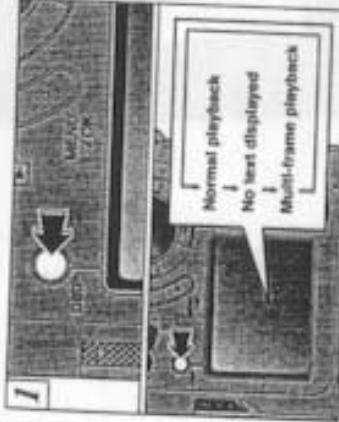

In playback mode, the display shown on the LCD monitor switches each time you press the "DISP" button. Press the "DISP" button until the multi-frame playback screen (9-frame) appears.

- The LCD monitor text display disappears after approximately 3 seconds.
- Playback zoom cannot be used with multi-frame playback.

ERASING SINGLE FRAME



Select a frame by using "▲", "▼", "■" and "■" to move the cursor (the orange box) to the desired frame. Press "▲" or "▼" several times to switch to the previous page or the next page.

- ① You can enlarge the selected image by pressing the "DISP" button again.
- Multi-frame playback is also useful for specifying erase, protect and DPOF settings for single frames and for selecting images when you want to check or cancel DPOF settings.

- See P.76 for more information on the Erasing all frames and Formatting.
- Multi-frame playback (P.38) is an easy way to select images to be protected.

Select "FRAME" in the "ERASE" menu and press the "MENU/OK" button.

- ① Set the Mode switch to "□".
- ② Press the "MENU/OK" button to display the Menu screen on the monitor.

ERASING SINGLE FRAME



Press the "MENU/OK" button to erase the displayed image. When erasing is complete, the next image appears and the "INITIAL" message is displayed.


Press "▼" or "►" button to display the image to be erased.

- If "INITIAL" message is displayed, the image protection must be removed to erase the image (P.81).
- If the "THE INITIAL INITIALIZED" message is displayed, DPOF is specified. When you press the "MENU/OK" button, the image is erased and the DPOF settings are updated.

To continue erasing images repeat the procedures from step 1.

- To cancel single-frame erase, press the "BACK" button to return to the menu. To exit the menu screen, press the "TRACK" button again.

USING A TV MONITOR

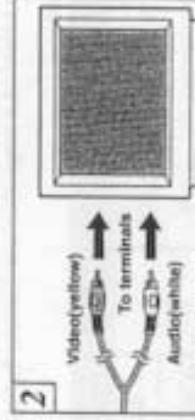

Plug the other end of the cable into the audio/video input socket on the TV. Then switch the camera and TV on and take pictures or play back images as you would normally.

- If your TV has stereo audio input sockets, plug the cable into the left (white) socket.
- Refer to the instructions provided with your TV for more information on audio and AV input for your TV.

3 Advanced Features

Photography

The Advanced Photography section introduces a range of camera functions that you can access by setting the Mode switch to "A".

■ Photography mode specifications

Photography Mode	Accessible menu settings	Factory default	Shared menu settings	Photo mode	Macro photo mode
Auto [→P. 43]	Self-timer [→P. 51] Voice captioning [→P. 51]	Off Off	— A5, 4, 3, Off	— A5, 4, 3, Off	— —
SP Scene Position [→P. 43]	Scene position [→P. 43] Self-timer [→P. 43] Manual focus [Nighttime shots only] [→P. 45]	— Off Off	— A5, 4, 3, Off	— A5, 4, 3, Off	— —
Portrait [→P. 44]	Scene position [→P. 43] Self-timer [→P. 43] Manual focus [Nighttime shots only] [→P. 45]	— Off Off	— A5, 4, 3, Off	— A5, 4, 3, Off	— —
Scene [→P. 44]	Scene position [→P. 43] Self-timer [→P. 43] Manual focus [Nighttime shots only] [→P. 45]	— Off Off	— A5, 4, 3, Off	— A5, 4, 3, Off	— —
Night Scene [→P. 44]	Night Scene [→P. 44] Black and White [→P. 44]	— —	— A5, 4, 3, Off	— A5, 4, 3, Off	— —
Manual [→P. 45]	Self-timer [→P. 51] White balance [→P. 64] Sensitivity [→P. 65] Manual focus [→P. 65]	Off AUTO 100 OFF NORMAL	— A5, 4, 3, Off	— A5, 4, 3, Off	— —
Continuous shooting [→P. 46]	Flash [→P. 67] EV [→P. 67] Multi-exp [→P. 68] Photometry [→P. 70]	— — — —	— A5, 4, 3, Off	— A5, 4, 3, Off	— —
Movie [Video] [→P. 47]	Self-timer [→P. 51] Manual focus [→P. 65] Auto bracketing [→P. 65]	— — —	— A5, 4, 3, Off	— A5, 4, 3, Off	— —
Audio recording [→P. 50]	—	—	— A5, 4, 3, Off	— A5, 4, 3, Off	— —

* You cannot change the flash and macro settings when you are using manual focus.

ADVANCED FEATURES PHOTOGRAPHY

This is the simplest mode for taking pictures and can be used in a wide range of situations.

AUTO

■ SP Scene Position



Turn the Mode dial to select the setting.

SP Scene Position

This setting provides modes tailored to the type of scene photographed. In "SP" (Scene Position) mode, you can choose from 4 types of scene: "A", "L", "U", or "D".

- ① Press the "MENU/OK" button to display the menu.
- ② Use "▲", "▼", "◀", or "▶" to select the photography mode from the "SP SCENE POSITION" menu.
- ③ Press the "MENU/OK" button to confirm your selection.

PHOTOGRAPHY MODE AUTO/AUTO/SP SCENE POSITION

Press the "SCENE POSITION" button to display the "SCENE POSITION" menu.



- ① Press the "SCENE POSITION" button to display the "SCENE POSITION" menu.
- ② Use "▲", "▼", "◀", or "▶" to select the "SCENE POSITION" mode.
- ③ Press the "MENU/OK" button to confirm your selection.

PORTRAIT • NIGHT SCENE • SCENE • BW BLACK AND WHITE

Use this mode for shots of people. Portrait mode provides soft-tone images with natural skin colors.

- When using the flash
 - Auto Flash, Red-Eye Reduction, Forced Flash, Slow Syncro

Use this mode for shots taken in the evening or at night. Night Scene mode gives priority to slower shutter speeds.

- Shutter
 - Slow shutter speed mode with speeds as slow as 3 seconds.
- When using the flash
 - Red-Eye Reduction, Forced Flash

With the exception of the Black and White mode, the MACRO setting can't be selected.


Use this mode for daytime shots of scenery. Landscape mode provides crisp, clear shots of buildings, mountains and other scenery.

- When using the flash
 - The Flash mode is automatically set to Suppressed Flash. This setting cannot be changed.

You can use this option to shoot in black and white regardless of the type of scene.

- Using flash
 - Auto Flash, Red-Eye Reduction, Forced Flash, Slow Syncro

PHOTOGRAPHY MODE OM MANUAL

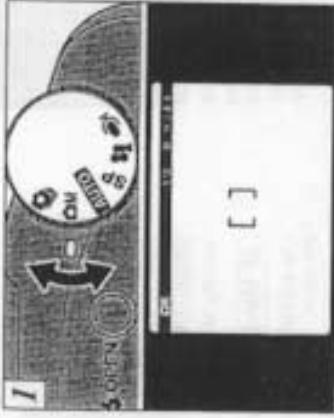

3
Press the "MENULOCK" button to display the menu. See P. 56 – 70 for details of the photography menu.

Turn the Mode dial to set the mode.
OM Manual
Manual mode allows you to specify your own combinations of photography settings.

- The factory default settings for "OM MANUAL" are shown on P. 42.
- To revert to the factory default settings, use "RESET ALL" (P. 92).

PHOTOGRAPHY MODE CONTINUOUS SHOOTING



Turn the Mode dial to set the mode.

Continuous shooting

In this mode, the camera shoots up to 5 continuous frames at intervals of 0.2 seconds.

- You cannot use the flash in this mode.
- The continuous photography speed is the same regardless of the quality and the size settings.

Auto bracketing can be selected in this mode.
→ P.62

PHOTOGRAPHY MODE MOVIE (VIDEO)



Turn the Mode dial to select the settings.

Movie (Video)

Use this mode to shoot up to 160 seconds of video per movie.

- Movie format: Motion JPEG (→ P.126)
- 320 × 240 pixels
- 10 frames per second
- With sound

- Because the audio is recorded as you shoot, take care not to cover the microphone with your finger (→ P.8).
- The shooting time per shot may be shorter than 160 seconds depending on the available space on the SmartMedia.
- You cannot switch the LCD monitor off in this mode.
- You may not be able to play back your movie on cameras other than the PowerShot 2000.

* The number of available shots are shown for formatted SmartMedia.

47



The available shooting time and the "TIME?" message are shown on the LCD monitor.


3

SmartMedia Capacity	Available recording time [sec.]
MG-4S (4MB)	Approx. 23 sec.
MG-8S (8MB)	Approx. 47 sec.
MG-16S (16MB)	Approx. 94 sec.
MG-32S (32MB)	Approx. 191 sec.
MG-64S (64MB)	Approx. 385 sec.
MG-128S (128MB)	Approx. 774 sec.

47

46

PHOTOGRAPHY MODE **MOVIE (VIDEO)**

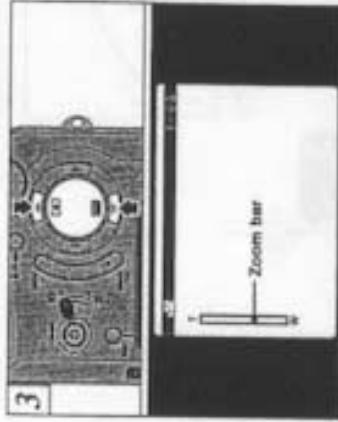

In Movie mode, the lens is locked at the wide-angle setting and only the digital zoom can be used. You can use the **"A"** and **"T"** buttons to zoom in an out. A "zoom bar" is displayed on the LCD monitor.

- Digital zoom focal distance
Approx. 36 mm to 72 mm [1.4 in. to 2.8 in.]
(2.00x)

The white balance is automatically set when you press the shutter button down fully.

The white balance is automatically set when you press the shutter button down fully.


The white balance is automatically set when you press the shutter button down fully.

If you press the shutter button during shooting, shooting ends and the movie is recorded on the SmartMedia.

• The time required to record a 160-second movie (roughly 25 MB) is approximately 22 seconds.

• If you end shooting immediately after you start shooting, only 3 seconds of movie is shot.

49

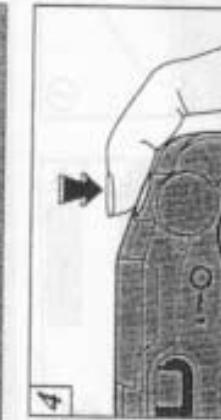

Shooting begins when you press the shutter button down fully.


- You do not need to hold down the shutter button.
- The focus is fixed at 50 cm (1.6 ft.) to infinity.
- The focus and white balance are fixed during shooting, but the exposure values automatically suit the scene being shot.

- Once the remaining time runs out, movie recording automatically stops and the movie is stored on the SmartMedia.

48



During shooting, a timer in the top-right corner of the LCD monitor counts down the remaining time.

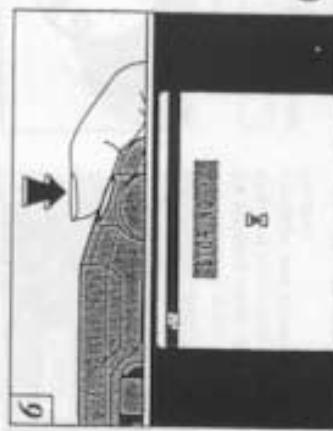

If you press the shutter button during shooting, shooting ends and the movie is recorded on the SmartMedia.

- The time required to record a 160-second movie (roughly 25 MB) is approximately 22 seconds.
- If you end shooting immediately after you start shooting, only 3 seconds of movie is shot.

49

AUDIO RECORDING

PHOTOGRAPHY MODE



Turn the Mode dial to select the settings.

Audio recording

Use this mode to record up to 1 hour of sound per audio recording.

Recording format: WAVE (→ P.126)


- Take care not to block the microphone (→ P.8) with your fingers, etc.
- The maximum length of the audio recording may be shorter than 1 hour depending on the available space on the SmartMedia.

Caution The recording time will be shorter if you select the mode before switching the camera off.

Standard audio recording times for SmartMedia

SmartMedia capacity	Available recording time (hrs.)
MG-4S (1MB)	Aprox. 8 min.
MG-8S (2MB)	Aprox. 16 min.
MG-16S (4MB)	Aprox. 32 min.
MG-32S (8MB)	Aprox. 67 min.
MG-64S (16MB)	Aprox. 135 min.
MG-128S (32MB)	Aprox. 272 min.

* These audio recording times are for newly formatted SmartMedia.

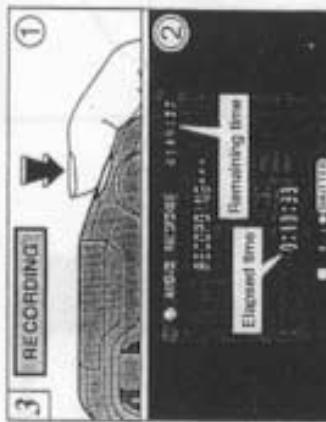

Press the shutter button during audio recording to stop recording.

(1) Pressing the shutter button down fully starts audio recording.

- During audio recording, the self-timer lamp blinks and counters on the LCD monitor show the elapsed and remaining time.


- You do not need to hold down the shutter button.
- Once the remaining time runs out, audio recording automatically stops.

Even if you press the shutter button to end audio recording immediately after recording starts, 51 approximately 3 seconds of sound will be recorded.

FLASH PHOTOGRAPHY



- Press the "OPEN" button to pop up the flash.
- Effective flash range (for "EZ")
Wide angle: 0.2 m to 3 m (0.6 ft. to 9.8 ft.)
Telephoto : 0.2 m to 2 m (0.6 ft. to 6.5 ft.)

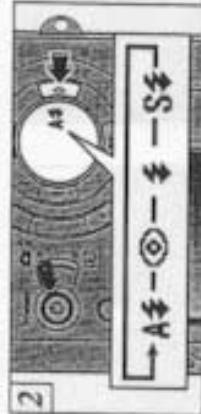

Press "▲" to select the flash setting. The flash setting changes [A\$ → Ⓛ → \$ → \$] each time you press "▲".

A\$ Auto Flash Mode

Use this mode for ordinary photography. The flash fires automatically as required by the shooting conditions.



- ① Red-Eye Reduction
- Use this mode to ensure that the subject's eyes appear natural when photographing people in low-light conditions.
- The flash fires a pre-flash just before the picture is taken and then fires again to take the actual picture.

- If the photography mode is "EZ", use the Auto Flash mode.
- When you pop the flash up, the image shown on the screen may disappear and the screen may go dark because the flash is charging. In this event, the indicator lamp flashes orange.

- ♦ Red-Eye Effect ♦
- When you use the flash to photograph people in low-light conditions, their eyes sometimes appear red in the picture. This is caused by the light of the flash reflecting off the inside of the eye. Use Red-Eye Reduction flash to effectively minimize the likelihood of the red-eye effect.
- Take the following measures also to make Red-Eye Reduction more effective :
- Get the subjects to look at the camera.
- Get as close as possible to the subjects.

FLASH PHOTOGRAPHY



4 Forced Flash

Use this flash mode to photograph backlit scenes, such as a subject against a window or in the shade of a tree, or to obtain the correct colors when you are shooting under lighting such as fluorescent tubes. In this mode, the flash fires in bright as well as dark conditions.

- The image may be overexposed when you shoot bright scenes.
- Because a slow shutter speed is used, a tripod should be used to prevent camera shake.

To take the picture with a background brightly lit with a long subject in the foreground, use the "Sp" mode. See "Night Scenel mode" (P.41).



5 Slow Synchro

This is a flash mode that uses a slow shutter speed. This allows you to take pictures of people at night that clearly show both your subjects and the nighttime backdrop.


- The image may be overexposed when you shoot bright scenes.
- Because a slow shutter speed is used, a tripod should be used to prevent camera shake.



6 Suppressed Flash

Pressing the flash down switches the camera to Suppressed Flash mode. Use this mode for photography using indoor lighting, for shots taken through glass, and for photography in venues such as theaters or at indoor sporting events where the distance is too great for the flash to be effective. When you use Suppressed Flash, the Auto White Balance function (P.126) operates so that natural colors are captured along with the ambience of the available light.

- If you are shooting in Suppressed Flash mode in dark conditions, use a tripod to prevent camera shake.
- See P.29, 110 for information on the camera shake warning.

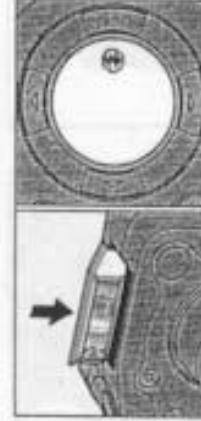

Close the flash to switch to Suppressed Flash mode. The "S" icon appears on the display panel and you cannot use the flash.
● In the modes shown below, the "S" icon is not displayed but the flash still cannot be used.
▲ Scene (Landscape) (P.44)
■ Movie (Video) (P.47)
○ Continuous shooting (P.46)


MACRO (CLOSE-UP) PHOTOGRAPHY

This mode can be selected in the **■■■■■ + ■■■■■ + Q** and **Q■■■■■** photography modes.

Selecting Macro mode allows you to take close-up shots.

Effective Photography Range:

Approx.: 20 cm – 80 cm.

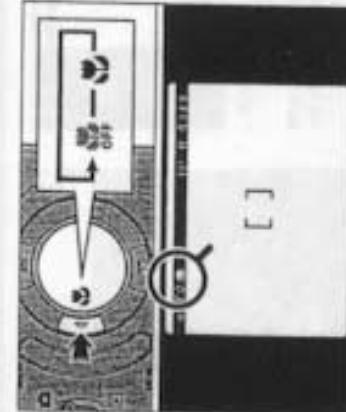

• The macro setting cannot be changed while you are using manual focus (P. 65).

• Set the appropriate Flash mode for the conditions (P. 52).

• If the flash is too bright, adjust the flash brightness (P. 67).

• When shooting in dark conditions, use a tripod to prevent blur shake.


• You can use the Macro mode to take pictures in Macro mode if the field visible through the viewfinder does not match the field actually photographed because the viewfinder and lens are in different positions. Accordingly, you should use the LCD monitor to take pictures in Macro mode.

• The LCD monitor automatically switches on, Macro photography is automatically cancelled in the following situations:

- When the photography mode is switched to "SP" (P. 47).
- When the camera is switched off.

- You cannot use the digital zoom for resolutions of **■■■■■**.
- See P. 94 for information on changing the file size setting.

DIGITAL ZOOM

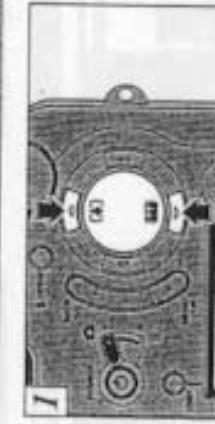

You can use the digital zoom function for all Resolution (File Size) settings other than **■■■■■**.

Note that the digital zoom only functions when you use the LCD monitor to take shots.

To use the digital zoom

Use the optical zoom to zoom in fully (telephoto) and then press the **▲ (Q)** button again.

To revert to optical zoom

Use the digital zoom to zoom out fully (wide-angle) and then press the **▼ (W)** button again.


• The optical zoom is equivalent to approx. 108 mm – 151 mm (1.4x).

• The digital zoom is equivalent to approx. 108 mm – 238 mm (2.2x).

• Movie: Equivalent to approx. 108 mm – 475 mm (4.4x).

• The optical zoom is equivalent to approx. 36 mm – 72 mm (2.00x).

- The optical zoom is equivalent to approximately 36 mm – 108 mm on a 35 mm camera.

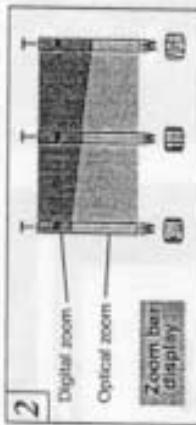

A "zoom bar" appears on the screen. If the image on the screen is difficult to make out, press the shutter button down halfway.

• Digital zoom focal lengths (35 mm camera equivalent)

• Digital zoom focal lengths (35 mm camera equivalent)

• Digital zoom focal lengths (35 mm camera equivalent)

• Digital zoom focal lengths (35 mm camera equivalent)

• Digital zoom focal lengths (35 mm camera equivalent)


• Digital zoom focal lengths (35 mm camera equivalent)

• Digital zoom focal lengths (35 mm camera equivalent)

• Digital zoom focal lengths (35 mm camera equivalent)

• Digital zoom focal lengths (35 mm camera equivalent)

PHOTOGRAPHY MENU OPERATION

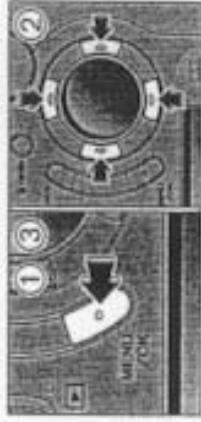

- ① Press the "MENU/OK" button to display the menu.
- ② Use "↑" and "↓" to select the menu item and "▲" and "▼" to change the setting.
- ③ Press the "MENU/OK" button to confirm the setting.


In "ON MANUAL" mode, you need to switch between menus.
Use the page numbers on the right-hand side of the LCD monitor to jump to another page.

■ Photography Menu

Page	Setting
1	ISO - <input checked="" type="checkbox"/> - <input type="checkbox"/> - <input type="checkbox"/>
2	EV - <input checked="" type="checkbox"/> - <input type="checkbox"/> - <input type="checkbox"/> - <input checked="" type="checkbox"/>
3	WB - <input type="checkbox"/>

- The settings available in the menu screen differ depending on the photography mode. See P.42 for details.

PHOTOGRAPHY MENU | SELF-TIMER PHOTOGRAPHY

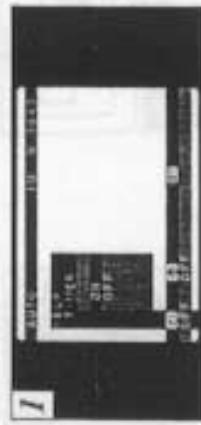


This mode can be selected in the "P/T/O" • SP • **ON** • and photography modes.
In this mode a timer runs for roughly 10 seconds before the shutter is released. Use this mode for shots such as photographs of yourself.


Position the AF frame over the subject and press the shutter button. The camera focuses on the subject in the frame and self-timer starts to run.

- You can also use the AF/AE lock (→ P.21).
- Be careful not to stand in front of the camera when you press the shutter button as this can cause housing or light metering errors.

PHOTOGRAPHY MENU SELF-TIMER PHOTOGRAPHY

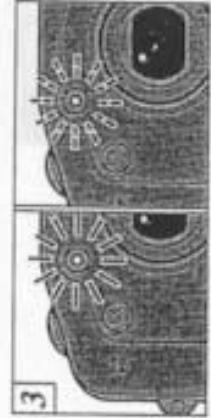

The self-timer lamp lights and then starts flashing until the picture is taken.

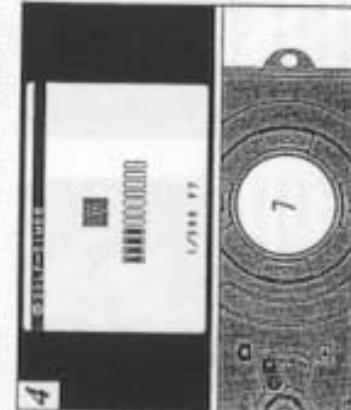


The time until the shutter releases is shown as a countdown bar on the LCD monitor and display panel.
Self-timer mode is automatically cancelled after each shot.


- To stop the self-timer once it has started running, press the "BACK" button.
- The self-timer is not cancelled for multi-exposure shots.

- You can check the countdown on the display panel when the LCD monitor is switched off.

PHOTOGRAPHY MENU VOICE CAPTIONING

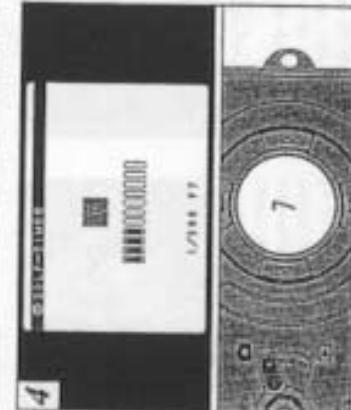

The time until the shutter releases is shown as a countdown bar on the LCD monitor and display panel.
Self-timer mode is automatically cancelled after each shot.

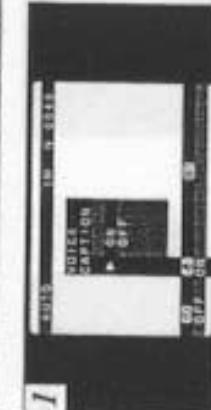

This function can be selected in the photography mode. Voice Memo allows you to record a voice memo (comment) up to 30 seconds long for an image immediately after you take the shot.

- Recording format: WAVE (P. 126)
- Audio file size: Approx. 240 KB (for a 30-second voice memo)



Take a picture as normal. The message then appears on the LCD monitor.


3

- If you do not want to record a voice memo, press the "BLACK" button. Note that the image will still be recorded.

61

60

PHOTOGRAPHY MODE | VOICE CAPTIONING

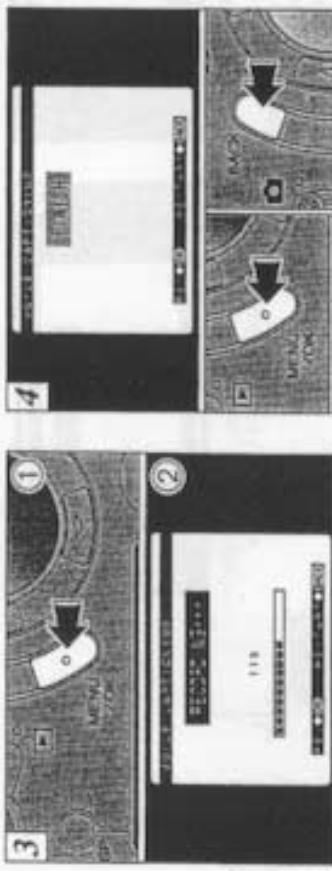

- ① Press the "MENU/OK" button to start recording the voice memo.
② During voice memo recording, the self-timer lamp blinks and counter on the LCD monitor shows the elapsed time.

Focus the camera (P.8) or the hood of the camera to record your comment. Hold the camera roughly 20 cm/s away from the best position.

- To end your comment during recording, press the "MENU/OK" button.

PHOTOGRAPHY MENU | AUTO BRACKETING



- This mode can be selected in the "REC" photography mode.
Use this feature to photograph the same image with different exposure settings. Auto bracketing automatically shoots 3 consecutive frames, one of which is correctly exposed while the remaining two are underexposed and overexposed respectively by a set amount.
• The three available settings are ±1/3, ±2/3 and ±1 EV. See P.126 for a definition of EV.

- Flash photography cannot be used.

- This feature always takes 3 shots. However, if there is insufficient space on the SmartMedia for 3 shots, no picture will be taken.


- The "STORING..." message appears on the LCD monitor while the images are being recorded onto the SmartMedia.

- The time required to record a file is approximately 12 seconds in "NORMAL" mode.

When Preview display is set to "ON", a (A) is correctly exposed, (B) is overexposed and (C) is underexposed. To record the images, press the "MENU/OK" button. To proceed without recording the images, press the "BLACK" button. You can also select the image to be recorded. See P.95 for details.

- 3**
- The "STORING..." message appears on the LCD monitor while the images are being recorded onto the SmartMedia.
 - The time required to record a file is approximately 12 seconds in "NORMAL" mode.
- 63**


PHOTOGRAPHY MENU [WB] WHITE BALANCE

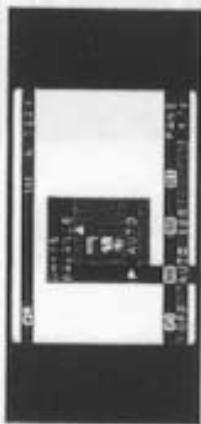

This mode can be selected in the "ON" photography mode. Change the white balance setting when you want to take a picture with the white balance fixed for the surroundings and lighting when the picture is taken. In Auto mode, the correct white balance may not be obtained for subjects such as close-ups of people's faces and shots taken under a special light source. In such situations, select the correct white balance for the light source. See P. 126 for more information on the white balance.

- AUTO: Automatic adjustment
(Shooting to show the ambience of the light source)
- * : Shooting outdoors in fine weather
 - : Shooting in shade
 - : Shooting under "Daylight" fluorescent lamps
 - : Shooting under "Warm White" fluorescent lamps
 - : Shooting under "Cool White" fluorescent lamps
 - : Shooting in incandescent light
- * The white balance setting (unless it is a Custom White Balance setting) is ignored when you use the flash. To achieve the desired effect in your shot, press the flash back down to suppress flash operation (P. 50).


PHOTOGRAPHY MENU [ISO] SENSITIVITY

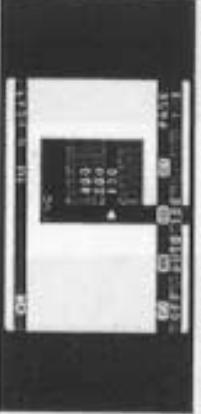


This mode can be selected in the "ON" photography mode. Use this setting when you want to take bright pictures indoors without using a flash or when you want to use a fast shutter speed. (to prevent camera shake, etc.)

- * Settings: 100 (standard), 200, 400

PHOTOGRAPHY MENU [MF] MANUAL FOCUS

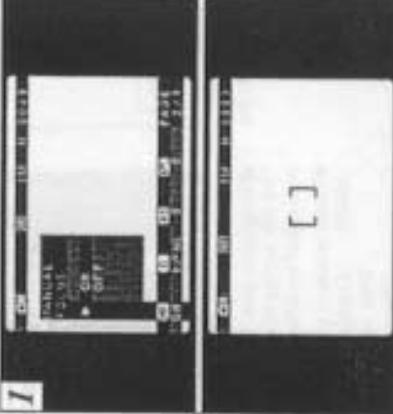


3 This function can be selected in the "ON" and "Q" photography modes. When the camera cannot focus in AF mode, use this mode to set the focus and take the picture. When you select this mode, the "MF" icon appears on the LCD monitor.

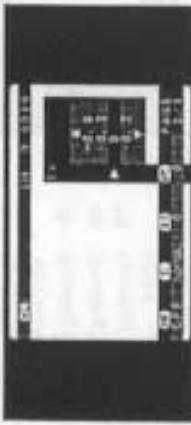

This mode can be selected in the "QM" photography mode.
Use this setting when you cannot obtain the correct brightness, such as when the flash does not much the subject (is too faint) or when you are using the flash for a close-up shot.

- Correction range: ±2 steps
(-1.5 to +0.5 EV in 0.3 EV increments)
See P.126 for more information on EVs.


- The Brightness setting is disabled in the following situations:
 - When the flash is used in Auto or Red-Eye Reduction mode
 - When dark scenes are shot in Forced Flash mode

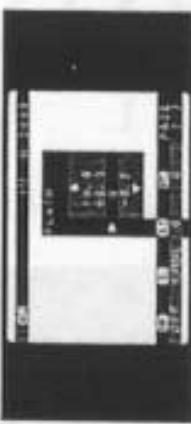

This mode can be selected in the "QM" photography mode.
Use this setting to soften or emphasize outlines or to adjust the image quality.

- Three levels of sharpness are available:
 - HARD : Emphasizes the outlines.
 - BEST for shots of subjects such as buildings or text where you want sharp images.
 - NORMAL : Best for ordinary photography.


- Provides edge sharpness that is ideal for ordinary shots.
- Softens the outlines.
- Best for shots of subjects such as people, where a softer image is desirable.

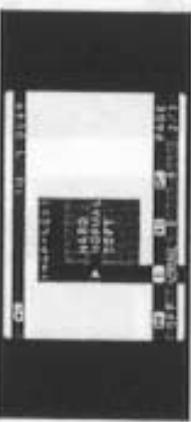

This mode can be selected in the "QM" photography mode.
Use this setting to focus on a nearby subject and ▶ (W) to focus on a distant object. Use the LCD monitor to check the focus.

- Because the macro and flash settings cannot be changed once manual focus is set to ON, set the macro (P.59) and flash (P.52) settings beforehand.

- The Brightness setting is disabled in the following situations:
 - When the flash is used in Auto or Red-Eye Reduction mode
 - When dark scenes are shot in Forced Flash mode

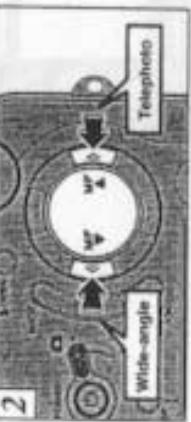

Press "◀" (W) to focus on a nearby subject and ▶ (T) to focus on a distant object. Use the LCD monitor to check the focus.

- The Brightness setting is disabled in the following situations:
 - When the flash is used in Auto or Red-Eye Reduction mode
 - When dark scenes are shot in Forced Flash mode



◆ Subjects for Which Exposure Adjustment is Particularly Effective ◆

- Copying of printed text (black characters on white paper) (+1.5 EV)
- Backlit portraits (+0.6 to +1.5 EV)
- Very bright scenes (such as snowflakes) and highly reflective subjects (+0.9 EV)
- Shots made up predominantly of sky (-0.9 EV)
- Split subjects, particularly against dark backgrounds (-0.6 EV)
- Copying of printed text (white characters on black paper) (-0.6 EV)
- Scenes with low reflectivity, such as shots of pine trees or dark foliage (-0.6 EV)

This mode can be selected in the "Q" photography mode.

Multi-exposure provides a way of overlaying photographed images on top of each other to give a final image that cannot be obtained through normal photography.

- If the photographed image is overexposed, use negative compensation in the Brightness (exposure compensation) setting to correct the exposure.
- Only the optical zoom can be used for multi-exposure shots. The digital zoom (P.57) does not function.

◆ Exposure Compensation is Disabled in the Following Situations:

- When the Flash is used in Auto or Red-eye Reduction mode
- When Forced Flash mode is used and the scene photographed is dark.



①



②



- ① A preview screen appears when you take a picture.
- ② Press "▶" to move to the next image frame.

③

- When you take the next (multi-exposure) shot, the images are overlaid and displayed in the preview screen.

◆ To overlay more images: Press "▶".

◆ To record the current image: Press "MENU/OK".

◆ To return to the previous image: Press "◀".

◆ To stop without recording any images: Press the "BACK" button.

There is [] on the number of times multi-exposure can be used.

③ A preview image is always shown, regardless of the photographed image display setting.