


System Expansion Options

By using the FinePix A202 together with other optional FUJIFILM products, your system can be expanded to fill a wide range of uses.

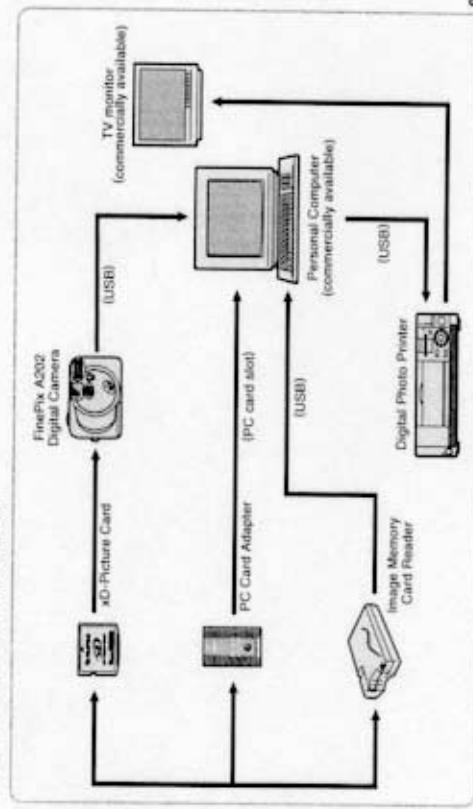

97

Mac OS X

Uninstalling FinePixViewer

Quit FinePixViewer and DP Editor. Then drag the installed FinePixViewer folder to the Trash and select "Empty Trash" from the "Special" menu.

Macintosh

NOTE

Only perform this operation when you no longer require the installed software or when the software was not installed correctly.

Mac OS 8.6-9.2

Uninstalling Mass Storage Driver and PC Camera Driver

1. Check that the camera is not connected to your Macintosh.
2. Drag all the files that begin with "USB04CB..." to the Trash.
3. Restart your Macintosh.
4. Select "Empty Trash" in the "Special" menu.

 
Uninstalling Exif Launcher, FinePixViewer and DP Editor

1. After you have quit Exif Launcher in "Exif Launcher Settings" in the FinePixViewer "Settings" menu, move the Exif Launcher file from the "Startup Items" folder in the System folder to the Trash. Then select "Empty Trash" in the "Special" menu.
2. After you have exited FinePixViewer and DP Editor and then drag the installed FinePixViewer folder to the Trash. Then click "Empty Trash" in the "Special" menu.

96

Accessories Guide

► The optional accessories (sold separately) can make taking pictures with the FinePix A202 even easier. For information on how to attach and use the accessories, refer to the instructions provided with the accessory used. Visit the FUJIFILM web site for the latest information on camera accessories.
<http://home.fujifilm.com/products/digital/index.html>

<ul style="list-style-type: none">● xD-Picture Card These are separately available xD-Picture Card cards. Use the following xD-Picture Card: 	<ul style="list-style-type: none">● AC Power Adapter AC-3V Use the AC power adapter when you want to take pictures or play back images for long periods or when the camera is connected to a computer. ★ The shape of the AC power adapter, the plug and socket outlet depend on the country.	<ul style="list-style-type: none">● Fujifilm Rechargeable Battery 2Hr-3UF The 2Hr-3UF includes 2 pieces of high-capacity AA-size Nickel Metal Hydride batteries. 
<ul style="list-style-type: none">● SC-FXA01 This is a special case made of polyester that protects the camera against soiling, dust and minor impacts when it is being carried. http://home.fujifilm.com/products/digital/index.html	<ul style="list-style-type: none">● DPC-R1 Image Memory Card Reader The DPC-R1 provides a quick and easy way to transfer images back and forth between your PC and an image memory card (xD-Picture Card and SmartMedia). The DPC-R1 uses the USB interface for high-speed file transfer.<ul style="list-style-type: none">● Compatible with Windows 98/98 SE, Windows Me, Windows 2000 Professional, Windows XP or Mac, Mac OS 8.6 to 9.2, Mac OS X (10.1.1 to 10.1.3), and models that support USB as standard.	<ul style="list-style-type: none">● DPC-AD PC Card Adapter The PC Card Adapter allows the xD-Picture Card and SmartMedia to be used as a PC Card Standard ATA-compliant (PCMCIA 2.1) PC card (Type II).<ul style="list-style-type: none">● Compatible with SmartMedia at 5V/3.3V, 2MB to 128MB.

98

<ul style="list-style-type: none">● SC-FXA01 This is a special case made of polyester that protects the camera against soiling, dust and minor impacts when it is being carried. http://home.fujifilm.com/products/digital/index.html	<ul style="list-style-type: none">● DPC-R1 Image Memory Card Reader The DPC-R1 provides a quick and easy way to transfer images back and forth between your PC and an image memory card (xD-Picture Card and SmartMedia). The DPC-R1 uses the USB interface for high-speed file transfer.<ul style="list-style-type: none">● Compatible with Windows 98/98 SE, Windows Me, Windows 2000 Professional, Windows XP or Mac, Mac OS 8.6 to 9.2, Mac OS X (10.1.1 to 10.1.3), and models that support USB as standard.	<ul style="list-style-type: none">● DPC-AD PC Card Adapter The PC Card Adapter allows the xD-Picture Card and SmartMedia to be used as a PC Card Standard ATA-compliant (PCMCIA 2.1) PC card (Type II).<ul style="list-style-type: none">● Compatible with SmartMedia at 5V/3.3V, 2MB to 128MB.
---	--	--

99

Notes on Using Your Camera Correctly

Notes on the Power Supply

► Be sure to read this information in conjunction with "Safety Notes" (P.114), to ensure that you use your camera correctly.

Places to Avoid

Do not store or use the camera in the following types of locations:

- In the rain or very humid, dirty or dusty places.
- In direct sunlight or in places subject to extreme temperature rises, such as in a closed car in summer.
- Extremely cold places.
- Places subject to strong vibration.
- Places affected by smoke or steam.
- Places subject to strong magnetic fields (such as near motors, transformers or magnets).
- In contact with chemicals such as pesticides, or next to rubber or vinyl products for long periods of time.

Notes on Immersion in Water or Sand

The FinePix A202 is particularly adversely affected by water and sand. When you are at the beach or close to water, ensure that the camera is not exposed to water or sand. Take care also not to place the camera on a wet surface. Water or sand inside the camera can cause faults that may be irreparable.

Notes on Condensation

If the camera is carried suddenly from a cold location into a warm place, water droplets (condensation) may form on the inside of the camera or on the lens. When this occurs, switch the camera off and wait an hour before using the camera. Condensation may also form on the XD-Picture

card. In this event, remove the XD-Picture Card and wait a short time before using it again.

When the Camera is Unused for Long Periods

If you do not intend to use the camera for a long period of time, remove the batteries and the XD-Picture Card before storing the camera.

Cleaning Your Camera

- Use a blower brush to remove dust from the lens, LCD monitor screen or viewfinder as these surfaces, and then wipe lightly with a soft, dry cloth. If any scaling remains, apply a small amount of lens cleaning liquid to a piece of FUJIFILM lens cleaning paper and wipe gently.
- Do not scratch hard objects against the lens, LCD monitor screen or viewfinder as these surfaces are easily damaged.
- Clean the body of the camera with a soft, dry cloth. Do not use volatile substances such as thinner, benzine or insecticide, as these may react with camera body and cause deformation or remove the coating.

Using the Camera Overseas

When traveling overseas, do not place your camera in the check-in baggage. Baggage handling at airports may subject luggage to violent shocks, and the camera may be damaged internally even when no external damage is visible.

Applicable Batteries

• AA-size alkaline, Ni-MH (nickel-metal hydride) can be used with this camera.

Do not use AA-size manganese, lithium or nickel-cadmium (Ni-Cd) batteries in your FinePix cameras because the heat generated by the batteries could damage the camera or cause malfunctions.

• The operating lives of alkaline batteries you purchase may be shorter than the alkaline batteries provided with the camera.

Notes on the Batteries

Incorrect use of the batteries could cause them to leak, become hot, ignite or burst. Always observe the precautions given below.

• Do not heat the batteries or throw them into a fire.

• Do not carry or store a batteries with metal objects such as necklaces or hairpins that could come into contact with the metal positive (+) and negative (-) poles of the batteries.

• Do not expose the batteries to fresh or sea water, and take particular care to keep the terminals dry.

• Do not attempt to deform, disassemble or modify the batteries.

• Do not attempt to peel off or cut the batteries casing.

• Do not drop, strike or otherwise subject the batteries to strong impacts.

• Do not use batteries that are leaking, deformed, discolored or exhibit any other obvious abnormality.

• Do not store batteries in very warm or moist locations.

• Keep the batteries out of reach of babies and small children.

• When loading the batteries into the camera, ensure that the battery polarity (+ and -) is indicated on the camera. Do not use new batteries together with used batteries. In the case of rechargeable batteries, do not use charged and discharged batteries together. Do not use batteries of different types or brands together.

• If you do not intend to use the camera for a long period of time, remove the batteries from the camera. (Note that if the camera is left with the batteries removed, their time and date settings are cleared.)

• The batteries may feel warm immediately after being used. Before removing the batteries, switch the camera off and wait until the batteries cool down.

• When replacing the batteries, always fit 2 new batteries. Here, "new batteries" refers to either recently purchased unused alkaline batteries, or Ni-MH (nickel metal hydride) batteries that have recently been fully charged together.

In cold locations (at temperatures of +10°C/+50°F or below), battery performance deteriorates and the time for which they can be used shortens markedly. This is particularly true of alkaline batteries. In cold conditions, put the batteries in your pocket or a similar place to warm them before loading them into the camera. If you use a body warmer to warm the batteries, ensure that they are not in direct contact with the warmer.

• Soil (such as fingerprints) on the battery terminals can markedly reduce the number of available shots. Carefully wipe the battery terminals clean with a soft dry cloth before loading the batteries.

Notes on the Power Supply

- △ If any liquid at all seeps from the batteries, wipe the battery compartment thoroughly and then load new batteries.
- △ If any battery fluid comes into contact with your hands or clothing, wash the area thoroughly with water. Note that battery fluid can cause loss of sight if it gets into your eyes. If this occurs, do not touch your eyes. Wash as told our with clean water and contact your physician for treatment.

■ Disposing of Batteries

When disposing of batteries, do so in accordance with your local waste disposal regulations.

■ Notes on Small Rechargeable Batteries (Ni-MH batteries)

- Always use the special battery charger to charge AA-size Ni-MH batteries. Charge the batteries as described in the instructions provided with the battery charger.
- Do not use the battery charger to charge batteries other than those specified for use with the charger.
- Note that the batteries may heat warm immediately after being charged.
- Ni-MH batteries are not charged at shipment. Be sure to charge the batteries before using them.
- The camera mechanism is such that it draws a minute amount of current even when the camera is switched off. Take particular care not to leave Ni-MH batteries in the camera for a long period of time as they can become excessively discharged and may no longer be usable even when charged.

102 • Ni-MH batteries self-discharge even when not used.

AC Power Adapter

Use only the AC-3V AC Power Adapter (sold separately) with your FinePix A302 Digital Camera. The use of other AC power adapters may result in damage to your camera.

- The AC power adapter is designed exclusively for indoor use.
- Plug the connection cord plug securely into the DC input terminal of the FUJIFILM Digital Camera.
- Turn off the power switch of the FUJIFILM Digital camera before disconnecting the connection card from the FUJIFILM Digital camera's DC input terminal. To disconnect, take hold of the plug and pull it out (do not disconnect it by pulling on the cord).
- Do not use the AC power adapter with any device except the specified device.
- During use, this AC power adapter will become hot to touch, but this is normal.
- Do not disassemble the AC power adapter. Doing so could be dangerous.
- Do not use this device in a place with high temperature and high humidity.
- Do not drop or subject this device to strong shocks.
- This device may emit a hummimg noise, but this is normal.
- If used near a radio, this device may cause static, so play the radio in a different place.

Notes on the xD-Picture Card

■ xD-Picture Card

The xD-Picture Card supplied with your FinePix A202 camera is a new image recording medium developed especially for use in digital cameras. Each xD-Picture Card contains a built-in semiconductor memory chip (NAND flash memory) which is used for storing digital image data. Because the data is stored electronically, the stored image data can be erased from the card and new data recorded.

■ xD-Picture Card with ID#

The xD-Picture Card ID is a xD-Picture Card that has an individually assigned identification number. xD-Picture Card ID cards can be used with devices that use ID numbers for copyright protection or other purposes. This camera accepts xD-Picture Card ID cards in the same way as conventional xD-Picture cards.

■ Storing Data

In the situations listed below, recorded data may be erased (destroyed). Please note that Fuji Photo Film Co., Ltd. accepts no responsibility whatsoever for the loss (destruction) of recorded data.

* When the xD-Picture Card is used incorrectly by the owner or a third party

* When the xD-Picture Card is exposed to static electricity or electrical noise

* When the battery cover is opened or the xD-Picture

Card removed and the camera is then switched off during data recording, during data erasing (xD-Picture Card formatting), or during frame advance when images are being played back.

You should always back up important files onto another media (MO disk, CD-R, CD-RW, hard disk, etc.).

■ Notes on Handling xD-Picture Card

• Take care to hold the xD-Picture Card straight when you load it into your camera.

• Never remove the xD-Picture Card or switch the camera off during data recording, during data erasing (xD-Picture Card formatting) or during frame advance when images are being played back. These actions could result in damage to the xD-Picture Card.

• Use only the xD-Picture Card specified for use with the FinePix A202. The use of other xD-Picture Card could damage the camera.

• xD-Picture Card are precision electronic devices. Do not bend, drop, or subject xD-Picture Card to excessive shocks.

• Do not use or store xD-Picture Card in environments likely to be affected by strong static electricity or electrical noise.

• Do not use or store xD-Picture Card in very hot, humid or corrosive environments.

or file names on the xD-Picture Card from your PC as this will make it impossible to use the xD-Picture Card in your camera.

• Always use the camera to erase image data on a xD-Picture Card.

• To edit image data, copy the image data to the PC's hard disk and then edit the copied data.

• Do not copy files other than those that will be used by the camera.

■ Specifications

Type	Image memory card for digital cameras (xD-Picture Card)
Operating voltage	3.3V
Conditions for use	Temperature: 0°C to +40°C (+32°F to +104°F) Humidity: 80% or less (no condensation)
Dimensions	37 mm × 45 mm × 0.76 mm (1.45 in. × 1.77 in. × 0.03 in.) (W × H × D)

■ Notes on Using xD-Picture Card with a PC

• If you intend to take photos using a xD-Picture Card that has been used on a PC, format the xD-Picture Card on your camera.

• When you format a xD-Picture Card in the camera and then shoot and record images, a directory (folder) is automatically created. Image data is then recorded in this directory.

• Do not change or delete the directory (folder) names

Warning Displays

► The table below lists the warnings that are displayed on the LCD monitor.

Warning Displayed	Explanation	Remedy
(L1 red) (Blanking red)	The batteries in the camera are fully depleted or very low on charge.	Replace the batteries or have new batteries ready.
	There is a strong likelihood of camera shake because the shutter speed is slow.	Use Matrix photography. However, a tripod should be used for some scenes and modes.
	There is no xD-Picture Card inserted.	Load the xD-Picture Card in the correct direction.
	<ul style="list-style-type: none"> The xD-Picture Card is not formatted. The xD-Picture Card contact area is soiled. Camera fault. 	<ul style="list-style-type: none"> Format the xD-Picture Card. Wipe the contact area on the xD-Picture Card with a soft dry cloth. It may be necessary to format the xD-Picture Card. If the error message is still displayed, replace the xD-Picture Card. Contact your FUJIFILM dealer.
	<ul style="list-style-type: none"> The xD-Picture Card contact area is soiled. The xD-Picture Card is damaged. The xD-Picture Card format is incorrect. Camera fault. 	<ul style="list-style-type: none"> Wipe the contact area on the xD-Picture Card with a soft dry cloth. It may be necessary to format the xD-Picture Card. If the error message is still displayed, replace the xD-Picture Card. Contact your FUJIFILM dealer.
	The xD-Picture Card is fully recorded.	<ul style="list-style-type: none"> Erase some images or use a xD-Picture Card that has ample free space.
	<ul style="list-style-type: none"> An attempt was made to playback a frame not recorded on this camera. The xD-Picture Card contact area is soiled. You attempted to play a movie with a recording time longer than 20 seconds. 	<ul style="list-style-type: none"> Images cannot be played back. Wipe the contact surface on the xD-Picture Card thoroughly with a soft, dry cloth. In some cases, you may have to format the xD-Picture Card. You cannot play back movies that are more than 20 seconds long.

Troubleshooting

► If you think the camera is faulty, check the following once more.

Troubleshooting	Possible causes	Solutions
No power.	<ul style="list-style-type: none"> The battery is exhausted. The AC power adapter plug has come out of the power outlet. 	<ul style="list-style-type: none"> Replace the batteries. Plug the adapter back in.
Power cuts out during operation.	The battery is exhausted.	<ul style="list-style-type: none"> Replace the batteries.
Battery runs out quickly.	<ul style="list-style-type: none"> You are using the camera in extremely cold conditions. The terminals are soiled. The battery is flat. 	<ul style="list-style-type: none"> Put the battery in your pocket or another warm place to heat it and then load it into the camera just before you take a picture. Wipe the battery terminals with a clean, dry cloth. Purchase new batteries.
No photograph is taken when the shutter button is pressed.	<ul style="list-style-type: none"> No xD-Picture Card is loaded. The xD-Picture Card is fully recorded. The xD-Picture Card contact area is isolated. The xD-Picture Card is damaged. The Power Save function has switched off the camera. The battery is exhausted. 	<ul style="list-style-type: none"> Load a xD-Picture Card. Insert a new xD-Picture Card or erase some unwanted frames. Format the xD-Picture Card. Wipe the xD-Picture Card contact area with a clean dry cloth. Load a new xD-Picture Card. Switch the camera on. Purchase new batteries.

Troubleshooting	Possible causes	Solutions
Can't use the flash to take pictures.	<ul style="list-style-type: none"> The flash is set to Suppressed Flash mode. You pressed the shutter button while the flash was charging. The battery is exhausted. 	<ul style="list-style-type: none"> Set the flash to Auto, Red-Eye Reduction or Forced Flash mode. Wait until charging is completed before pressing the shutter button. Purchase a new battery.
The playback image is too dark even though the flash was used.	<ul style="list-style-type: none"> The subject is too far away. Your fingers are obscuring the flash or flash control sensor. 	<ul style="list-style-type: none"> Move closer to the subject. Hold the camera correctly.
The image is blurred.	<ul style="list-style-type: none"> The lens is dirty. You photographed a distant subject with the macro selector switch set to •. 	<ul style="list-style-type: none"> Clean the lens. Cancel Macro mode.
There is speckling on the image.	<ul style="list-style-type: none"> The shot was taken with a slow shutter speed (long exposure) in a high-temperature environment. 	<ul style="list-style-type: none"> This is a characteristic of CCDs and does not indicate a camera fault.
I can't format the xD-Picture Card.	<ul style="list-style-type: none"> The xD-Picture Card contact area is soiled. 	<ul style="list-style-type: none"> Wipe the xD-Picture Card contact area with a clean dry cloth.

Troubleshooting

► If you think the camera is faulty, check the following once more.

Explanation of Terms

Troubleshooting	Possible causes	Solutions
The ERASE ALL function does not erase all the frames.	• Some frames may be protected.	• Unprotect frames using the camera on which the protection was first applied.
Frame erase does not erase the frame.		
Nothing happens when I use the Mode switch.	• Camera malfunction. • The battery exhausted.	• Briefly remove the batteries or disconnect the AC power adapter. Then reinsert the batteries or reconnect the AC power adapter and try again. • Purchase new batteries.
When the camera is connected to a personal computer (PC), the shot image appears on the camera's LCD monitor.	• The special USB cable is not connected correctly to the PC or camera. • The PC is not switched on.	• Set up the camera and USB cable correctly. • Switch the PC on.
The camera no longer works correctly.	• The camera has suffered an unforeseen problem.	• Remove the batteries briefly and then reinsert the batteries and try again.

DPOF: Digital Print Order Format
DPOF is a format used for recording information on a storage media (image memory card, etc.) that allows you to specify which of the frames shot using a digital camera are printed and how many prints are made of each image.

EV:
A number that denotes exposure. The EV is determined by the brightness of the subject and sensitivity (speed) of the film or CCD. The number is larger for bright subjects and smaller for dark subjects. As the brightness of the subject changes, a digital camera maintains the amount of light hitting the CCD at a constant level by adjusting the aperture and shutter speed. When the amount of light striking the CCD doubles, the EV increases by 1. Likewise, when the light is halved, the EV decreases by 1.

JPEG:
Joint Photographic Experts Group
A file format used for compressing and saving color images. The compression ratio can be selected, but the higher the compression ratio, the poorer the quality of the expanded image.

Motion JPEG:
A type of AVI (Audio Video Interleave) file format that handles images and sound as a single file. Images in the file are recorded in JPEG format. Motion JPEG can be played back by QuickTime 3.0 or later.

PC Card:
A generic term for cards that meet the PC Card Standard.

PC Card Standard:
A standard for PC cards determined by the PCMCIA.

PCMCIA:
Personal Computer Memory Card International Association (USA).

White Balance:
Whatever the kind of the light, the human eye adapts to it so that a white object still looks white. On the other hand, devices such as digital cameras see a white subject as white by first adjusting the color balance to suit the color of the ambient light around the subject. This adjustment is called matching the white balance. A function that automatically matches the white balance is called an **Automatic White Balance function**. **A 111**

Specifications

System

- Exposure control
 - 64 zone TTL metering, Program AE
(exposure compensation available in Manual mode)
- Number of effective pixels: 2.0 million pixels
- CCD sensor
 - 1/2.7-in. square pixel CCD with RGB Filter
- Number of total pixels: 2.11 million pixels
- Number of recorded Pixels
 - 1600 × 1200 pixels/1280 × 960 pixels/640 × 480 pixels
- File format
 - Still image: JPEG (Exit Ver. 2.2), DPOF-compatible Movie: AVI format, Motion JPEG
- Design rule for Camera File system Compliant
- Viewfinder
 - Informed Gauges finder, Frame covering: 80%
- Lens
 - Fujinon optical fixed-focus lens
- Storage media
 - xD-Picture Card (16MB to 128MB)
- Focus distance
 - 0.5 m (equivalent to 36 mm on a 35 mm camera)
- Standard number of available shots/recording time per xD-Picture Card

File Size	2M + F	2M + N	1M	0.3M	60K	20K
Number of recorded pixels	1600 × 1200	1280 × 960	640 × 480	—	—	—
Image Data Size	Aprox. 20MB	Aprox. 26MB	Aprox. 31.0MB	Aprox. 39.0MB	—	—
DPC-16 (16MB)	25	30	48	122	Aprox. 1.5 min.	Aprox. 5.0 min.
DPC-32 (32MB)	50	79	99	247	Aprox. 3.1 min.	Aprox. 10.1 min.
DPC-64 (64MB)	101	159	198	497	Aprox. 6.4 min.	Aprox. 20.2 min.
DPC-128 (128MB)	204	319	398	997	Aprox. 12.9 min.	Aprox. 40.6 min.

112

Input/Output Terminals

- DC IN 3V (Power input) socket
- Socket for specified AC power adapter (sold separately)
- xD (Special USB) socket
- USB (1) for image data output with a personal computer
- Power Supply and Others
- Power supply
 - Use one of the following:
 - AAA-size alkaline batteries
 - 2AA-size Ni-MH (nickel metal hydride) batteries (sold separately)
 - AC Power Adapter AC-20 (sold separately)
 - No. of available shots using battery (battery life)
 - With LCD monitor OFF
 - With LCD monitor ON
 - With LCD monitor OFF
- Accessories
 - See p.74, 75

- * These specifications are subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this Owner's Manual.
- * The LCD monitor on your digital camera is manufactured using advanced high precision technology. Even so, small bright points and anomalous colors (particularly around text) may appear on the monitor. These are normal display characteristics and do not indicate a fault with the monitor. This phenomenon will not appear on the recorded image.
- * The operation error may be caused in a digital camera by the strong radio interference (i.e. electric fields, static electricity, low noise, etc.).
- * Due to the nature of the lens, the edges of photographed images may appear distorted. This is normal and does not indicate a fault.

113

Safety Notes

- To ensure that you use your FinePix A200 camera correctly, read these Safety Notes and your Owner's Manual carefully beforehand.
- After reading these Safety Notes, store them in a safe place.

About the Icons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.

△ WARNING

When a fault arises, switch the camera off and then remove the batteries and disconnect the AC power adapter.



Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock.

• Contact your FUJIFILM dealer.

Do not allow water or foreign objects to enter the camera.



If water or foreign objects get inside the camera, switch the camera off, remove the battery and disconnect and unplug the AC power adapter.

Continued use of the camera can cause a fire or electric shock.

• Contact your FUJIFILM dealer.

△ WARNING

This icon indicates that death or serious injury can result if the information is ignored.

This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the information which is to be observed.



Triangular icons notify the user of information requiring attention ("Important").

Circular icons with a diagonal bar notify the user that the action indicated is prohibited ("Prohibited").

Filled circles with an exclamation mark notify the user of an action that must be performed ("Required").

△ WARNING

When a fault arises, switch the camera off and then remove the batteries and disconnect the AC power adapter.



Do not use the camera when it has been dropped or the casing is damaged.

This can cause a fire or electric shock.

• Contact your FUJIFILM dealer.

Never attempt to take pictures while in motion.

Do not use the camera while you are walking or operating a moving car or other vehicle.

This can result in you falling down or being involved in a traffic accident.

Do not heat, modify or attempt to disassemble the batteries.

Do not drop or subject the batteries to impacts.

Do not attempt to recharge lithium or alkaline batteries.

Do not store the batteries with metallic products.

Any of these actions can cause the batteries to heat or leak and cause fire or injury as a result.

Do not use the camera in the bathroom or shower.

This can cause a fire or electric shock.

• Contact your FUJIFILM dealer.

△ WARNING

Do not touch any metal parts of the camera during a thunderstorm.

This can cause an electric shock due to induced current from the lightning discharge.

Do not use the batteries except as specified.

Load the batteries with the polarities positioned as indicated by the (+) and (-) marks.

Use only the batteries or AC power adapter specified for use with this camera.

 
The use of other power sources can cause a fire.

If the battery leaks and fluid gets into your eyes or comes into contact with your skin or clothing, this can cause injury or loss of eyesight. Immediately flush the affected area thoroughly with clean water and seek medical treatment.

When discarding or storing batteries, cover the battery terminals with insulation tape.

• Contact with other metallic objects or batteries could cause the batteries to ignite or burn.

 CAUTION	
Keep out of the reach of small children. This product could cause injury in the hands of a child.	
Do not use this camera in locations severely affected by oil, humes, steam, humidity or dust. This can cause a fire or electric shock.	
Do not leave this camera in places subject to extremely high temperatures. Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.	
Do not place heavy objects on the camera. This can cause the heavy object to tip over or fall and cause injury.	
Do not move the camera while the AC power adapter is still connected. This can damage the power cord or cables and cause a fire or electric shock.	

 CAUTION	
Do not cover or wrap the camera or the AC power adapter in a cloth or quilt. This can cause heat to build up and distract the causing or cause a fire.	
Remove the batteries and disconnect the AC power adapter when you are cleaning the camera or if you intend to leave the camera unused for a long period. Failure to do so can cause a fire or electric shock.	
Using a cloth too close to a person's eyes may temporarily affect the eyesight. Take particular care when photographing infants and young children.	
Request regular internal testing and cleaning for your camera. Build-up of dust in your camera can cause a fire or electric shock. • Contact your FUJIFILM dealer to request internal cleaning every 2 years.	

EC Declaration of Conformity

We
Name : Fuji Photo Film (Europe) G.m.b.H.
Address : Heisenstrasse 31
40549 Dusseldorf, Germany

 
declare that the product

Product Name : FUJIFILM DIGITAL CAMERA FinePix A202
Manufacturer's Name : Fuji Photo Film Co., LTD.
Manufacturer's Address : 26-30, Nishiizabu 2-chome, Minato-ku,
Tokyo 106-8620, Japan

is in conformity with the following Standards

Safety : EN60950
EMC : EN55022 : 1998 Class B
EN55024 : 1998
EN61000-3-2 : 1995 + A1:1998 + A2:1998

following the provision of the EMC Directive (89/336/EEC, 92/31/EEC and
93/68/EEC) and Low Voltage Directive (73/23/EEC).



Dusseldorf, Germany September 1, 2002

Date

Place

Signature/Managing Director



Bij dit product zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet
weggooien maar inleveren als KCA.



FUJIFILM

FUJI PHOTO FILM CO., LTD.

20-30, Nihonbashi 2-chome, Minato-ku, Tokyo 106-8620, Japan

Printed in Japan

Printed on recycled paper.

FDS-204106-A4