



FUJI PHOTO FILM CO.,LTD.

26-30, NISHIAZABU 2-CHOME,

MINATO-KU, TOKYO 106, JAPAN

Telephone: (03) 3406-2934

Facsimile : (03) 3406-9967

FCC ID : F5GNX-70

Part 15 Sub.part B Class B Digital Device


Exhibit F

OWNER'S MANUAL


- **High sharpness**
1,500,000 pixels compatible with megapixels digital cameras.
- **Light and simple operation.**




3 Loading the Cassette

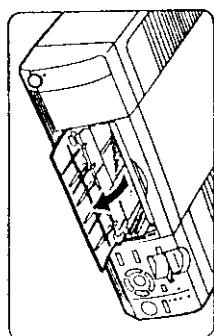

Open the paper cassette slow

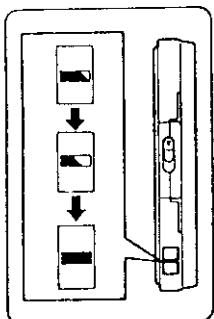


The remaining paper criteria is displayed in the remaining paper window. When the printer runs out of paper, the remaining paper window will turn red. When this occurs, insert a new paper cartridge into the cassette.

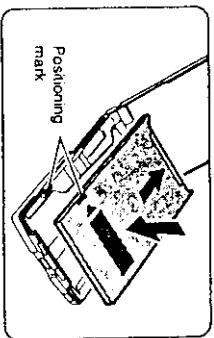


While matching the positioning marks (gray) on the cassette and cartridge, insert the cartridge into the cassette, and gently close the cassette cover.

Reading the Index and Using the Direction Keys

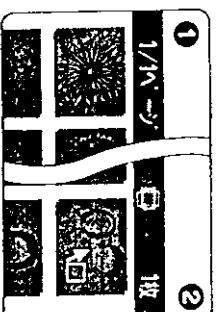


① Displays the total number of pages and the number of the current page of the INDEX screen.

② Displays the number of images to be printed.

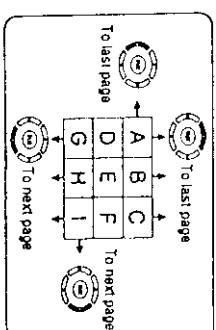


When the right direction key is pressed, the images are selected in (A)→(B)→(C)→(D) order. When the left direction key is pressed, the images are selected in the opposite order.


When the down key is pressed at the first page and the up key is pressed at the first page, the first and last pages are selected respectively.

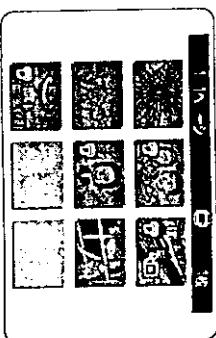

The print mark is displayed on the images. The print mark can be displayed on up to 20 images by repeating this.

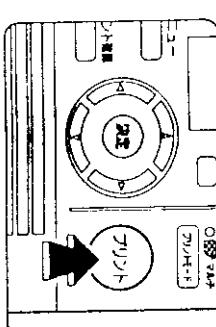

After the print mark is displayed, press the PRINT button.

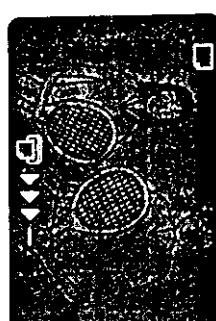


Printing starts and the image being printed appears on the monitor screen.

FUJIFILM

FUJIFILM



DIGITAL PRINTER **TX-70**

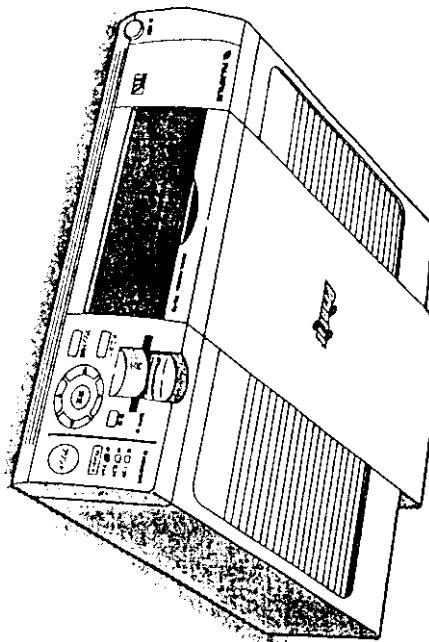

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.



The graphical symbols are located on the bottom of the case.

CAUTION: TO REDUCE THE RISK OF
ELECTRIC SHOCK, DO NOT REMOVE
COVER (OR BACK).
NO USER-SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED
SERVICE PERSONNEL.

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For customers in the U.S.A.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

_____ Reorient or relocate the receiving antenna.

_____ Increase the separation between the equipment and receiver.

_____ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

_____ Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your warranty.

For customers in Canada

CAUTION
This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Owner's Record

The model and serial numbers are located on the rear panel. Record the serial number in the space provided rear. Refer to these whenever you call upon your Fuji dealer regarding this product.

Model No. TX-70
Serial No. _____

■ Trademark Information

• IBM PC/AT is a registered trademark of International Business Machines Corp. of USA.
• Macintosh is a trademark of Apple Computer, Inc.
• MS-DOS and Windows are trademarks of the Microsoft Corporation of the US registered in the USA and other countries.

• All other company or product names are trademarks or registered trademarks of the respective companies.

FEATURES


- Direct printing from SmartMedia
- Images can be directly printed from SmartMedia to post cards and stickers.
- High sharpness
- 1,500,000 pixels compatible with megapixels digital cameras.
- Light and simple operation.

PREPARATIONS


■ Checking the Accessories

| | |
|-----------------------|----------|
| Video cable (on plug) | 1 |
| Power cable | 1 |
| Cassette | 1 |
| Owner's Manual | 1 |
| Safety Notes | 1 |
| Warranty | 1 |
| User's Card | 1 |
| Cleaning paper | 5 sheets |

● Paper

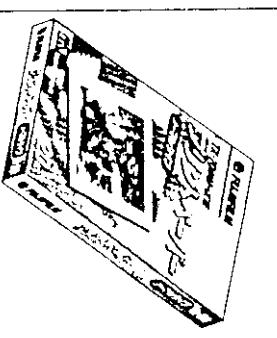

COMPONENT NAMES

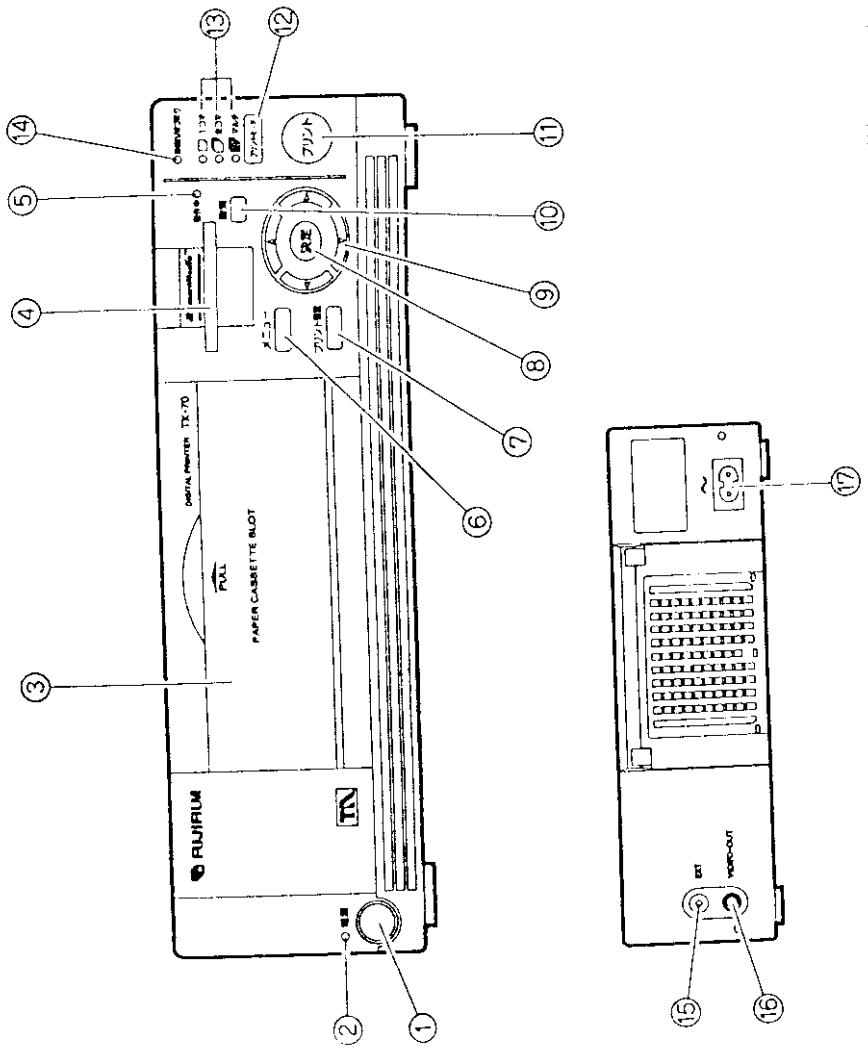

Lights when the printer is on.

Insert the paper cassette here.

Insert the SmartMedia here.

Use to turn the menu display on and off.

Use to view the image to be printed.

Use to specify printing reservation and to display the next menu on the screen.

Use to select the image to be printed from the INDEX or PREVIEW screen. When a menu is displayed, use these buttons to select a menu item (down keys) or it changes the settings of a menu item (left and right keys).

When pressed while the INDEX or PREVIEW screen is displayed, the screen returns to the initial display when the SmartMedia was loaded. This button is pressed while a menu is displayed, all the PRINT MODE are returned to their initial value.

Starts printing.

Use to select the 1-FRAME, ALL FRAMES, or MULTI print mode.

The lamp of the selected print mode lights.

Lights when the printer runs out of paper and blinks when the paper jam occurs.


Use to connect the printer to an external device using the special cable.

Use this socket to connect the printer to a monitor using the accessory cable.

The power cable connects to this socket.

1 Connecting the Printer

Printer uses normal type (B-20) or larger type (B-10S2, B-10S4, B-10S6) paper. The cartridge is vulnerable to direct sunlight and high temperature and humidity. Do not store it outside its protective package. Do not attempt to insert or remove paper into or from the cartridge. It will cause the paper to jam. Use unpacked cartridges as quickly as possible. The use of a cartridge that has exceeded its valid period may cause a drop in printing quality.

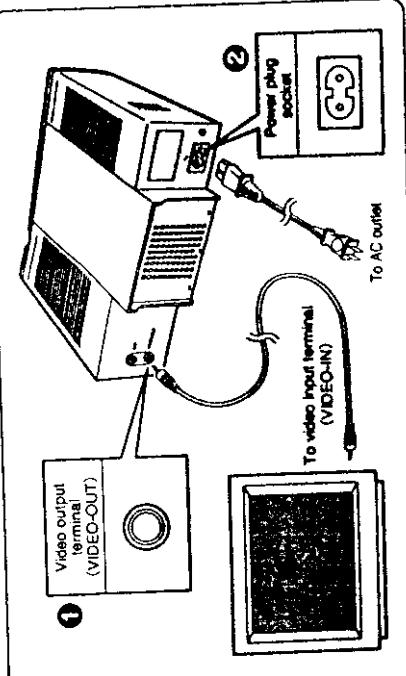


2 Inserting the Cartridge

- Connect the video output terminal (VIDEO-OUT) on the back of the printer to the video input terminal (VIDEO-IN) of the monitor using the accessory video cable (pin plug). *For information regarding the video input terminal (VIDEO-IN), refer to the manual that comes with the monitor.
- Insert the connector at one end of the power cable into the power socket on the back of the printer and plug the power plug at the other end of the power cable into a power outlet.

Remove the cartridge from the arrow package and peel off the grip. *The protective package of the cartridge is used to sit the cartridge. Do not throw it away.

*Do not get the acrylic window at the back of the cartridge or the code label on the front of the cartridge dirty. If the window or label gets dirty, images may not be printed at optimum sharpness.

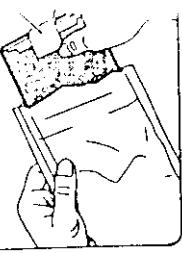


5 Loading and Unloading SmartMedia

■ Turning the Power On and Off


■ Loading and Unloading SmartMedia

to the Printer


5 Loading and Unloading SmartMedia

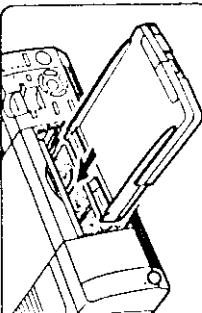


Paying attention to the direction of the cassette, insert the cassette into the cassette slot.
If the printer will not be used for a long time, remove the cassette and store the cartridge in the protective package.

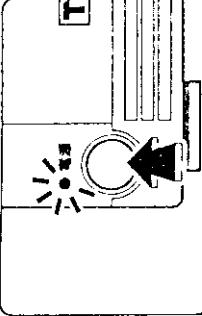

Turn on the monitor power and switch the printer to the connected monitor input mode.
* For information on monitor switching, refer to the manual that comes with the monitor.

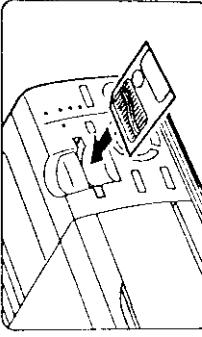


Press the power button to turn on the power. When the power comes on, the message "Insert" appears on the monitor screen. Pressing the power button again turns off the power.
* When the power comes on, the printer enters the 1-FRAME print mode.

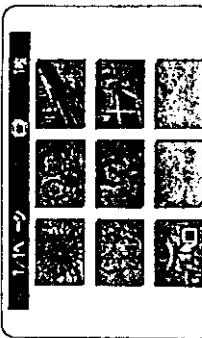

When SmartMedia is loaded, an image index is displayed on the monitor screen. The image photographed last is indicated by the cursor.

* If "WARNING" is displayed on the screen, remove and reload the SmartMedia.

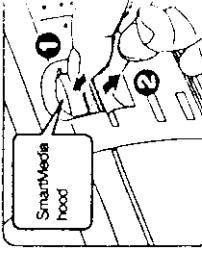


When removing the SmartMedia, always grasp the SmartMedia out while pushing in the hood. ① While pushing in the hood, ② do not remove the SmartMedia.


* Do not remove the BUSY lamp is lit.

2 Simple 1-Frame Print Operation


When you wish to print a single image...

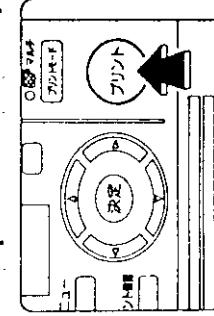

Press the PRINT button.

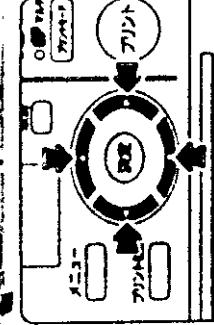

Press the direction keys at the INDEX screen and move the cursor to the image you wish to print.

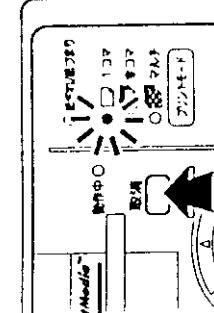


Then the CANCEL button is pressed at the INDEX screen, the monitor screen is turned to the display when the SmartMedia was loaded.

- ① Select the images you wish to print from the INDEX screen using ② and reserve printing of them by pressing the SET button.


- * If "WARNING" is displayed on the screen, remove and reload the SmartMedia.
- * Do not touch the SmartMedia terminals.
- * Do not touch the SmartMedia during printing.

3 All Frames Print Operation


When you wish to print the entire contents of the SmartMedia...

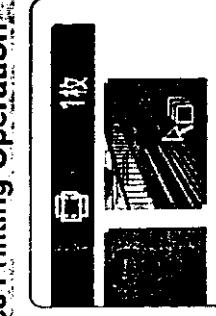

When the ALL FRAMES PRINT mode is selected, the cursor icon changes to .

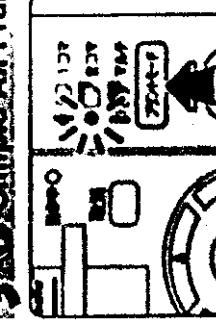

Press the PRINT mode button. The image being printed appears on the monitor screen.

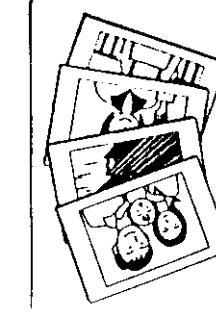

The images indicated by the print marks are printed.
The images are printed in print mark order.
Do not allow a large number of sheets of printed paper to pile up on the cassette.

Continued over page



- * Do not touch the paper during printing.
- * Do not allow a large number of sheets of printed paper to pile up on the cassette.

- All the images on the SmartMedia are printed.

- * Do not touch the paper during printing.
- * Do not allow a large number of sheets of printed paper to pile up on the cassette.

NU is displayed, the current settings are all returned to their initial value.


■ MODE button, ② the menu can be opened pressing the MENU button.

* To print standard paper (normal type paper), change the PAPER item to NORMAL.


INDEX screen.

print on the INDEX screen.


Random Multi Print Operation ■ When you wish to index print arranged images...

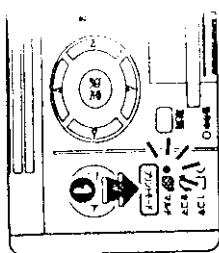


With the ① PRINT MODE button, open the menu by pressing the UP button.

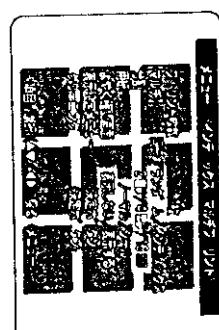


Select RANDOM from the MULTI items and select 2, 4, or 16 from the INDEX item.

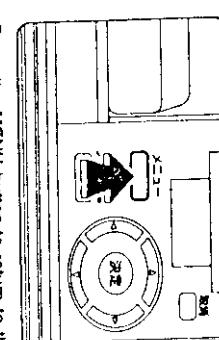

Press the MENU button to return to the INDEX screen.

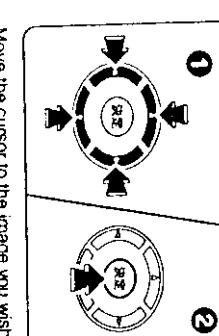


Move the cursor to the image you wish to print on the ① INDEX screen and press the ② SET button.

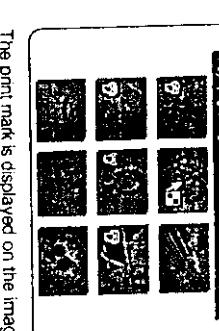

The print mark is displayed on the image. Display a print mark on all the images you like by repeating this operation.


When you wish to remove a print mark, set the cursor to the desired image and press the SET key. The print mark will disappear.

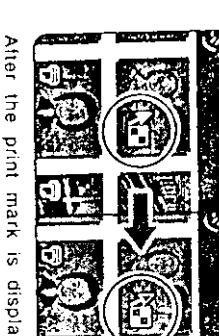


After the print mark is displayed, according to the number of images selected with the menu, the cursor changes from "→" to "←".

* Images can be printed even if all the print marks are not displayed. However, the remaining frames are printed all white.

■ Random Multi & Reservation Screen Technique

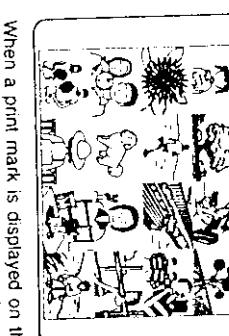


When a print mark is displayed on the INDEX screen, since the same image cannot be selected twice, different images are separate printed.

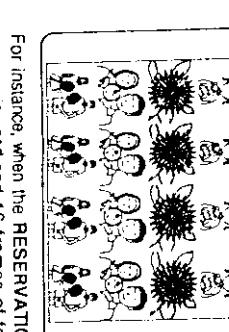


For instance, when the RESERVATION screen is used and 16 frames of four images each are separate printed, four frames of each image can be printed.

* Before printing, the images can be viewed on the PREVIEW screen by pressing the PREVIEW button.

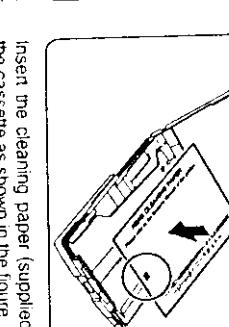


Insert the cleaning paper (supplied) if the cassette as shown in the figure.


* Pay careful attention to the direction of the cleaning paper. Never insert two more sheets of cleaning paper.

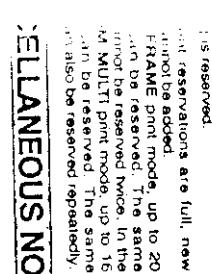


If you wish to cancel reservation of a certain image, press the down direction key and select the file you want to cancel ② and press the SET button.

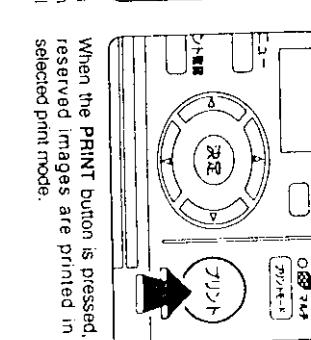


When the PRINT button is pressed, the reserved images are printed in the selected print mode.

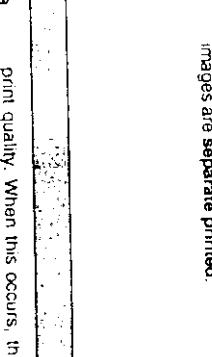

When a print mark is displayed on the INDEX screen, since the same image cannot be selected twice, different images are separate printed.

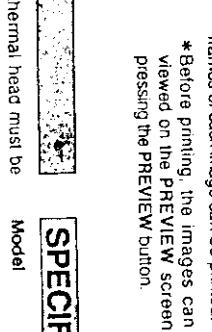

* If a radio or radio-cassette player is used near this printer, a hummin sound may be audible during radio broadcasts. Also, placing this printer close to a VCR may cause distortion in the television image. If any of these occur, move the appliance (radio, VCR, etc.) as far as possible away from the printer.

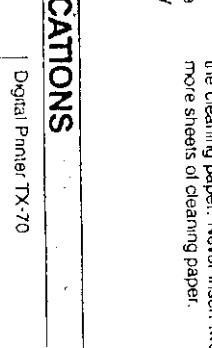

print quality. When this occurs, the thermal head must be replaced. Contact your Fuji dealer.

■ Condensation

Note that the following can result in the formation of condensation in the printer:

- Placing the printer in very humid or steamy locations
- Moving the printer from a cold outdoor location into a warm room.
- Moving the printer suddenly from an air-conditioned room
- Moving the printer from a cold outdoor location into a very warm and humid environment.

SPECIFICATIONS

| Model | Digital Printer TX-70 |
|-----------------------|---|
| Print Method | Thermo-Automatic |
| Compatible Paper | Printing paper for TX-70 Series (separately) |
| Paper Size | B-20 (normal type) B-10S2 (sticker type, 2 cuts sheet) B-10S4 (sticker type, 4 cuts sheet) |
| Print Size | B-10S16 (sticker type, 16 cuts sheet) |
| No. of Pixels Printed | 100×148 mm 10.85×126 mm (max) 1024 (H)×1518 (W) dots (max) 256 gradations, each color (8bit) |
| Colors Supported/ | |


Do not touch the printer when condensation has formed inside the case.

Note


Do not touch the printer when condensation has formed inside the case.

Note

Simple Multi-Print Operation ■ I wonder what this SmartMedia contains?...

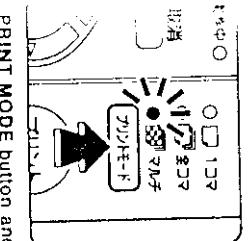


When the MULTI mode is selected, the cursor icon changes to .

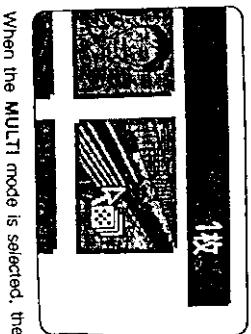

Press the PRINT button. The image being printed appears on the monitor screen.


* Do not remove the cassette while the printer is printing.

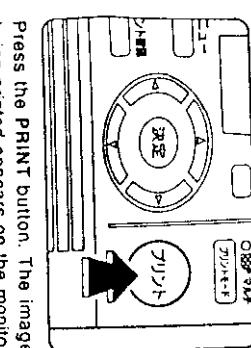


All the images in the SmartMedia are printed by 16-frame/print index printing.

* Do not touch the paper during printing.

* Do not allow a large number of sheets of printed paper to pile up on the cassette.

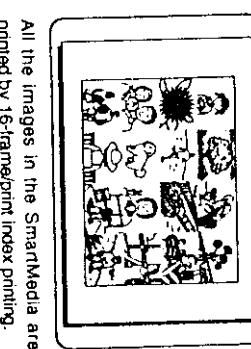


5 Halting Printing...

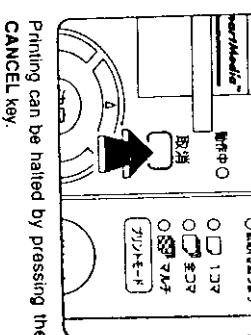


Printing can be halted by pressing the CANCEL key.

* When the CANCEL button is pressed, printing stops after the current image is printed.

When the OUT OF PAPER/PAPER JAT lamp lights and the message "Load more paper." is displayed, load a new cartridge into the cassette.

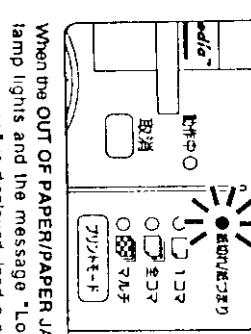

6 When the Printer Runs Out of Paper

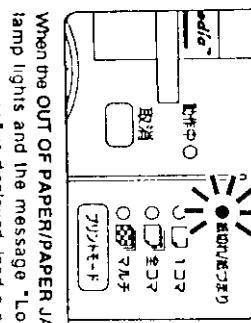


Set the cursor to the image you wish to print on the INDEX screen.

* Set the cursor to the image you wish to print on the INDEX screen.


* To print standard paper (normal type paper), change the PAPER item to NORMAL.

ADVANCED TECHNIQUES

4 Same Multi Print Operation ■ When you wish to separate print one image...

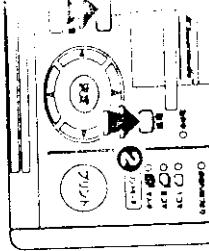




① Don't Know which Menu is Selected

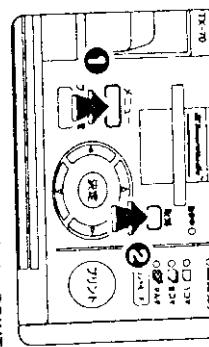

② By selecting MULTI with the PRINT MODE button, ② the menu can be opened pressing the MENU button.



CANCEL button is pressed. Select SAME from the MULTI menu and select 2, 4, or 16 from the SEPARATE item.

③ Settings are all returned to value.

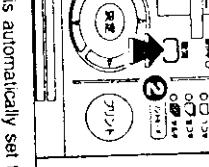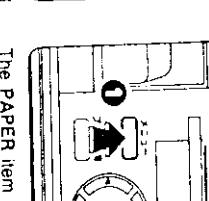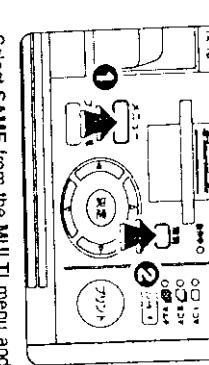

The PAPER item is automatically set to STICKER.

* To print standard paper (normal type paper), change the PAPER item to NORMAL.

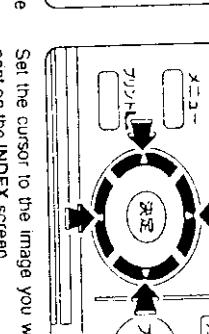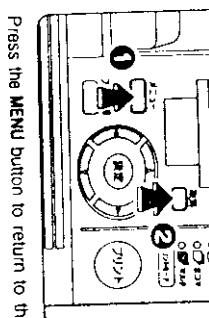


1 Previewing the Image to be Printed

* When the PRINT button was pressed, printing is performed in the set printing mode.

* The INDEX screen can be displayed at any time by pressing the PREVIEW button again.


* When the printing mode was switched, the display is automatically switched to the INDEX screen.

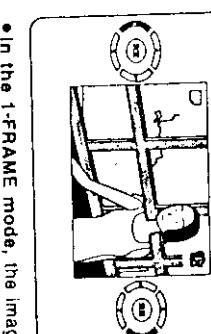

* In the 1-FRAME mode, the image indicated by the cursor is displayed and can be switched using the left and right direction keys.



* In the ALL FRAMES mode, one image is displayed over the entire screen and the images are sequentially displayed automatically.

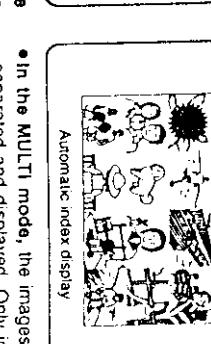

* In the MULTI mode, the images are separated and displayed. Only individual images are sequentially displayed automatically.

The image to be printed (PREVIEW screen) can be viewed by pressing the PREVIEW button. The image can be printed by pressing the PRINT button while the PREVIEW screen is being displayed.

COPIES * Sets the number of prints made of the same image.

* When the printing mode is switched, the number of prints is set to one even if two or more sets. In the ALL FRAMES mode, the number of prints cannot be set.

DISPLAY SWITCHER • FILENAME : Selects DISPLAY or NO DISPLAY in the DISPLAY SWITCHER mode on the screen.
• INDEX : To display the index display from the first page, select BEGINNING, and to display display from the last page, select END.
• PREVIEW : To enable characters display on the PREVIEW screen, select CHARACTER; disable characters display, select NO CHARACTERS.

Menus common to 1-FRAME and ALL FRAMES modes

DATE PRINT Selects PRINT or NO PRINT in the DATE PRINT mode.

- The date is printed on the print in orange.
- If the image does not have any date data, the date is not printed. (Only a period is printed.)

SIZE

Selects the printing range.
• LARGE : Entire print area (The image is cut.)
• NORMAL : Entire image area (The white space on the printing surface increases.)

ALL FRAMES mode menu

PRINT SELECTION To print everything, select ALL FRAMES and to print protected frames only, select PROTECT.
* "Protect" is a function that can be selected with a digital camera.

MULTI mode menu

MULTI SAME : Uses the same image when printing separate prints.
RANDOM : Arbitrary images can be specified when printing separate prints.
INDEX : Outputs all the images in the SmartMedia on a 16-frame index print.

SEPARATE

PAPER 2-frame, 4-frame, or 16-frame can be selected only in the SAME or RANDOM.

Menu items selected only from the 1-FRAME and RANDOM MULTI modes

RESERVATION Selects DISPLAY or NO DISPLAY in the RESERVATION mode.
Checks which screens were selected and registers and cancels printing reservation. This random multi technique that is used only with the RESERVATION screen. (Refer to the pertinent section.)

Menu items selected only from the PREVIEW screen

SHARPNESS ADJUSTMENT When the SET button is pressed, the menu is switched.
• AUTOMATIC : Sharpness is optimally compensated according to the photographed scene.
For instance, for backlit scenes, the subject is often dark. This function compensates so the subject is beautifully printed.

- OTHER : Brightness and contrast can be adjusted without regard to automatic adjustment.

ZOOM

When the SET button is pressed, the printer is switched to the ZOOM mode. This can be executed in the 1-FRAME mode.
• SIZE (NORMAL) : The image can be magnified 1.0, 1.5, or 2.0 times. After magnification, can be trimmed using the direction keys.


When the PRINT button is pressed, the trimmed image displayed on the screen is printed.
At the end of printing, zooming is canceled and the INDEX screen is displayed.
* To cancel the ZOOM mode, open the menu again and press the SET button

TROUBLESHOOTING


| Event | Meaning | Response |
|-------|---------|----------|
|-------|---------|----------|

Reservation Screen Operation

 PRINTING SCREEN

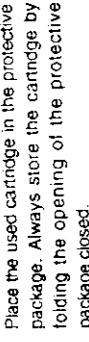

 
Place the used cartridge in the protective package. Always store the cartridge by folding the opening of the protective package closed.




Remove the cassette from the printer and close the paper cassette slot.

Remove the SmartMedia and turn off the power.
* Do not turn off the power during printing or when the BUSY lamp is lit.

2 Menu

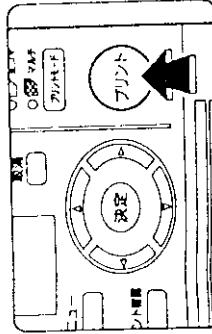



Basic operation in the MENU uses the up and down direction keys to select the item and the left and right direction keys to change the setting.
Setting in the MENU is ended by pressing the MENU button again.

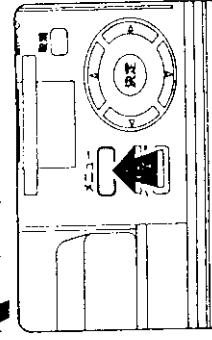


When the MENU button is pressed, a menu is displayed, and various printing settings can be selected. (The menus are described in the table at the right.)
* Only the setting items matched to the menu screen displayed are displayed.

* When all the images have been displayed, the automatic display (slide show) function returns to the INDEX display. Images can be printed even during slide display by pressing the PRINT button.


* When the CANCEL button is pressed when the PREVIEW screen is displayed, the display is returned to the initial display when the SmartMedia was loaded.

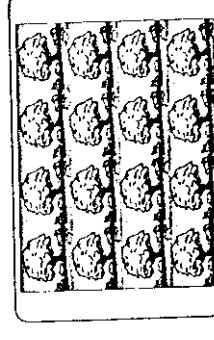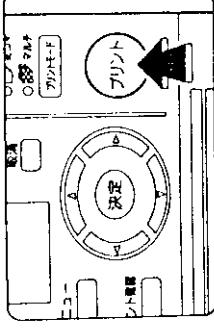

The image to be printed appears on the monitor screen.

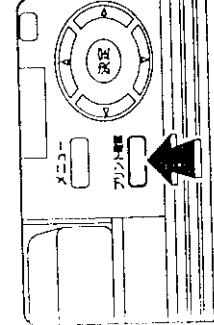


Press the PREVIEW button and verify the image to be printed.

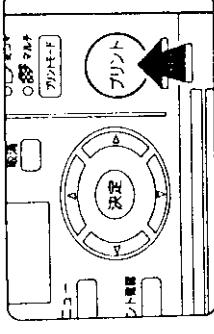


Press the PRINT button to print the image.


Reservation Screen Operation

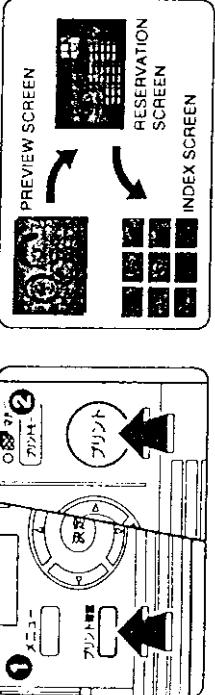


① Press the **PRINT** button and check the images to be printed. The images are in the order of assignment of the print marks, beginning from the left top.
 ② Press the **PRINT** button and print the images.

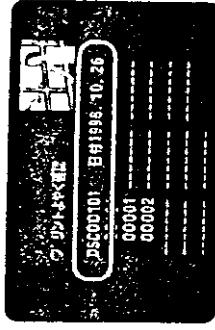

When "RESERVATION SCREEN" is selected from the menu, the screens are displayed in "PREVIEW SCREEN" → "RESERVATION SCREEN" → "INDEX SCREEN" order each time the **PREVIEW** button is pressed.

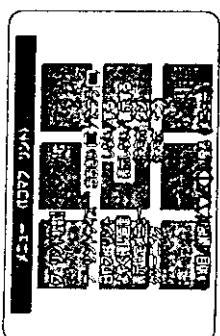

Display the menu and select **CLEANING** and press the **SET** button.
 * CLEANING cannot be selected from the **PREVIEW** and **RESERVATION** screens.

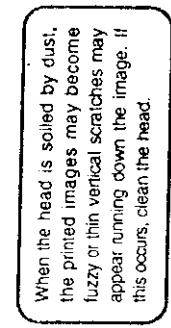

When the **SET** button is pressed at this screen, cleaning begins.

| Paper Feed Method | Automatic feed (max. 20 sheets) Normal type) |
|-------------------|--|
| | Power Requirement 100V AC, 50/60 Hz Printing : Approx. 135W max. Standby : Approx. 10 W |
| | Dimensions 270 (W) × 80 (H) × 290 (D) mm Approx. 2.8 kg |
| | Operating Conditions +5°C to +30°C, 15% to 80% RH (no condensation) TIFF (full color only) +30°C to +35°C, 15% to 60% RH (no condensation) Approx. 1.8 m |
| | Power Cord Length |

| | |
|--------------------------|--|
| Dated prints | <ul style="list-style-type: none"> Random multi prints (2 / 4 / 16) Same multi prints (2 / 4 / 16) Index prints of images included in SmartMedia (16) Continuous prints (up to 20 pages) |
| SmartMedia input | SmartMedia slot (front, 1) |
| Compatible SmartMedia | Capacity : 2, 4, 6, 16 MB (voltage : 3.3V, 5V) |
| Compatible Image Format | Exit Ver.1.0-2.1 (JPEG standard or TIFF standard), BMP (uncompressed, 24 bits full color only) |
| Compatible No. of Pixels | 26,240 (H) × 320 (W) dots to 1200 (H) × 1800 (W) dots |
| Video Output Socket | VIDEO OUT (rear,1) : Pin Jack 1Vp-p, 75Ω, unbalanced, synchronized negative |
| External Connection Port | Stereo mini minijack (2.5mm dia.) |

* All specifications and performance data are subject to change without notice.
 Fuji Photo Film Co., Ltd. accepts no liability arising from errors contained in this Owner's Manual.

TROUBLESHOOTING

| Event | Meaning | Response |
|---|--|---|
| ① The three PRINT MODE lamps all light (green). | • The printer mechanism is being initialized | • Leave the printer for a short time. Once the printer mechanism is initialized, the PRINT MODE lamp will light. |
| ② OUT OF PAPER lamp lights (red). | • The paper cartridge is empty. • The paper cartridge is loaded wrong way round or upside down. | • Check the cartridge paper in the cassette. Load it correctly. |
| ③ PAPER JAM lamp blinks (red). | • Printed paper is jammed on the cassette. • Paper cannot be fed correctly. | • Remove the paper on the cassette. Unplug the printer from the power source few minutes, and then plug it back in on. |
| ④ All the lamps blink. | • Paper cannot be ejected correctly. • Mechanism or circuit is not operating normally. | • Unplug the printer from the power source few minutes, and then plug it back in on. • If the same problem recurs, contact dealer or authorized Fuji service facility. |
| ⑤ One of the PRINT MODE lamps blinks. | • Printing is in progress. | • Once printing is finished, the current MODE lamp will light. |
| ⑥ All three PRINT MODE lamps blink. | • The thermal head temperature is too high. | • Once the thermal head temperature lamp for the selected print mode only has turned off, turn the printer off and then on again. |
| Power | Power is not supplied. | • Is the power cord unplugged from the power outlet? • Is the SmartMedia loaded correctly? • Is the video cable connected correctly? • Is the monitor input switch set to the VIDEO position? |
| Monitor screen | SmartMedia image does not appear on the monitor screen. | • Is the power cord unplugged from the power outlet? • A safety device may have operated. Unplug the power cord, wait a few minutes, and then plug it back in and turn on the power. • Is the monitor input switch set to the VIDEO position? |
| Operation | Paper is ejected without being printed. | • Is the monitor adjusted correctly? • Is the picture quality adjusted correctly? |
| | Cannot print. | • Is the special paper cartridge being used? • Is the paper cartridge loaded wrong way around? |
| | Paper is printed but is not ejected. | • Is the OUT OF PAPER/PAPER JAMMING lamp lit? • Is the paper cartridge loaded correctly? |
| | Power cord was unplugged while printing. | • Plug the power cord into the power outlet and power by pressing the POWER switch. After the machine is initialized, turn off the power. |

* "Insert" was displayed.

* Is the SmartMedia loaded properly?
 • When the message "Check contents of **①**" is displayed, check the contents of the SmartMedia with this printer.