

General Inquiries <docomo Information Center>

☎ 0120-005-250 (toll free)

* Service available in: English, Portuguese, Chinese, Spanish, Korean.
* Available from mobile phones and PHSs.

■ From DOCOMO mobile phones (In Japanese only) ■ From land-line phones (In Japanese only)

☎ (No prefix) 151 (toll free) ☎ 0120-800-000 (toll free)

* Unavailable from mobile phones, etc. * Available from mobile phones and PHSs.

● Please confirm the phone number before you dial.

● For Applications or Repairs and After-Sales Service, please contact the above mentioned information center or the docomo shop etc. near you on the NTT DOCOMO website or i-mode
▶ NTT DOCOMO website <http://www.nttdocomo.co.jp/english/> ▶ i-mode site iMenu⇒お客様サポート (user support)⇒ドコモショップ (docomo Shop) * In Japanese only

Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo Information Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code for the country you stay (table 1) -81-3-5366-3114* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.
※If you use F-01A, you should dial the number +81-3-5366-3114 (to enter '+', press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

International prefix number for the universal number (table 2) -800-0120-0151*

* You might be charged a domestic call fee according to the call rate for the country you stay.
※See page XXX and XXX for international call access codes for major countries (table 1) and international prefix numbers for the universal number (table 2).

● If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.
● If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.



Li-ion 00

To prevent damage to the environment, bring used battery packs to a docomo service counter, a docomo agent or a recycle center.



This manual is printed using an ink based on soy bean oil.



Don't forget your mobile phone ... or your manners!
When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

Repairs

■ From DOCOMO mobile phones (In Japanese only) ■ From land-line phones (In Japanese only)

☎ (No prefix) 113 (toll free) ☎ 0120-800-000 (toll free)

* Unavailable from land-line phones, etc. * Available from mobile phones and PHSs.

Failures encountered overseas <Network Technical Operation Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code for the country you stay (table 1) -81-3-6718-1414* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.
※If you use F-01A, you should dial the number +81-3-6718-1414 (to enter '+', press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

International prefix number for the universal number (table 2) -800-5931-8600*

* You might be charged a domestic call fee according to the call rate for the country you stay.
※See page XXX and XXX for international call access codes for major countries (table 1) and international prefix numbers for the universal number (table 2).

docomo

F-02A

INSTRUCTION MANUAL

'08.12

docomo STYLE series F-02A

ISSUE DATE: '08.12

NAME:

PHONE NUMBER:

MAIL ADDRESS:

INSTRUCTION MANUAL

NTT docomo

- Easy Search/Contents/Precautions
- Before Using the Handset
- Voice/Videophone Calls
- Phonebook
- Sound/Screen/Light Settings
- Security Settings
- Mail
- i-mode/i-motion/i-Channel/i-concier
- Full Browser
- Camera
- 1Seg
- Music
- i-appli
- Osaifu-Keitai/ToruCa
- Data Management
- Convenient Functions
- Character Entry
- Network Services
- Overseas Use
- PC Connection
- Appendix/Troubleshooting
- Index/Quick Manual

Sales: NTT DOCOMO, INC.
Manufacturer: FUJITSU LIMITED

2008.12 (1st Edition)
CA92002-5501

DOCOMO W-CDMA System

Thank you for purchasing "docomo STYLE series F-02A" mobile terminal.

Before and during use of your FOMA terminal, be sure to thoroughly read this manual and instruction manuals that come with other optional devices to ensure you are able to correctly use your FOMA terminal. For more detailed information, contact "General Inquiries" using the phone number on the back of this manual. F-02A is your capable partner. Please treat it with care and enjoy using it for years.

Before using your FOMA terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Notepad, Recorded messages, Voice memos, Movie memo, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.
- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.

- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL.
Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

Before using this manual

This FOMA terminal supports Kisekai Tool (→P92). When changing the design of the menu screen using Kisekai Tool, the structure of some menus may be changed according to the usage frequency depending on the menu type. Also, the number assigned to menu item (item number) may not be applicable to some menu items.

Latest information about this manual can be downloaded from NTT DOCOMO website.

- User's Manual Download
<http://www.nttdocomo.co.jp/english/support/manual/index.html>
* The URL and contents are subject to change without prior notice.

Viewing/Searching this manual

This manual provides the methods below for necessary function's easy search.

Searching from Easy Search ▶ P4

Search for frequently used or convenient functions by plain words.

Searching from Menu list ▶ P354

Search from menu displayed on the display of F-02A.

Searching from thumb indices ▶ Front cover

Search from the index on the front cover.

**See P2-3 for examples.*

Searching from Contents ▶ P6

Search from Contents categorized into chapters by functions.

Searching by main functions ▶ P8

Search from featured functions or new functions of F906i.

Searching from the Index ▶ P410

Search from the function name, item keyword or service name.

Using the Quick Manual ▶ P418

You can cut out Quick Manual from this manual and carry it with you anywhere.

Also refer to described "Quick Manual (Overseas Use)" when using FOMA terminal overseas.

- In this "Manual for F-02A", "F-02A" mobile terminal is usually referred to as "FOMA terminal". Please be forewarned.
- This manual explains functions performed with a microSD card. A microSD card is required separately.
microSD card→P279
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- The icons and screens that appear on the display and sub-display have been initialized to the default settings selected from the combinations prepared in FOMA terminal depending on FOMA terminal color.
This manual mainly gives descriptions assuming that Kisekai Tool is set to "Cosmetic Pink". →P92
- In this manual, "i-appli compatible with Osaifu-Keitai which supports IC card function" is referred to as "Osaifu-Keitai compatible i-appli".
- The description of "authenticate" indicates the operating procedure for entering the terminal security code (4-8 digits).→P100
- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents of this manual are subject to change without prior notice.

Viewing/Searching this manual

Methods to search pages are described, taking "Answer machine" for example.

Searching from Easy Search

Functions frequently used and convenient functions are categorized by their purposes and with simple words.

電話に出られないとき		
ボクに電話に出られないときに保留にしたい	応答保留	68
相手の用件を録音/録画したい	伝言メモ	70

Searching from Menu list

Functions can be searched from the words displayed on the FOMA terminal screen.

4]4] FOMAカード (UIM) 登録		82
4]5] プッシュトーク電話帳		77
4]6] 着信履歴		60
4]7] リダイヤル		60
4]8] 伝言メモ/音声メモ		
4]8]1] 伝言メモ設定	OFF	70
4]8]2] 伝言メモ一覧		70
		338

Searching from thumb indices

Functions can be searched by using indices in the order of the front cover, chapter top page and function description page.

The chapter top page also gives the list of detailed contents.

ご使用前の確認		
電話/テレビ電話/プッシュトーク		
電話帳		
/照明設定		
メール		
iモード/iモード/チャンネル/アイコンセル		
フルブラウザ		
カメラ		

電話/テレビ電話/プッシュトーク		
58	電話、テレビ電話に出られないとき、出られなかったとき	
58	すうじ機能に設定されないときに発着する	応答保留 68
58	電話に出られないときに電着録音、録音する	伝言メモ 70
60	ダイヤル/着信履歴	
60	テレビ電話帳	
62	キータッチ利用	71
63	テレビ電話の中心機能	71
64	伝言メモ/音声メモ	72
64	伝言メモ/音声メモ	74
64	電話とテレビ電話の切り替えを設定する	テレビ電話動作確認 74
64	パソコン接続/無線LANを設定する	パソコン接続/無線LAN確認 74
66	外線機と接続してテレビ電話を使用する	テレビ電話動作確認 74
66	プッシュトーク	
66	プッシュトーク	76
66	プッシュトーク	77

Function name

This name is listed in Index.

Outline and supplementary description of the function**Typical operating procedure****伝言メモ****電話に出られないときに用件を録音／録画する**

- 伝言メモを起動しておくと、電話に出られないときに応答ガイダンスが流れ、相手の用件が録音／録画されます。
- 音声電話とテレビ電話を合わせて最大4件、1件につき約30秒間録音／録画できます。
- 2in1利用時、AナンバーとBナンバーに着信した伝言メモを合わせて最大4件録音／録画できます。表示はモードによって異なります。
- フッシュトークでは利用できません。

◆ 伝言メモを起動する

- 通常スタイルで操作してください。

1 (1秒以上) ▶ または

待受画面に が表示されます。

- 伝言メモの起動中に電話がかかってくると

1 電話がかかってくる

伝言メモの録音／録画が開始され、電話の通話時間経過すると伝言メモの録音／録画が終了します。

70 電話／テレビ電話／フッシュトーク

Index related to thumb index

* The page shown here represents an example. Images may differ from actual page in this manual.

2 相手のメッセージが録音／録画される

- 開始時と終了時に相手には確認音（ピーツ）が鳴ります。また、開始時から約25秒後に終了予告音（ピビツ）が鳴ります。

3 録音／録画が終了すると、電話が切れる**❖ クイック伝言メモに対応する（クイック伝言メモ）**

伝言メモを起動していても、着信中に を1秒以上押し、その着信に限る伝言メモを1回だけ動作させられます。この操作は、伝言メモを開始に設定する操作ではありません。

仮**お知らせ**

- 応答ガイダンス中、伝言メモ録音／録画中でも を押しと電話に出ることができます。テレビ電話の場合は を押しでも出られます。このとき、電話を受けるまでの録音／録画内容は記録されません。
- 圏外や電源が切れているときは、伝言メモは動作しません。留守番電話サービスをご利用ください。
- 伝言メモが4件録音／録画されると、待受画面に が表示され、伝言メモおよびクイック伝言メモは動作しません。不要な伝言メモを削除してください。留守番電話サービスまたは転送でんわサービスを開始している場合は各サービスが動作します。

Supplementary description of the operation

Detailed description and convenient information about the function

- In this manual, operation by pressing keys is represented by graphic symbols. → P26 "Part names and functions"
- The representations and meanings of operating procedures are as shown below.

Representation example	Meaning
(1 sec. or more)	Press for 1 second or more.
[Settings & NW services] ▶ -	On the stand-by display, , move the cursor to [Settings & NW services] and press . Successively, press , then press any of - .

- In this manual, to select an item by placing the cursor with (Multi-cursor key) and pressing (Enter key) is referred to as "select". Regarding an operation to enter characters in the entry field, the final step of pressing [OK] is omitted.
- This manual uses the default settings to describe operations. If the settings are changed, the displays or operations of FOMA terminal may differ from the ones described in this manual. For the default settings, see Menu List. → P354

Easy Search

Functions which you want to know can be searched for using friendly words.



Convenient functions for calls

Showing/Hiding your phone number	Caller ID notification	49
Putting the call on hold	On hold	53
Changing the volume of the other party's voice	Listen volume	53
Switching from voice call to videophone call	Switching to videophone call	54



When you cannot answer the call

Putting the call on hold when you cannot answer it immediately	Respond and Hold	63
Notifying the caller that you have to refrain from talking	Public mode (Drive mode)	63
.....	Public mode (Power OFF)	64
Recording the other party's voice or image	Answer machine	64



Changing sound, lighting color and vibration

Setting different ring tone etc. for incoming calls from specific parties	Alert by contact	73
Changing ring alert	Ring alert	80
Changing loudness of ring tone	Adjust volume	82
Making vibration when there is an incoming call	Vibrate alert/effect	82

Muting keypad sound	Keypad sound	83
Setting silent mode	Silent mode	84
Changing the color of keypad light	Keypad light	90
Changing color such as light	Light alert	96



Changing displays

Meanings of icons on display	Viewing display	29
Switching the menu display	Selecting functions from menu	35
Changing stand-by display	Stand-by display	86
Displaying a calendar on stand-by display	Info/calendar layout	87
Changing font size	Font size	97



Safety and security

Hiding contents of phonebook	Secret attribute	78
Locking FOMA remotely in case of misplacement etc.	Omakase Lock^{*1}	103
.....	Anonymous caller	113
Rejecting calls with no caller IDs	Anonymous caller	113
Rejecting calls from parties not saved in phonebook	Unregistered caller	114
Saving data such as phonebook in case of data loss	Data Security Service^{*2}	114



Making full use of mail

Sending Deco-mail	Deco-mail	122
Sending images and/or melodies	Attachment	127
Automatically sorting mails	Sort method	142



Making full use of camera

Saving shot still images to microSD card	Save to	189
Changing image size	Still image settings/Recording settings	193
Viewing shot still images	Displaying image	266



Making full use of 1Seg

Watching 1Seg	Activate 1Seg	206
Recording 1Seg	1Seg recording	211
Reserving watching/recording 1Seg	Watching/Recording reservation	212
Changing settings of images and sounds	User setting	214

*1 A charged service.

*2 A charged service requiring subscription.

- For procedures to search for other functions, see "How to use this manual". → P1
- Quick Manual introduces you procedures for using convenient functions. → P418



Other convenient functions

Reading QR and/or bar code	Bar code reader	200
Listening to music	MUSIC Player	222
Using microSD card	microSD card	279
Sending or receiving data via infrared communication	Infrared communication	290
Using alarm clock	Alarm clock	299
Using calculator	Calculator	312
Using a mobile phone overseas	International Roaming	340
Updating software	Software update	395
Keeping security software updated	Scanning function	399

Contents

■ Before using your FOMA terminal Inside front cover	
■ Viewing/Searching this manual	1
■ Easy Search	4
■ Main functions of F-02A	8
■ Precautions (ALWAYS FOLLOW THESE DIRECTIONS)	10
■ Handling precautions	17
■ Waterproofness	19
■ Accessories and main options	24

Before Using the Handset 25

Part names and functions Viewing display
Selecting menu Motion sensor Using UIM
(FOMA card) Attaching/Removing battery
pack Charging battery Battery level Power
ON/OFF Select language Date & time Caller
ID notification User information etc.

Voice/Videophone Calls 51

Making a call Redial/Received calls Chaku-
moji 186/184 Tone signal (DTMF) Call option
WORLD CALL Receiving a call Any key
answer Close settings Respond and Hold
Public mode Recorded messages Using
Chara-den Videophone settings Notify of
switchable mode etc.

Phonebook 71

Phonebook new entry Alert by contact Group
settings Search/Edit/Delete phonebook
Secret attribute Quick dial etc.

Sound/Screen/Light Settings 79

Ring alerts & Sounds Adjust volume Vibrate
alert/effect Silent mode Timed theme Stand-
by display Call image Mail image Power
saving mode Select startup menu Kisekae
Tool Light alert Clock display format etc.

Security Settings 99

Security code Terminal security code change
PIN code All lock Omakase Lock Self mode
Personal data lock Keypad dial lock Privacy
mode Side key hold Lock on close/Auto
keypad lock Accept/Reject call Data security
service Reset Delete all data etc.

Mail 119

Creating/Sending i-mode mail Deco-mail
Decome-Anime Attachment Saving i-mode
mail Quick mail Receiving i-mode mail Check
new message Operating Inbox/Outbox Mail
settings MessageR/F Early warning "Area
Mail" Creating/Sending chat mail Creating/
Sending SMS etc.

i-mode/i-motion/i-Channel 159

Site display Change i-mode password Go to
location Bookmark Screen memo
Downloading from site Uploading to site i-
mode settings Operating certificate i-motion
i-Channel i-Channel ticker etc.

Full Browser 179

Displaying web pages designed for PC Setting
Full Browser etc.

Camera 185

Still camera Movie camera Sound recorder
Advanced settings Setting for shooting Bar
code reader etc.

1Seg.....203

Setting channels 1Seg watching Program guide i-αpli Data broadcasting TVlink Multi window Recording/Reserving etc.

Music.....217

Setting program Operating Music&Video Channel Saving music data Playing/Managing music data BGM play etc.

i-αpli.....231

Downloading Starting i-αpli i-αpli To i-αpli stand-by display Managing i-αpli etc.

Osaifu-Keitai/ToruCa.....255

iC transfer service Starting Osaifu-Keitai compatible i-αpli IC card lock Receiving ToruCa etc.

Data Management.....265

Displaying/Editing image Playing/Editing movies/i-motion Displaying Chara-den Playing melody Displaying recorded data of 1Seg microSD card Managing data Infrared communication/iC transmission etc.

Convenient Functions.....295

Multiaccess Multitask Quick search Auto power ON/OFF Countdown timer Alarm clock High-pitched alarm Scheduler Shortcut icons Custom menu Side key shortcut Toy's world Fake call Voice memo/Movie memo Call duration/Call cost Calculator Notepad Dictionaries Pedometer Earphone/Microphone with switch etc.

Character Entry.....319

5-touch input method Save phrase Copying/Cutting characters KUTEN code input Save word Password manager DL dictionary 2-touch input Text input method etc.

Network Services.....329

Voice Mail Service Call Waiting Call Forwarding Service Nuisance Call Blocking Service Caller ID Request Service Dual Network Service English guidance Service numbers Arrival call act Remote control Multi Number 2in1 OFFICEED Additional service etc.

Overseas use.....339

Overview of international roaming service (WORLD WING) Services available Preparing and checking for overseas use Making/Receiving a call Network search mode PLMN setting Area service status Roaming guidance Bar calls at roaming Network services etc.

PC Connection.....347

Data communication DOCOMO keitai datalink etc.

Appendix/Troubleshooting...353

Menu list Combination of Multiaccess/Multitask functions Services available Introduction of options and related devices Error messages Warranty and After-Sales Service Software update Scanning function SAR certification information Intellectual Property Right etc.

Index/Quick Manual.....409

Index Quick Manual Quick Manual (Overseas Use)

Main functions of F-02A

1Seg

You can watch "1Seg" that is a terrestrial digital TV broadcasting for mobile devices. You can also shoot a still image and record video while watching 1Seg. →P204

International Roaming

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G Area is supported). →P340

And, Japanese-English/Japanese-Chinese version of "しゃべって翻訳 for F (Speech Translation for F)", an application that interprets your Japanese into English or Chinese and your English or Chinese into Japanese, is preinstalled. →P238

Waterproofness

Waterproof to IPX5 and IPX7 standards if the external connection jack cap is strictly closed as well as the back cover is mounted and locked. →P19
You can talk or send/receive mail in the rain, in a bath or at a poolside. You can hand wash a dirty handset with tap water.

Large sub-display

Stand-by display, recorded video, etc. can be displayed on the 2.0-inch color sub-display. →P32
Also, when multi information is set, press **TV** while displaying the sub stand-by screen to display information such as calendar, pedometer, i-Channel, etc. on the sub-display. →P34

Motion sensor

You can stop alarm sound by double-tapping FOMA terminal or enjoy watching light or Flash graphics change by tilting FOMA terminal. →P38

Super clear-voice 2 and Voice slowing

When "Voice clear" is set to ON, noise equalizer adjusts a sound according to a voice range and emphasizes other party's voice. Also, "Voice slowing" that adjusts the voice speed makes it easy to hear other party's voice. These two functions allow you to communicate by delivering each other's voice.

Toy's world

Animation and light change or vibrator operates in response to the tilt, sound and double-tapping of FOMA terminal.
Animation can be displayed either on the stand-by display and sub-display. →P309

Avatar notifications

With avatar set to phonebook, the avatar is displayed when making/receiving a call or receiving mail. You can recognize the sender at sight and enjoy the action of avatar that operates according to sending/receiving types. →P72

Sub-display mini games

You can activate/terminate a game with FOMA terminal folded and play it on the sub-display. You can operate it with side keys or by tilting FOMA terminal. →P34

Charging image

You can display your favorite image on the sub-display while charging. →P90

Automatic lighting of sub-display

Sub-display light can be automatically turned on only by picking up and tilting FOMA terminal. →P90

High-pitched alarm

By using High-pitched alarm, you can sound loud alarm by simple side keys operation and let people around you know where you are. →P300

Fake call

Fake call is a function that allows you to pretend you are receiving a call or calling. You can talk over smoothly hearing voice prompts. →P309

Auto-keypad lock

In addition to Lock on close that locks each time FOMA terminal is folded, FOMA terminal is equipped with Auto keypad lock that locks key operations when no operation is made for the specified time. →P110

High-performance camera

FOMA terminal is equipped with functions such as a face detection to distinguish people's face, local contrast correction, Auto focus, etc. The shooting screen is displayed on the sub-display, so you can shoot images with FOMA terminal folded or shoot your image with high-quality out-camera. The shot still image is saved according to the orientation of camera when the image is shot. →P186

Quick search

On the stand-by display or while performing a function, search functions of i-mode, Full Browser, Map, dictionaries, phonebook or mail can be used by pressing the search key. →P297

Shortcut icons

Only by selecting the icon pasted on the stand-by display for function, file or mail being created, you can start the target operation quickly. And, icon on the stand-by display can be changed freely. →P305

Pedometer




FOMA terminal can be used as a pedometer, and walking distance, consumed calories or quantity of burnt fat can be calculated. →P314
You can check the number of steps and calculated values on the sub-display. →P237

Other functions







- Videophone call →P52
 - Chaku-moji →P56
 - Kisekai Tool →P92
 - Security Settings →P100
 - i-mode mail/Deco-mail/Deco-mail pictogram →P120
 - Chaku-uta full[®]/Uta-hodai/Music&Video Channel^{*}/MUSIC Player/Video clip →P218
 - i-appli/Mega i-appli/Chokkan Game →P232
 - Osaifu-Keitai/ToruCa →P256
 - Network services →P330
 - High-speed communication compatibility →P348
- * A charged service requiring subscription.
* "Chaku-uta full" is registered trademark of Sony Music Entertainment (Japan) Inc.

Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 DANGER	This sign denotes that death or serious injury may directly result from improper use.
 WARNING	This sign denotes that death or serious injury may result from improper use.
 CAUTION	This sign denotes that bodily injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.
 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (common).....	11
Handling FOMA terminal	12
Handling battery pack.....	14
Handling optional devices (AC Adapter/DC Adapter/Desktop Holder/In-Car Holder)	15
Handling UIM	16
Handling mobile phones near electronic medical equipment	16

◆ Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (common)

DANGER



Don't

Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.

May cause the equipment to be deformed or malfunction, and battery pack to leak, heat, burst or ignite, and the capability or life to be reduced or shortened. Overheating on parts of the case may cause burns or injuries.



No disassembly

Do not disassemble or remodel the equipment. Do not solder items onto the equipment.

May cause fire, injuries, electric shock, or malfunction. It may also cause the battery pack to leak, heat, burst or ignite.



No liquids

Do not let the equipment get wet.

Contact with water or other liquids can cause heating, electric shock, fire, malfunctions or injuries. Take care of the place for use and treatment of the equipment.



Do

Use the battery pack and adapter (including battery charger) specified by NTT DOCOMO for your FOMA terminal.

Use of equipment not specified by DOCOMO can cause FOMA terminal, battery pack and other parts to leak, heat, burst, catch fire or malfunction.

Battery Pack F09
Desktop Holder F28
FOMA AC Adapter 01/02
FOMA DC Adapter 01/02
FOMA Dry Battery Adapter 01
FOMA USB Cable with Charge Function 01/02

FOMA Portable Charging Adapter 01
FOMA AC Adapter 01 for Global use
* Contact a sales outlet such as DOCOMO Shop for information on other compatible products.

WARNING



Don't

Do not put the battery pack, FOMA terminal, adapter (including battery charger) or UIM in microwave ovens or other heating appliances or high-pressure containers.

May cause the battery pack to leak, heat, burst or ignite, FOMA terminal, adapter (including battery charger) or UIM to heat, smoke, ignite, or damage circuits.



Don't

Do not throw the equipment or give hard shock to it.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



Don't

Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal.

May be subject to electrical short and could cause fire or malfunction.



Do

Turn FOMA terminal OFF before entering a place such as a gas station where flammable gases are generated. Do not charge the battery. The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.

1. Remove the power plug from the wall outlet or cigarette lighter socket.
2. Turn FOMA terminal OFF.
3. Remove the battery pack from FOMA terminal.

May cause the equipment to heat, burst or ignite or the battery pack to leak if you keep using the equipment.

⚠ CAUTION

Do not leave the equipment on unstable or sloping surfaces.

Don't

May cause malfunction or injuries.



Do not store the equipment in extremely humid, dusty or hot areas.

Don't

May cause malfunction.



Do

Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.
May cause injuries.



Do

Store the equipment out of reach of small children.

May be accidentally swallowed or cause injuries.



Do

Be careful especially when using FOMA terminal connected to the adapter (including battery charger) continuously for a long time.

If you execute i-appli, use videophone call or watch 1Seg while charging the battery pack, FOMA terminal, battery pack and adapter (including battery charger) may become hot. Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

◆ Handling FOMA terminal**⚠ WARNING**

Don't

Do not direct the infrared data port toward your eye and transmit signals.

May affect your eyes. Faulty operation could result from directing the infrared data port toward other infrared equipment and transmitting signals.



Don't

Do not put FOMA terminal in the place such as the dashboard near the air-bag, where the influence of air-bag explosion is expected.

When the air-bag explodes, FOMA terminal may hit yourself or others and could cause injury, equipment malfunction or damage.



Don't

When you use electronic medical equipment, do not keep the terminal in your chest pocket or inside pocket.

Using your FOMA terminal near medical electronic equipment could cause equipment failure.



Don't

Do not put foreign objects such as liquid like water, metal pieces or burnable things into UIM or microSD card slot.

May cause fire, electric shock or malfunction.



Don't

Do not turn on the light aiming directly at the driver of the car etc.

May disturb driving and cause an accident.



Do

Turn FOMA terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.

May cause electronic equipment or electronic medical equipment to fail or malfunction. If the function which automatically turns the power ON is set, cancel the setting before turning the power OFF.

When using the phone in a medical facility, be sure to observe the regulations of the facility. If you do prohibited act such as using the phone in an airplane, you may be punished according to law.



Do

When you talk by setting handsfree, always keep FOMA terminal away from your ear.

And, when connecting the earphone/microphone to FOMA terminal and play a game or music, adjust the volume moderately.

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.



Do

If you have weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.
Could affect heart function.



Do

If it starts thunder while using the terminal outdoors, turn the power OFF immediately, and move to a safe location.

May be subject to lightning strike and could cause electric shock.



Do

Turn FOMA terminal OFF near high-precision electronic control equipment or electronic equipment using low-power signals.

May cause the equipment to fail or malfunction.

* Examples of electronic equipment to avoid.

Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatic control equipment.

Users wearing implanted pacemakers or defibrillators or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.



Do

When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of FOMA terminal.

Surfaces of display and camera lens are made of plastic panels and they are structured for the glass not to scatter, however, if you mistakenly touch broken or exposed parts, you may be injured.



Do

If you sound high-pitched alarm, be sure to keep FOMA terminal away from your ear.

May cause hearing loss.



Do

Mobile phones can give some users skin problems such as itching, allergic reactions or rashes. If you develop skin

CAUTION



Don't

Do not swing FOMA terminal by its strap.

May cause the terminal damage or failure, or injury to yourself or others.



Don't

When using the motion tracking or motion sensor, check the safety around you, hold FOMA terminal firmly, and do not shake it unnecessarily.

The motion tracking and motion sensor are functions to operate by tilting or shaking FOMA terminal. There is a risk that FOMA terminal hits people or objects around you by shaking it too much, causing a serious accident or damage.



Don't

If you put a metal strap or the like to FOMA terminal, be careful not to let the strap hit people or objects around you when performing motion tracking or using motion sensor.

Accidents such as injury, malfunction or damage may result.



Don't

Do not place magnetic disks or cards with magnetic stripes near FOMA terminal or place inside and fold the terminal.

Data stored on media such as cash cards, credit cards, telephone cards and floppy disks may be erased if the storage medium is placed near the phone.

problems, stop using the phone immediately, and see a doctor.



Don't

Do not bring magnetized objects close to FOMA terminal.

Bringing strong magnetism close may cause a malfunction.



Don't

If the display part is accidentally broken and liquid crystal leaks out, do not put the liquid in your mouth, inhale, or make contact with your skin. If the liquid gets into your eyes or mouth, rinse it with clean water and see a doctor immediately.

And, if the liquid adheres to skin or clothing, use alcohol etc. to wipe it off, then wash with soap.

May cause loss of sight or skin problems.



Don't

Do not bring the speaker close to your ear when the ring alert is sounding or you are playing a melody with FOMA terminal.

May cause hearing loss.



Do

In rare cases, using the phone in some vehicle models can cause the vehicle's electronic equipment to malfunction or fail.

In this case, do not use the phone because it may hamper safe driving.

FOMA terminal contains metal in the parts below.

Place of use	Material	Surface finishing
Charging jack	Copper	Gold plate



Do

When opening or closing FOMA terminal, take care not to have your fingers or strap caught by the terminal.
May cause injuries or damages.



Do

When watching 1Seg, take a certain distance from the display in a fully bright place.
May cause your eyesight to be impaired.

◆ Handling battery pack

- Check that the battery type matches the type displayed on the battery pack label.

Display	Battery type
Li-ion 00	Li-ion battery

⚠ DANGER



Don't

Do not connect a wire or other metal objects to the jack. And, do not carry or store FOMA terminal with objects like a metal necklace.

May cause the battery pack to leak, heat, burst or ignite.



Don't

Do not try to force the battery pack onto FOMA terminal if you are having trouble installing it. Always install it after checking that it is correctly oriented.

May cause the battery pack to leak, heat, burst or ignite.



Don't

Do not throw the battery pack into the fire.

May cause the battery pack to leak, heat, burst or ignite.



Don't

Do not nail the battery pack, hit with a hammer or step on it.

May cause the battery pack to leak, heat, burst or ignite.



Do

If the battery pack's fluid contacts eyes, immediately flush the eyes with clean water and see a doctor right away. Do not rub the eyes.

May cause loss of sight.

⚠ WARNING



Don't

If the battery pack seems to have abnormalities such as deformation or scratches due to an external impact or falling, stop using it immediately.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



Do

If the battery pack does not have a full charge after being charged for the specified time, stop charging it.

May cause the battery pack to leak, heat, burst or ignite.



Do

If the battery pack leaks or gives off a strange smell, immediately remove it from the vicinity of open flames.

The vapors from leaking battery pack fluid may ignite or explode.



Do

Be careful not to let your pet bite the battery pack.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.

⚠ CAUTION

Don't

Do not discard old battery packs together with other garbage.

May cause igniting or environmental destruction. Tape the terminals of old battery packs to insulate them, and then bring them into a sales outlet such as DOCOMO Shop. If your local municipality has a battery recycling program, dispose of them as provided for.



Don't

Do not charge a wet battery pack.

May cause heat generation, ignition or rupture of the battery pack.



Do

If the battery pack's fluid contacts skin or clothes, immediately flush the contacted area thoroughly with clean water.

May hurt the skin.

◆ Handling optional devices (AC Adapter/DC Adapter/Desktop Holder/In-Car Holder)**⚠ WARNING**

Don't

Do not use the adapter (including battery charger) cord or power cord if it gets damaged.

May cause electric shock, heat or fire.



Don't

Do not use the AC adapter or desktop holder in a bathroom or other highly humid area.

May cause electric shock.



Don't

Always use the DC adapter with a negative-ground vehicle. Do not plug it into a positive-ground vehicle.

May cause fire.



Don't

When it starts to thunder, do not touch FOMA terminal and adapter (including battery charger).

May be subject to lightning strike and could cause electric shock.



Don't

Do not short the charging jack while it is connected to the outlet or cigarette lighter socket. Do not touch the charging jack with a part of your body such as your hand or finger.

May cause fire, malfunction, electric shock or injuries.



Don't

Place battery charger and desktop holder in a stable location while charging. Do not cover or wrap battery charger and desktop holder with a cloth, blanket, etc.

May cause FOMA terminal to be removed or the optional devices to be heated, resulting in fire or troubles.



Don't

Do not place heavy objects on the adapter (including battery charger) cord or power cord.

May cause electric shock or fire.



No wet hands

Do not touch the adapter (including battery charger) cord or outlet with wet hands.

May cause electric shock.



Do

Only use with the specified power source and voltage.

If incorrect voltage is used, this may cause fire or failure. When using FOMA terminal overseas, use AC Adapter for global use.

AC adapter : AC100V

DC adapter : 12 or 24V DC (specific for negative ground vehicle)

AC adapter for global use : Between 100V and 240V AC (Connect to the AC outlet for internal household use)



Do

If the DC adapter's fuse blows, replace it only with the specified fuse.

Using other fuses may cause fire or equipment failure. For the specified fuse, see the instructions that come with the DC adapter.



Do

Wipe off any dust that accumulates on the power plug.

May cause fire.



Do

When you connect the AC adapter to an outlet, make sure not to touch with metal such as metal straps and firmly connect to the outlet.

May cause electric shock, electrical short or fire.



Do

When you disconnect the adapter (including battery charger) from the outlet or cigarette lighter socket, do not pull the adapter (including battery

charger) cord or power cord with excessive force; instead hold the plug to disconnect.

Pulling the cord could damage it, possibly leading to electric shock or fire.



Unplug

Always remove the power plug from the outlet when not using the adapter for an extended period.

May cause electric shock, fire or malfunction.



Unplug

Immediately remove the power plug from the outlet or cigarette lighter socket if water or other fluids get into the adapter.

May cause electric shock, smoke or fire.



Unplug

Always remove the power plug from the cigarette lighter socket when cleaning the equipment.

May cause electric shock.

◆ Handling UIM

⚠ CAUTION



Do

Be careful of the cut surface when removing UIM (ICs).

May hurt hands or fingers.

◆ Handling mobile phones near electronic medical equipment

- These precautions are based on the guidelines produced at the Electromagnetic Compatibility Conference Japan, regarding the protection of electronic medical equipment from radio waves emitted by mobile phone units.

⚠ WARNING



Do

Obey the following rules inside medical facilities.

- Do not bring FOMA terminal into operating rooms (ORs), intensive care units (ICUs) or coronary care units (CCUs).
- Turn FOMA terminal OFF in hospital wards.
- Turn FOMA terminal OFF in hospital lobbies and corridors if electronic medical equipment could be nearby.
- If the medical facility has specified zones where use or possession of mobile devices is prohibited, obey those instructions.
- If the function to automatically turn ON the power is set, cancel the setting before turning the power OFF.



Do

Turn FOMA terminal OFF in crowded trains or other public places where pacemaker or defibrillator wearers could be nearby.

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

Wearers of implanted pacemakers or defibrillators must carry and use FOMA terminal at least 22 cm away from the implanted device.

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

When electronic medical equipment other than implanted pacemakers or defibrillators are in use outside of medical facilities (such as in home care settings), check with the device manufacturer to determine how the device is affected by electrical signals. FOMA terminal's signals may affect the performance of electronic medical equipment.