

## General Inquiries <DoCoMo Information Center>

### In English

**0120-005-250 (toll-free)**

\* Available from land-line phones, mobile phones and PHSs.

### In Japanese only

**No prefix 151 (toll-free)**

\* Available only from mobile phones and PHSs.

● Please check on the number before dialing.

● For Applications or Repairs/After-Sales Service, please contact the above-mentioned information center or the DoCoMo Shop etc. near you on DoCoMo website or i-mode site.  
DoCoMo website <http://nttdocomo.co.jp/> i-mode site iMenu→お知らせ (News)→ドコモショップ (DoCoMo Shops)

## Loss or theft of FOMA terminal or payment of cumulative cost overseas

### <DoCoMo Information Center> (24 hours)(In Japanese only)

#### ● From DoCoMo mobile phone

International access number for your staying country (table 1)

**-81-3-5366-3114\* (toll-free)**

\* Long distance call to Japan will be charged when calling from a land-line phone.

\* When calling from F-06A, dial +81-3-5366-3114 to contact the DoCoMo Information Center. (Press "0" key for 1 second or more to enter "+".)

#### ● From land-line phone <Universal number>

International phone code for Universal number (table 2)

**-800-0120-0151\***

\* Local call charges may be required.

\* For International access number for major countries (table1)/International phone code for Universal number (table2), see PXXX in this manual.

● In case your FOMA terminal is misplaced or stolen, immediately contact DoCoMo to request suspension of usage.

● In case your FOMA terminal has troubles, bring it to the nearest DoCoMo repair handling service counter after returning to Japan.



Don't forget your mobile phone ... or your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

## Retailer NTT DoCoMo Group

NTT DoCoMo Hokkaido, Inc.	NTT DoCoMo Tohoku, Inc.	NTT DoCoMo, Inc.	NTT DoCoMo Tokai, Inc.	NTT DoCoMo Hokuriku, Inc.
NTT DoCoMo Kansai, Inc.	NTT DoCoMo Chugoku, Inc.	NTT DoCoMo Shikoku, Inc.	NTT DoCoMo Kyushu, Inc.	

Manufacturer: FUJITSU LIMITED



Li-ion

To promote environmental conservation, be sure to return your used battery pack to NTT DoCoMo's sales outlets, our cooperate agencies or the shops that collect used battery in your community.



This manual is printed with soy based ink.

## Repairs

### In Japanese only

**No prefix 113 (toll-free)** **0120-800-000 (toll-free)**

\* Available only from mobile phones and PHSs.

\* Available from land-line phones, mobile phones and PHSs.

## Failures encountered overseas

### <Network Technical Operations Center> (24 hours)

#### ● From DoCoMo mobile phone

International access number for your staying country (table 1)

**-81-3-6718-1414\* (toll-free)**

\* Long distance call to Japan will be charged when calling from a land-line phone.

\* When calling from F-06A, dial +81-3-6718-1414 to contact Network Technical Operations Center. (Press "0" key for 1 second or more to enter "+".)

#### ● From land-line phone <Universal number>

International phone code for Universal number (table 2)

**-800-5931-8600\***

\* Local call charges may be required.

\* For International access number for major countries (table1)/International phone code for Universal number (table2), see PXXX in this manual.

NTT  
DoCoMo

F-06A INSTRUCTION MANUAL

'08.X

# F-06A

ISSUE DATE: '08.X

NAME:

PHONE NUMBER:

MAIL ADDRESS:

INSTRUCTION MANUAL



Easy Search/Contents/Precautions

Before Using the Handset

Voice/Videophone Calls

PushTalk

Phonebook

Sound/Screen/Light Settings

Security Settings

Camera

i-mode/i-motion/i-Channel

Mail

i-appli

Osaifu-Keitai/ToruCa

GPS function

1Seg

Full Browser

Data Display/Edit/Management

Music&Video Channel/Music Playback

Convenient Functions

Character Entry

Network Services

PC Connection

Overseas Use

Appendix/External Devices/Troubleshooting

Index/Quick Manual

## DOCOMO W-CDMA, GSM/GPRS System

### Thank you for purchasing F-06A mobile terminal.

Before and during use of your FOMA terminal, be sure to thoroughly read this manual and instruction manuals that come with other optional devices to ensure you are able to correctly use your FOMA terminal. For more information, you may contact us as mentioned on the back of this manual.

Treated with care, your F-06A mobile terminal will be your able partner.

### Before using your FOMA terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Notepad, Recorded messages, Voice memos, Movie memo, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.
- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.

- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL.  
Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.  
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

### Before using this manual

This FOMA terminal supports Kisekai Tool (→P109). When changing the design of the menu screen using Kisekai Tool, the structure of some menus may be changed according to the usage frequency depending on the menu type. Also, the number assigned to menu item (item number) may not be applicable to some menu items. In this case, as operations cannot be performed as described in this manual, switch to the basic menu (→P36) or reset the menu operation log (→P113).

Latest information about this manual can be downloaded from DOCOMO website.

- User's Manual Download  
<http://www.nttdocomo.co.jp/english/support/manual/index.html>  
\* The URL and contents are subject to change without prior notice.

# How to use this manual

This manual provides the methods below for necessary function's easy search.

## Searching from Easy Search ▶ P4

Search for frequently used or convenient functions by plain words.

## Searching from Menu list ▶ P422

Search from menu displayed on the display of F-06A.

## Searching from thumb indices ▶ Front cover

Search from the index on the front cover.

\*See P2-3 for examples.

## Searching from CONTENTS ▶ P6

Search from CONTENTS categorized into chapters by functions.

## Searching by main functions ▶ P8

Search from featured functions or new functions of F-06A.

## Searching from Index ▶ P476

Search from the function name, item keyword or service name.

## Using Quick Manual ▶ P487

You can cut out Quick Manual from this manual and carry it with you anywhere.

Also refer to described "Quick Manual (Overseas Use)" when using FOMA terminal overseas.

- In this "Manual for F-06A", "F-06A" mobile terminal is usually referred to as "FOMA terminal".
- This manual explains functions performed with a microSD card. A microSD card is required separately.  
microSD card→P311
- The images or illustration used in this manual are examples and may differ from the actual displays.
- The icons and screens that appear on the display and sub-display have been initialized to the default settings selected from the combinations prepared in FOMA terminal depending on FOMA terminal color.  
This manual mainly gives description assuming that Kisekai Tool is set to "White". →P109
- In this manual, "i-αppli compatible with Osaifu-Keitai which supports IC card function" is referred to as "Osaifu-Keitai compatible i-αppli".
- The description of "authenticate" indicates the operating procedure for entering the terminal security code (4-8 digits) or authenticating your fingerprint in this manual.  
Terminal security code→P118 Fingerprint authentication→P120
- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents of this manual are subject to change without prior notice.

# How to use this manual

Methods to search pages are described, taking "Answer machine" for example.

## Searching from Easy Search

Functions frequently used and convenient functions are categorized by their purposes and with simple words.

When you cannot answer the call	
Putting the call on hold when you cannot answer it immediately	64
Recording the other party's voice or image	67

## Searching from Menu list

Functions can be searched from the words displayed on the FOMA terminal screen.

Phonebook & Logs	
1 Phonebook	
2 Phonebook new entry	
3 Add group	
4 Phonebook(UIM) new entry	
5 PushTalk phonebook	
6 Received calls	
7 Redial	
8 Ans.Machine&Voice memo	
8   1 Answer machine	OFF 67
8   2 Recorded messages	68
	366

## Searching from thumb indices

Functions can be searched by using indices in the order of the front cover, chapter top page and function description page. The chapter top page also gives the list of detailed contents.

Before Using the Handset	
Voice/Videophone Calls	
PushTalk	
Phonebook	
Sound/Screen/Light Settings	
Security Settings	
Camera	

Voice/Videophone Calls	
When you can/could not answer a voice/videophone call	
Putting calls on hold when you cannot answer immediately	
Setting status message	64
Using Public mode	65
Recording message when you cannot answer call	67
Playing/Deleting recorded message or voice memo	68
Videophone call settings	
Using Char-den	69
Setting images to send to the other party during a call	70
Customizing display settings for videophone call	70

**Function name**

This name is listed in Index.

**Outline and supplementary description of the function**

**Typical operating procedure**

**Answer machine**

**Recording message when you cannot answer the call**

By activating Answer machine, a greeting message is played and the caller can record a message when you cannot answer the call.

- You can record up to 4 voice and videophone calls in total, approximately 30 seconds for each call.

◆ **Activating Answer machine**

You can set if you activate Answer machine.

- Operate FOMA terminal in open state.

1 Side key [▲] (1 sec. or more) ▶ [1] ▶ [1] or [2]

☐ appears on the stand-by display when Answer machine is activated.

◆ **Responding with Quick answer machine <Quick answer machines>**

2 The other party's message is recorded

- A beep announces the other party at the start and the end. And when approximately 25 seconds elapsed since the start, 2 short beeps are heard to warn that the end is approaching.

3 When the recording is completed, the call ends

✓ **INFORMATION**

- Even while playing greeting or recording a message, a call can be answered by pressing [☐]. For videophone call, you can answer also by pressing [☐]. A substitute image is sent to the other party by pressing [☐]. The contents of the recorded message before receiving the call are not recorded.
- When FOMA terminal is out of service area or the power is OFF, answer machine does not operate. Use Voice Mail service.
- When 4 messages are recorded in Answer machine, ☐ appears on the stand-by display and the Answer machine or Quick answer machine does not operate. Delete unnecessary recorded messages. If you activated Voice Mail or Call forwarding service, the services can be used.

◆ **Setting the response time before the greeting message**

Voice/Videophone Calls 67

**Supplementary description of the operation**

**Detailed description and convenient information about the function**

**Index related to thumb index**

\* The page shown here represents an example. Images may differ from actual page in this manual.

- In this manual, operations of pressing keys are represented by graphical symbols. →P26 "Names and functions of parts"
- The representations and meanings of operating procedures are as shown below.

Representation example	Meaning
[ME] (1 sec. or more)	Press [ME] for 1 second or more.
[ME] [Settings & NW services] [5] [7] [2] ▶ [1] - [3]	On the stand-by display, [ME], move the cursor to [Settings & NW services] and press [☐]. Successively, press [5] [7] [2], then press any of [1] - [3].

- In this manual, to select an item by placing the cursor with [☐][☐][☐][☐] (Multi-cursor key) and pressing [☐] (Enter key) is referred to as "select". Regarding an operation to enter characters in the entry field, the final step of pressing [☐] [OK] is omitted.
- This manual gives descriptions based mainly on the default settings. If settings are changed, the displays or operations of your FOMA terminal may differ from the ones described in this manual. For the default settings, see Menu list. →P422

# Easy Search

Functions which you want to know can be searched for using friendly words.



## Convenient functions for calls

Showing/Hiding your phone number .....	<a href="#">Caller ID notification</a>	50
Putting the call on hold .....	<a href="#">On hold</a>	55
Changing the volume of the other party's voice .....	<a href="#">Listen volume</a>	56
Switching from voice call to videophone call .....	<a href="#">Switching to videophone call</a>	56



## When you cannot answer the call

Putting the call on hold when you cannot answer it immediately .....	<a href="#">Respond and Hold</a>	66
Notifying the caller that you have to refrain from talking .....	<a href="#">Public mode (Drive mode)</a>	67
.....	<a href="#">Public mode (Power OFF)</a>	68
Recording the other party's voice or image .....	<a href="#">Answer machine</a>	69



## Changing sound, lighting color and vibration

Setting different ring tone etc. for incoming calls from specific parties .....	<a href="#">Alert by contact</a>	86
Changing ring alert .....	<a href="#">Ring alert</a>	97
Changing loudness of ring tone .....	<a href="#">Adjust volume</a>	98
Making vibration when there is an incoming call .....	<a href="#">Vibrate alert/effect</a>	99

Muting keypad sound .....	<a href="#">Keypad sound</a>	100
Setting silent mode .....	<a href="#">Silent mode</a>	101
Changing the color of keypad light .....	<a href="#">Keypad light</a>	108
Changing color such as light .....	<a href="#">Light alert</a>	114



## Changing displays

Meanings of icons on display .....	<a href="#">Display overview</a>	30
Switching the menu display .....	<a href="#">Selecting functions from menu</a>	36
Changing stand-by display .....	<a href="#">Stand-by display</a>	103
Displaying a calendar on stand-by display .....	<a href="#">Info/calendar layout</a>	105
Changing font size .....	<a href="#">Font size</a>	115



## Making full use of mail

Sending Deco-mail .....	<a href="#">Deco-mail</a>	183
Sending images and/or melodies .....	<a href="#">Attachment</a>	190
Automatically sorting mails .....	<a href="#">Sort method</a>	208



## Making full use of camera

Saving shot still images to microSD card .....	<a href="#">Save to</a>	144
Changing image size .....	<a href="#">Still image settings/Recording settings</a>	149
Viewing shot still images .....	<a href="#">Displaying image</a>	298



## Safety and security

Hiding contents of phonebook .....	<a href="#">Secret attribute</a>	92
Locking FOMA remotely in case of misplacement etc. .....	<a href="#">Omakase Lock*1</a>	123
Rejecting calls with no caller IDs .....	<a href="#">Anonymous caller</a>	134
Rejecting calls from parties not saved in phonebook .....	<a href="#">Unregistered caller</a>	135
Saving data such as phonebook in case of data loss .....	<a href="#">Data Security Service*2</a>	135



## Making full use of 1Seg

Watching 1Seg .....	<a href="#">Activate 1Seg</a>	276
Reserving watching/recording 1Seg .....	<a href="#">Watching/Recording reservation</a>	279
Recording 1Seg .....	<a href="#">1Seg recording</a>	285
Changing settings of images and sounds .....	<a href="#">User setting</a>	286

\*1 A charged service.

\*2 A charged service requiring subscription.

- For procedures to search for other functions, see "How to use this manual". → P1
- Quick Manual introduces you procedures for using convenient functions. → P487



## Other convenient functions

Reading QR and/or bar code .....	<a href="#">Bar code reader</a>	155
Using microSD card .....	<a href="#">microSD card</a>	311
Sending or receiving data via infrared communication .....	<a href="#">Infrared communication</a>	326
Listening to music .....	<a href="#">Music player</a>	343
Using alarm clock .....	<a href="#">Alarm clock</a>	359
Using calculator .....	<a href="#">Calculator</a>	374
Using a mobile phone overseas .....	<a href="#">Overseas use</a>	412
Updating software .....	<a href="#">Software update</a>	429
Keeping security software updated .....	<a href="#">Scanning function</a>	433

# CONTENTS

- **Before using your FOMA terminal** ..... Inside front cover
- **How to use this manual** ..... 1
- **Easy Search** ..... 4
- **Main functions of F-06A** ..... 8
- **Making full use of F-06A** ..... 10
- **Precautions (ALWAYS FOLLOW THESE DIRECTIONS)** ..... 12
- **Handling instructions** ..... 19
- **Intellectual property rights** ..... 21
- **Basic package and optional accessories** ..... 23

## Before Using the Handset ..... 25

Names and functions of parts YOKO-MOTION Display overview Selecting menu Pointing device Motion sensor Using UIM (FOMA card) Installing/Removing battery pack Charging battery Battery level Power ON/OFF Select language Date & time Caller ID notification User information etc.

## Voice/Videophone Calls ..... 53

Making calls Redial/Received calls Chakumoji 186/184 Tone signal (DTMF) Call option WORLD CALL Receiving calls Any key answer Close settings Respond and Hold Public mode Recorded messages Using Chara-den Videophone settings Notify switchable mode etc.

## PushTalk ..... 75

Making PushTalk calls Receiving PushTalk calls PushTalk phonebook PushTalk alert etc.

## Phonebook ..... 83

Phonebook new entry Alert by contact Group settings Search/Edit/Delete phonebook Secret attribute Quick dial etc.

## Sound/Screen/Light Settings ..... 95

Ring alert Alarm sound Adjust volume Vibrate alert/effect Silent mode Timed theme Stand-by display Ring alert settings Outgoing/Incoming mail/Retrieving image Select startup menu Style theme Light alert Clock display format etc.

## Security Settings ..... 117

Security code Terminal security code change PIN code Fingerprint authentication All lock Omakase Lock Self mode Personal data lock Keypad dial lock Privacy mode Side key hold Lock on close Accept/Reject call Data security service etc.

## Camera ..... 137

Still camera Movie camera Sound recorder Advanced settings Setting for shooting Bar code reader etc.

## i-mode/i-motion/i-Channel ..... 159

Site display Change i-mode password Go to location Bookmark Screen memo Downloading from site Uploading to site i-mode settings Operating certificate i-motion i-Channel i-Channel ticker etc.

## Mail ..... 181

Creating/Sending i-mode mail Deco-mail Decome-Anime Attachment Saving i-mode mail Quick mail Receiving i-mode mail Check new message Operating Inbox/Outbox Mail settings MessageR/F Area Mail Creating/Sending Chat mail Creating/Sending SMS etc.

## i-appli ..... 227

Downloading Starting i-appli i-appli To i-appli stand-by display Managing i-appli etc.

## Osaifu-Keitai/ToruCa ..... 245

iC transfer service Starting Osaifu-Keitai compatible i-appli Downloading ToruCa IC card lock etc.



**GPS Function .....255**

Position location GPS compatible i-appli  
Location request Notify location Loc. history  
Setting GPS etc.

**1Seg .....271**

Channel setting 1Seg watching Program  
guide i-appli Reserve program Data  
broadcasting TVlink Multi window  
Recording Remote controller with  
microphone etc.

**Full Browser .....289**

Viewing websites for a PC Setting for Full  
Browser etc.

**Data Display/Edit/Management  
.....297**

Displaying/Editing image Playing/Editing  
movie/i-motion Chara-den Playing melody  
microSD card Managing data Infrared  
communication/iC transmission Displaying  
PDF Displaying Word, Excel, PowerPoint files  
Displaying recording data of 1Seg etc.

**Music&Video Channel/Music  
Playback .....337**

Setting program Operating Music&Video  
Channel Saving music data Reading Music  
player screen Playing/Managing music data  
Setting Music player Remote controller with  
microphone etc.

**Convenient Functions ..... 355**

Multiaccess Multitask Quick search Auto  
power ON/OFF Countdown timer Alarm  
clock Scheduler Shortcut icons Custom  
menu Turn-display option Side key shortcut  
Fake call Voice memo/Movie memo Call  
duration/Call cost Calculator Notepad  
Dictionaries Pedometer Earphone/  
Microphone with switch Reset Delete all data  
etc.

**Character Entry ..... 381**

5-touch input method Save phrase Copying/  
Cutting characters KUTEN code input Save  
word Password manager DL dictionary 2-  
touch input Text input method etc.

**Network Services ..... 391**

Voice Mail service Call waiting Call  
forwarding service Nuisance call barring  
service Caller ID request service Dual  
network service English guidance Service  
numbers Arrival call act Remote control  
Multi number 2in1 OFFICEED Additional  
service etc.

**PC Connection ..... 404**

Data communication AT commands  
DOCOMO keitai datalink etc.

**Overseas use.....411**

Overview of international roaming service  
(WORLD WING) Services available Preparing  
and checking for overseas use Making/  
Receiving a call Network search mode PLMN  
setting 3G/GSM setting Area service status  
Roaming guidance Bar calls at roaming  
Services available overseas etc.

**Appendix/External Devices/  
Troubleshooting ..... 421**

Menu list Combination of Multiaccess/  
Multitask functions Services available  
Options and related devices Error messages  
Warranty and After-Sales Service Software  
update Scanning function SAR certification  
information etc.

**Index/Quick Manual .....475**

Index Quick Manual Quick Manual (Overseas  
Use)

# Main functions of F-06A

FOMA is a DOCOMO's service name based on W-CDMA recognized as one of the global standards for 3rd generation wireless communication (IMT-2000).

## It's amazing because it's i-mode!

i-mode is an online service used with i-mode terminal. This service supports connection to i-mode sites (programs) or i-mode compatible sites that provide a variety of useful information and allows you to exchange i-mode mail.

## Main features of F-06A

### i-mode mail, Deco-mail, Deco-mail pictogram

In addition to message text, you can attach pictures or movie files. →P190  
Moreover, because Deco-mail and Deco-mail pictogram are available, you can change a font color and size or background color for the message text, or you can insert image or moving pictogram. Moreover, by Decome-Anime, joyful mails of animation can be easily created just by inserting a message to the template. →P183

### Mega i-appli, Chokkan Game

Using i-appli downloaded from sites, you can enjoy games or automatically update stock prices, weather information or other information. This FOMA terminal supports large-capacity Mega i-appli, allowing you to play high-resolution 3D and long roll-playing games.  
Also, compatible with Chokkan Game enjoyed by sensuous operations such as "declining" or "shaking" FOMA terminal or "speaking" to FOMA terminal.

### International Roaming

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (applicable to GSM/3G Areas). You can use voice/videophone calls, i-mode, i-mode mail, SMS and network services. →P412  
And, Japanese-English/Japanese-Chinese version of "しゃべって翻訳 for F (Speech Translation for F)", an application that interprets your Japanese into English or Chinese and your English or Chinese into Japanese, is preinstalled. →P234

## High-speed communication compatibility

Compatible with FOMA HIGH-SPEED Area, and high speed communication with the receiving speed of up to 3.6 Mbps and sending speed of up to 384 Kbps can be performed.\*

\* Maximum size of the technical standard, and the actual communication speed may differ by the network traffic or communication environment. When connecting to an access point out of the FOMA HIGH-SPEED Area or when you are using a device not compatible with HIGH-SPEED such as mopera, the connection is made at the speed of 384 Kbps for both reception and transmission.

## GPS

Using location information obtained by GPS, you can search for the map or peripheral information of your current location, notify your location by attaching it to mail or navigate to a destination. Since "地図アプリ (Map application)" is preinstalled, precise maps are handily available. →P256

## Chaku-uta full®/Uta-hodai/ Music&Video Channel /Video clip

Compatible with Chaku-uta full® that a whole tune can be downloaded, and Uta-hodai that you can enjoy as many favorite tunes as you want at a flat rate. Also, compatible with Music&Video Channel that you can enjoy music programs, program with video image, etc. by automatically downloading them at night just by setting in advance. Moreover, since compatible with i-motion of up to 10 MB, you can enjoy a video clip containing a whole tune as well.

\* A charged service requiring subscription.

\* "Chaku-uta full" is registered trademark of Sony Music Entertainment (Japan) Inc.

## Osafu-Keitai/ToruCa

Downloading Osafu-Keitai compatible i-appli allows you to deposit electric money from sites to IC card, or to check the balances and payment records. And, the i-appli of "DCMX", a DOCOMO's Credit service is preinstalled (→P239). Moreover, compatible with "IC transfer service" that you can easily transfer data in IC card when replacing the FOMA terminal by changing of the model etc. →P246

ToruCa is an electronic card that can be downloaded from the IC card reader, site, etc. and can be easily exchanged using mails or infrared communication. →P248

## Kisekai Tool

You can change the stand-by display, menu icons, etc. collectively by downloading images of your favorite characters etc. from i-mode. With F-06A, since you can change the display order of the menu according to the frequency of usage, the menu screen can be customized to your taste.→P109

## Various functions of F-06A

### Pointing device

Pointing operation can be performed with fingerprint sensor. Since the cursor or pointer can be moved by moving a finger from side to side and up and down instead of using multi-cursor key, and items can be selected by double-tapping (tapping twice with a finger), i-appli or Full Browser can be operated more intuitively.→P39

### Quick search

On the stand-by display or while performing a function, search functions of i-mode, Full Browser, map application, dictionary, phonebook or mail can be used by pressing Search key.→P357

### Motion sensor

By double-tapping FOMA terminal to stop alarm, or by declining it, you can enjoy changes of light or Flash graphics.→P40

### Swing display (YOKO-MOTION)

By rotating the display 90 degrees to the right or left, you can use the horizontal screen to watch 1Seg, shoot and play still images/movies or operate mails, Full Browser, etc. And, some functions and i-appli are applicable to wide display that can display fully on the horizontal screen.→P29

You can also activate the function by rotating the display.→P369

### Pedometer

FOMA terminal can be used as a pedometer, and walking distance, consumed calories or quantity of burnt fat can be calculated.→P376

### Shortcut icons

Only by selecting the icon pasted on the stand-by display for function, file or mail being created, you can start the target operation quickly. And, icon on the stand-by display can be changed freely.→P365

## Rainbow key illumination

The color of key lighting can be changed to 7 colors.→P108

## Security Settings→P118

### Omakase Lock\*

Omakase Lock is a service that locks FOMA terminal on request from the subscriber. Even if the holder of FOMA terminal is different from its subscriber, the terminal may be locked on request from the subscriber.→P123

\* A charged service. If you request unlocking at the same time as service interruption or during interruption, no charges occur. Even in Omakase Lock, if Request permit/deny is "Always permit", FOMA terminal responds to location request of GPS function. For precautions and detailed procedure for using this service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

### Fingerprint authentication

Fingerprint authentication can be performed with FOMA terminal folded. You can restrict the use of FOMA terminal more strictly by setting "Fingerprint access" that does not allow entry of security codes.→P121

### Data Security Service\*

A service that phonebook can be backed up by automatic update. This service allows you to store phonebook, images or mails saved in FOMA terminal to Data Center and, in case of misplacement etc. of FOMA terminal, restore the saved data. And, you can send broadcast notice when you changed your mail address. With a PC (My docomo), more convenient usages are available.→P135

\* A charged service requiring subscription.

For precautions and detailed procedure for using this service, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

## Wide array of network services

- Voice Mail service (charged)→P392
- Call waiting (charged)→P393
- Call forwarding service (free)→P394
- Nuisance call barring service (free)→P395
- Dual network service (charged)→P395
- Multi number (charged)→P397
- 2in1 (charged)→P398

 
\* All these services require application except Nuisance call barring service.

# Making full use of F-06A

The superior functions of F-06A are explained in actual displays.

## Videophone

You can have a conversation with a party in the distance seeing each others face. You can start conversation as other party's voice is set to be heard from the speaker by default. And, even during a usual voice call, it can be switched to a videophone call without disconnecting the call. → P54

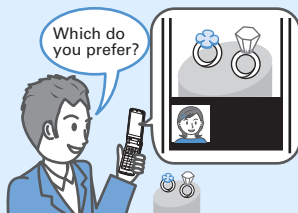

Shopping consultation from outside


## 1Seg

 You can receive Digital Terrestrial TV broadcasting for mobile object (1Seg). You can easily enjoy participating in quiz program, TV shopping, etc. by sending and receiving information to/from TV broadcasting companies (stations). 1Seg is activated only by pressing a specific key (TV), and it provides convenient functions such as OFF timer, subtitle display with large font, watching reservation, and recording or recording reservation of video or still image. You can use another function while watching 1Seg (Multi window). → P272



## i-Channel


You can periodically receive graphical information such as news and weather information with no specific operations. Rich detailed information created with Flash (→ P162) can be downloaded by selecting a channel from the channel list. → P179

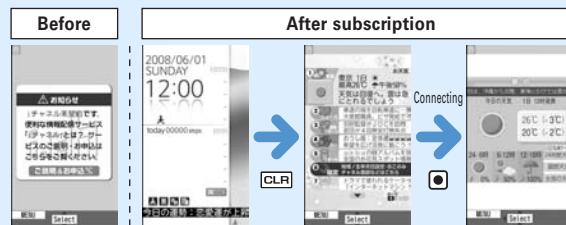

\* A charged service requiring subscription.


## Chaku-moji

 When making a call, you can keep displaying a message on the receiver's incoming call screen before the called party answers. The receiver can check the message displayed on the screen and know the purpose, feelings, etc. of the caller. → P59

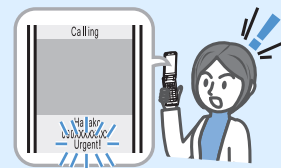

## 2in1

 
This service allows you to use 2 phone numbers/mail addresses for 1 mobile phone; you can use FOMA terminal as if you have two different mobile phones by using the specific mode function. You can categorize phonebooks, mailboxes, call logs, stand-by displays, etc. to "A mode" and "B mode" for separate management; "Dual mode" is available to simultaneously manage A and B modes. →P398

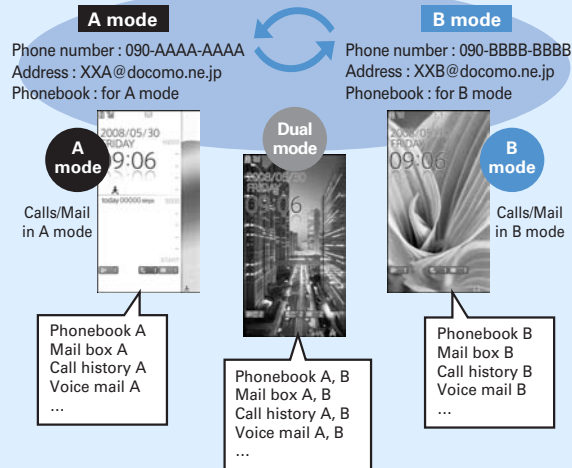

\* A charged service requiring subscription.

## Music player

 Chaku-uta full<sup>®</sup> (compatible with Uta-hodai) downloaded from music distribution sites and Windows Media<sup>®</sup> Audio (WMA) files transferred from music CDs etc. to a PC can be played in stereo sound. Compatible with background playing, operation using Music key specifically for music or using remote controller with microphone F01 (optional) are also available. →P343

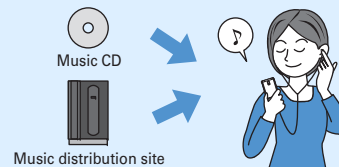

## Kisekai Tool/ダイレクトメニュー (Direct menu)

"ダイレクトメニュー (Direct menu)" that allows you to access frequently used functions/services easily is installed.

The menu is separated into 4 categories and allocated in the upper/lower/left/right parts, and "LAST 10" button to display 10 items of the functions or services used the last is allocated in the center. Since these 5 categories are synchronized with the multi-cursor key, the operations are easy to learn and menu operations are easy to perform. →P109



Menu screen




- Up : DATABOX (My Picture)
- Down : SETTINGS (Settings & NW services, User information)
- Left : SERVICES (Mail, i-mode, i-appli, MUSIC, 1Seg, Osaifu-Keitai, etc.)
- Right : TOOLS (Alarm clock, Calculator, Notepad, Scheduler, Receive Ir data, etc.)
- Center : LAST10\* (display 10 menu items right after used automatically)

\* This function is already registered by default.







## Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.

■ The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 <b>DANGER</b>	This sign denotes that death or serious injury may directly result from improper use.
 <b>WARNING</b>	This sign denotes that death or serious injury may result from improper use.
 <b>CAUTION</b>	This sign denotes that bodily injury or damage to property may result from improper use.

■ The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.
 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (common).....	13
Handling FOMA terminal .....	14
Handling battery pack.....	16
Handling optional devices (AC Adapter/DC Adapter/Desktop Holder/In-Car Holder) .....	17
Handling UIM .....	18
Handling mobile phones near electronic medical equipment .....	18

## ◆ Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (common)

### DANGER



Don't

**Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.**

May cause the equipment to be deformed or malfunction, and battery pack to leak, heat, burst or ignite, and the capability or life to be reduced or shortened. Overheating on parts of the case may cause burns or injuries.



No disassembly

**Do not disassemble or remodel the equipment. Do not solder items onto the equipment.**

May cause fire, injuries, electric shock, or malfunction. It may also cause the battery pack to leak, heat, burst or ignite.



No liquids

**Do not let the equipment get wet.**

Contact with water or other liquids can cause heating, electric shock, fire, malfunctions or injuries. Take care of the place for use and treatment of the equipment.



Do

**Use equipment specified by the DOCOMO Group companies with your FOMA terminal.**

Use of equipment not specified by DOCOMO can cause FOMA terminal, battery pack and other parts to leak, heat, burst, catch fire or malfunction.

Battery Pack F10  
Desktop Holder F24  
FOMA AC Adapter 01/02  
FOMA DC Adapter 01/02  
FOMA Dry Battery Adapter 01  
FOMA USB Cable with Charge Function 01/02  
FOMA Portable Charging Adapter 01  
FOMA AC Adapter 01 for Global use  
\* Contact a sales outlet such as DOCOMO Shop for information on other compatible products.

### WARNING



Don't

**Do not put the battery pack, FOMA terminal, adapter (including battery charger) or UIM in microwave ovens or other heating appliances or high-pressure containers.**

May cause the battery pack to leak, heat, burst or ignite, FOMA terminal, adapter (including battery charger) or UIM to heat, smoke, ignite, or damage circuits.



Don't

**Do not throw the equipment or give hard shock to it.**

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



Don't

**Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal.**

May be subject to electrical short and could cause fire or malfunction.



Do

**Turn FOMA terminal OFF before entering a place such as a gas station where flammable gases are generated. Do not charge the battery. The gas may catch fire.**

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

**If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.**

1. Remove the power plug from the wall outlet or cigarette lighter socket.
2. Turn FOMA terminal OFF.
3. Remove the battery pack from FOMA terminal.

May cause the equipment to heat, burst or ignite or the battery pack to leak if you keep using the equipment.

**⚠ CAUTION****Do not leave the equipment on unstable or sloping surfaces.**

May cause malfunction or injuries.

**Do not store the equipment in extremely humid, dusty or hot areas.**

May cause malfunction.

**Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.**  
May cause injuries.**Store the equipment out of reach of small children.**

May be accidentally swallowed or cause injuries.

**Be careful especially when using FOMA terminal connected to the adapter (including battery charger) continuously for a long time.**

If you execute i-appli, use videophone call or watch 1Seg while charging the battery pack, FOMA terminal, battery pack and adapter (including battery charger) may become hot. Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

**◆ Handling FOMA terminal****⚠ WARNING****Do not direct the infrared data port toward your eye and transmit signals.**

May affect your eyes. Faulty operation could result from directing the infrared data port toward other infrared equipment and transmitting signals.

**Do not turn on the light by getting the lighting part closer to other person's eyes.**

May impair eyesight. And may cause accidents like injury etc., by dazzling or astounding other people.

**Do not put FOMA terminal in the place such as the dashboard near the air-bag, where the influence of air-bag explosion is expected.**

When the air-bag explodes, FOMA terminal may hit yourself or others and could cause injury, equipment malfunction or damage.

**When you use electronic medical equipment, do not keep the terminal in your chest pocket or inside pocket.**

Using your FOMA terminal near medical electronic equipment could cause equipment failure.

**Do not put foreign objects such as liquid like water, metal pieces or burnable things into UIM or microSD card slot.**

May cause fire, electric shock or malfunction.

**Do not turn on the light aiming directly at the driver of the car etc.**

May disturb driving and cause an accident.

**Turn FOMA terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.**

May cause electronic equipment or electronic medical equipment to fail or malfunction.

If the function which automatically turns ON the power is set, cancel the setting before turning the power OFF.

When using the phone in a medical facility, be sure to observe the regulations of the facility. If you do prohibited act such as using the phone in an airplane, you may be punished according to law.

**When you talk by setting handsfree, always keep FOMA terminal away from your ear.****And, when connecting the earphone/microphone to FOMA terminal and play a game or music, adjust the volume moderately.**

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.





Do

**If you have weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.**  
Could affect heart function.



Do

**If it starts thunder while using the phone outside, retract antenna and turn the power OFF immediately, and move to a safe location.**

May be subject to lightning strike and could cause electric shock.



Do

**Turn FOMA terminal OFF near high-precision electronic control equipment or electronic equipment using low-power signals.**

May cause the equipment to fail or malfunction.

\* Examples of electronic equipment to avoid.

Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatic control equipment.

Users wearing implanted pacemakers or defibrillators or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.



Do

**When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of FOMA terminal.**

Surfaces of display and camera lens are made of plastic panels and they are structured for the glass not to scatter, however, if you mistakenly touch broken or exposed parts, you may be injured.

## CAUTION



Don't

**Do not swing FOMA terminal by its antenna or strap.**

May cause the terminal damage or failure, or injury to yourself or others.



Don't

**Do not use FOMA terminal in crowded places.**

The antenna may hit other people causing injuries.



Don't

**Do not use FOMA terminal with its antenna damaged.**

May hurt your skin.



Don't

**When using the motion tracking or motion sensor, check the safety around you, hold FOMA terminal firmly, and do not shake it unnecessarily.**

The motion tracking and motion sensor are functions to operate by tilting or shaking FOMA terminal. There is a risk that FOMA terminal hits people or objects around you by shaking it too much, causing a serious accident or damage.



Don't

**If you put a metal strap or the like to FOMA terminal, be careful not to let the strap hit people or objects around you when performing motion tracking or using motion sensor.**

Accidents such as injury, malfunction or damage may result.



Don't

**Do not place magnetic disks or cards with magnetic stripes near FOMA terminal or place inside and fold the terminal.**

Data stored on media such as cash cards, credit cards, telephone cards and floppy disks may be erased if the storage medium is placed near the phone.



Don't

**Do not bring magnetized objects close to FOMA terminal.**

Bringing strong magnetism close may cause a malfunction.



Don't

**If the display part is accidentally broken and liquid crystal leaks out, do not put the liquid in your mouth, inhale, or make contact with your skin. If the liquid gets into your eyes or mouth, rinse it with clean water and see a doctor immediately. And, if the liquid adheres to skin or clothing, use alcohol etc. to wipe it off, then wash with soap.**

May cause loss of sight or skin problems.



Don't

**Do not bring the speaker close to your ear when the ring alert is sounding or you are playing a melody with FOMA terminal.**

May cause hearing loss.



**In rare cases, using the phone in some vehicle models can cause the vehicle's electronic equipment to malfunction or fail.**

In this case, do not use the phone because it may hamper safe driving.



**Mobile phones can give some users skin problems such as itching, allergic reactions or rashes. If you develop skin problems, stop using the phone immediately, and see a doctor.**

FOMA terminal contains metal in the parts below.

Place of use	Material	Surface finishing
Model name panel on the back	Stainless	Coating
Fingerprint sensor	Stainless	Trivalent chrome plating
Metal part of the TV antenna	Front edge, Center part, Lower hinge	Brass Ni plating
	Extendable shaft	Stainless None
	Upper hinge	Stainless Ni plating, NiPd plating
Charging jack	Copper	Gold plating



**When opening or closing FOMA terminal, take care not to have your fingers or strap caught by the terminal.**

May cause injuries or damages.



**When watching 1Seg, take a certain distance from the display in a fully bright place.**

May cause your eyesight to be impaired.

### ◆ Handling battery pack

- **Check that the battery type matches the type displayed on the battery pack label.**

Display	Battery type
Li-ion	Li-ion battery

### ⚠ DANGER



**Do not connect a wire or other metal objects to the jack. And, do not carry or store FOMA terminal with objects like a metal necklace.**

May cause the battery pack to leak, heat, burst or ignite.



**Do not try to force the battery pack onto FOMA terminal if you are having trouble installing it. Always install it after checking that it is correctly oriented.**

May cause the battery pack to leak, heat, burst or ignite.



**Do not throw the battery pack into the fire.**

May cause the battery pack to leak, heat, burst or ignite.



**Do not nail the battery pack, hit with a hammer or step on it.**

May cause the battery pack to leak, heat, burst or ignite.



**If the battery pack's fluid contacts eyes, immediately flush the eyes with clean water and see a doctor right away. Do not rub the eyes.**

May cause loss of sight.

### ⚠ WARNING



**If the battery pack seems to have abnormalities such as deformation or scratches due to an external impact or falling, stop using it immediately.**

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



**If the battery pack does not have a full charge after being charged for the specified time, stop charging it.**

May cause the battery pack to leak, heat, burst or ignite.



**If the battery pack leaks or gives off a strange smell, immediately remove it from the vicinity of open flames.**

The vapors from leaking battery pack fluid may ignite or explode.



**Be careful not to let your pet bite the battery pack.**

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.

**⚠ CAUTION****Do not discard old battery packs together with other garbage.**

May cause igniting or environmental destruction. Tape the terminals of old battery packs to insulate them, and then bring them into a sales outlet such as DOCOMO Shop. If your local municipality has a battery recycling program, dispose of them as provided for.

**Do not charge a wet battery pack.**

May cause heat generation, ignition or rupture of the battery pack.

**If the battery pack's fluid contacts skin or clothes, immediately flush the contacted area thoroughly with clean water.**

May hurt the skin.

**◆ Handling optional devices (AC Adapter/DC Adapter/Desktop Holder/In-Car Holder)****⚠ WARNING****Do not use the adapter (including battery charger) cord or power cord if it gets damaged.**

May cause electric shock, heat or fire.

**Do not use the AC adapter or desktop holder (battery pack's battery charger) in a bathroom or other highly humid area.**

May cause electric shock.

**Always use the DC adapter with a negative-ground vehicle. Do not plug it into a positive-ground vehicle.**

May cause fire.

**When it starts to thunder, do not touch FOMA terminal and adapter (including battery charger).**

May be subject to lightning strike and could cause electric shock.

**Do not short the charging jack while it is connected to the outlet or cigarette lighter socket. Do not touch the charging jack with a part of your body such as your hand or finger.**

May cause fire, malfunction, electric shock or injuries.

**Place battery charger and desktop holder in a stable location while charging. Do not cover or wrap battery charger and desktop holder with a cloth, blanket, etc.**

May cause FOMA terminal to be removed or the optional devices to be heated, resulting in fire or troubles.

**Do not place heavy objects on the adapter (including battery charger) cord or power cord.**

May cause electric shock or fire.



No wet hands

**Do not touch the adapter (including battery charger) cord or outlet with wet hands.**

May cause electric shock.



Do

**Only use with the specified power source and voltage.**

If incorrect voltage is used, this may cause fire or failure. When using FOMA terminal overseas, use AC Adapter for global use.

AC adapter : AC100V

DC adapter : 12 or 24V DC (specific for negative ground vehicle)

AC adapter for global use : Between 100V and 240V AC (Connect to the AC outlet for internal household use)



Do

**If the DC adapter's fuse blows, replace it only with the specified fuse.**

Using other fuses may cause fire or equipment failure. For the specified fuse, see the instructions that come with the DC adapter.



Do

**Wipe off any dust that accumulates on the power plug.**

May cause fire.



Do

**When you connect the AC adapter to an outlet, make sure not to touch with metal such as metal straps and firmly connect to the outlet.**

May cause electric shock, electrical short or fire.



Do

**When you disconnect the adapter (including battery charger) from the outlet or cigarette lighter socket, do not pull the adapter (including battery charger) cord or power cord with excessive force; instead hold the plug to disconnect.**

Pulling the cord could damage it, possibly leading to electric shock or fire.



Unplug

**Always remove the power plug from the outlet when not using the adapter for an extended period.**

May cause electric shock, fire or malfunction.



Unplug

**Immediately remove the power plug from the outlet or cigarette lighter socket if water or other fluids get into the adapter.**

May cause electric shock, smoke or fire.



Unplug

**Always remove the power plug from the cigarette lighter socket when cleaning the equipment.**

May cause electric shock.

## ◆ Handling UIM

### ⚠ CAUTION



Do

**Be careful of the cut surface when removing UIM (ICs).**

May hurt hands or fingers.

## ◆ Handling mobile phones near electronic medical equipment

- These precautions are based on the guidelines produced at the Electromagnetic Compatibility Conference Japan, regarding the protection of electronic medical equipment from radio waves emitted by mobile phone units.

### ⚠ WARNING



Do

**Obey the following rules inside medical facilities.**

- Do not bring FOMA terminal into operating rooms (ORs), intensive care units (ICUs) or coronary care units (CCUs).
- Turn FOMA terminal OFF in hospital wards.
- Turn FOMA terminal OFF in hospital lobbies and corridors if electronic medical equipment could be nearby.
- If the medical facility has specified zones where use or possession of mobile devices is prohibited, obey those instructions.
- If the function to automatically turn ON the power is set, cancel the setting before turning the power OFF.



Do

**Turn FOMA terminal OFF in crowded trains or other public places where pacemaker or defibrillator wearers could be nearby.**

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

**Wearers of implanted pacemakers or defibrillators must carry and use FOMA terminal at least 22 cm away from the implanted device.**

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

**When electronic medical equipment other than implanted pacemakers or defibrillators are in use outside of medical facilities (such as in home care settings), check with the device manufacturer to determine how the device is affected by electrical signals.** FOMA terminal's signals may affect the performance of electronic medical equipment.

## Handling instructions

### ◆ General

- **Keep water away from FOMA terminal.**
  - FOMA terminal, battery pack, adapter (including battery charger) and UIM are not waterproof. Do not use FOMA terminal in bathrooms or other high-humidity areas, or in the rain. When carrying FOMA terminal in a pocket near your body, sweat may corrode the inner components, causing malfunction.
  - Malfunions deemed to be caused by water are not covered by the warranty, and may be impossible to repair. Since these conditions are outside the scope of the warranty, a repair, if at all possible, is charged.
- **Clean FOMA terminal with a dry soft cloth (such as a cloth for eyeglasses).**
  - The display of FOMA terminal may have been applied special coating to improve clearness of the color LCD. When cleaning FOMA terminal, rubbing it roughly with a dry cloth can scratch the display. Take care when handling the unit, and clean it with a dry soft cloth (such as a cloth for eyeglasses). Drops of water or dirt left on the display can cause stains or remove the coating.
  - If FOMA terminal is wiped with alcohol, paint thinner, benzine or detergent, the printing may disappear or color may fade.
- **Clean the jack occasionally with a dry cotton swab.**
  - If the jack is dirty, the contact may become poor and the power may shut OFF. A dirty jack can result in poor charging, so clean it with a dry cloth or cotton swab.
- **Do not place FOMA terminal near an air-conditioner outlet.**
  - The rapid change in temperature may cause condensation, causing internal corrosion and malfunction.
- **When using, be careful not to subject excessive force to FOMA terminal or the battery.**
  - If FOMA terminal is crammed into a brimming bag or placed in a pocket and sat on, display, internal PCBs or battery pack may be damaged or malfunction. And, if external devices are plugged into the external connection jack or earphone/microphone jack, the breakage of the connector or malfunction may result.
- **Carefully read the separate instructions that come with FOMA terminal, adapter (including battery charger) and desktop holder.**

- Do not rub or scrape the display with a metal piece etc.
  - It may scratch the display, causing malfunction or damage.

### ◆ FOMA terminal

- **Avoid extreme temperature.**
  - Use FOMA terminal in an ambient temperature range of between 5 and 35°C, and in a humidity range of between 45 and 85%.
- **FOMA terminal may affect land-line phones, TVs or radios in use nearby, so use it as far as possible from these appliances.**
- **Maintain a separate record of the data you saved in your FOMA terminal.**
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- **Do not plug external devices into the external connection jack or the earphone/microphone jack at a slant, or do not pull it forcibly while it is plugged.**
  - May cause malfunction or damage.
- **Do not fold FOMA terminal with the strap held inside.**
  - May cause malfunction or damage.
- **It is normal for FOMA terminal to become warm during use or charging. Continue to use it.**
- **Do not leave FOMA terminal with the camera in areas under strong direct sunlight.**
  - May cause discoloring or burn-in of materials.
- **Usually, use FOMA terminal with the earphone/microphone jack cover, external connection jack cap and memory card slot cover placed.**
  - Dust and/or water brought into FOMA terminal cause troubles.
- **Do not use FOMA terminal with the back cover removed.**
  - It may cause the battery to come off, or may cause a malfunction or damage.
- **Do not put an extremely thick sticker etc. on the display or keypad.**
  - May cause malfunction.
- **Do not rotate the display with FOMA terminal folded.**
  - It may cause the display and around the keys to be scratched, causing a malfunction or damage.
- **Do not give a hard shock to the fingerprint sensor and take care not to scratch its surface.**
  - May not only cause the fingerprint sensor to malfunction, but also disable authentication or pointing operation.

- Clean the fingerprint sensor by wiping with a dry soft cloth (e.g. eyeglass cleaner).
  - Any soil or water attached to the surface of the fingerprint sensor may cause fingerprint scan failure, which may lead to reduction of the authentication performance, an error where the sensor operates as authenticating when the finger is not in contact or disability of pointing operation.
- While using microSD card, do not remove microSD card or turn OFF FOMA terminal.
  - It may cause data loss or malfunction.

### ◆ Battery pack

- The battery pack is a consumable part.
  - Replace the battery pack if FOMA terminal has extremely short operation time on a full charge, though it may vary by operating conditions. Purchase a new battery pack of the specified type.
- Charge the battery in an area within the proper ambient temperature range (5-35°C).
  - Always charge before using it for the first time or after extended disuse.
- The operation time provided by the battery pack varies by the operating environment and battery pack's deterioration.
- The battery pack may swell out as it comes to near the end of its lifetime depending on the usage conditions, but it is not a problem.
- Do not preserve or leave the battery pack as it is empty.
  - It may cause the battery pack performance to be degraded or its lifetime to be shortened.

### ◆ Adapter (including battery charger)

- Charge the battery in an area within the proper ambient temperature range (5-35°C).
- Do not charge the battery in the areas below.
  - In areas of excessive humidity, dust or vibrations
  - Near land-line phones or TVs/radios
- It is normal for the adapter (including battery charger) to become warm while charging. Continue to use it.
- When using the DC adapter for charging, keep the vehicle engine running.
  - The vehicle's battery could become flat.

- When using an outlet with a mechanism preventing unplugging, follow the handling instructions for that outlet.
- Do not give hard shock to the adapter (including battery charger). Do not deform the charging jack.
  - May cause malfunction.

### ◆ UIM

- Do not use excessive force to install/remove UIM.
- It is normal for UIM to become warm during use. Continue to use it.
- Note that DOCOMO assumes no responsibility for malfunctions occurring as the result of inserting and using a UIM with another IC card reader/writer.
- Always keep UIM ICs clean.
- Clean UIM with a soft, dry cloth (such as a cloth for eyeglasses).
- Maintain a separate record of the data you saved in UIM.
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- To preserve the environment, bring the old UIM to a sales outlet such as DOCOMO Shop.
- Avoid extreme temperature.
- Take care not to scratch, touch accidentally or short IC.
  - May cause data loss or malfunction.
- Do not drop UIM or subject it to shocks.
  - May cause malfunction.
- Do not bend UIM or place heavy objects on it.
  - May cause malfunction.
- Do not install UIM into FOMA terminal with a label or sticker put on UIM.
  - May cause malfunction.

### ◆ CAUTION

- Do not use a remodeled FOMA terminal. Using a remodeled terminal violates the Radio Law.
 

FOMA terminal is certified according to technical standard conformance of specified wireless equipment based on the Radio Law, and as a proof of it, the "Technical Compliance Mark (TCM)" is depicted on the engraved sticker of FOMA terminal.

If you remodel FOMA terminal by removing its screws, your certification of technical standard conformance becomes invalid.

Do not use FOMA terminal with its certification of technical standard conformance invalid as it violates the Radio Law.

- Be careful when you use FOMA terminal while driving a car etc. Using a mobile phone while driving is subject to penal regulations. If you inevitably receive a call, tell the caller that you will "call back" by handsfree, then park in a safe place and call back.

## Intellectual property rights

### ◆ Copyrights and portrait rights

Except for the case protected by copyright laws such as personal use, use of FOMA terminal to reproduce, alter, or publicly transmit recorded pictures or sounds, or copyrighted text, images, music or software downloaded from websites without the copyright holder's authorization is prohibited.

Note that taking photos or recordings at some demonstrations, performances or exhibitions may be prohibited even when only for personal use.

Avoid taking pictures of others with FOMA terminal without their consent or disclosing recorded pictures of others without their consent to general public through Internet websites etc., because they may infringe on portrait rights.

### ◆ Trademarks

Company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.

- "FOMA", "mova", "i-motion", "i-mode", "i-appli", "i-motion mail", "i-shot", "DoPa", "mopera", "mopera U", "WORLD CALL", "WORLD WING", "Short Mail", "Chaku-motion (Movie ringtone)", "Deco-mail", "V-live", "i-area", "Chara-den", "i-appliDX", "i-Channel", "Dual Network", "FirstPass", "sigmarion", "Security Scan", "musea", "Public mode", "PushTalk", "PushTalkPlus", "ToruCa", "iD", "2in1", "DCMX", "OFFICEED", "IMCS", "Chokkan Game" and logos of "FOMA", "i-mode", "i-appli", "DCMX", "iD" and "HIGH-SPEED" are trademarks or registered trademarks of NTT DOCOMO.

- Microsoft®, Windows®, Windows Vista®, Windows Media® and PowerPoint® are trademarks or registered trademarks of "Microsoft Corporation" in the US and other countries.
- Microsoft Excel and Microsoft Word are product names of Microsoft Corporation in the U.S.A. In this manual, they may be described as Excel and Word.
- "Multitask" is a trademark of NEC Corporation.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- Free Dial logo mark is a registered trademark of NTT Communications Corporation.
- Java and all Java-related trademarks are trademarks or registered trademarks of Sun Microsystems, Inc. in the US and other countries.
- This product contains NetFront Browser, NetFront Sync Client of ACCESS CO., LTD.

**NetFront®**

ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD. in Japan, US and other countries.  
Copyright© 2008 ACCESS CO., LTD. All rights reserved.

- Powered by JBlend™ Copyright 2002-2008 Aplix Corporation. All rights reserved.




JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

- This product contains Adobe® Flash® Lite™ and Adobe Reader® LE technology of Adobe Systems Incorporated.  
Adobe Flash Lite Copyright© 2003-2007 Adobe Systems Incorporated. All rights reserved.  
Adobe Reader LE Copyright© 1993-2007 Adobe Systems Incorporated. All rights reserved.

Adobe, Adobe Reader, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.



- FlashFX® Pro™ is a registered trademark of DATALIGHT, Inc.  
FlashFX® Copyright 1998-2008 DATALIGHT, Inc.  
U.S. Patent Office 5,860,082/6,260,156
- QR code is a registered trademark of Denso Wave Inc.
- miniSD™ and  are trademarks of the SD Association.  
(miniSD™ memory card is described as miniSD card.)

- microSDHC Logo is a trademark.
- Word, Excel and PowerPoint file display technologies are powered by Pictsel Technologies.  
Pictsel, Pictsel File Viewer and the Pictsel cube logo are trademarks or registered trademarks of Pictsel Technologies, Pictsel File Viewer.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates.
- QuickTime is a registered trademark of Apple Inc. in the US and other countries.
- ATOK + APOT of Justsystem Corporation is installed in this product as Japanese character conversion function.  
"ATOK" "APOT (Advanced Prediction Optimization Technology)" are registered trademarks of Justsystem Corporation.
- This product contains software licensed by Symbian Software Ltd © 1998-2008. **symbian** and Symbian OS are trademarks of Symbian Ltd.
- "Round Gothic", "Ryumin" and "Round Fork" are provided by Morisawa&Company Ltd., and these names are their trademarks or registered trademarks, and the copyrights of these font data belong to them.
- "Privacy mode" is a registered trademark of FUJITSU LIMITED.
- Napster is a registered trademark of Napster, LLC. and/or its affiliates in the US and/or other countries.
- Google is registered trademark of Google Inc.
- "日英版しゃべって翻訳 for F (J-E Speech Translation for F)" and "日中版しゃべって翻訳 for F (J-C Speech Translation for F)" are trademarks of ATR-Trek.
- アバターメーカー™ (Avatar maker) is a trademark of Acrodea, Inc.
- Other company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.
- The abbreviations of operating systems (Japanese versions) below are used in this manual.
  - Windows Vista stands for Windows Vista® (Home Basic, Home Premium, Business, Enterprise and Ultimate).
  - Windows XP indicates the Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.
  - Windows 2000 indicates the Microsoft® Windows® 2000 Professional operating system.



pictsel



## ◆ Others

- This product contains a module developed by the Independent JPEG Group.
- This product is equipped with the technologies of GestureTek, Inc. Copyright© 2006–2008, GestureTek, Inc. All Rights Reserved.
- "学研モバイル国語辞典 (Gakken Mobile JpnDic)", "学研モバイル英辞典 (Gakken Mobile JE Dic)", "学研モバイル英和辞典 (Gakken Mobile EJ Dic)", "今日は何の日 (Today's trivia)" and "今日の歴史 (Today in history)" are copyrighted by GAKKEN CO., LTD.
- This product is licensed based on MPEG-4 Visual Patent Portfolio License. The use of MPEG-4 Video Codec function is allowed for personal and nonprofit use only in the cases below.
  - Recording movies and i-motion that conform to MPEG-4 Visual Standard (hereinafter referred to as MPEG-4 Video)
  - Playing MPEG-4 Videos recorded personally by consumers not engaged in profit activities
  - Playing MPEG-4 Video supplied from the provider licensed from MPEG-LA  
For further utilizing such as promotion, in-house use or profit-making business, please contact MPEG LA, LLC in U.S.
- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations;
 

 
4,901,307	5,504,773	5,109,390	5,535,239	5,267,262	5,600,754	5,416,797
5,490,165	5,101,501	5,511,073	5,267,261	5,568,483	5,414,796	5,659,569
5,056,109	5,506,865	5,228,054	5,544,196	5,337,338	5,657,420	5,710,784
				5,778,338		
- Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When downloading licenses for protected content, you agree that Microsoft may include a "Revocation List" with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you cannot access a content that requires the upgrade.




## Basic package and optional accessories

### <Basic package>


**F-06A**  
(including the Back Cover F27  
and the written warranty)

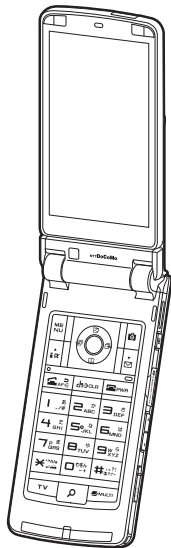

**Battery Pack F10**

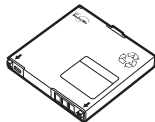 


**Instruction manual**

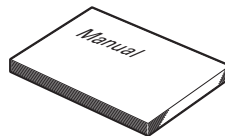 

\* Quick Manual is appended on P488.

**CD-ROM for F-06A**

 


\* The PDF version of "Manual for PC Connection" and  
"Kuten Code List" are contained in the CD-ROM.


**Other optional accessories →P458**
 
### <Optional accessories>

**FOMA AC Adapter 01/02**  
(including the written warranty  
and operation manual)

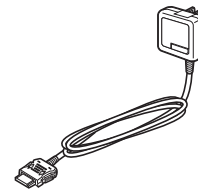


 
**Desktop Holder F24**  
(including operation manual)

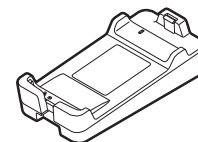

# Before Using the Handset

<b>Names and functions of parts</b> .....	26
<b>Swinging display</b> .....	29
<b>Display overview</b> .....	<a href="#">YOKO-MOTION</a> 30
<b>Sub-display/Light overview</b> .....	34
<b>Selecting functions from menu</b> .....	36
<b>Pointing operation using fingerprint sensor</b> .....	<a href="#">Pointing device</a> 39
<b>Using motion sensor</b> .....	40
<b>Using UIM (FOMA card)</b> .....	41
<b>Installing/Removing battery pack</b> .....	43
<b>Charging</b> .....	44
<b>Checking remaining battery level</b> .....	<a href="#">Remaining battery level</a> 47
<b>Turning power ON/OFF</b> .....	<a href="#">Power ON/OFF</a> 47
<b>Switching to English</b> .....	<a href="#">Select language</a> 49
<b>Setting date and time</b> .....	<a href="#">Date &amp; time</a> 49
<b>Notifying your phone number to the other party</b> .....	<a href="#">Caller ID notification</a> 50
<b>Checking your own phone number</b> .....	<a href="#">User information</a> 50
  
## Names and functions of parts

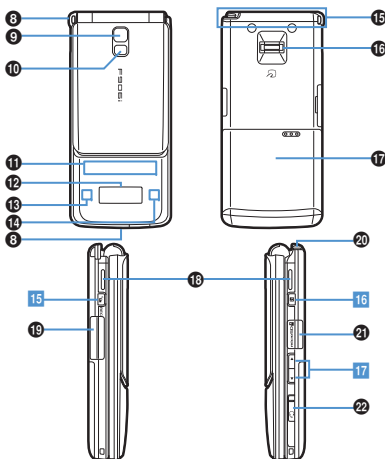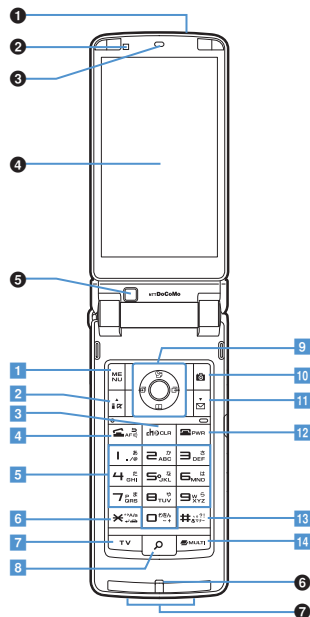

### <Functions of parts>

#### 1 Infrared data port → P326, 329

Infrared communication, Infrared remote control.

#### 2 Light sensor

Sense the ambient luminance (automatic adjustment of the brightness of the display).

\* Blocking the light sensor may disable correct adjustment of the brightness.

#### 3 Earpiece

Hear other party's voice from here.

#### 4 Display → P30

#### 5 In-camera

Shoot the image of yourself, send the image of yourself over a videophone call.

#### 6 Microphone

Send your voice from here.

\* Do not cover with your finger while talking or recording sound.

#### 7 Charging jack

#### 8 Strap opening (2 openings)

#### 9 Out-camera

Shoot still images or movies, send images over a videophone call.

#### 10 Light → P71, 151, 369

Camera light for videophone call, still image shooting or movie recording, or simple light

#### 11 Light → P114

Turn on or blink when activating Lock on close, shooting an image, recording a movie, operating Music&Video Channel player or Music player operate according to the settings of Indicator light or Light alert.

#### 12 Sub-display → P34

#### 13 Call light → P35

#### 14 Mail light → P35

#### 15 FOMA Built-in antenna

\* The terminal has a FOMA built-in antenna. To talk in better conditions, do not cover the antenna with your hand.

#### 16 Fingerprint sensor → P40, 120

Operation of pointing device, register/authenticate fingerprint

#### 17 Back cover