



F-01B

INSTRUCTION MANUAL '09.X

docomo **PRIME** series

DOCOMO W-CDMA, GSM/GPRS System

Thank you for purchasing "docomo PRIME series F-01B" mobile terminal.

Before using F-01B, read this manual to ensure safe use and handling.

Instruction manuals for F-01B

The operations of F-01B are described in this manual, "Guide (In Japanese only)" (installed in FOMA terminal) and "Instruction Manual (In Japanese only)" (in pdf format).

User's Manual (this manual)

This manual provides information about screens and operations of basic functions.

"Guide (In Japanese only)" (installed in FOMA terminal)

This guide provides overviews and operations of frequently-used functions.
In F-01B Stand-by display, **[MENU] ▶ [7] LifeKit ▶ [0] Guide ▶** Select a search method

"Instruction Manual (In Japanese only)" (in pdf format)

This manual provides detailed information and operations of all the functions.
(From a PC) This manual can be downloaded from NTT DOCOMO website.
<http://www.nttdocomo.co.jp/english/support/manual/index.html>
* The latest information about this manual can also be downloaded. The URL and contents are subject to change without prior notice.

- In this "Manual for F-01B", "F-01B" mobile terminal is usually referred to as "FOMA terminal".
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- The description of "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits (⇒P46) or performing fingerprint authentication (⇒P47).

Basic package and main options

■ Basic package

 
F-01B
(including Back Cover F42 and the written warranty)



Battery Pack F10



Instruction manual (this manual)

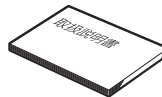

CD-ROM for F-01B



■ Main options

- **FOMA AC Adapter 01/02**
(including written warranty and operation manual)
- **Desktop Holder F30**
(including operation manual)

- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

Contents

Introduction

About This Guide	2
What you can do with F-01B	3
Part names and functions	4
Usage Styles	6
About FOMA Terminal	7
Precautions (ALWAYS FOLLOW THESE DIRECTIONS)	8

Basic Operation



Before Using	25
Screens	28
Character entry	35
Sound/Screen/Setting	38
Lock/Security	46

Connect



Call Telephone	63
Mail	74
Phonebook	77

Search



i-mode/Full Browser	85
i-Channel	88
Map/GPS	90

Enjoy



Camera	93
1Seg	98
Music	101
i-appli	103
i-motion/Movie	105

More convenient



Osaifu-Keitai	107
i-concier	109
Convenient tools	111
Data management	118

Others

Support	123
Appendix	123
Index	133

About This Guide

The screenshot shows the '音の設定' (Sound Settings) menu. Annotations include:

- Function category:** 音 / 画面設定
- Function name or title:** 音の設定
- Outline of the function:** 着信音を変更したり、音量を調整したり、公共性の高い場所で音を消したり、音に関する設定を行います。
- Typical operating procedure:** 音設定 (1) MENU ▶ 8 設定 / NW サービス ▶ 1 音 / バイブ ▶ 1 音設定
- Introduction of related and recommended functions:** Description in [] represents index search words for "Guide".
- Chapter title:** 音設定
- Supplementary description of the function and operation, other operating procedure:** 基本の操作 (Basic Operation)

The screenshot content includes:

音設定
着信音やアラーム音などの音量を設定します。
(例) 電話着信音量の設定
1 [MENU] ▶ 8 設定 / NW サービス ▶ 1 音 / バイブ ▶ 2 音量設定
2 1 電話着信・受話音量 ▶ 1 電話着信音量 ▶ [OK] or [X] ▶ [選択]

Point
* [Silent] に設定したときには、待受画面に [] が表示されます。電話着信時のバイブレータを同時に設定しているときは [] が表示されません。

Information
• 電話を着信したときの着信音やイメージ表示、バイブレータの動作パターン、イルミネーションを設定できます。【電話着信設定】【テレビ電話着信設定】
• 着信やアラームを音ではなく、振動で知らせることができます。【バイブレータ設定】

33

* The page shown here represents an example. Images may differ from actual page in this manual.

The representations and meanings of operating procedures are as shown below.

Representation example	Meaning
[] (1 sec. or more)	Press [] for 1 second or more. * Pressing a key for a certain period of time, such as "1 sec. or more", is disabled for touch-operation.
[MENU] ▶ 8 [Settings & NW services] ▶ 7 [Clock & Other] ▶ 1 [Clock] ▶ 1 [Date & Time] ▶ Set required items ▶ [] [Set]	On the stand-by display, press [MENU] and then press [8] [7] [1] [1]. Successively, set required items, and then press []. * You can select [MENU] or menu items with either key operation or touch operation. * Description in [] represents a guide line when using touch operation.

- In this manual, to select an item by placing the cursor with [] (Multi-cursor key) and pressing [] (Enter key) is referred to as "select". Regarding an operation to enter characters in the entry field, the final step of pressing [] [OK] is omitted.
- Description in this manual is based on default settings. If the settings are changed, the displays or operations of FOMA terminal may differ from the one described in this manual.

What you can do with F-01B

Guide

Guide is useful for checking an operating procedure of the function you want to use on FOMA terminal. Without Instruction Manual at hand, you can check quickly anytime and anywhere.

999



i-concier

i-concier is a service to use FOMA terminal conveniently in which a character on the stand-by display (Machi-chara) notifies you of useful information and schedules (i-schedule) can be downloaded automatically from a site.



International Roaming (WORLD WING)

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G/GSM Areas are supported).



Waterproofness/Dustproofness

999

Waterproofness of IPX5 and IPX8 (which exceeds IPX7) and dustproofness of IP5X are provided by firmly closing the external connection jack cap and installing the back cover in a locked state.



Intuitive Touch Operation

Thanks to the touch operation, you can operate the terminal intuitively in any scenes including when you want to perform a function, select an item and enter text.



Kid-safe Mode

You can restrict usable functions, so you can let your child use FOMA terminal without anxiety.




Part names and functions

Part names of F-01B and major functions assigned to each part are as follows.

- ① **Earpiece**
Hear other party's voice from here.
- ② **Display (touch panel)**⇒P28, 31
- ③ **Microphone**
Send your voice from here. Do not cover the microphone during a call or sound recording.
- ④ **MENU MENU key**
Display a menu.
- ⑤ **IR i-mode/i-appli/Character key**
Switch i-mode views, i-appli folder views or character entry modes.
- ⑥ **CLR ch/Clear key**
Display i-Channel or return to the previous screen.
- ⑦ **Start a voice call key**
Start a voice call.
- ⑧ **1-9 Keypads**
Enter phone number or characters, or select an item.
- ⑨ ***/*Public mode (Drive mode) key**
Enter "*" or voiced/semi-voiced sound, or start/cancel Public mode (Drive mode).
- ⑩ **TV i-Widget/TV key**
Start/Exit i-Widget or start 1Seg.
- ⑪ **Light sensor**
Sense the ambient luminance to automatically adjust the brightness of the

display. Do not cover the sensor with your hand.

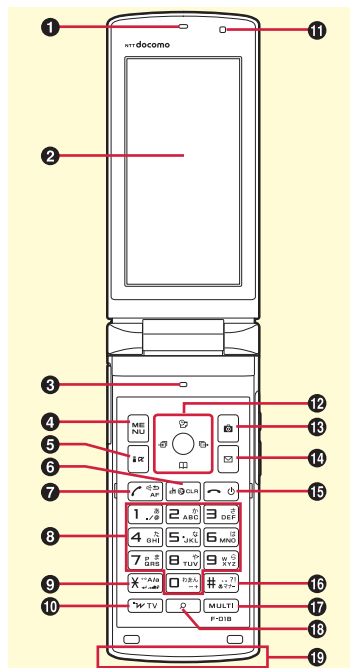

- ⑫ **Multi-cursor key**
Move the cursor, or operate a menu.
 - ⊙ : Perform an operation.
 - ⌚ : Display Scheduler, or adjust the volume.
 - 📖 : Display Phonebook, or adjust the volume.
 - ☎ : Display Received calls.
 - 📠 : Display Redial.
- ⑬ **Camera key**
Shoot still images or moving pictures.
- ⑭ **Mail key**
Display the mail menu.
- ⑮ **Power/End key**
Turn on/off FOMA terminal, or exit a function.
- ⑯ **#/#Silent mode key**
Enter "#" or punctuation, or start/cancel Silent mode.
- ⑰ **MULTI Multitask key**
Start/perform a different function.
- ⑱ **Search key**
Start Quick search.
- ⑲ **1Seg antenna (built into FOMA terminal)**
For better signal reception, do not cover the antenna with your hand.

20 Light

The light turns on when the battery charges.

21 Sub-display⇒P29**22 Call light/Mail light**

The display light turns on or blinks when there is any incoming call, mail or during a call.

23 FOMA antenna (built into FOMA terminal)

For a call in better conditions, do not cover the antenna with your hand.

24 Camera

Shoot still images or moving pictures.

25 Fingerprint sensor

Authenticate a fingerprint.

26 Speaker

Hear ring alert or voice of the caller using the handsfree function.

27 Mark

Use Osaifu-Keitai or send/receive data by iC transmission.


28 Light/Infrared data port

Use this light/port for shooting, or for infrared communication or infrared remote control function.

29 Back cover

* To access the microSD card slot, remove the back cover, open the inner

cover, and then remove the battery pack.

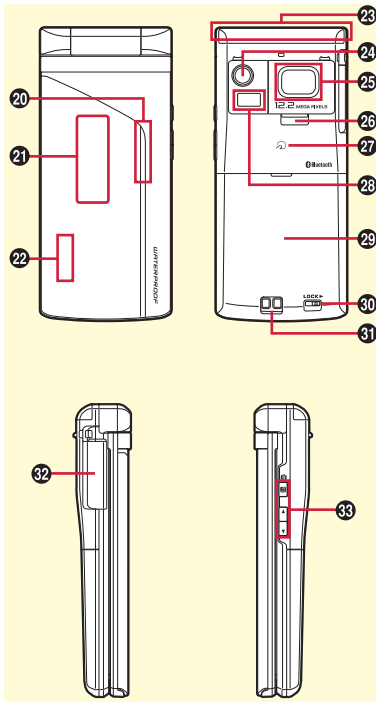**30 Back cover lever**


* Firmly install the back cover and lock it with the lever before using to avoid water seepage.

31 Charging jack**32 External connection jack**

Available to connect an optional AC adapter, DC adapter, FOMA USB Cable with Charge Function, Earphone Plug Adapter for External connector terminal etc.

33 Side keys

- : Use for operating MUSIC Player or Music&Video Channel, or for shooting.
- : Stop the ring tone, alarm sound, vibration, or adjust the volume.
- : Adjust the volume, turn on the light on the sub-display or switch the views.

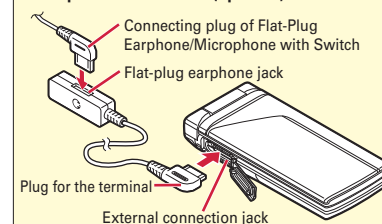
Example of connecting Flat-Plug Earphone/Microphone with Switch (optional)

Usage Styles

You can use FOMA terminal in three styles.


❖ With the terminal closed

The sub-display and light provide information.

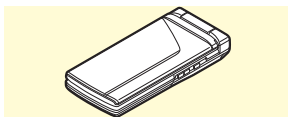

❖ Normal style (vertical/horizontal)


Either touch operation or keypad operation is available when FOMA terminal is opened. When the motion sensor is activated, the vertical/horizontal display switches according to the tilt of FOMA terminal.

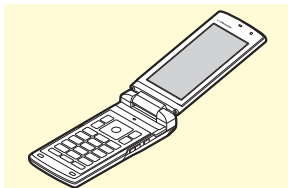


* To make a videophone call while seeing the other party, rotate the display clockwise by 180 degrees and turn the camera toward you.

❖ Viewer style (vertical/horizontal)

Touch operation is available when the display is facing outward. When the motion sensor is activated, the vertical/horizontal display switches according to the tilt of FOMA terminal (except during a call).

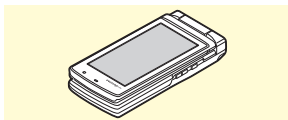

To set FOMA terminal to Viewer style, open the terminal (❶) until the display stops, rotate it clockwise by 180 degrees (❷), and then close it toward (❸).

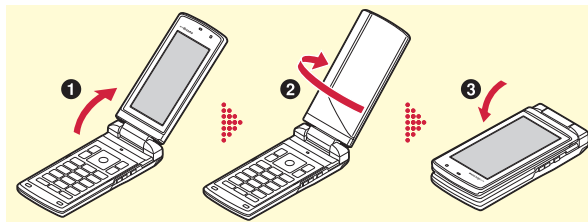

* To switching back to Normal style from Viewer style, open the display until it stops, and then rotate it counterclockwise by 180 degrees.

Point

- When switching to Viewer style, do not rotate the display counterclockwise or by 180 degrees or more. When rotating the display, do not let the corners of the display touch the terminal or keys. Doing so may damage the terminal.
- Before carrying FOMA terminal with the terminal closed, activate HOLD to prevent inadvertent operations of the side keys. Before carrying FOMA terminal in Viewer style, activate Security lock to prevent inadvertent operations of the touch panel or to save battery power consumption.

Precautions on rotating display






About FOMA Terminal



- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
 - Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
 - Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
 - Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
 - Maintain a separate record of the data (Phonebook, Schedule, Notepad, Recorded messages, Voice memos, Moving picture memos, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.
- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
 - The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd.
 - This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
 - FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.
The FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.





Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 DANGER	This sign denotes that death or serious injury may directly result from improper use.
 WARNING	This sign denotes that death or serious injury may result from improper use.
 CAUTION	This sign denotes that bodily injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.

 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter and UIM (common)	9
.....	9
Handling FOMA terminal	10
Handling battery pack	12
Handling adapter	13
Handling UIM	14
Handling mobile phones near electronic medical equipment.....	14