



# F-01C

INSTRUCTION MANUAL '10.10

docomo **PRIME** series

# DOCOMO W-CDMA, GSM/GPRS, Wireless LAN System

Thank you for purchasing "docomo PRIME series F-01C" mobile terminal.

Before using F-01C, read this manual to ensure safe use and handling.

## Instruction manuals for F-01C

The operations of F-01C are described in this manual, "使いかたガイド (Guide)" (installed in FOMA terminal) and "Instruction manual (detailed version)" (in pdf format).

### Instruction manual (this manual)

This manual provides information about screens and operations of basic functions.

\*  is index term for "使いかたガイド (Guide)".

### "使いかたガイド (Guide)" (installed in FOMA terminal)

This guide provides overviews and operations of frequently-used functions. (In Japanese only)

In F-01C Stand-by display, **[MENU]** ▶ **[6]** Tool ▶ **[#]** Guide ▶ Select a search method

### "Instruction manual (detailed version)" (in pdf format)

This manual provides detailed information and operations of all the functions. (In Japanese only)

 
<From a PC> This manual can be downloaded from NTT DOCOMO website.

<http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html>

\* The URL and contents are subject to change without prior notice.

- In this "F-01C INSTRUCTION MANUAL", "F-01C" mobile terminal is usually referred to as "FOMA terminal".
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- The images used in this manual assume that Kisekai Tool is set to "White" and Color theme setting is set to "White".
- In this manual, "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits (⇒P38) or performing fingerprint authentication (⇒P39).

## Basic package

<b>F-01C</b> (including Back Cover F53 and warranty)		<b>Battery Pack F18</b> 	<b>Desktop Holder F30</b>   Desktop Holder F30 is made of recycled ABS from used products.	<b>Instruction manual</b> 	<b>CD-ROM for F-01C</b> 	<b>電子辞書データ DVD F02 (Electronic dictionary data DVD F02)</b>  Compatible options⇒PXX
---	---	--	--	--	--	--

- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

# Contents

## Introduction

FOMA terminal .....	2
What you can do with F-01C .....	3
Part names and functions .....	4
Usage styles .....	6
Precautions (ALWAYS FOLLOW THESE DIRECTIONS) .....	7
Handling precautions .....	14
Waterproofness/Dustproofness .....	18

## Basic Operation



Before Using .....	23
Screen Explanation .....	26
Character Entry .....	30
Sound/Screen Setting .....	32
Lock/Security .....	38

## Connect



Call Telephone .....	42
Mail .....	51
Phonebook .....	55

## Search



i-mode/Full Browser .....	61
i-Channel .....	65
Map/GPS .....	66

## Enjoy



Camera .....	72
1Seg .....	74
Music .....	76
i-appli .....	78
i-motion/Movie .....	80

## More Convenient



Osaifu-Keitai .....	85
i-concier .....	86
Convenient tools .....	88
Data Management .....	94

## Others

Support .....	101
Appendix .....	110
Index .....	127

## Introduction

## Basic Operation

## Connect

## Search

## Enjoy

## More Convenient

## Others

# FOMA terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS, Wireless LAN system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Note, Recorded messages, Voice memos, Moving picture memos, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.

- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS.  
Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.  
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc., Go Daddy, Inc.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

# What you can do with F-01C

## AUTO-GPS

67

The AUTO-GPS function allows for useful services that deliver information about the weather or shops around where you are, or sightseeing information. (In Japanese only)

## 使いかたガイド (Guide)

This function allows you to learn operations you want to use on the FOMA terminal. Without the instruction manual at your hand, you can check the operations readily. (In Japanese only)

**MENU** ▶ **6** Tool ▶ **#** Guide ▶ Select a search method

## i-concier

86

i-concier is a service to use the FOMA terminal conveniently in which a character on the stand-by display (Machi-chara) notifies you of useful information (Information) and schedules (i-schedule) can be downloaded automatically from a site. (In Japanese only)

## International Roaming (WORLD WING)

49

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G/GSM area supported).

## Waterproofness/Dustproofness

18

Waterproofness of IPX5 and IPX8 (which exceeds IPX7) and dustproofness of IP5X are provided by firmly closing the external connection jack cap and HDMI connection jack cap and installing the back cover in a locked state.

## High functionality camera

71

Camera offers approximately 13,2 million pixels (effective pixels) and a lot of high functionality like digital camera.

## Full-fledged electronic dictionary

90

Full-fledged electronic dictionary is provided supporting collective-search from multiple dictionaries by search key and handwriting input.

## Wi-Fi

92

You can perform comfortable data communication in Public wireless LAN area, enjoy versus games by connecting Wi-Fi device or view websites.

# Part names and functions

Part names of F-01C and major functions assigned to each part are as follows.

## 1 Earpiece

## 2 Light sensor

\* Sense the ambient luminance to automatically adjust the brightness of the display. Do not cover the sensor with your hand or a sticker.

## 3 Display (Touch panel) ⇒ P26, 28

## 4 Microphone

\* Do not cover the microphone during a call or recording. (Microphone on the back side is used for noise reduction)

## 5 MENU key

Display the menu

## 6 Mail/Character key

Display the mail menu, or switch text input modes

## 7 CLR/Clear key

Display i-Channel, or return to the previous screen

## 8 Start a voice call key

Start a voice call

## 9 Keypads


Enter phone number or characters, or select menu item

## 10 \*/Public mode (Drive mode) key

Enter "\*" or voiced/semi-voiced sound, or start/cancel Public mode (Drive mode)

## 11 i-Widget/TV key

Start/Exit i-Widget, or watch 1Seg

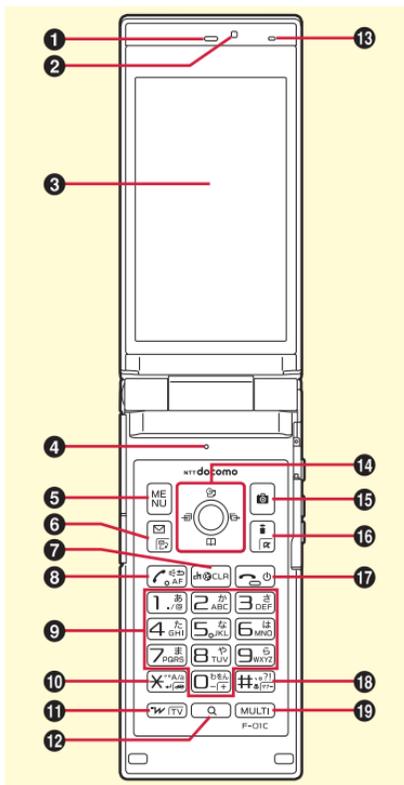

## 12 Search key

Activate Quick search

## 13 Temperature/Humidity sensor

\* To measure accurately, do not cover it.

## 14 Multi-cursor key

Move the cursor, or operate menu

 : Perform an operation.

 : Display Schedule, or adjust sound volume

 : Display Phonebook, or adjust sound volume

 : Display Received calls.

 : Display Redial.

\* 8-direction operations are available depending on functions.

## 15 Camera key

Start the still camera/movie camera shooting

## 16 i-mode/i-appli key

Display iMenu or i-appli folder

## 17 Power/End key

Turn ON/OFF FOMA terminal, or exit a running function

## 18 #/Silent mode key

Enter "#" or punctuation, or start/cancel Silent mode

## 19 MULTI Multitask key

Perform another function during a call or operation, or activate/deactivate Privacy view.

**20 Charging light****21 Sub-display****22 Indicator light**

Turn on/blink to notify various status such as incoming call or mail, shooting still image/moving picture, etc.

**23 FOMA antenna (built-in)**

\* For a call in better conditions, do not cover the antenna with your hand.

**24 Back side microphone**

Microphone for shooting moving picture or the sound recorder

\* Do not cover it during operation.

**25 Fingerprint sensor**

Register fingerprint and authenticate

**26 Camera**

Shoot still image/moving picture, or send an image via videophone

**27 Speaker**

Hear ring alert or voice of the caller with the handsfree function ON

**28 Infrared data port**

Infrared communication, infrared remote control function

**29 Mark**

Use Osaifu-Keitai, or send/receive data via iC transmission

**30 Light/Shooting light**


Camera light

**31 Back cover**

\* To access docomo UIM slot and the microSD card slot, remove the back cover and the battery pack.

**32 Charging jack****33 Back cover lever**

\* Firmly install the back cover and lock it with the lever before using to avoid water seepage.

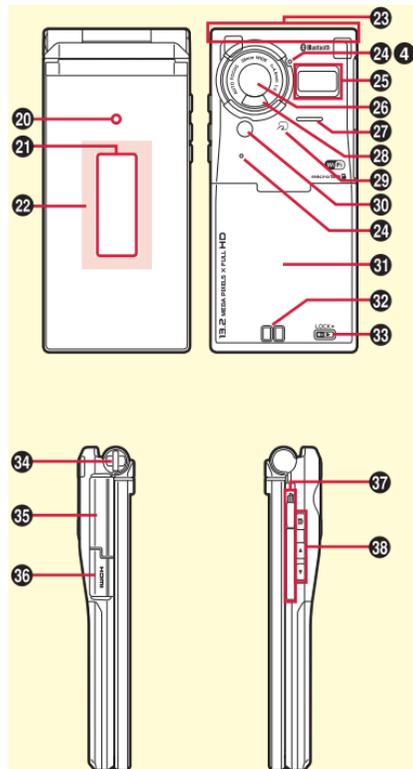**34 Strap opening****35 External connection jack**

Connect optional AC adapter, DC adapter, FOMA USB Cable with Charge Function, Earphone Plug Adapter for External connector terminal etc.

**36 HDMI connection jack****37 1Seg antenna**

\* Pull out for better signal reception when watching 1Seg.


**38 Side camera key**

Activate Still image shooting, record a video during 1Seg watching, or stop ring alert, alarm sound or vibrator

**Side up/down keys**

Adjust the volume, turn on the sub-display backlight, switch views

▲ for activate Record message/Voice memo, ▼ for checking i-mode Center, etc.

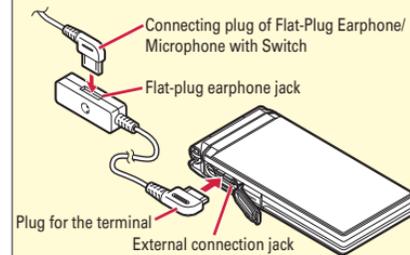
**Example of connecting Flat-Plug Earphone/Microphone with Switch (optional)**

# Usage styles

 You can use functions by key operation and touch operation on the FOMA terminal.

## Closed style


You can check missed calls, unread mail, Pedometer/ACT monitor, i-Channel information with the sub-display. Press the side key when nothing is displayed, the clock appears.



## Normal style


This style supports key operation and touch operation.

\* To talk over the videophone call seeing each other's image, rotate the display in 180-degree to face the camera to yourself.

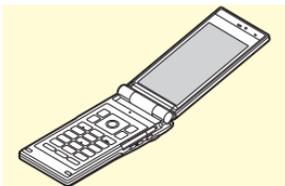

## Flip style

The display is turned outward. This style supports touch operation.

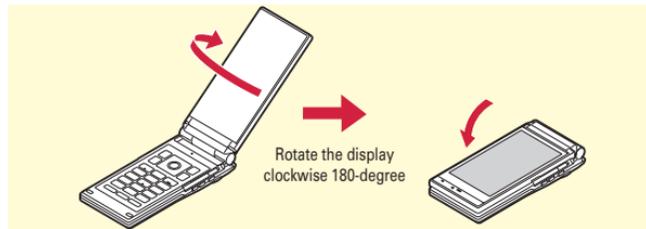

### Point

- Be careful not to close the terminal on your finger for switching to flip style.
- Do not rotate the display clockwise more than 180-degree, or counterclockwise more than 90-degree.
- Do not let the corner of the display hit to the terminal body (keypad face) when rotating or closing the display.

#### Precautions on rotating the display



- Do not close the FOMA terminal or switching to flip style with clipping the strap. Doing so may cause malfunction or damage.
- For opening, closing or rotating the FOMA terminal, do not touch the touch panel with your fingers to avoid erroneous operation.
- In flip style, do not place the terminal with the face of display downward on a desk etc. The surface of the display may be scratched.
- For carrying the FOMA terminal, activate Side key hold to avoid erroneous operation when it closed or activate Display off lock setting to avoid erroneous operation of the touch panel or to save battery consumption in flip style.

# Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 <b>DANGER</b>	This sign denotes that death or serious injury may directly result from improper use.
 <b>WARNING</b>	This sign denotes that death or serious injury may result from improper use.
 <b>CAUTION</b>	This sign denotes that minor injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.
 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

## ■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter, desktop holder and docomo UIM (common) .....	8
Handling FOMA terminal .....	9
Handling battery pack .....	10
Handling adapter and desktop holder .....	11
Handling docomo UIM .....	12
Handling mobile phones near electronic medical equipment .....	12

## Handling FOMA terminal, battery pack, adapter, desktop holder and docomo UIM (common)

### DANGER



Don't

**Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.**

May cause fire, burns or injuries.



Don't

**Do not put the terminal into heating cooking device such as microwave oven or high-pressure container.**

May cause fire, burns, injuries, electric shock.



No disassembly

**Do not disassemble or remodel the equipment.**

May cause fire, burns, injuries, electric shock.



No liquids

**Do not let the terminal get wet with water, drinking water, urine of pet animals, etc.**

May cause fire, burns, injuries, electric shock.



Do

**Use the battery pack and adapter specified by NTT DOCOMO for your FOMA terminal.**

May cause fire, burns, injuries, electric shock.

### WARNING



Don't

**Do not throw the equipment or give hard shock to it.**

May cause fire, burns, injuries, electric shock.



Don't

**Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal.**

May cause fire, burns, injuries, electric shock.



Don't

**Do not cover or wrap the terminal with a blanket, etc while using or charging.**

May cause fire or burns.



Do

**Turn FOMA terminal OFF and stop charging before entering a place such as a gas station where flammable gases are generated.**

The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

**If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.**

- Remove the power plug from the wall outlet or cigarette lighter socket.
- Turn FOMA terminal OFF.
- Remove the battery pack from FOMA terminal.

Failure to do so may cause fire, burns, injuries, electric shock.

### CAUTION



Don't

**Do not leave the equipment on unstable or sloping surfaces.**

May cause injuries.



Don't

**Do not store the equipment in extremely humid, dusty or hot areas.**

May cause fire, burns, electric shock.



Do

**Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.**

May cause injuries.



Do

**Store the equipment out of reach of small children.**

May be accidentally swallowed or cause injuries.



Do

**Be careful especially when using FOMA terminal connected to the adapter continuously for a long time.**

If you use i-appli, a videophone call or 1Seg watching while charging the battery for a long time, FOMA terminal, battery pack and adapter may be heated.

Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

## Handling FOMA terminal

### WARNING



Don't

**Do not direct the infrared data port toward your eye and transmit signals.**

May cause harmful effect on eyes.



Don't

**Do not direct the infrared data port toward home electric appliances etc. equipped with infrared device when using infrared communication.**

May cause an accident because of malfunction of infrared device.



Don't

**Do not turn on the light by getting the lighting part closer to other person's eyes.**

May impair eyesight. And may cause accidents like injury etc., by dazzling or astounding other people.



Don't

**Do not put foreign objects such as liquid like water, metal pieces or burnable things into docomo UIM or microSD card slot.**

May cause fire, burns, injuries, electric shock.



Don't

**Do not turn on the light aiming directly at the driver of the car etc.**

May disturb driving and cause an accident.



Do

**Turn FOMA terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.**

Failure to do so may cause electronic equipment or electronic medical equipment to fail or malfunction. If the function which automatically turns the power ON is set, cancel the setting before turning the power OFF.

When using the phone in a medical facility, be sure to observe the regulations of the facility. If you do prohibited act such as using the phone in an airplane, you will be punished according to law.



Do

**When you talk by setting handsfree or ring alert is sounding, keep FOMA terminal away from your ear.**

**And, when connecting the earphone/microphone etc. to the FOMA terminal and play a game or music, adjust the volume moderately.**

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.



Do

**If you have weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.**

May cause harmful effect on heart.



Do

**When you use electronic medical equipment, check with the equipment manufacturer to determine how the device is affected by radio waves before using.**

May cause harmful effect on electronic medical equipment etc.



Do

**Turn FOMA terminal OFF near high-precision electronic control equipment or electronic equipment using low-power signals.**

Failure to do so may cause the equipment to fail or malfunction.

\* Examples of electronic equipment to avoid.  
Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatic control equipment.  
Users wearing implanted pacemakers or defibrillators or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.



Do

**When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of FOMA terminal.**

Surfaces of display and camera lens are made of plastic panels and they are structured for the glass not to scatter, however, if you mistakenly touch broken or exposed parts, you may be injured.



Do

**To sound the high-pitched alarm, always keep FOMA terminal away from your ears.**

Failure to do so may cause hearing defect.

**CAUTION****Do not swing FOMA terminal by antenna or its strap.**

Don't

May cause accident such as injury to yourself or others by hitting.

**Do not use damaged FOMA terminal.**

Don't

May cause fire, burns, injuries, electric shock.

**When using the motion tracking or motion sensor, check the safety around you, hold FOMA terminal firmly, and do not shake it unnecessarily.**

Don't

May cause accident such as injuries.

**If the display part is accidentally broken and the substance leaks out, do not make the substance contact with your skin of face or hands.**

Don't

May cause loss of sight or skin problems. If the substance gets into your eyes or mouth, rinse it with clean water and see a doctor immediately.

And, if the liquid adheres to skin or clothing, use alcohol etc. to wipe it off, then wash with soap.

**To use the terminal in car, check with automobile manufacturer or dealer to determine how the device is affected by radio waves before using.**

Do

In rare cases, using the phone in some vehicle models can cause the vehicle's electronic equipment to malfunction. In that case, stop using the terminal immediately.



Do

**Mobile phones can give some users skin problems such as itching, allergic reactions or rashes. If you develop skin problems, stop using the phone immediately, and see a doctor. → "Material list (P13)"**

Do

**When opening or closing FOMA terminal, take care not to have your fingers or strap caught by the terminal.**

May cause accident such as injuries.



Do

**When watching the display, take a certain distance from the display in a fully bright place.**

May reduce visual acuity.

**Handling battery pack**

- Check that the battery type matches the type displayed on the battery pack label.

Display	Battery type
Li-ion 00	Li-ion battery

**DANGER**

Don't

**Do not connect a wire or other metal objects to the jack. And, do not carry or store FOMA terminal with objects like a metal necklace.**

May cause the battery pack to ignite, burst, heat or leak.



Don't

**Check the orientation of battery pack to install it to FOMA terminal, and do not try to force the battery pack onto FOMA terminal if you are having trouble installing it.**

May cause battery pack to ignite, burst, heat or leak.



Don't

**Do not throw the battery pack into the fire.**

May cause battery pack to ignite, burst, heat or leak.



Don't

**Do not nail the battery pack, hit with a hammer or step on it.**

May cause battery pack to ignite, burst, heat or leak.



Do

**If the battery pack's fluid etc. contacts eyes, immediately flush the eyes with clean water and see a doctor right away. Do not rub the eyes.**

May cause loss of sight.

**WARNING**

Don't

**If the battery pack seems to have abnormalities such as deformation or scratches due to falling, never use it.**

May cause battery pack to ignite, burst, heat or leak.



Do

**If the battery pack leaks or gives off a strange smell, immediately remove it from the vicinity of open flames.**

The vapors from leaking battery pack fluid may ignite or explode.



**Be careful not to let your pet bite the battery pack.**

Do

May cause battery pack to ignite, burst, heat or leak.

### CAUTION



**Do not discard old battery packs together with other garbage.**

Don't

May cause igniting or environmental destruction. Tape the terminals of old battery packs to insulate them, and then bring them into a sales outlet such as docomo Shop. If your local municipality has a battery recycling program, dispose of them as provided for.



**Do not use or charge a wet battery pack.**

Don't

May cause battery pack to ignite, burst, heat or leak.



**If fluid etc. leaks out from the battery pack, do not make the fluid contact with your skin of face or hands.**

Do

May cause loss of sight or skin problems. If the fluid etc. put into your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean water. If the fluid put into the eyes or mouth, immediately see a doctor after flushing.

## Handling adapter and desktop holder

### WARNING



**Do not use the adapter cord if it gets damaged.**

Don't

May cause fire, burns, electric shock.



**Do not use the AC adapter or desktop holder in a bathroom or other highly humid area.**

Don't

May cause fire, burns, electric shock.



**Always use the DC adapter with a negative-ground vehicle. Do not plug it into a positive-ground vehicle.**

Don't

May cause fire, burns, electric shock.



**When it starts to thunder, do not touch adapter.**

Don't

May cause electric shock.



**Do not short the charging jack while it is connected to the outlet or cigarette lighter socket. Do not touch the charging jack with a part of your body such as your hand or finger.**

Don't

May cause fire, burns, electric shock.



**Do not place heavy objects on the adapter cord.**

Don't

May cause fire, burns, electric shock.



**When you insert and remove AC adapter from power outlet, do not contact a metal strap or other metal objects with the jack.**

Don't

May cause fire, burns, electric shock.



No wet hands

**Do not touch the adapter cord, desktop holder or outlet with wet hands.**

May cause fire, burns, electric shock.



Do

**Only use with the specified power source and voltage. When charging FOMA terminal overseas, use AC Adapter for global use.**

If incorrect voltage is used, this may cause fire, burns or electric shock.

AC adapter : AC100V

DC adapter : 12 or 24V DC (specific for negative ground vehicle)

AC adapter for global use : Between 100V and 240V AC (Connect to the AC outlet for internal household use)



Do

**If the DC adapter's fuse blows, replace it only with the specified fuse.**

May cause fire, burns, electric shock. For the specified fuse, see the instructions that come with the DC adapter.



Do

**Wipe off any dust that accumulates on the power plug.**

Failure to do so may cause fire, burns, electric shock.



Do

**When you connect the AC adapter to an outlet, firmly connect to the outlet.**

Failure to do so may cause fire, burns, electric shock.



Do

When you disconnect the adapter from the outlet or cigarette lighter socket, do not pull the adapter cord with excessive force. Instead, hold the power plug to disconnect.

May cause fire, burns, electric shock.



Unplug

Always remove the power plug from the outlet or cigarette lighter when not using the adapter for an extended period.

Failure to do so may cause fire, burns, electric shock.



Unplug

Immediately remove the power plug from the outlet or cigarette lighter socket if water or other fluids get into the adapter.

Failure to do so may cause fire, burns, electric shock.



Unplug

Always remove the power plug from the cigarette lighter socket when cleaning the equipment.

Failure to do so may cause fire, burns, electric shock.

## Handling docomo UIM



### CAUTION



Do

Be careful of the cut surface when removing docomo UIM.

May cause injuries.

## Handling mobile phones near electronic medical equipment

- These precautions are based on the guidelines produced at the Electromagnetic Compatibility Conference Japan, regarding the protection of electronic medical equipment from radio waves emitted by mobile phone units.



### WARNING



Do

Obey the following rules inside medical facilities.

- Do not bring FOMA terminal into operating rooms (ORs), intensive care units (ICUs) or coronary care units (CCUs).
- Turn FOMA terminal OFF in hospital wards.
- Turn FOMA terminal OFF in hospital lobbies and corridors if electronic medical equipment could be nearby.
- If the medical facility has specified zones where use or possession of mobile devices is prohibited, obey those instructions.
- If the function to automatically turn ON the power is set, cancel the setting before turning the power OFF.



Do

Turn FOMA terminal OFF in crowded trains or other public places where pacemaker or defibrillator wearers could be nearby.

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

Wearers of implanted pacemakers or defibrillators must carry and use FOMA terminal at least 22 cm away from the implanted device.

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

When electronic medical equipment other than implanted pacemakers or defibrillators are in use outside of medical facilities (such as in home care settings), check with the device manufacturer to determine how the device is affected by electrical signals.

FOMA terminal's signals may affect the performance of electronic medical equipment.

## Material list

Part		Material	Surface treatment
Exterior case	Movable part Display	PC+ABS resin	UV hard coating
	Movable part Rear surface	Acrylate resin	UV hard coating
	Fixed part Keypad	PA-GF resin	UV hard coating
	Fixed part Battery	PC+ABS resin	UV hard coating
	Back cover	PC+ABS resin	UV hard coating
	Back cover lock lever	POM resin	None
	Back cover inside lock plate	Stainless steel	None
	Back cover (body)	Stainless steel	None
	Back cover (gasket)	Silicon rubber (VMQ)	None
Main display panel	Hardened glass	Shatterproof film	

Part		Material	Surface treatment
Camera lens	Camera panel	Acrylate resin	UV hard coating
	Camera ring	ABS resin	Chrome-plating
Light lens		PC resin	None
Side keys	Volume key	PC resin	UV hard coating
	Camera key	ABS resin	Chrome-plating
Keypad		PC resin	UV hard coating
External connection jack cap, HDMI connection jack cap	Cap body, water stop	PC+ABS resin	UV hard coating
	Flexure	Elastomer resin (TPE)	None
	O ring	Synthetic rubber (EPDM)	None
Charging jack	Contacts	Stainless steel	Gold plating
	Attaching holder section	LCP resin	None
External connection jack		Stainless steel	Tin plating
Facing sheet around keypad		PET resin	UV hard coating
Case pad		Polyethylene resin	None

Part		Material	Surface treatment
Hinge pad		Elastomer resin (TPEE)	None
1Seg antenna	Top section	PC+ABS resin	Coating
	Middle section	Stainless steel	None
	Bottom section	Stainless steel	None
Screw (battery install recess)		Stainless steel	None
Screw (hinge rotation section)		Stainless steel	None
Battery install recess face		PC board	Gold plating
Battery contacts	Battery contacts connector	PPS resin	None
	Battery contacts	Beryllium copper	Gold plating (base : Ni-Pd plating)
Battery pack	Battery pack	PC resin	None
	Contacts	Beryllium copper	Gold plating
Fingerprint sensor		Flexible PC board	None
docomo UIM tray		POM resin	None

# Handling precautions

## General

- **F-01C is waterproof/dustproof, however, do not allow water or dust to seep into FOMA terminal and do not allow accessories or optional devices to get wet or let dust attach.**
  - Battery pack, adapter, docomo UIM are not waterproof/dustproof. Do not use in a bathroom or other highly humid area or do not let rain attached. Or putting the terminal on your body, humidity of sweat may cause internal corrosion and malfunction. Note that malfunctions, which are determined to be caused by water as result of inspections, are not covered by the warranty. Since these conditions are outside the scope of the warranty, a repair, if at all possible, is charged.
- **Clean FOMA terminal with a dry soft cloth (such as a cloth for eyeglasses).**
  - Rubbing it roughly with a dry cloth may scratch the display.
  - Drops of water or dirt left on the display may cause stains.
  - If FOMA terminal is wiped with alcohol, paint thinner, benzine or detergent, the printing may disappear or color may fade.
- **Clean the jack occasionally with a dry cotton swab etc.**
  - If the jack is soiled, connection gets worse and it may cause power to be turned off or insufficient battery charge, so clean the jack with a dry cotton swab etc. Also, be careful never to damage the jack when cleaning it.
- **Do not place FOMA terminal near an air-conditioner outlet.**
  - The rapid change in temperature may cause condensation, causing internal corrosion and malfunction.
- **When using, be careful not to subject excessive force to FOMA terminal or the battery.**
  - If FOMA terminal is crammed into a brimming bag or placed in a pocket and sat on, display, internal PCBs or battery pack may be damaged or malfunction. And, if external devices are plugged into the external connection jack (earphone/microphone jack), the breakage of the connector or malfunction may result.
- **Do not rub or scrape the display with a metal piece etc.**
  - It may scratch the display, causing malfunction or damage.
- **Carefully read the separate instructions that come with the adapter.**

## FOMA terminal

- **Do not press the surface of the touch panel strongly or operate it with sharp objects such as a nail, a ballpoint pen and a pin.**
  - It may damage the touch panel.
- **Avoid extreme temperature.**
  - Use FOMA terminal where the temperature ranges between 5 and 40°C (limited to the temporary use in a bathroom etc. when temperature is above 36°C) and humidity ranges between 45 and 85%.
- **FOMA terminal may affect land-line phones, TVs or radios in use nearby, so use it as far as possible from these appliances.**
- **Maintain a separate record of the data you saved in your FOMA terminal.**
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- **Do not drop FOMA terminal or subject it to shocks.**
  - May cause malfunction or damage.
- **Do not plug external devices into the external connection jack (earphone/microphone jack) at a slant, or do not pull it forcibly while it is plugged.**
  - May cause malfunction or damage.
- **Do not close FOMA terminal with the strap etc. held inside.**
  - May cause malfunction or damage.
- **It is normal for FOMA terminal to become warm during use or charging. Continue to use it.**
- **Do not leave FOMA terminal with the camera in areas under strong direct sunlight.**
  - May cause discoloring or burn-in of materials.
- **Use FOMA terminal with the external connection jack cap and HDMI connection jack cap closed.**
  - Dust and/or water brought into FOMA terminal cause troubles.
- **Do not use FOMA terminal with the back cover removed.**
  - May cause removal of battery pack, malfunction or damage.
- **Do not put extreme thick sticker on the display or keypad face.**
  - May cause malfunction, damage or erroneous operation.

- **Do not put strong impact on the fingerprint sensor or scratch its surface.**
  - It may cause malfunction of fingerprint sensor and disable authentication operation.
- **Clean the fingerprint sensor with a dry soft cloth (such as a cloth for eyeglasses).**
  - If the fingerprint sensor is dirty or water is sit on its surface, the sensor cannot read fingerprints, and it may cause decrease authentication performance or malfunction.
- **While microSD card is being used, do not take the card out and do not turn off FOMA terminal.**
  - May cause data loss or malfunction.
- **Do not bring magnetic cards etc. close to FOMA terminal nor clip it by FOMA terminal.**
  - Magnetic data in cash cards, credit cards, telephone cards, floppy disks, etc. may be erased.
- **Do not bring magnetized objects close to FOMA terminal.**
  - Bringing strong magnetism close may cause a malfunction.

## Battery pack

- **The battery pack is a consumable part.**
  - Replace the battery pack if FOMA terminal has extremely short operation time on a full charge, though it may vary by operating conditions. Purchase a new battery pack of the specified type.
- **Charge the battery in an area within the proper ambient temperature range (5-35°C).**
- **The operation time provided by the battery pack varies by the operating environment and battery pack's deterioration.**
- **The battery pack may swell out as it comes to near the end of its lifetime depending on the usage conditions, but it is not a problem.**
- **Be careful especially about the following points when preserving the battery pack.**
  - Keeping under the state of the full charge (right after charging ends)
  - Keeping under the state of the empty charge (too exhausted to turn on FOMA terminal)

They may cause the battery pack performance to be degraded or its lifetime to be shortened.

A recommended battery level to keep the battery pack is the battery icon in 2 cells or in 40 % of remaining battery level as a guide.

## Adapter


- **Charge the battery in an area within the proper ambient temperature range (5-35°C).**
- **Do not charge the battery in the areas below.**
  - In areas of excessive humidity, dust or vibrations
  - Near land-line phones or TVs/radios
- **It is normal for the adapter to become hot while charging. Continue to use it.**
- **When using the DC adapter for charging, keep the vehicle engine running.**
  - The vehicle's battery could become flat.
- **When using an outlet with a mechanism preventing unplugging, follow the handling instructions for that outlet.**
- **Do not give strong shock. Do not deform the charging jack.**
  - Doing so may cause malfunction.

## docomo UIM

- **Do not use excessive force to install/remove docomo UIM.**
- **Note that DOCOMO assumes no responsibility for malfunctions occurring as the result of inserting and using docomo UIM with another IC card reader/writer.**
- **Always keep UIM ICs clean.**
- **Clean UIM with a soft, dry cloth (such as a cloth for eyeglasses).**
- **Maintain a separate record of the data you saved in docomo UIM.**
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- **To preserve the environment, bring the old docomo UIM to a sales outlet such as docomo Shop.**
- **Take care not to scratch, touch accidentally or short IC.**
  - May cause data loss or malfunction.
- **Do not drop docomo UIM or subject it to shocks.**
  - May cause malfunction.
- **Do not bend docomo UIM or place heavy objects on it.**
  - May cause malfunction.
- **Do not install docomo UIM into FOMA terminal with a label or sticker put on.**
  - May cause malfunction.

## Bluetooth® devices

- This FOMA terminal is equipped with the security features, that are compliant with Bluetooth standards for communication via Bluetooth. However, depending on the settings, there may not be enough security. Be aware of security risks when using Bluetooth.
- DOCOMO assumes no responsibility for any information which may be leaked during communication via Bluetooth.
- You can use headset, handsfree, audio, keyboard, dial-up connection, data transfer, serial port, image transfer or health devices with FOMA terminal. An audio/video remote control may be available with an audio device (only Bluetooth compatible devices).
- **Frequency bands**  
Frequency bands used by FOMA terminal Bluetooth function are as below.

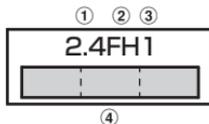

- ① 2.4 : Radio equipment that uses the 2400 MHz band.
- ② FH : The modulation is the FH-SS method.
- ③ 1 : The expected interference distance is 10 m or shorter.
- ④  : All bandwidths between 2400 MHz and 2483.5 MHz are used, and the bandwidth used by mobile object identification devices cannot be avoided.

### Cautions on using Bluetooth devices

In the bandwidth used by this terminal, in addition to home electric appliances such as a microwave oven and industrial/scientific/medical devices, in-plant radio stations used to identify mobile objects used in production lines of a factory that require a license, specified low power radio stations, or amateur radio stations that do not require a license (hereafter "other radio stations") can be in operation.

1. Before using this terminal, check whether other radio stations are in operation in your neighborhood.

2. If radio wave interference occurs between the terminal and "other radio stations", use the terminal in a different location or "Turn the power OFF" to avoid the radio wave interference.
3. For details, contact "General Inquiries" on the last page of this manual.

## Wireless LAN (WLAN)


### Wireless LAN

Do not use Wireless LAN in a place where magnetized by electric products, AV, OA equipment, etc. or where electromagnetic wave is generated.

- If magnetism or electrostatic noise affects FOMA terminal, noise may be increased or communication may not be available (especially when using microwave oven, it may affect the terminal).
- Using near TV or radio may cause poor reception or TV screen may be blurred.
- When multiple wireless LAN access points exist near FOMA terminal and they use the same channel, search may not be performed correctly.

### Frequency bands

Frequency bands for WLAN devices are written on battery pack insert section of phone. Label description are as follows.

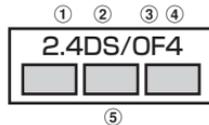

- ① 2.4 : Radio equipment that uses the 2400 MHz band.
- ② DS : The modulation is the DS-SS method.
- ③ OF : The modulation is the OFDM method.
- ④ 4 : The expected interference distance is 40 m or shorter.
- ⑤  : All bandwidths between 2400 MHz and 2483.5 MHz are used, and the bandwidth used by mobile object identification devices can be avoided.

Available channel varies by countries. To use WLAN overseas, check the conditions such as available frequency, regulation, etc. for the country. To use in airplane, confirm with airline company in advance.

### Cautions on using 2.4GHz devices

In the bandwidth used by WLAN devices, in addition to home electric appliances such as a microwave oven and industrial/scientific/medical devices, in-plant radio stations for identification of mobile objects used in production lines of a factory (a license is required), specified low power radio stations (a license is not required), or amateur radio stations (a license is required) can be in operation.

1. Before using this device, confirm that in-plant radio stations for identification of mobile objects, specified low power radio stations or amateur radio stations are not in operation in your neighborhood.
2. If this device generates harmful radio wave interference against in-plant radio stations for identification of mobile objects, change the using frequency promptly or stop using wireless LAN function, and contact "General Inquiries" on the last page of this manual, then consult about treatment for prevention of the interference (for example, installation of partitions etc.).
3. If this device generates harmful radio wave interference against in-plant radio stations for identification of mobile objects or amateur radio stations, or if any trouble, contact "General Inquiries" on the last page of this manual.

### FeliCa reader/writer

- FeliCa reader/writer function of FOMA terminal uses weak waves requiring no licenses for radio stations.
- It uses 13.56 MHz frequency band. When using other reader/writers in your surroundings, keep FOMA terminal away sufficiently from them. Before using the FeliCa reader/writer, confirm that there are no radio stations using the same frequency band nearby.

### FM transmitter

- FM transmitter of FOMA terminal uses weak waves requiring no licenses for radio stations.
- It uses 77.4 - 85.0MHz frequency band. To use it, set frequency not to common to FM radio station of the area you use to avoid affecting FM radio users in neighborhood.

### CAUTION

- **Do not use a remodeled FOMA terminal. Using a remodeled terminal violates the Radio Law.**

FOMA terminal is certified according to technical standard conformance of specified wireless equipment based on the Radio Law, and as a proof of it, the "Technical Compliance Mark" is depicted on the engraved sticker of FOMA terminal.

If you remodel FOMA terminal by removing its screws, your certification of technical standard conformance becomes invalid.

Do not use FOMA terminal with its certification of technical standard conformance invalid as it violates the Radio Law.

- **Be careful when you use FOMA terminal while driving a car etc.**  
Using a mobile phone while driving is subject to penal regulations. However, absolutely necessary cases such as rescue of a sick person or maintaining public's safety are exempted.
- **Use the Bluetooth function only in Japan.**  
The Bluetooth function of the FOMA terminal is compliant with wireless standards and is authorized for use only in Japan.  
If you use this function overseas, you may be punished.
- **Use the Wireless LAN (WLAN) function only in Japan.**  
The Wireless LAN function of FOMA terminal is compliant with wireless standards and is authorized for use only in Japan.  
If you use this function overseas, you may be punished.
- **Use FeliCa reader/writer function only in Japan.**  
FeliCa reader/writer function of FOMA terminal conforms to Japanese radio standards.  
If you use this function overseas, you may be punished.
- **Use FM transmitter only in Japan.**  
FM transmitter of FOMA terminal is compliant with wireless standards and is authorized for use only in Japan.  
If you use this function overseas, you may be punished.

# Waterproofness/Dustproofness

F-01C provides waterproofness of IPX8\*<sup>3</sup> which exceeds IPX5 (former JIS protection code 5)\*<sup>1</sup>, IPX7 (former JIS protection code 7)\*<sup>2</sup> and dustproofness of IP5X (JIS protection code 5)\*<sup>4</sup> with firmly closing the external connection jack cap and HDMI connection jack cap and installing the back cover in a locked state.

- \*1 IPX5 means that a phone keeps functioning after applying a jet flow of 12.5 L/min. from every direction from a distance of approximately 3 m for at least 3 minutes using water nozzle in 6.3 mm inner diameter.
- \*2 IPX7 means that a phone keeps functioning after F-01C is slowly submerged to depth of 1 m in static tap water at room temperature, left there for 30 minutes and then taken out.
- \*3 IPX8 means that it provides waterproofness of which exceeds of IPX7 standard.
- \*4 IP5X means a protection degree that a phone keeps functioning and safety after it is placed in a device with dust in diameter 75  $\mu$  or less for 8 hours, agitated and then taken out.

- ● ●  
F-01C provides the following waterproof performances of IPX8.
  - F-01C keeps functioning after it is slowly submerged to depth of 1.5 m in static tap water at room temperature, left there for approximately 30 minutes and then taken out.
  - The mobile phone keeps shooting still images or moving pictures in approximately 30 minutes in static tap water at room temperature.

## ❖ What you can do with waterproofness/dustproofness of F-01C

- You can talk or watch 1Seg programs without using an umbrella in the rain (for rainfall of 20 mm or less per hour).
  - When your hands or FOMA terminal are wet, avoid installing/removing the back cover or opening/closing the external connection jack cap.

- You can also shoot still images and moving pictures in the pool depth of 1.5 m.
  - Do not perform other operations underwater than shooting still images and moving pictures.
  - If you put the terminal in water of swimming pool, be sure to have it within 30 minutes.
  - If FOMA terminal gets wet with water from the swimming pool, wash it in specified procedure ( $\Rightarrow$ P20).
- You can use FOMA terminal in a bathroom.
  - Do not put the terminal in the bathtub. Do not use the terminal in hot water. May cause malfunction.
  - Never put FOMA terminal in hot spring water or water containing soap, detergent or bath powder.


## To ensure waterproofness/dustproofness

To avoid water/dust ingress, be sure to observe the following points.

- Do not throw any liquid other than room-temperature tap water on FOMA terminal, or soak it in such liquid.
- Open/close the external connection jack cap and HDMI connection jack cap as described below.


### <Opening the external connection jack cap>

Pull the cap up with your finger by the groove.

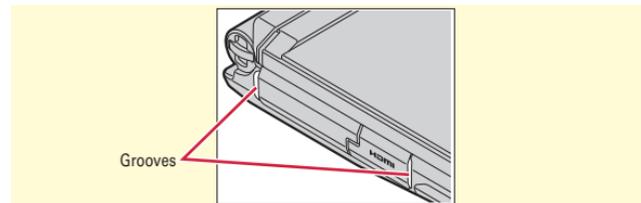

### <Closing the external connection jack cap/HDMI connection jack cap>


Close the external connection jack cap/HDMI connection jack cap not giving any gap with FOMA terminal by firmly pressing in the direction of arrow mark. Make sure that the cap is completely closed without slack.

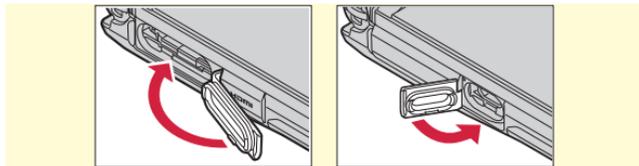

- Install the back cover as described below.

### <Installing the back cover>

Align 8 tabs of the back cover with concaves of FOMA terminal. While pressing the back cover in the direction of ❶ so that there is no gap between FOMA terminal and back cover, slide the back cover in the direction of ❷ to install, then slide the back cover lever in the direction of ❸ to lock.

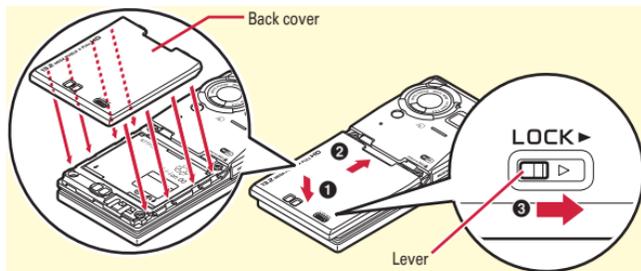

- \* Make sure that the back cover is completely closed without slack. Slide the back cover in the direction of the arrow shown on the lever, and then make sure the cover is securely locked before using.

- Securely lock the back cover and firmly close the external connection jack cap/HDMI connection jack cap. Even a fine obstacle (one hair, one grain of sand, tiny fiber, etc.) put between contact surfaces may allow water to enter.
- Do not poke the microphone, earpiece or speaker with a swab or sharp object.
- Do not let FOMA terminal fall. It may become scratched causing the waterproof/dustproof performance to degrade.
- The external connection jack cap, HDMI connection jack cap and the rubber packing of the rear side of the back cover play an important role for keeping waterproof performance. Do not remove or scratch it. Also, prevent dust from adhering to it.

- To keep FOMA terminal waterproofness/dustproofness, replacement of parts is required every 2 years regardless of whether FOMA terminal appears normal or abnormal. DOCOMO replaces the parts as a chargeable service. Bring FOMA terminal to a sales outlet such as a DOCOMO-specified repair office.

## Important precautions

Do not perform actions shown in the illustrations below.

<Example>



Using Soap/Detergent/  
Bath power



Washing with  
brush/sponge



Machine-washing



Applying strong  
water flow



Soaking in  
ocean water



Using in hot spring

**Observe the following precautions to use FOMA terminal properly.**


- Accessories and optional devices are not waterproof/dustproof. When watching 1Seg etc. with FOMA terminal installed in the included desktop holder, do not use it in a bathroom, shower room, kitchen or lavatory even if it is not connected to the AC adapter.
- Do not apply water flow stronger than allowed (⇒P18) (e.g., such water flow that gives you pain when applied to your skin directly from a faucet or shower). F-01C provides IPX5 waterproof performances. However, it causes malfunction.
- If FOMA terminal gets wet with salt water, sea water, refreshing beverage or mud or soil adhered, wash it immediately. If they dry out, it is hard to remove the dirt and it may cause damage or malfunction.
- Do not put FOMA terminal in hot water, use it in a sauna or apply hot airflow (from a hair dryer etc.) to it.
- Do not move in water or slam the terminal against the surface of water with FOMA terminal opened.
- If you put the terminal in tap water or in water of swimming pool, be sure to have it within 30 minutes.
- When you use the terminal in swimming pool, obey rules of the facility.
- FOMA terminal does not float on water.
- Do not leave water on FOMA terminal. May short-circuit the power jacks, or in a cold region, water may freeze causing malfunction.
- Do not leave water on the microphone, earpiece or speaker. Such water may interfere with talking.
- If the back cover is damaged, replace it. Water may enter inside from a damaged section causing troubles such as electric shocks or corrosion of the battery.

- If FOMA terminal gets wet with water or other liquids with the external connection jack cap/HDMI connection jack cap or the back cover open, the liquid may get inside the terminal causing electric shocks or malfunction. Stop using FOMA terminal, turn the power OFF, remove the battery pack and contact a DOCOMO-specified repair office.
- If the external connection jack cap or HDMI connection jack cap, or the rubber gasket on the rear side of the back cover is damaged or deformed, replace it at DOCOMO-specified repair office.

● ● ●  
 DOCOMO does not guarantee actual operations under all states. Malfunctions deemed to be caused by inappropriate operation by the customer are not covered by the warranty.

**Washing FOMA terminal**

**With pressing and holding the external connection jack cap and HDMI connection jack cap not to open, wash the terminal in tap water without rubbing hard.**

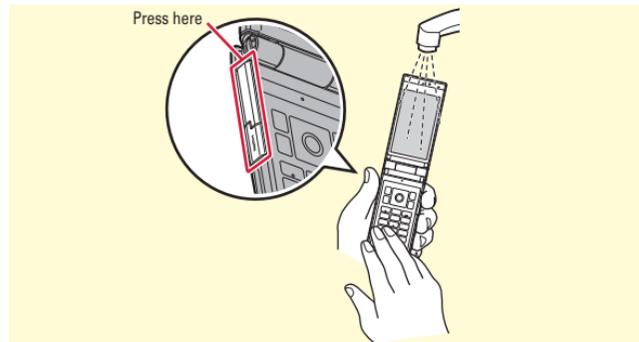


- Do not apply water flow stronger than allowed ( $\Rightarrow$ P18) (e.g., such water flow that gives you pain when applied to your skin directly from a faucet or shower).
- In locked state with the back cover attached, with pressing and holding the external connection jack cap and HDMI connection jack cap not to open, wash the terminal in tap water in room temperature without rubbing hard.
- Do not use brush, sponge, soap, detergent, etc.
- If mud or soil is adhered to the terminal, do not open, close or rotate the terminal. Eliminate the dirt first by shaking several times in tap water of wash-basin and then wash the terminal with running water.
- After washing, wipe the surface with dry cloth well, drain water by the following procedure and let the terminal dry naturally.


## Draining water from FOMA terminal

When FOMA terminal is wet, water may flow out after wiping it off; drain the water in the following steps.


- ① Wipe moisture on FOMA terminal surface off with dry, clean cloth etc.

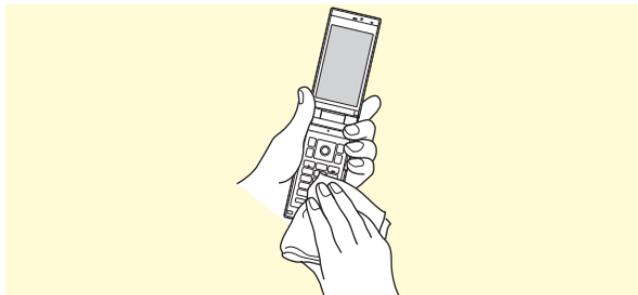

- ② Shake FOMA terminal approximately 20 times, firmly holding its hinge section, until there is no more water splattering.

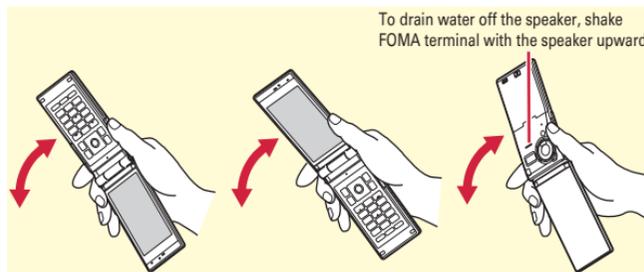

- ③ To drain water in the microphone, earpiece, speaker, gap between keys, hinge section, charging jack, etc., press FOMA terminal into dry, clean cloth etc. lightly and wipe it off.

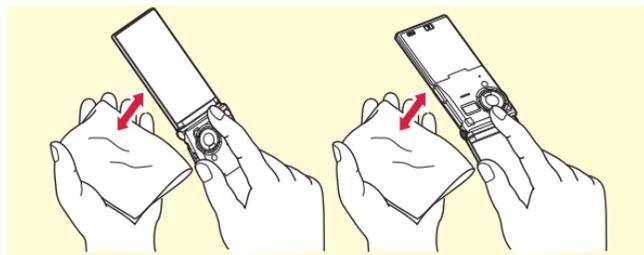

- ④ Wipe off water drained from FOMA terminal with dry, clean cloth etc., and dry naturally.
  - Water, if any, remaining in FOMA terminal may ooze up after wiping off.
  - Do not wipe off water remaining in gaps directly with a cotton swab etc.

## Charging

### Check the following before and after charging.


- Check if FOMA terminal is not wet. Never try to charge the battery pack when FOMA terminal is wet.
- Accessories and optional devices are not waterproof/dustproof.
- When charging the battery when or after FOMA terminal is wet, adequately drain it and wipe off water with a dry, clean cloth etc., before connecting the accessory desktop holder or opening the external connection jack cap.
- When the external connection jack cap is opened for charging, close the cap firmly after charging. It is recommended to use the desktop holder for charging to prevent water from seeping inside from the external connection jack.
- Do not use the AC adapter or desktop holder in a bathroom, shower room, kitchen, lavatory or other highly humid area. May cause fire or electric shock.
- Do not touch the AC adapter or desktop holder with wet hands. May cause electric shock.

## Attaching docomo UIM/battery pack

After turning power OFF, close FOMA terminal and hold it in your hand so that you can properly attach UIM/battery pack.


### ❖ Removing back cover

Slide the lever in the direction ① to unlock, hold the FOMA terminal firmly with your hand not to slide, and then slide the back cover in the direction ② by 2 mm with a thumb of the other hand to remove it.

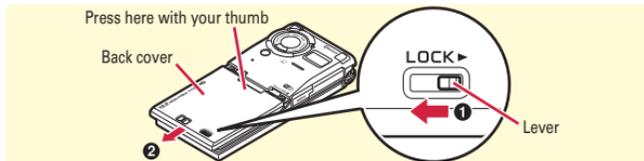

### ❖ Attaching docomo UIM

Pull the tab with your nail and pull out the tray until it clicks (①). Hold docomo UIM with the IC side down, align the corner cut with the tray (②) and push into the tray until it stops (③).

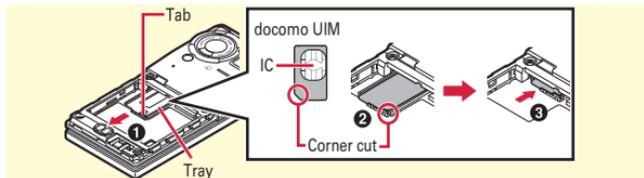


#### Point

- docomo UIM (blue) is not available for this FOMA terminal. If you have the docomo UIM (blue), bring it to a docomo Shop to replace.

### ❖ Installing battery pack


With the label side of the battery pack upward, align convex parts of the battery pack with the concave parts of the FOMA terminal and

slide the battery pack in the direction ①, press the battery pack in the direction ② to set it in.

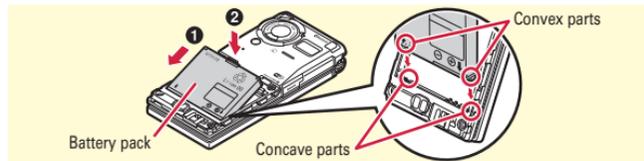

### ❖ Installing back cover

Place the 8 tabs of back cover to the notches, press back cover in the direction of ① to avoid forming any clearance between FOMA terminal and back cover, then slide it in the direction of ② to install it. Finally, slide the lever in the direction of ③ to lock.

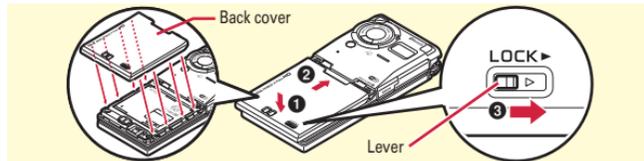

#### Point


- Firmly attach the back cover and lock it with the lever to avoid water or dust ingress.
- The rubber packing of the rear side of the back cover play an important role for keeping waterproofness/dustproofness. Do not remove or scratch it. Also, prevent dust from adhering to it.

## Before Using Charging

The battery pack does not have a full charge at time of purchase. Use AC adapter for FOMA terminal to charge the battery before using FOMA terminal.

### Using desktop holder and AC adapter in combination for charging


- 1 Insert the connector of AC adapter horizontally to the accessory desktop holder, with the arrow mark side upward
- 2 Unfold the AC adapters power plug and insert it into a 100V AC outlet
- 3 With FOMA terminal closed, insert it into the desktop holder  
\* Check that the indicator light turns on.

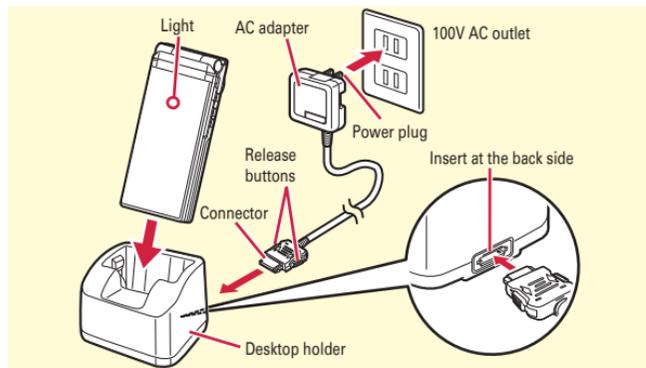

- 4 After charging is completed, remove FOMA terminal from the desktop holder

### Charging using AC adapter

- 1 Open jack cap (1) of FOMA terminal, hold the connector horizontally with the arrow side upward and insert it to the jack (2)
- 2 Unfold the power plug and insert it into a 100V AC outlet  
\* Check that the indicator light turns on.

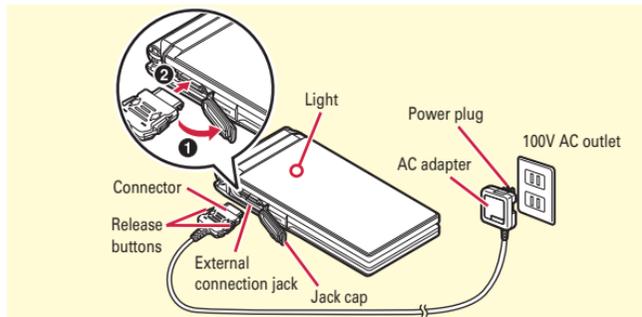

- 3 When charging is over, pull out the power plug from the outlet, and pull out from FOMA terminal horizontally while pressing the release buttons on both sides of the connector

#### ❖ Operations for charging

When charging starts, a charge start alert sounds. While charging, the light turns on and the battery icon on the display blinks. When charging is over, a charge completion alert sounds.

## Turning power ON - Configuring default setting

Initial setting is an operation when FOMA terminal is turned ON for the first time.

1  (2 sec. or more)

The screen shown to the right appears.

2 **Set required items**  **[Complete]**

Always set Change security code and Request permit/deny. If you exit without setting, Initial setting screen reappears when the power is turned ON the next time.



3 **On a confirmation screen of software update function,**



The stand-by display appears.

**Point**

- If no operation is performed, the display light is automatically turned off according to the settings in Light time-out or eco mode setting. The display light turns on again if there is any operation or incoming call.
- The battery usage state is automatically recorded while using the FOMA terminal. The record is used only for repair diagnosis.

**Turning power off :**  (2 sec. or more)

**Changing the initial setting :** **MENU**  **8** **9** **2**

**Changing screen display to English :** **MENU**  **8** **4** **4**  Select "English"

## Checking Profile

Check a model name or own phone number.

For details of checking/changing a mail address, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

1 **MENU**  **0** **Profile**

The screen shown to the right appears.



**Point**

**Editing the profile :** On User information screen,   **Authenticate**  **Set required items** 

**Checking a phone number during a call :** **MULTI**  **0**

## Viewing display

 
The current state can be checked by the icon appearing on the screen. Major icons are as follows.

### ■ Top of the display

Battery level (Battery icon)



Signal strength (Antenna icon)



**SELF** : Self mode ON

: In data transfer mode

: Connecting to i-mode

: Connecting Wi-Fi

: Wi-Fi mode ON and out of service area

: Infrared communication in operation

: Bluetooth ON

: The total calls cost exceeds the limit

: Communication using handsfree-compatible device in progress

: Handsfree ON

: Femtocell available

: eco mode ON

: Touch operation OFF

: Positioning with GPS

: Location request setting

: Unread Area Mail exists

: Unread i-mode mail exists

: Arrival i-concier information exists

: Unreceived i-mode mail exists in i-mode Center

: A phonebook entry or schedule has secret attribute

: Displaying SSL/TLS page etc.

: In-area auto-send mail exists

: Music&Video Channel program obtaining reservation exists

: High-pitched alarm is "ON"

: Kid-safe mode ON

: During i-appli operation

: i-appli call exists

: Lock on close or Display off lock setting set

: Alarm is set

: 1Seg watching/recording reserved or Schedule alarm ON

: Inside OFFICEED area

: Manner mode ON

: Call alert volume OFF

: Vibration mode for voice call ON

: In Public mode (Drive mode)

: Record message setting ON

: Keypad dial lock ON

: GPS Request failed

: Personal data lock ON

: Music&Video Channel program obtaining failure

: Loading docomo UIM

: IC card lock ON

: Available multi-cursor key

: Recording 1Seg in the FOMA terminal

: i-appli Auto start failed

: microSD card installed during Communication mode

: Connected to external device using USB cable

: Pedometer/ACT monitor is set

: Software update rewrite notice

: Auto-update of latest pattern definition failure

### ■ Bottom of the display



Arrival information icons (Starting from the left, missed call, recorded message, voice mail service, unread message, unread ToruCa, i-appli call)

# Menu operation

On the stand-by display, press **[MENU]** and then perform the functions from the menu. You can select a menu item with shortcut operations, which use the keypad, **[↔]** and **[≡]**, or with multi-cursor operation, which uses the multi-cursor key to move the cursor.

<Example> Selecting "Calculator"

## Shortcut operations

1 **[MENU]** ▶ **[6]** ▶ **[2]**

## Multi-cursor key operations

1 **[MENU]** ▶ Move the cursor to "6 Tool" ▶ **[Select]** ▶  
Move the cursor to "2 Calculator" ▶ **[OK]**


### Point

- Even when a function is running, you can perform the same operation if "Submenu" is displayed on the guide area.
- To return to the previous screen, press **[CLR]**. To return to the stand-by display, press **[←]**.

## Guide area and key operation

Operations that can be performed by pressing **[MENU]**, **[✉]**, **[●]**, **[📷]** and **[📄]** are displayed in the guide area.

↻ in the guide area corresponds to **[↔]** of multicursor key.

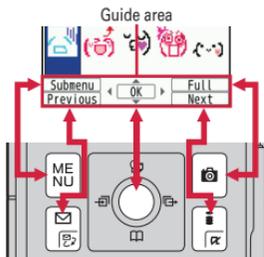

## Stand-by launcher and focus mode

Stand-by launcher is always displayed on the stand-by display. You can activate menu display, call, mail or Quick search by selecting the icon. You can extend Stand-by launcher by moving the cursor, touching the stand-by display, sliding Stand-by launcher etc, to use the shortcut icons.



<Select Status display area and display Status menu>



<Stand-by screen with Info/calendar layout and Arrival information icons>



<Displaying all of Stand-by launcher>

On the stand-by display with arrival information or i-concier information displayed, or with Info/calendar layout set, press **[●]** to change the display to the focus mode that allows you to quickly display the corresponding information.

### Point

- In focus mode, menu cannot be displayed even if pressing **[MENU]**.

# Using touch panel

Operate by touching the display directly.

## Notes for using the touch panel


- Do not put excessive force when opening, closing or rotating the FOMA terminal. Doing so may cause malfunction or damage of the keys or the display.
- The touch panel is designed for being touched lightly with fingers. Do not push it forcibly with a finger or press it with sharp objects such as nail, ballpoint pen, pin, etc.
- Touching the touch panel may not work in the following cases. Note that it may cause malfunction.
  - Operation with gloved hands
  - Operation with tip of fingernail
  - Operation with a foreign object on the display
  - Operation with protective sheet or seal on the display
  - Operation with wet hand
  - Operation under water
- Do not press forcibly the frame part around the display. The touch panel may malfunction.

### Point


- Although the effective area of the touch panel is whole of the display, it varies by the operation or function.

## Basic touch operation

<b>Touch</b>	Touch the display lightly once and release the finger. The operation becomes effective when you release your finger from the display. This operation is mainly for selecting menus, items, etc.
<b>Touch (1 sec. or more)</b>	Touch the display for 1 sec. or more and release the finger. The operation becomes effective when you release your finger from the display.
<b>Slide</b>	Keep touching the display, move your finger up, down, right or left. This operation is used for scrolling screen, entering hand-writing characters, etc.
<b>Slide quickly</b>	Touch the display lightly and flick your finger up, down, right or left. This operation is for switching pages or images, or moving to a different chapter or tune, etc.
<b>Pinch</b>	While touching the display with the two fingers, widen and narrow the spacing between the two fingers. This operation is mainly for zooming in/out the display.

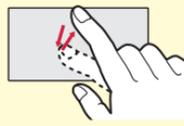

Example: Touch

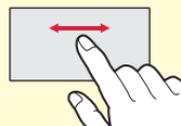

Example: Slide



Example: Pinch



### Information

- You can disable touch operation. [🔒タッチON/OFF設定 (Touch ON/OFF setting)]

## Caller ID notification (At subscription : Notify)

You can notify your phone number (caller ID) to the other party's terminal when making a voice call.

1 **MENU** ▶ 7 **TEL function** ▶ 4 **Dial/Receive call setting** ▶  
3 **Caller ID notification** ▶ 2 **Setting** ▶ 1 **ON**

Select "2 OFF" if you do not want to notify.

### Point

- Caller ID is your important personal information. Carefully consider whether you want to include caller ID information when making a call.
- If you hear an announcement of requesting caller ID when making a call, set Caller ID notification or add prefix "186" to the phone number to call again.

## Specific absorption rate (SAR) of mobile phone

This model phone FOMA F-01C meets the MIC's\*<sup>1</sup> technical regulation governing exposure to radio waves.

The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)<sup>\*2</sup> averaged over 10 grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP.<sup>\*3</sup>

All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this FOMA F-01C is 0.465 W/kg. It was taken by the Telecom Engineering Center (TELEC). The test for SAR was conducted according to the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

For further information about SAR, please see the websites below.

- ● ●
- World Health Organization (WHO) :  
<http://www.who.int/peh-emf/en/>
- ICNIRP :  
<http://www.icnirp.de/>
- MIC :  
<http://www.tele.soumu.go.jp/e/sys/ele/index.htm>
- TELEC :  
[http://www.telec.or.jp/ENG/Index\\_e.htm](http://www.telec.or.jp/ENG/Index_e.htm)
- NTT DOCOMO :  
<http://www.nttdocomo.co.jp/english/product/sar/>
- FUJITSU LIMITED :  
<http://www.fmworld.net/product/phone/sar/>

- \*1 Ministry of Internal Affairs and Communications.
- \*2 The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.
- \*3 International Commission on Non-Ionizing Radiation Protection.

### Declaration of Conformity

- ● ●
- The product "F-01C" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on <http://www.fmworld.net/product/phone/doc/>.

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR<sup>+</sup> limits<sup>\*\*</sup> for exposure to radio-frequency (RF) energy, which SAR<sup>+</sup> value, when tested for compliance against the standard was 0.517W/Kg. While there may be differences between the SAR<sup>+</sup> levels of various phones and at various positions, they all meet<sup>\*\*\*</sup> the EU requirements for RF exposure.

- \* The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.
- \*\* The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/Kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- \*\*\* Tests for SAR have been conducted using standard operation positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

## Federal Communications Commission (FCC) Notice

- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions :
  - ① this device may not cause harmful interference, and
  - ② this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications made in or to the radio phone, not expressly approved by the manufacturer, will void the user's authority to operate the equipment.

## FCC RF Exposure Information

This model phone meets the U.S. Government's requirements for exposure to radio waves.

This model phone contains a radio transmitter and receiver. This model phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy as set by the FCC of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions as accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output level of the phone.

Before a phone model is available for sale to the public, it must be tested and certified to prove to the FCC that it does not exceed the limit established by the U.S. government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC for each model. The highest SAR value for this model phone as reported to the FCC, when tested for use at the ear, is 0.492W/kg, and when worn on the body, is 0.453W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. government requirements. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Equipment Authorization Search section at <http://www.fcc.gov/oet/ea/fccid/> (please search on FCC ID VQK-F01C).

For body worn operation, this phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and which positions the handset at a minimum distance of 1.5 cm from the body.

\* In the United States, the SAR limit for wireless mobile phones used by the general public is 1.6 Watts/kg (W/kg), averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Important Safety Information

### **AIRCRAFT**

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers flight mode or similar feature consult airline staff as to whether it can be used on board.

### **DRIVING**

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

### **HOSPITALS**

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

### **PETROL STATIONS**

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

### **INTERFERENCE**

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pace maker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and does not carry it in a breast pocket.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

### **For other Medical Devices :**

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

# Export Administration Regulations/Intellectual Property Right

## Export Administration Regulations

This product and its accessories may be under coverage of the Export Administration Regulations of Japan ("Foreign Exchange and Foreign Trade Control Laws" and the related laws and regulations). When exporting this product and its accessories, take necessary procedures on your responsibility and expense. For details, contact Ministry of Economy, Trade and Industry of Japan.

## Intellectual Property Right

### Copyrights and portrait rights

Except for the case protected by copyright laws such as personal use, use of FOMA terminal to reproduce, alter, or publicly transmit recorded pictures or sounds, or copyrighted text, images, music or software downloaded from websites without the copyright holder's authorization is prohibited. Note that taking photos or recordings at some demonstrations, performances or exhibitions may be prohibited even when only for personal use. Avoid taking pictures of others with FOMA terminal without their consent or disclosing recorded pictures of others without their consent to general public through Internet websites etc., because they may infringe on portrait rights.

### Trademarks

Company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.

- "FOMA", "i-mode", "i-appli", "i-motion", "Deco-mail", "Chara-den", "ToruCa", "mopera", "WORLD CALL", "DCMX", "iD", "WORLD WING", "OFFICEED", "Zin1", "docomo PRIME series", "docomo web mail" and logos of "FOMA", "i-mode", "i-appli", "Music&Video Channel", "DCMX", "iD", "iC" are trademarks or registered trademarks of NTT DOCOMO.
- Free Dial logo mark is a registered trademark of NTT Communications Corporation.

- "Catch Phone (Call Waiting Service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates. 
- Contains Adobe® Flash® Lite® and Adobe Reader® Mobile technology by Adobe Systems Incorporated. Adobe Flash Lite Copyright© 2003-2010 Adobe Systems Incorporated. All rights reserved. Adobe Reader Mobile Copyright© 1993-2010 Adobe Systems Incorporated. All rights reserved. Adobe, Adobe Reader, Flash and Flash Lite are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.  Powered by ADOBE® FLASH™
- This product contains NetFront Browser, NetFront Document Viewer and NetFront Sync.   Client of ACCESS CO., LTD. ACCESS, the ACCESS logo and NetFront are registered trademarks or trademarks of ACCESS CO., LTD. in the United States, Japan and/or other countries. Copyright© 2010 ACCESS CO., LTD. All rights reserved.
- Powered by JBlend™ Copyright 2002-2009 Aplix Corporation. All rights reserved. JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries. 
-  is a registered trademark of FeliCa Networks, Inc.
- FeliCa is a contactless IC card technology developed by Sony Corporation. FeliCa is a registered trademark of Sony Corporation.
- QR code is a registered trademark of Denso Wave Inc.
- microSDHC Logo is a trademark of SD-3C, LLC.
- "Multitask" is a registered trademark of NEC Corporation. 

- QuickTime is a registered trademark of Apple Inc., in the US and other countries.
- Microsoft<sup>®</sup>, Windows<sup>®</sup>, Windows Vista<sup>®</sup>, Windows Media<sup>®</sup> and PowerPoint<sup>®</sup> are trademarks or registered trademarks of "Microsoft Corporation" in the US and other countries.
- Microsoft Excel and Microsoft Word are product names of Microsoft Corporation in the U.S.A. In this manual, they may be described as Excel and Word.
- The abbreviations of operating systems (Japanese versions) below are used in this manual.
  - Windows 7 stands for Microsoft<sup>®</sup> Windows<sup>®</sup> 7 (Starter, Home Basic, Home Premium, Professional, Enterprise and Ultimate).
  - Windows Vista stands for Windows Vista<sup>®</sup> (Home Basic, Home Premium, Business, Enterprise and Ultimate).
  - Windows XP indicates the Microsoft<sup>®</sup> Windows<sup>®</sup> XP Professional operating system or Microsoft<sup>®</sup> Windows<sup>®</sup> XP Home Edition operating system.
- Google and Google Map for Mobile are trademarks of Google Inc.
- Bluetooth<sup>®</sup> and its logo are registered trademarks of Bluetooth SIG, Inc., and NTT DOCOMO uses them under license. Other trademarks and names inhere to their respective owners.
- "CROSS YOU" is a trademark of Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- iWnn of OMRON SOFTWARE Co., Ltd. is used for conversion methods for Japanese language.  
iWnn© OMRON SOFTWARE Co., Ltd. 2008-2010 All Rights Reserved.
- "AXIS Font" is a trademark of AXIS Inc., and the "AXIS" font is a font developed by Type Project Inc.
- This product contains software licensed by Symbian Foundation Limited. Symbian is a registered trademark of Symbian Foundation Limited.
- "Privacy mode" is a registered trademark of FUJITSU LIMITED.
- "Uni-Type" is a universal designed font jointly-developed by LIM Corp., Ltd. and Faculty of Engineering, Chiba University. Uni-Type is a registered trademark of LIM Corp., Ltd.
- Wi-Fi<sup>®</sup>, Wi-Fi Alliance<sup>®</sup>, and logos of Wi-Fi and Wi-Fi CERTIFIED are registered trademarks of Wi-Fi Alliance.

- Wi-Fi CERTIFIED<sup>™</sup>, WMM<sup>™</sup>, WPA<sup>™</sup>, WPA2<sup>™</sup> and Wi-Fi Protected Setup<sup>™</sup> are trademarks of Wi-Fi Alliance.
- AOSS<sup>™</sup> is a trademark of BUFFALO INC.
- IrSimple<sup>™</sup>, IrSS<sup>™</sup> and IrSimpleShot<sup>™</sup> are trademarks of Infrared Data Association<sup>®</sup>.
- Blu-ray Disc and its logo are trademarks.
- HDMI and HDMI logo are trademarks and registered trademarks of HDMI Licensing, LLC.
- Other company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.



## Others

- This product contains a module developed by the Independent JPEG Group.
- FeliCa is a contactless IC card technology developed by Sony Corporation.
- This product is equipped with the technologies of GestureTek, Inc. Copyright © 2006-2010, GestureTek, Inc. All Rights Reserved.
- OMRON Corporation's Mobile OmCR is used for a character recognition engine.
- This product contains software licensed based on Apache License V2.0. For details of the license, refer to "Apache\_License\_Version\_2.0.txt" in "GPL・LGPL等について (About GPL/LGPL)" in attached CD-ROM.
- This product is licensed based on MPEG-4 Visual Patent Portfolio License. The use of MPEG-4 Video Codec function is allowed for personal and nonprofit use only in the cases below.
  - Recording moving pictures and i-motion that conform to MPEG-4 Visual Standard (hereinafter referred to as MPEG-4 Video)
  - Playing MPEG-4 Videos recorded personally by consumers not engaged in profit activities
  - Playing MPEG-4 Video supplied from the provider licensed from MPEG-LA For further utilizing such as promotion, in-house use or profit-making business, please contact MPEG LA, LLC in U.S.
- Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When downloading licenses for protected content, you agree that Microsoft may include a "Revocation List" with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you cannot access a content that requires the upgrade.
- Attached 電子辞書データDVD F02 (Electronic dictionary data DVD F02) contains following dictionary data (22 dictionaries + 6 searches by category).  
<岩波書店 (Iwanami Shoten, Publishers)>  
広辞苑 第六版 DVD-ROM版+6分野別検索 (慣用語・漢字・人名・地名・作品名・季語) (新村出編) (KOJIEN 6th edition, DVD-ROM version + 6-category search)

<研究社 (KENKYUSYA)>

リーダーズ英和辞典 第2版 (松田徳一郎編) (Reader's English-Japanese dictionary 2nd edition)

新和英中辞典 第5版 (Martin Collick, David P. Dutcher, 田辺宗一、金子稔編) (New Japanese-English-Chinese dictionary 5th edition)

<自由国民社 (Jiyukokuminsya)>

現代用語の基礎知識2010年版 (自由国民社編) (Basic knowledge of modern term for 2010)

<大修館書店 (Daisyukan Shoten)>

新漢語林MX (鎌田正、米山寅太郎著) (New Chinese origin words MX)

みんなで国語辞典② あふれる新語 (北原保雄編著 / 「もっと明鏡」委員会編集) (Minna de Kokugo jiten ② Afureru shingo)

KY式日本語 (北原保雄編著 / 「もっと明鏡」委員会編集) (KY style Japanese) 問題な日本語 (北原保雄編 (北原保雄、小林賢次、砂川有里子、鳥飼浩二、矢澤真人執筆)) (Problematic Japanese)

築地魚河岸ことばの話 (生田與克、富岡一成著) (TSUKIJI fish market word stories)

<三省堂 (SANSEIDO)>

デイリー日仏英・仏日英辞典 (村松定史監修 / 三省堂編修所編) (Daily Japanese-French-English/French-Japanese-English dictionary)

デイリー日独英・独日英辞典 (渡辺学監修 / 三省堂編修所編) (Daily Japanese-German-English/German-Japanese-English dictionary)

デイリー日中英・中日英辞典 (池田巧監修 / 三省堂編修所編) (Daily Japanese-Chinese-English/Chinese-Japanese-English dictionary)

デイリー日西英・西日英辞典 (上田博人、アントニオ・ルイス・ティニコ監修 / 三省堂編修所編) (Daily Japanese-Spanish-English/Spanish-Japanese-English dictionary)

デイリー日伊英・伊日英辞典 (藤村昌昭監修 / 三省堂編修所編) (Daily Japanese-Italian-English/Italian-Japanese-English dictionary)

デイリー日仏英3か国語会話辞典 (村松定史監修 / 三省堂編修所編) (Daily Japanese-French-English conversation dictionary)

デイリー日独英3か国語会話辞典 (渡辺学監修 / 三省堂編修所編) (Daily Japanese-German-English conversation dictionary)

デイリー日中英3か国語会話辞典 (池田巧・胡興智監修 / 三省堂編修所編) (Daily Japanese-Chinese-English conversation dictionary)

## General Inquiries <docomo Information Center>

### 0120-005-250 (toll free)

\* Service available in: English, Portuguese, Chinese, Spanish, Korean.

\* Unavailable from part of IP phones.

(Business hours : 9:00 a.m. to 8:00 p.m.)

■ From DOCOMO mobile phones  
(In Japanese only)

■ From land-line phones  
(In Japanese only)

### (No prefix) 151 (toll free) 0120-800-000 (toll free)

\* Unavailable from land-line phones, etc.

\* Unavailable from part of IP phones.

(Business hours : 9:00 a.m. to 8:00 p.m. (open all year round))

● Please confirm the phone number before you dial.

● For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo shop etc. near you on the NTT DOCOMO website or the i-mode site.

▶ NTT DOCOMO website <http://www.nttdocomo.co.jp/english/>

▶ i-mode site iMenu⇒お客様サポート (user support)⇒ドコモショップ (docomo Shop) \* In Japanese only

## Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo Information Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code  
for the country you stay

-81-3-6832-6600\* (toll free)

\* You are charged a call fee to Japan when calling from a land-line phone, etc.

※If you use F-01C, you should dial the number +81-3-6832-6600 (to enter '+', press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

Universal number  
international prefix

-8000120-0151\*

\* You might be charged a domestic call fee according to the call rate for the country you stay.

※For international call access codes for major countries and universal number international prefix, refer to DOCOMO International Services website.

● If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.

● If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.

## Repairs

■ From DOCOMO mobile phones  
(In Japanese only)

■ From land-line phones  
(In Japanese only)

### (No prefix) 113 (toll free) 0120-800-000 (toll free)

\* Unavailable from land-line phones, etc.

\* Unavailable from part of IP phones.

(Business hours : 24 hours (open all year round))

## Failures encountered overseas <Network Support and Operation Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code  
for the country you stay

-81-3-6718-1414\* (toll free)

\* You are charged a call fee to Japan when calling from a land-line phone, etc.

※If you use F-01C, you should dial the number +81-3-6718-1414 (to enter '+', press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

Universal number  
international prefix

-8005931-8600\*

\* You might be charged a domestic call fee according to the call rate for the country you stay.

※For international call access codes for major countries and universal number international prefix, refer to DOCOMO International Services website.



Li-ion 00

To prevent damage to the environment, bring used battery packs to a docomo service counter, a docomo agent or a recycle center.



Don't forget your mobile phone ... or your manners!

When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

Sales: NTT DOCOMO, INC.  
Manufacturer: FUJITSU LIMITED

2010.10 (1st Edition)  
CA92002-6162