

# F-04B

**INSTRUCTION MANUAL '10.X** 

docomo PRIME series

#### **DOCOMO W-CDMA, GSM/GPRS System**

Thank you for purchasing "docomo PRIME series F-04B" mobile terminal.

Before using F-04B, read this manual to ensure safe use and handling.

#### Instruction manuals for F-04B

The operations of F-04B are described in this manual, "使いかたガイド (Guide)" (installed in FOMA terminal) and "Instruction manual (detailed version)" (PDF file).

Instruction manual (this manual)

This manual provides information about screens and operations of basic functions.

\* 😡 is index term for "使いかたガイド(Guide)".

"使いかたガイド (Guide)" (installed in FOMA terminal) This guide provides overviews and operations of frequently-used functions. (In Japanese only) In F-04B Stand-by display, MENU ▶ 6 LifeKit ▶ 0 Guide ▶ Select a search method

"Instruction manual (detailed version)" (PDF file)

This manual provides detailed information and operations of all the functions. (In Japanese only) <From a PC> This manual can be downloaded from NTT DOCOMO website. http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html

\* The URL and contents are subject to change without prior notice.

- In this "F-04B INSTRUCTION MANUAL", "F-04B" mobile terminal is usually referred to as "FOMA terminal".
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- In this manual, "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits. ⇒P47

#### Basic package

#### F-04B (including Back Cover F45 (for display unit), Back Cover F46 (for keypad unit) and warranty)



#### Battery Pack F13 (for display unit)



## Battery Pack F14



#### Instruction manual



## CD-ROM for F-04B STAND STRAP (SAMPLE)





Compatible options ⇒PXXX

- · Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

## Contents

Introduction			Search		Introduction	
FOMA terminal What you can do with F-04B Part names and functions Usage Styles		2 3 4 8		i-mode/Full Browser	Basic Operation	
Precautions (ALWAYS FOLLOW THESE DIRECTIONS) Handling precautions  Basic Operation		9 Enjoy 16	Camera	Connect		
Connect	Before Using Screen Explanation Character Entry	26 32 36 More co	More conveni	Music       108         i-αppli       110         i-motion/Movie       112	Search	
	Sound/Screen Setting Lock/Security		More conveni	Osaifu-Keitai         116           i-concier         117           Convenient tools         118	Enjoy	
	Call Telephone Mail Phonebook	66 75 78	Others	Data management 123	More Convenient	
and the second s			Appendix		Others	

#### FOMA terminal

- 0.01
  - Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (phonebook, schedule, notepad, recorded messages, voice memos, moving picture memos, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.

- You are recommended to save important data to microSD card.
   Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS.
   Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/ TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
   Certifier: VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

## What you can do with F-04B

#### Style-flexible, Separatable Keitai

8

This FOMA terminal is separatable and you can choose the usage style according to the scene, for example, using only with display unit or calling with keypad unit while watching 1Seg, receiving mails, viewing sites, checking schedule, etc. with display unit. Furthermore, making



videophone call without emitting sound from speaker and using keypad unit as remote controlled shutter when shooting camera are available. You can even enter characters with QWERTY keypad and perform i-αppli lightly in game mode.

## **AUTO-GPS**

96

AUTO-GPS function allows you to use convenient services that deliver such information as weather, neighboring shops, sightseeing, etc. around your location.



## 使いかたガイド (Guide)

It is convenient function to check operations of function on FOMA terminal. You can check it immediately without Instruction manual at hand. (In Japanese only)



#### i-concier

A character on stand-by display (Machichara) delivers useful information (Information) and a schedule is automatically downloaded from sites (ischedule) so that you can use the service for your convenience. (In Japanese only)



#### International Roaming (WORLD WING)

73

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G/GSM Areas are supported).




#### Projector unit

144

By using Projector unit F01 (optional), 1Seg, i-αppli, images, document data, etc. can be projected widely.



Part names of F-04B and major functions assigned to each part are as follows.

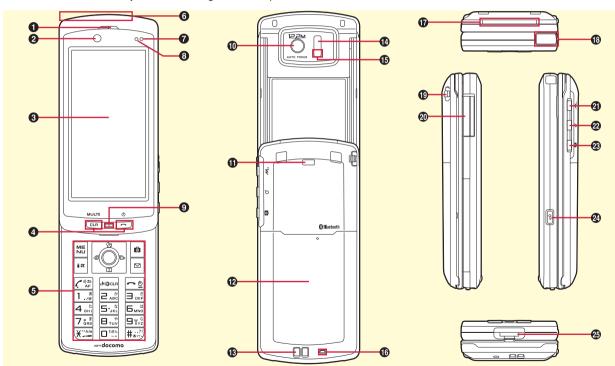

Introduction

Earpiece

Hear other party's voice from here.

2 In-camera

Send your image via videophone.

- 3 Display (touch panel) ⇒P26, 29
- **4** Front keypad⇒P6
- 6 Numeric keypad⇒P6
- **6** FOMA antenna (built into FOMA terminal) For a call in better conditions, do not cover the antenna with your hand.
- **7** Light sensor

Sense the ambient luminance to automatically adjust the brightness of the display. Do not cover the sensor with your hand or a sticker.

1 Indicator light

The indicator light turns on or blinks when there is any incoming call, mail or during a call.

Microphone

Send your voice from here. Do not cover the microphone during a call or sound recording.

Out-camera

Shoot still images or moving pictures.

1 Light

Use as camera light.

- Pack cover (keypad unit)
- (B) Charging jack

1 Infrared data port

Use the port for infrared communication or infrared remote control function.

(B) Shooting indication light

The light turns on when camera shooting.

(keypad unit)

Send your voice from here when talking with keypad unit.

The Arch light ⇒ P27

It turns on or blinks when detaching/ attaching unit, charging or checking battery level of keypad unit.

1Seg antenna

Pull out for better signal reception when watching 1Seg.

- (19) Strap opening
- @ External connection jack

Available to connect an optional AC adapter, DC adapter, FOMA USB Cable with Charge Function, Earphone Plug Adapter for External connector terminal etc.

- ② i-Widget/TV key Start/Exit i-Widget or start 1Seq.
- Start Quick search.
- Camera key


Start/Stop camera shooting, save still image on 1Seg, or stop ring alert.


② 
☐ Lock key

Activate Operation lock or turn off the screen.

Separating button

Press the button when detaching unit.

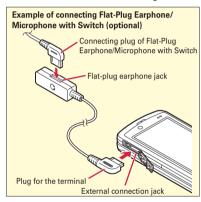

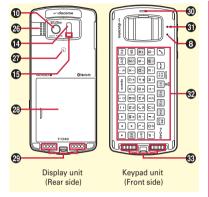

3 Speaker

Hear ring alert or voice of the caller using the handsfree function.

**②** ⋒Mark

Use Osaifu-Keitai or send/receive data by iC transmission.

- Back cover (display unit)
  - \* To access the UIM slot and microSD card slot, remove the back cover and then remove the battery pack.
- Attaching terminal (display unit)
   For attaching keypad unit or Projector unit
   F01 (optional)
- 1 Earpiece (keypad unit)

Hear other party's voice from here when talking with keypad unit.

Bluetooth light

Check Bluetooth connection status on the unit.

- Attaching terminal (keypad unit)

  For attaching display unit

Front/Numeric/QWERTY keypads 1 CLR 🖽 🙃 10 5 -6 ME 7 8 ŧα 9 3 4 ch@CLF 2 ABC ∃gĕ 11 12 NTT docomo 6 7 8 4 G 5 H B space 11 10 13

Turn ON/OFF FOMA terminal, or exit an operating function.

2 CLR

Return to the previous screen or activate/perform other function.

- 5 MENU (MENU key)/ FI
  Display a menu. FI to activate QWERTY keypad lock.
- 6 (Camera key)/ F2
  Shoot still images or moving pictures.
- 7 **■** (i-mode/i-αppli/Character key)/

Display i-mode menu or i- $\alpha$ ppli folder, or switch character input modes.

- 8 (Mail key)/ F4
  Display the mail menu.
- 9 Incl. (ch/Clear key)/ CLA Display i-Channel or return to the previous screen.

10 **(Multi-cursor key)/** ★ 【▼ 【▼

Move the cursor, or operate a menu.

▶ / ★★ : Perform an operation.

- Ŏ / ▲: Display Scheduler or adjust sound volume.

- II O-9 (Keypads)/ .- N
  Enter phone number or characters, or select an item.
- 12 (\*/Public mode (Drive mode) key)/

Enter "\*" or start/cancel Public mode (Drive mode). Use ★ to add voiced/ semi-voiced sound mark.

- Press an alphabet key or The at the same time to enter capitalized character or select range.

15 Fn

Press an alphabet key or a symbol key at the same time to enter symbol or number indicated on upper section.

16 Ctr

Press a specified key at the same time to activate a function.

## **Usage Styles**

You can use FOMA terminal in three styles.

- Unless otherwise noted, operations in slide style are explained in this manual.
- The terminal supports motion sensor in basic style and separated style. ⇒P25

#### Basic style

Touch operation is available with FOMA terminal closed.

\* Only in-camera is available to shoot still image/moving picture. To shoot with out-camera, change the style.



Numeric keypad operation and touch operation are available with FOMA terminal opened.





#### ♣ Separated style



Separate FOMA terminal into display unit and keypad unit ( $\Rightarrow$ P20) and then operate the terminal with keypad unit via Bluetooth communication or use only display unit. While talking with keypad unit, watching 1Seg, sending/receiving mail, viewing sites, etc. are available with display unit. When keypad unit is closed, entering characters in Roman letters or operating i- $\alpha$ ppli in game mode are available with OWERTY keypad.

\* Use Osaifu-Keitai or perform iC communication in this style. ⇒P116, 127

#### Point

 Do not apply excessive force when opening/closing the terminal or detaching/attaching unit, or opening/closing keypad unit. It may cause damages on keypad or display.

\_\_\_\_\_\_

- Before carrying FOMA terminal, activate Operation lock or QWERTY keypad lock to prevent inadvertent operations or to save battery power consumption.
- Vibrator operates in display unit. Please be careful not to drop the terminal from a desk etc. by vibration.