



F-06B

INSTRUCTION MANUAL '10.X

docomo **PRIME** series

DOCOMO W-CDMA, GSM/GPRS, Wireless LAN System

Thank you for purchasing "docomo PRIME series F-06B" mobile terminal.


Before using F-06B, read this manual to ensure safe use and handling.

Instruction manuals for F-06B

The operations of F-06B are described in this manual, "使いかたガイド (Guide)" (installed in FOMA terminal) and "Instruction manual (detailed version)" (in pdf format).

Instruction manual (this manual)

This manual provides information about screens and operations of basic functions.

*  is index term for "使いかたガイド (Guide)".

"使いかたガイド (Guide)" (installed in FOMA terminal)

This guide provides overviews and operations of frequently-used functions. (In Japanese only)

In F-06B Stand-by display, [MENU] ▶ [6] LifeKit ▶ [#] Guide ▶ Select a search method

"Instruction manual (detailed version)" (in pdf format)

This manual provides detailed information and operations of all the functions. (In Japanese only)

 
 





(From a PC) This manual can be downloaded from NTT DOCOMO website.

<http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html>

* The URL and contents are subject to change without prior notice.

- In this "F-06B INSTRUCTION MANUAL", "F-06B" mobile terminal is usually referred to as "FOMA terminal".
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- In this manual, "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits (⇒P43) or performing fingerprint authentication (⇒P45).

Basic package

F-06B (including Back Cover F48 and warranty)		Battery Pack F16 	Desktop Holder F30 	Instruction manual 	CD-ROM for F-06B 	Electronic dictionary data DVD F01 
 Desktop Holder F30 is made of recycled ABC from used products.						
Compatible options ⇒PXXX						

- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

Contents

Introduction

FOMA Terminal.....	2
What you can do with F-06B	3
Part names and functions.....	4
Usage Styles	6
Precautions (ALWAYS FOLLOW THESE DIRECTIONS)	7
Handling precautions	14
Waterproofness	18

Basic Operation



Before Using.....	24
Screen Explanation.....	28
Character Entry	32
Sound/Screen Setting.....	36
Lock/Security	44

Connect



Call Telephone.....	56
Mail.....	64
Phonebook.....	67

Search



i-mode/Full Browser	76
i-Channel	79
Map/GPS.....	80

Enjoy



Camera	86
1Seg.....	88
Music	90
i-appli	92
i-motion/Movie.....	93

More convenient



Osaifu-Keitai	100
i-concier	101
Convenient tools	102
Data management.....	105

Others

Support	114
Appendix.....	124
INDEX.....	143

Introduction

Basic Operation

Connect

Search

Enjoy

More Convenient

Others

FOMA Terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Note, Recorded messages, Voice memos, Moving picture memos, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.
- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

What you can do with F-06B

AUTO-GPS

 
81

The AUTO-GPS function allows for useful services that deliver information about the weather or shops around where you are, or sightseeing information.



使いかたガイド (Guide)

Guide is useful for checking an operating procedure of the function to use on FOMA terminal. You can check it immediately without Instruction manual at hand. (In Japanese only)

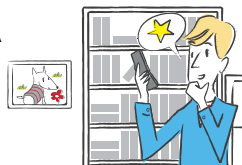

i-concier

101

i-concier is a service to use FOMA terminal conveniently in which a character on the stand-by display (Machi-chara) notifies you of useful information and schedules (i-schedule) can be downloaded automatically from a site.

i コンシェルは
あなたの欲しい情報をお届けします。



International Roaming (WORLD WING)

62

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G/ GSM Areas are supported).



Waterproofness

18

Waterproofness of IPX5 and IPX8 (which exceeds IPX7) are provided by firmly closing the external connection jack cap and installing the back cover in a locked state.



Full-fledged electronic dictionary

 
103

A full-fledged electronic dictionary function is provided so that you can search collectively from multiple dictionaries by a search key or handwriting input. KOJI-EN Text version, English-Japanese Dictionary for The General Reader, XXXXX are preinstalled in FOMA terminal. You can copy various dictionaries such as KOJI-EN Multimedia version, XXXX, XXXX etc. given in the attached electronic dictionary data DVD to microSD card using a PC and bring it with you.

Part names and functions

Part names of F-06B and major functions assigned to each part are as follows.

- 1 **Earpiece**
Hear other party's voice from here.
- 2 **Indicator light**
The light turns on and blinks when there is an incoming call, receiving mail, or calling, and it turns on while charging.
- 3 **Display**⇒P28, 31
- 4 **Microphone**
Send your voice from here.
- 5 **MENU** **MENU key**
Display a menu.
- 6 **Mail/Character key**
Display mail menu, or switch character entry modes.
- 7 **ch/CLEAR key**
Display i-Channel or return to the previous screen.
- 8 **Start a voice call key**
Start a voice call.
- 9 **Keypads**
Enter phone number or characters, or select an item.
- 10 *** /Public mode (Drive mode) key**
Enter "*" or voiced/semi-voiced sound, or start/cancel Public mode (Drive mode).
- 11 **i-Widget/TV key**
Start/Exit i-Widget or start 1Seg.

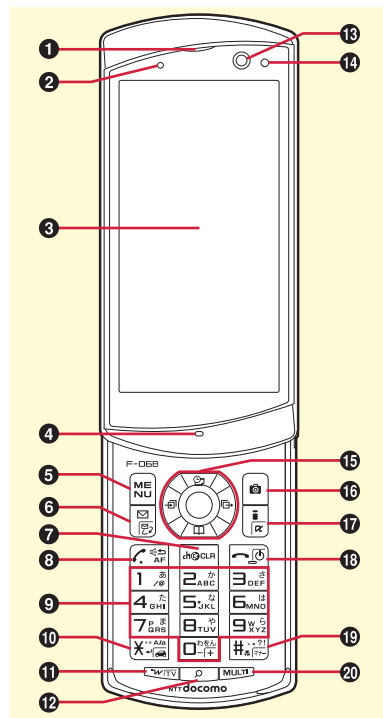

- 12 **Search key**
Start Quick search.
- 13 **In-camera**
Shoot yourself or send your image via videophone call.
- 14 **Light sensor**
Sense the ambient luminance to automatically adjust the brightness of the display. Do not cover the sensor with your hand or a sticker.
- 15 **Multi-cursor key**
Move the cursor, or operate a menu.
 - : Perform an operation.
 - ⌂ : Display Scheduler, or adjust the volume.
 - ☎ : Display Phonebook, or adjust the volume.
 - ☎ : Display Received calls.
 - ☎ : Display Redial.
- 16 **Camera key**
Start the still camera/movie camera.
- 17 **i-mode/i-appli key**
Display i-mode menu or i-appli folder.
- 18 **Power/End key**
Turn on/off FOMA terminal, or exit a function.
- 19 **#/Silent mode key**
Enter "#" or punctuation, or start/cancel Silent mode.

20  **Multitask key**

Start/perform a different function.

21 **FOMA antenna (built into FOMA terminal)**

For a call in better conditions, do not cover the antenna with your hand.

22 **Infrared data port**

Use this port for infrared communication or infrared remote control function.

23 **Out-camera**

Shoot still images or moving pictures.

24 **Light**

Use as a camera light.

25  **Mark**

Use Osaifu-Keitai or send/receive data by iC transmission.

26 **Back cover**

* To access the microSD card slot, remove the back cover, open the inner cover, and then remove the battery pack.

27 **Charging jack****28** **Speaker**

 
Hear ring alert or voice of the caller using the handsfree function.

29 **Fingerprint sensor**

Authenticate a fingerprint.

30 **Back cover lever**

* Firmly install the back cover and lock it with the lever before using to avoid water seepage and dust ingress.

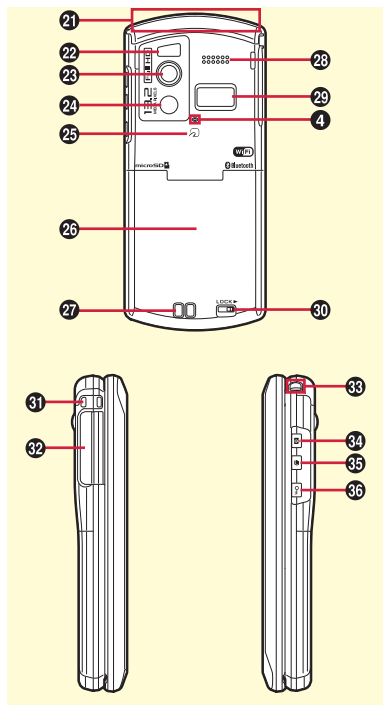31 **Strap opening****32** **External connection jack**

Available to connect an optional AC adapter, DC adapter, FOMA USB Cable with Charge Function, Earphone Plug Adapter for External connector terminal etc.

33 **1Seg antenna**

Pull out for better signal reception when watching 1Seg.

34  **Side camera key**

 
Activate Still image shooting, record a video during 1Seg watching, or stop ring alert, alarm sounding or vibrator.

35 **Side multi key**

Perform another function during a call or activate/deactivate Manner mode.

36  **Lock key**

Activate/Deactivate Operation lock or Privacy view, or activate High-pitched alarm.

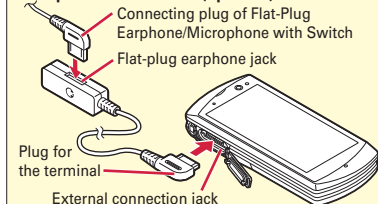
Example of connecting Flat-Plug Earphone/ Microphone with Switch (optional)

Usage Styles

You can use functions by key operation and touch operation on FOMA terminal.

Basic style

 
Touch operation is available with FOMA terminal closed. With auto-rotation function using motion sensor, the vertical/horizontal display switches according to the tilt of FOMA terminal.

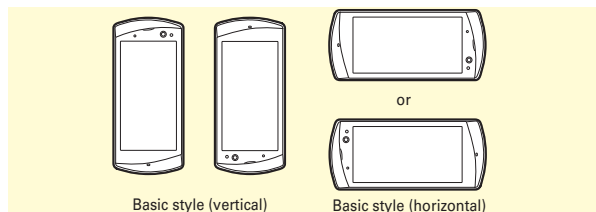

Slide style (Opened (vertical))/YOKO-MOTION (Opened (horizontal))

It is touch operation and key operation supported style with FOMA terminal opened.

 To close FOMA terminal, rotate the display in the reverse direction and slide it.

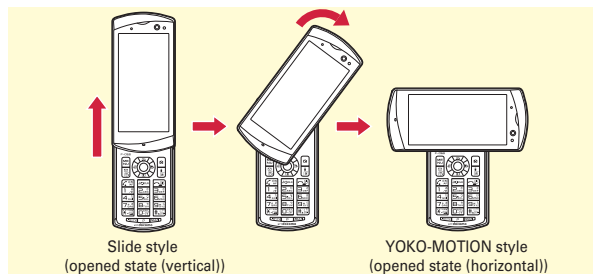

Point

- When changing to slide style or YOKO-MOTION style, do not rotate the display counterclockwise or by 90 degrees or more.
- The sliding operation of FOMA terminal may be felt hard, but it is not malfunction. When opening/closing or rotating, hold the display lightly with your hand and move it until it clicks.
- Before carrying FOMA terminal, activate Operation lock to prevent inadvertent operations of the touch panel or to save battery power consumption.






Information



- You can set to display editing screen of mail or note in slide style 【@スライド編集設定 (Slide and edit)】, or set functions to be activated by swing 【@スイング設定 (Turn-display option)】.
- You can answer a call by changing to slide style when receiving a voice call, 【@着信中オープン応答 (Slide and answer)】 or select to disconnect/hold the call by changing to basic style 【@通話中クローズ設定 (Close settings)】.





Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 DANGER	This sign denotes that death or serious injury may directly result from improper use.
 WARNING	This sign denotes that death or serious injury may result from improper use.
 CAUTION	This sign denotes that bodily injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.

 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter, desktop holder and UIM (common)	8
Handling FOMA terminal	9
Handling battery pack	11
Handling adapter and desktop holder	12
Handling UIM	13
Handling mobile phones near electronic medical equipment	13

Handling FOMA terminal, battery pack, adapter, desktop holder and UIM (common)

DANGER



Don't

Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.

May cause the equipment to be deformed or malfunction, and battery pack to leak, heat, burst or ignite, and the capability or life to be reduced or shortened. Overheating on parts of the case may cause burns or injuries.



No disassembly

Do not disassemble or remodel the equipment. Do not solder items onto the equipment.

May cause fire, injuries, electric shock, or malfunction. It may also cause the battery pack to leak, heat, burst or ignite.



No liquids

Do not let the equipment get wet.

Contact with water or other liquids can cause heating, electric shock, fire, malfunctions or injuries. Take care of the place for use and treatment of the equipment.



Do

Use the battery pack and adapter specified by NTT DOCOMO for your FOMA terminal.

Use of equipment not specified by DOCOMO can cause FOMA terminal, battery pack and other parts to leak, heat, burst, catch fire or malfunction.

WARNING



Don't

Do not put the battery pack, FOMA terminal, adapter or UIM in microwave ovens or other heating appliances or high-pressure containers.

It may cause the battery pack to leak, heat, burst or ignite, may cause FOMA terminal or adapter to heat, smoke, ignite, or may damage circuits.



Don't

Do not throw the equipment or give hard shock to it.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



Don't

Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal.

May be subject to electrical short and could cause fire or malfunction.



Do

Turn FOMA terminal OFF before entering a place such as a gas station where flammable gases are generated.

Do not charge the battery. The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.

1. Remove the power plug from the wall outlet or cigarette lighter socket.
2. Turn FOMA terminal OFF.
3. Remove the battery pack from FOMA terminal.

May cause the equipment to heat, burst or ignite or the battery pack to leak if you keep using the equipment.

CAUTION



Don't

Do not leave the equipment on unstable or sloping surfaces.

May cause malfunction or injuries.



Don't

Do not store the equipment in extremely humid, dusty or hot areas.

May cause malfunction.



Do

Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.

May cause injuries.



Do

Store the equipment out of reach of small children.

May be accidentally swallowed or cause injuries.