



# F-07C

**INSTRUCTION MANUAL '11.5**

docomo **PRO** series

## DOCOMO W-CDMA, GSM/GPRS System

Thank you for purchasing "docomo PRO series F-07C" mobile terminal.

Before using F-07C, read this manual to ensure safe use and handling.

### Instruction manuals for F-07C

The operations of F-07C are described in this manual, "使いかたガイド (Guide)" (installed in FOMA terminal) and "Instruction manual (detailed version)" (PDF file).

**Instruction manual (this manual)**

This manual provides information about screens and operations of basic functions.

**"使いかたガイド (Guide)" (installed in FOMA terminal)**

This guide provides overviews and operations of frequently-used functions. (In Japanese only)

In F-07C Stand-by display, **MENU** ▶ **6** LifeKit ▶ **\*** Guide ▶ Select a search method

**"Instruction manual (detailed version)" (PDF file)**




This manual provides detailed information and operations of all the functions. (In Japanese only)

<From a PC> This manual can be downloaded from NTT DOCOMO website.  
<http://www.nttdocomo.co.jp/support/trouble/manual/download/index.html>

\* The URL and contents are subject to change without prior notice.

- In this "F-07C INSTRUCTION MANUAL", "F-07C" mobile terminal is usually referred to as "FOMA terminal".
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- In this manual, "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits. ⇒P35

### Basic package

<b>F-07C</b> (including Back Cover F58 and warranty)	<b>Battery Pack F20</b>	<b>Earphone Plug Adapter F01</b>	<b>USB Cable F01</b>
	 <b>Instruction manual</b> 		<b>AC Adapter F04</b>  Compatible options ⇒PXX

- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents in this manual, URL and contents are subject to change without prior notice.

# Contents

<b>FOMA terminal</b> .....	2	<b>Precautions (Always follow these directions)</b> .....	8	<b>Introduction</b>
<b>What you can do with F-07C</b> .....	3	<b>Handling precautions</b> .....	16	
<b>Part names and functions</b> .....	4			
<b>Usage Styles</b> .....	7			
<b>Before Using</b> .....	20	<b>Sound/Screen Setting</b> .....	30	<b>Basic Operation</b>
<b>Screen Explanation</b> .....	23	<b>Lock/Security</b> .....	35	
<b>Character Entry</b> .....	27			
<b>Call Telephone</b> .....	47			<b>Connect</b>
<b>Mail</b> .....	57			
<b>Phonebook</b> .....	61			
<b>i-mode/Full Browser</b> .....	63			<b>Search</b>
<b>i-Channel</b> .....	65			
<b>Map/GPS</b> .....	66			
<b>Camera</b> .....	71	<b>i-motion/Movie</b> .....	76	<b>Enjoy</b>
<b>Music</b> .....	73			
<b>i-appli</b> .....	75			
<b>Osaifu-Keitai</b> .....	79	<b>Data Management</b> .....	85	<b>More Convenient</b>
<b>i-concier</b> .....	81			
<b>Convenient tools</b> .....	82			
<b>Before Using</b> .....	91	<b>Maintenance</b> .....	103	<b>Windows 7</b>
<b>Screen Explanation</b> .....	95	<b>Recovery</b> .....	106	
<b>Communications</b> .....	99	<b>Office</b> .....	107	
<b>Sound/Saving Setting</b> .....	102	<b>Support</b> .....	108	
<b>Support</b> .....	113			<b>Others</b>
<b>Appendix</b> .....	125			
<b>Index</b> .....	141			


## FOMA terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (phonebook, schedule, notepad, recorded messages, voice memos, moving picture memos, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.
- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.  
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd., Entrust, Inc.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

## What you can do with F-07C

### Windows 7 mode

71

F-07C is equipped with "Keitai mode" for using as a regular FOMA terminal and "Windows 7 mode". To switch to Windows 7 mode, press . You can use the Internet via Full Browser, e-mail "Office 2010 Personal" and electronic dictionaries. In Windows 7 mode, you can also use Wi-Fi.

\* The functions of Windows 7 mode are described in the chapter "Windows 7" other than common portions to Keitai mode, such as part names. For functions of Keitai mode used in Windows 7 mode, see "Windows 7".

### 使いかたガイド (Guide)

26

Without Instruction manual at hand, you can check the operations of desired functions immediately with the FOMA terminal. By searching from the function list or entering keywords, you can view outlines and operating procedures of the function, and also start the function. (In Japanese only)

### AUTO-GPS

67

AUTO-GPS function allows you to use convenient services that deliver such information as weather, neighboring shops, sightseeing, etc. around your location.

### International Roaming (WORLD WING)

55

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G/GSM Areas are supported).

### High functionality camera

71

Camera offers approximately 5,11 million pixels (effective pixels) and Auto scene recognition to switch to the optimal scene mode, Face detection to detect person's face and smile rate, Tracking focus to track the subject, Whiteboard mode to shoot text etc. on the whiteboard sharply, etc.

 
### i-concier

81

A character on stand-by display (Machi-chara) delivers useful information (Information) and schedules are automatically downloaded from sites (i-schedule) so that you can use the service for your convenience. (In Japanese only)




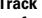


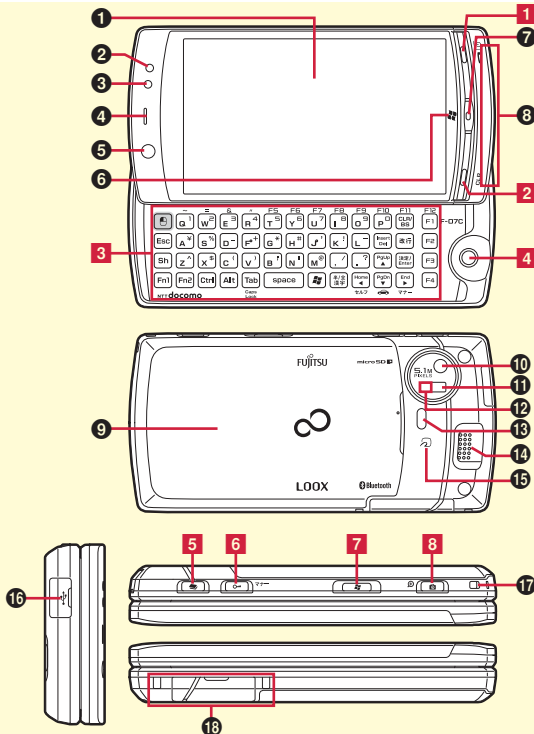

## Part names and functions

Part names of F-07C and major functions assigned to each part are as follows.



To use the function with \*, press the key for 1 second or more.

- ① Display (touch panel)
- ② Light sensor for sensing the ambient lightness to adjust the brightness of the display
- ③ Indicator light for notifying the state of the FOMA terminal
- ④ Earpiece
- ⑤ In-camera
- ⑥ Indicator light for notifying the state of Windows 7 mode
- ⑦ Microphone for calling and recording
- ⑧ FOMA antenna (built into FOMA terminal)
- ⑨ Back cover
- ⑩ Out-camera
- ⑪ Infrared data port
- ⑫ Shooting indication light
- ⑬ Camera light
- ⑭ Speaker
- ⑮ ↻ mark for placing over IC card reader for Osaifu-Keitai and iC transmission
- ⑯ microUSB connection jack for USB Cable F01 and Earphone Plug Adapter F01
- ⑰ Strap opening
- ⑱ Cradle connection jack⇒P21

 
- 1  Exit a running function, or turn ON/OFF the FOMA terminal by pressing for 2 seconds or more
- 2  Receive a voice call, delete a character, return to the previous screen, or display i-Channel list
- 3  QWERTY keypad⇒P6
- 4  Track ball for moving the cursor by rotating/for performing the operations by pressing, or the same operation as right-click of mouse pad by pressing in Windows 7 mode
- 5  Multitask key for starting another function during a call or operation
- 6  Turn ON/OFF the display or start/cancel Silent mode\*
- 7  Switch Windows 7 mode/Keitai mode or force-quit Windows 7+
- 8  Perform operations while starting Camera or start the still camera shooting\*

#### <Using earphone>


Use optional earphone compatible with external connection jack. When using earphone incompatible with external connection jack, use optional plug adapter.

#### Example of connecting Earphone Plug Adapter for External connector terminal 01 (optional)

\* AC adapter (charger) and Stereo Earphone Set 01 (earphone/microphone jack) use a common jack.

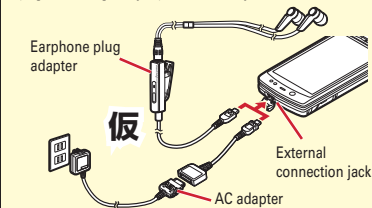

## QWERTY keypad

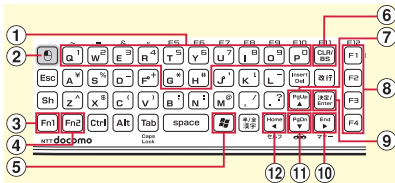 

- 1 **Q** - **W**, **E**, **R**, **T**, **Y**, **U**, **I**, **O**, **P** Enter phone number or symbols, select menu or item, or perform each shortcut operation
- 2 **G** Only in Windows 7 mode, select an item or the same operation as left-click of mouse pad
- 3 **Fn1** Press with the other key to enter symbols/numbers or to use the functions marked on the key in blue
- 4 **Fn2** Press with the other key to enter symbols or to use the functions marked on the key in yellow-green
- 5 Display Start menu of Windows 7 (in Windows 7 mode only)
- 6 **CLR** Receive a voice call, delete a character, return to the previous screen, or display i-Channel list
- 7 **S** Display Scheduler, move the cursor, or display Alarm clock list\*

## 8 Guide keys

- F1 : Display the menu, or perform the operation at upper-left of the guide area
- F2 : Display the outgoing call screen, or perform the operation at upper-right of the guide area
- F3 : Display the mail menu, perform the operation at lower-left of the guide area, or Check new message\*
- F4 : Display iMENU connecting to i-mode, perform the operation at lower-right of the guide area, or display i-αppli folder list\*
- 9 Perform the operation or Focus mode
- 10 Display Redial, switch screens, move the cursor, or start/cancel IC card lock\*
- 11 Display Phonebook, move the cursor, or add phonebook entry\*
- 12 Display Received calls, switch screens, move the cursor

 


## Usage Styles

You can use the FOMA terminal with two styles: "basic style (closed state)" supports touch operation, "slide style (opened state)" supports touch operation and key operation.

- Unless otherwise noted, operations in basic style are mainly explained in this manual.


### ❖ Basic style

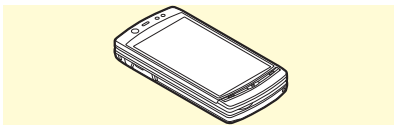

Touch operation is available with FOMA terminal closed.

- Vertical and horizontal views can be switched according to tilt of the FOMA terminal by the auto rotation in Motion sensor.

### ❖ Slide style

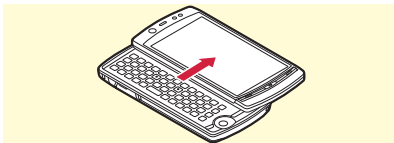 

Key operation and touch operation are available with FOMA terminal opened.




#### Point

- In basic style, vertical and horizontal views can be switched according to tilt of the FOMA terminal by the auto rotation in Motion sensor.



- In slide style, the display is switched automatically to horizontal view.
- In slide style, the display is switched automatically to horizontal view.
- Do not apply excessive force when opening/closing the FOMA terminal. It may cause damages on the keypad or the display.
- For opening/closing the FOMA terminal, do not touch the touch panel with your fingers to prevent inadvertent operations.
- Before carrying the FOMA terminal, change to basic style and activate Operation lock to prevent inadvertent operations or to save battery power consumption.





## Precautions (Always follow these directions)

- Before using your FOMA terminal, or when necessary, read the following precautions to ensure safe use and handling. After reading this manual, keep it in a safe place.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 <b>DANGER</b>	This sign denotes that death or serious injury may directly result from improper use.
 <b>WARNING</b>	This sign denotes that death or serious injury may result from improper use.
 <b>CAUTION</b>	This sign denotes that minor injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.

 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

### ■ Precautions contain the descriptions below.

Handling FOMA terminal, battery pack, adapter and UIM (common)	.....9
Handling FOMA terminal	.....10
Handling battery pack	.....12
Handling adapter	.....13
Handling UIM	.....14
Handling mobile phones near electronic medical equipment	.....14

## Handling FOMA terminal, battery pack, adapter and UIM (common)

### DANGER



Don't

**Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.**

May cause fire, burns or injuries.



Don't

**Do not put the terminal into heating cooking device such as microwave oven or high-pressure container.**

May cause fire, burns, injuries or electric shock.



No disassembly

**Do not disassemble or remodel the equipment.**

May cause fire, burns, injuries or electric shock.



No liquids

**Do not let the terminal get wet with water, drinking water, urine of pet animals, etc.**

May cause fire, burns, injuries or electric shock.



Do

**Use the battery pack and adapter specified by NTT DOCOMO for your FOMA terminal.**

Failure to do so may cause fire, burns, injuries or electric shock.

### WARNING



Don't

**Do not throw the equipment or give hard shock to it.**

May cause fire, burns, injuries or electric shock.



Don't

**Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the microUSB or cradle connection jack. Do not put those materials inside the connection jack.**

May cause fire, burns, injuries or electric shock.



Don't

**Do not cover or wrap the terminal with a blanket, etc while using or charging.**

May cause fire or burns.



Do

**Turn FOMA terminal OFF and stop charging if you charge the battery before entering a place such as a gas station where flammable gases are generated.**

The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

**If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.**

- Remove the power plug from the wall outlet or cigarette lighter socket.
- Turn FOMA terminal OFF.
- Remove the battery pack from FOMA terminal.

Failure to do so may cause fire, burns, injuries or electric shock.

**CAUTION**

Don't

**Do not leave the equipment on unstable or sloping surfaces.**

The equipment may fall and cause injuries.



Don't

**Do not store the equipment in extremely humid, dusty or hot areas.**

May cause fire, burns or electric shock.



Do

**Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.**  
May cause injuries.

Do

**Store the equipment out of reach of small children.**

May be accidentally swallowed or cause injuries.



Do

**Be careful especially when using FOMA terminal connected to the adapter continuously for a long time.**

If you use i-appli or a videophone call while charging the battery for a long time, FOMA terminal, battery pack and adapter may be heated.

Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

**Handling FOMA terminal****WARNING**

Don't

**Do not direct the infrared data port toward your eye and transmit signals.**

May cause harmful effect on eyes.



Don't

**Do not direct the infrared data port toward home electric appliances etc. equipped with infrared device when using infrared communication.**

May cause an accident because of malfunction of infrared device.



Don't

**Do not turn on the light by getting the lighting part closer to other person's eyes.**

May impair eyesight. And may cause accidents like injury etc., by dazzling or astounding other people.



Don't

**Do not put foreign objects such as liquid like water, metal pieces or burnable things into UIM or microSD card slot.**

May cause fire, burns, injuries or electric shock.



Don't

**Do not turn on the light aiming directly at the driver of the car etc.**

May disturb driving and cause an accident.



Do

**Turn FOMA terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.**

Failure to do so may cause electronic equipment or electronic medical equipment to fail or malfunction. If the function which automatically turns the power ON is set, cancel the setting before turning the power OFF.

When using the phone in a medical facility, be sure to observe the regulations of the facility. If you do prohibited act such as using the phone in an airplane, you may be punished according to law.



Do

**When you talk by setting handsfree or ring alert is sounding, keep FOMA terminal away from your ear. And, when connecting the earphone/microphone etc. to FOMA terminal and play a game or music, adjust the volume moderately.**

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.



Do

**If you have weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.**

May cause harmful effect on heart.



Do

**When you use electronic medical equipment, check with the equipment manufacturer to determine how the device is affected by radio waves before using.**

May cause harmful effect on electronic medical equipment etc.



Do

**Turn FOMA terminal OFF near high-precision electronic control equipment or electronic equipment using low-power signals.**

Failure to do so may cause the equipment to fail or malfunction.

\* Examples of electronic equipment to avoid.

Hearing aids, implanted pacemakers or defibrillators, other electronic medical equipment, fire alarms, automatic doors and other automatic control equipment.

Users wearing implanted pacemakers or defibrillators or other electronic medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.



Do

**When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of FOMA terminal.**

Surfaces of display and camera lens are made of plastic panels and they are structured for the glass not to scatter, however, if you mistakenly touch broken or exposed parts, you may be injured.



Do

**To sound the high-pitched alarm, always keep FOMA terminal away from your ears.**

Failure to do so may cause hearing defect.

** CAUTION**

Don't

**Do not swing FOMA terminal by its strap.**

May cause accident such as injury to yourself or others by hitting.



Don't

**Do not use damaged FOMA terminal.**

May cause fire, burns, injuries or electric shock.



Don't

**When using the motion tracking or motion sensor, check the safety around you, hold FOMA terminal firmly, and do not shake it unnecessarily.**

May cause accident such as injuries.



Don't

**If the display part is accidentally broken and the liquid crystal leaks out, do not make the substance contact with your skin of face or hands.**

May cause loss of sight or skin problems.

If the liquid gets into your eyes or mouth, rinse it with clean water and see a doctor immediately. And, if the liquid adheres to skin or clothing, use alcohol etc. to wipe it off, then wash with soap.



Do

**To use the terminal in car, check with automobile manufacturer or dealer to determine how the device is affected by radio waves before using.**

In rare cases, using the phone in some vehicle models can cause the vehicle's electronic equipment to malfunction. In that case, stop using the terminal immediately.



Do

**Mobile phones can give some users skin problems such as itching, allergic reactions or rashes. If you develop skin problems, stop using the phone immediately, and see a doctor. ⇒ "Material list (P15)".**



Do

**When opening or closing FOMA terminal, take care not to have your fingers or strap caught by the terminal.**

May cause accident such as injuries.



Do

**When watching the display, take a certain distance from the display in a fully bright place.**

May reduce visual acuity.

## Handling battery pack

■ Check that the battery type matches the type displayed on the battery pack label.

Display	Battery type
Li-ion 00	Li-ion battery



### ⚠ DANGER



Don't

**Do not connect a wire or other metal objects to the jack. And, do not carry or store FOMA terminal with objects like a metal necklace.**

May cause the battery pack to ignite, burst, heat or leak.



Don't

**Check the orientation of battery pack to install it to FOMA terminal, and do not try to force the battery pack onto FOMA terminal if you are having trouble installing it.**

May cause the battery pack to ignite, burst, heat or leak.



Don't

**Do not throw the battery pack into the fire.**

May cause the battery pack to ignite, burst, heat or leak.



Don't

**Do not nail the battery pack, hit with a hammer or step on it.**

May cause the battery pack to ignite, burst, heat or leak.



Do

**If the battery pack's fluid contacts eyes, immediately flush the eyes with clean water and see a doctor right away. Do not rub the eyes.**

May cause loss of sight.

**⚠ WARNING**

Don't

**If the battery pack seems to have abnormalities such as deformation or scratches due to falling, never use it.**

May cause the battery pack to ignite, burst, heat or leak.



Do

**If the battery pack leaks or gives off a strange smell, immediately remove it from the vicinity of open flames.**

The vapors from leaking battery pack fluid may ignite or explode.



Do

**Be careful not to let your pet bite the battery pack.**

May cause the battery pack to ignite, burst, heat or leak.

**⚠ CAUTION**

Don't

**Do not discard old battery packs together with other garbage.**

May cause igniting or environmental destruction. Tape the terminals of old battery packs to insulate them, and then bring them into a sales outlet such as docomo Shop. If your local municipality has a battery recycling program, dispose of them as provided for.



Don't

**Do not use or charge a wet battery pack.**

May cause the battery pack to ignite, burst, heat or leak.



Do

**If fluid etc. leaks out from the battery pack, do not make the fluid contact with your skin of face or hands.**

May cause loss of sight or skin problems.  
If the fluid etc. put into your eyes or mouth, or contacts skin or clothes, immediately flush the contacted area with clean water.  
If the fluid put into the eyes or mouth, immediately see a doctor after flushing.

**Handling adapter****⚠ WARNING**

Don't

**Do not use the adapter cord if it gets damaged.**

May cause fire, burns, electric shock.



Don't

**Do not use the AC adapter or cradle holder in a bathroom or other highly humid area.**

May cause fire, burns, electric shock.



Don't

**When it starts to thunder, do not touch adapter.**

May cause electric shock.



Don't

**Do not short the charging jack while it is connected to the outlet or cigarette lighter socket. Do not touch the charging jack with a part of your body such as your hand or finger.**

May cause fire or electric shock.



Don't

**Do not place heavy objects on the adapter cord.**

May cause fire, burns or electric shock.



Don't

**When you insert and remove AC adapter from power outlet, do not contact a metal strap or other metal objects with the jack.**

May cause fire, burns or electric shock.



No wet hands

**Do not touch the adapter cord or outlet with wet hands.**

May cause fire, burns or electric shock.



Do

**Only use with the specified power source and voltage.**  
**When charging FOMA terminal overseas, use AC Adapter for global use.**  
 If incorrect voltage is used, this may cause fire, burns or electric shock.  
 AC adapter : AC100V  
 AC adapter for global use : Between 100V and 240V AC (connect to the AC outlet for internal household use)



Do

**Wipe off any dust that accumulates on the power plug.**  
 Failure to do so may cause fire, burns or electric shock.



Do

**When you connect the AC adapter to an outlet, firmly connect to the outlet.**  
 Failure to do so may cause fire, burns or electric shock.



Do

**When you disconnect the adapter from the outlet or cigarette lighter socket, do not pull the adapter cord with excessive force. Instead, hold the power plug to disconnect.**  
 Failure to do so may cause fire, burns or electric shock.



Unplug

**Always remove the power plug from the outlet or cigarette lighter when not using the adapter for an extended period.**  
 Failure to do so may cause fire, burns or electric shock.



Unplug

**Immediately remove the power plug from the outlet or cigarette lighter socket if water or other fluids get into the adapter.**  
 Failure to do so may cause fire, burns or electric shock.



Unplug

**Always remove the power plug from the cigarette lighter socket when cleaning the equipment.**  
 Failure to do so may cause fire, burns or electric shock.

## Handling UIM



### CAUTION



Do

**Be careful of the cut surface when removing UIM.**  
 Failure to do so may cause injuries.

## Handling mobile phones near electronic medical equipment

■ These precautions are based on the guidelines produced at the Electromagnetic Compatibility Conference Japan, regarding the protection of electronic medical equipment from radio waves emitted by mobile phone units.



### WARNING



Do

**Obey the following rules inside medical facilities.**

- Do not bring FOMA terminal into operating rooms (ORs), intensive care units (ICUs) or coronary care units (CCUs).
- Turn FOMA terminal OFF in hospital wards.
- Turn FOMA terminal OFF in hospital lobbies and corridors if electronic medical equipment could be nearby.
- If the medical facility has specified zones where use or possession of mobile devices is prohibited, obey those instructions.
- If the function to automatically turn ON the power is set, cancel the setting before turning the power OFF.





Do

**Turn FOMA terminal OFF in crowded trains or other public places where pacemaker or defibrillator wearers could be nearby.**

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

**Wearers of implanted pacemakers or defibrillators must carry and use FOMA terminal at least 22 cm away from the implanted device.**

FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Do

**When electronic medical equipment other than implanted pacemakers or defibrillators are in use outside of medical facilities (such as in home care settings), check with the device manufacturer to determine how the device is affected by electrical signals.**

FOMA terminal's signals may affect the performance of electronic medical equipment.

## Material list

Part	Material	Surface treatment
Exterior case	Movable part Display	PC+ABS resin
	Back case	PC+ABS resin
	Back cover	ABS resin
	Fixed part Slide pad	POM
	Fixed part Upper cover	PC+ABS resin
	Fixed part Middle frame	PC+ABS resin

Part	Material	Surface treatment
Keypad	PC resin	
Camera panel	Out-camera	PMMA resin
	In-camera	PC resin
Display panel	PA+GF45 resin	
Light sensor panel	PC resin	
Indicator light panel	PC resin	
Light panel	PC resin	
Connection jack cap	microUSB connection jack cap	PC+ABS resin
	Cradle connection jack cap	PC+ABS resin
UIM tray	POM resin	

# Handling precautions

## General

- **Keep water away from FOMA terminal.**
  - FOMA terminal, battery pack, adapter, UIM are not waterproof. Do not use FOMA terminal in bathrooms or other high-humidity areas, or in the rain. When carrying FOMA terminal in a pocket near your body, sweat may corrode the inner components, causing malfunction. Malfunctions deemed to be caused by water are not covered by the warranty, and may be impossible to repair. Since these conditions are outside the scope of the warranty, a repair, if at all possible, is charged.
- **Clean FOMA terminal with a dry soft cloth (such as a cloth for eyeglasses).**
  - Rubbing it roughly with a dry cloth can scratch the display.
  - Drops of water or dirt left on the display may cause stains.
  - If FOMA terminal is wiped with alcohol, paint thinner, benzine or detergent, the printing may disappear or color may fade.
- **Clean the jack occasionally with a dry cotton swab etc.**
  - If the jack is soiled, connection gets worse and it may cause power to be turned off or insufficient battery charge, so clean the jack with a dry cotton swab etc. Also, be careful never to damage the jack when cleaning it.
- **Do not place FOMA terminal near an air-conditioner outlet.**
  - The rapid change in temperature may cause condensation, causing internal corrosion and malfunction.
- **When using, be careful not to subject excessive force to FOMA terminal or the battery.**
  - If FOMA terminal is crammed into a brimming bag or placed in a pocket and sat on, display, internal PCBs or battery pack may be damaged or malfunction. And, if USB Cable F01 etc. are plugged into the microUSB connection jack, the breakage of the connector or malfunction may result.

- **Do not rub or scrape the display with a metal piece etc.**
  - It may scratch the display, causing malfunction or damage.
- **Carefully read the separate instructions that come with battery pack, adapter and cradle.**

## FOMA terminal

- **Do not press the surface of the touch panel strongly or operate it with sharp objects such as a nail, a ballpoint pen and a pin.**
  - It may damage the touch panel.
- **Avoid extreme temperature.**
  - Use FOMA terminal where the temperature ranges between 5 and 35°C and humidity ranges between 45 and 85%.
- **FOMA terminal may affect land-line phones, TVs or radios in use nearby, so use it as far as possible from these appliances.**
- **Maintain a separate record of the data you saved in your FOMA terminal.**
  - If the data is deleted, DOCOMO assumes no responsibility for the loss of any data.
- **Do not drop FOMA terminal or subject it to shocks.**
  - May cause malfunction or damage.
- **Do not plug USB Cable F01 etc. into the microUSB connection jack at a slant, or do not pull it forcibly while it is plugged.**
  - May cause malfunction or damage.
- **Do not close FOMA terminal with the strap etc. held inside.**
  - May cause malfunction or damage.
- **It is normal for FOMA terminal to become warm during use or charging. Continue to use it.**
- **Do not leave FOMA terminal with the camera in areas under strong direct sunlight.**
  - May cause discoloring or burn-in of materials.
- **FOMA terminal should normally be used with the microUSB connection jack cap closed.**
  - Dust and/or water brought into FOMA terminal cause troubles.