

General Inquiries <docomo Information Center>

☎ 0120-005-250 (toll free)

* Service available in: English, Portuguese, Chinese, Spanish, Korean.

* Available from mobile phones and PHSs.

■ From DOCOMO mobile phones
(In Japanese only)

■ From land-line phones
(In Japanese only)

☎ (No prefix) 151 (toll free) ☎ 0120-800-000 (toll free)

* Unavailable from land-line phones, etc. * Available from mobile phones and PHSs.

● Please confirm the phone number before you dial.

● For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo shop etc. near you on the NTT DOCOMO website or the i-mode site.

▶ NTT DOCOMO website <http://www.nttdocomo.co.jp/english/> ▶ i-mode site iMenu⇒お客様サポート (user support)⇒ドコモショップ (docomo Shop) * In Japanese only

Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo Information Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code for
the country you stay (table 1)

-81-3-5366-3114* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.

※If you use F-08A, you should dial the number +81-3-5366-3114 (to enter '+', press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

International prefix number for
the universal number (table 2)

-800-0120-0151*

* You might be charged a domestic call fee according to the call rate for the country you stay.

※See page XXX and XXX for international call access codes for major countries (table 1) and international prefix numbers for the universal number (table 2).

- If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.
- If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.



Li-ion 00

To prevent damage to the environment, bring used battery packs to a docomo service counter, a docomo agent or a recycle center.



This manual is printed using an ink based on soy bean oil.

Don't forget your mobile phone ... or your manners!
When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

Repairs

■ From DOCOMO mobile phones
(In Japanese only)

■ From land-line phones
(In Japanese only)

☎ (No prefix) 113 (toll free) ☎ 0120-800-000 (toll free)

* Unavailable from land-line phones, etc. * Available from mobile phones and PHSs.

Failures encountered overseas <Network Technical Operation Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code for
the country you stay (table 1)

-81-3-6718-1414* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.

※If you use F-08A, you should dial the number +81-3-6718-1414 (to enter '+', press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

International prefix number for
the universal number (table 2)

-800-5931-8600*

* You might be charged a domestic call fee according to the call rate for the country you stay.

※See page XXX and XXX for international call access codes for major countries (table 1) and international prefix numbers for the universal number (table 2).

Sales: NTT DOCOMO, INC.
Manufacturer: FUJITSU LIMITED

2009.6 (1st Edition)
CA92002-5661

docomo

F-08A

INSTRUCTION MANUAL

'09.6

F-08A

ISSUE DATE:

'09.6

NAME:

PHONE NUMBER:

MAIL ADDRESS:

INSTRUCTION MANUAL

NTT docomo

docomo STYLE series

Easy Search/Contents/Precautions

Before Using the Handset

Voice/Videophone Calls

Phonebook

Sound/Screen/Light Settings

Security Settings

Mail

i-mode/Full Browser

i-motion/Movie/i-Channel/i-concier

Camera

1Seg

Music

i-appli/i-Widget

Osaifu-Keitai/ToruCa

Data Management

Convenient Functions

Character Entry

Network Services

Overseas Use

PC Connection

Appendix/Troubleshooting

Index/Quick Manual

DOCOMO W-CDMA, GSM/GPRS System

Thank you for purchasing "docomo STYLE series F-08A" mobile terminal.

Before and during use of your FOMA terminal, be sure to thoroughly read this manual and instruction manuals that come with other optional devices to ensure you are able to correctly use your FOMA terminal. For more detailed information, contact "General Inquiries" using the phone number on the back of this manual. F-08A is your capable partner. Please treat it with care and enjoy using it for years.

Before using your FOMA terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Notepad, Recorded messages, Voice memos, Movie memo, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.
- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.

- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS.
Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

Before using this manual

This FOMA terminal supports Kisekai Tool (→P106). When changing the design of the menu screen using Kisekai Tool, the structure of some menus may be changed according to the usage frequency depending on the menu type. Also, the number assigned to menu item (item number) may not be applicable to some menu items.

Latest information about this manual can be downloaded from NTT DOCOMO website.

- User's Manual Download
<http://www.nttdocomo.co.jp/english/support/manual/index.html>
* The URL and contents are subject to change without prior notice.

Viewing/Searching this manual

This manual provides the methods below for necessary function's easy search.

Searching from Easy Search ▶ P4

Search for frequently used or convenient functions by plain words.

Searching from Menu list ▶ P415

Search from menu displayed on the display of F-08A.

Searching from thumb indices ▶ Front cover

Search from the index on the front cover.

*See P2-3 for examples.

Searching from Contents ▶ P6

Search from Contents categorized into chapters by functions.

Searching by main functions ▶ P8

Search from featured functions or new functions of F-08A.

Searching from the Index ▶ P476

Search from the function name, item keyword or service name.

Using the Quick Manual ▶ P490

You can cut out Quick Manual from this manual and carry it with you anywhere.

"Quick Manual" in Japanese version and "Quick Manual (Overseas Use)" that is useful when you use FOMA terminal overseas, is appended.

- In this "Manual for F-08A", "F-08A" mobile terminal is usually referred to as "FOMA terminal". Please be forewarned.
- This manual explains functions performed with a microSD card. A microSD card is required separately.
microSD card→P317
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- The icons and screens that appear on the display have been initialized to the default settings selected from the combinations prepared in FOMA terminal depending on FOMA terminal color.
This manual mainly gives descriptions assuming that Kisekai Tool is set to "White". →P106
- In this manual, "i-αppli compatible with Osaifu-Keitai which supports IC card function" is referred to as "Osaifu-Keitai compatible i-αppli".
- The description of "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits or performing fingerprint authentication.
Terminal security code→P113
Fingerprint authentication→P115
- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents of this manual are subject to change without prior notice.

Function name

This name is listed in Index.

Outline and supplementary description of the function**Typical operating procedure****伝言メモ****電話に出られないときに用件を録音／録画する**

- 伝言メモを起動しておくと、電話に出られないときに応答ガイダンスが流れ、相手の用件が録音／録画されます。
- 音声電話とテレビ電話を合わせて最大4件、1件につき約30秒間録音／録画できます。
 - 2in1利用時、AナンバーとBナンバーに着信した伝言メモを合わせて最大4件録音／録画できます。表示はモードによって異なります。
 - フッシュトークでは利用できません。

◆ 伝言メモを起動する

1 **【電話帳/履歴】** または

「ON」にすると、待受画面にが表示されます。

■ 伝言メモの起動中に電話がかかってくると

1 電話がかかってくる

伝言メモ応答時間設定の応答時間が経過すると、相手には伝言メモ応答ガイダンスが流れて応答音も流れません。

電話/テレビ電話/フッシュトーク

2 相手のメッセージが録音／録画される

- 開始時と終了時に相手には確認音（ピーツ）が鳴ります。また、開始時から約25秒後に終了予告音（ピビツ）が鳴ります。

3 録音／録画が終了すると、電話が切れる**◆ クイック伝言メモに対応する（クイック伝言メモ）**

伝言メモを起動していなくても、着信中にを1秒以上押すと、その着信に限り伝言メモを1回だけ動作させられます。この操作は、伝言メモを開始に設定する操作ではありません。

仮**お知らせ**

- 応答ガイダンス中、伝言メモ録音／録画中でもを押すと電話に出ることができます。テレビ電話の場合はで自分側の映像が、で代替画像が送信されます。このとき、電話を受けるまでの録音／録画内容は記録されません。
- 圏外や電源が切れているときは、伝言メモは動作しません。留守番電話サービスをご利用ください。
- 伝言メモが4件録音／録画されると、待受画面にが表示され、伝言メモおよびクイック伝言メモは動作しません。不要な伝言メモを削除してください。留守番電話サービスまたは転送でんわサービスを開始している場合は各サービスが動作します。

Supplementary description of the operation**Detailed description and convenient information about the function****Index related to thumb index**

* The page shown here represents an example. Images may differ from actual page in this manual.

- In this manual, operation by pressing keys is represented by graphic symbols.→P27 "Part names and functions"
- The representations and meanings of operating procedures are as shown below.

Representation example	Meaning
(1 sec. or more)	Press for 1 second or more.
[Settings & NW services] -	On the stand-by display, , move the cursor to [Settings & NW services] and press . Successively, press , then press any of - .

- In this manual, to select an item by placing the cursor with (Multi-cursor key) and pressing (Enter key) is referred to as "select". Regarding an operation to enter characters in the entry field, the final step of pressing [OK] is omitted.
- This manual uses the default settings to describe operations. If the settings are changed, the displays or operations of FOMA terminal may differ from the ones described in this manual. For the default settings, see Menu List.→P415

Easy Search

Functions which you want to know can be searched for using friendly words.



Convenient functions for calls

Showing/Hiding your phone number	Caller ID notification	63
Putting the call on hold	On hold	68
Changing the volume of the other party's voice	Listen volume	68
Switching from voice call to videophone call	Switching to videophone call	69



When you cannot answer the call

Putting the call on hold when you cannot answer it immediately	Respond and Hold	77
Notifying the caller that you have to refrain from talking	Public mode (Drive mode)	78
.....	Public mode (Power OFF)	78
Recording the other party's voice or image	Record message	79



Changing sound, lighting color and vibration

Setting different ring tone etc. for incoming calls from specific parties	Alert by contact	86
Changing ring alert	Ring alert	94
Changing loudness of ring tone	Adjust volume	95
Making vibration when there is an incoming call	Vibrate alert/effect	96

Muting keypad sound	Keypad/touch sound	97
Setting silent mode	Silent mode	98
Changing the color of keypad light	Keypad light	104
Changing color such as light	Light alert	109



Changing displays

Meanings of icons on display	Viewing display	33
Switching the menu display	Selecting functions from menu	38
Changing stand-by display	Stand-by display	100
Displaying a calendar on stand-by display	Info/calendar layout	101
Changing font size	Font size	110



Safety and security

Hiding contents of phonebook	Secret attribute	90
Locking FOMA remotely in case of misplacement etc.	Omakase Lock^{*1}	118
Rejecting calls with no caller IDs	Anonymous caller	131
Rejecting calls from parties not saved in phonebook	Unregistered caller	132
Saving data such as phonebook in case of data loss	Data Security Service^{*2}	132



Making full use of mail

Sending Deco-mail	Deco-mail	141
Sending images and/or melodies	Attachment	145
Automatically sorting mails	Sort method	161



Making full use of camera

Saving shot still images to microSD card	Save to	211
Changing image size	Still image settings/Recording settings	216
Viewing shot still images	Displaying image	305



Making full use of 1Seg

Watching 1Seg	Activate 1Seg	227
Recording 1Seg	1Seg recording	233
Reserving watching/recording 1Seg	Watching/Recording reservation	235
Changing settings of images and sounds	User setting	237

*1 A charged service.

*2 A charged service requiring subscription.

- For procedures to search for other functions, see "Viewing/Searching this manual". → P1
- Quick Manual introduces you procedures for using convenient functions. → P490



Other convenient functions

Reading QR and/or bar code	Bar code reader	221
Listening to music	MUSIC Player	246
Using microSD card	microSD card	317
Sending or receiving data via infrared communication	Infrared communication	330
Using alarm clock	Alarm clock	344
Using calculator	Calculator	359
Using a mobile phone overseas	International Roaming	399
Updating software	Software update	455
Keeping security software updated	Scanning function	459

Contents

■ Before using your FOMA terminal	Inside front cover
■ Viewing/Searching this manual	1
■ Easy Search	4
■ Main functions of F-08A.....	8
■ Precautions (ALWAYS FOLLOW THESE DIRECTIONS)	10
■ Handling precautions	17
■ Accessories and main options	24

Before Using the Handset 26

Part names and functions Available styles
Viewing display Selecting menu Touch panel
Pointing device Motion sensor Using UIM (FOMA card) Attaching/Removing battery pack Charging battery Battery level Self-check Power ON/OFF Select language Date & time Caller ID notification User information etc.

Voice/Videophone Calls 66

Making a call Redial/Received calls Chakumoji 186/184 Tone signal (DTMF) Call option WORLD CALL Receiving a call Any key answer Slide and answer Close settings Respond and Hold Public mode Recorded messages Using Chara-den Videophone settings Notify of switchable mode etc.

Phonebook 84

Phonebook new entry Alert by contact Group

6 Easy Search/Contents/Precautions

settings Search/Edit/Delete phonebook Secret attribute Quick dial etc.

Sound/Screen/Light Settings 92

Ring alerts & Sounds Adjust volume Vibrate alert/effect Silent mode Timed theme Stand-by display Call image Mail image Power saving mode Select startup menu Display Machi-chara Kisekai Tool Light alert Clock display format etc.

Security Settings 112

Security code Terminal security code change PIN code Fingerprint authentication All lock Omakase Lock Self mode Personal data lock Keypad dial lock Privacy mode Operation lock Lock when immobile Accept/Reject call Data Security Service Reset Delete all data Initializing remotely Remote customization etc.

Mail 138

Creating/Sending i-mode mail Deco-mail Decome-Anime Attachment Saving i-mode mail Quick mail Receiving i-mode mail Check new message Operating Inbox/Outbox Mail settings Messenger/F Area Mail Creating/Sending SMS etc.

i-mode/Full Browser 176

Site display Change i-mode password Internet connection Bookmark Screen memo Downloading from site Uploading to site i-mode settings Operating certificate etc.

i-motion/Movie/i-Channel/i-concier 198

i-motion Movie i-Channel i-Channel ticker i-concier etc.

Camera 206

Still camera Movie camera Sound recorder Advanced settings Setting for shooting Bar code reader etc.

1Seg224

Setting channels 1Seg watching Program guide i-appli Data broadcasting TVlink Multi window Recording Reserving Remote controller with microphone etc.

Music240

Setting program Operating Music&Video Channel Saving music data Playing/Managing music data BGM play Remote controller with microphone etc.

i-appli/i-Widget256

Downloading Starting i-appli i-appli call i-appli To i-appli stand-by display Managing i-appli i-Widget etc.

Osaifu-Keitai/ToruCa282

iC transfer service Starting Osaifu-Keitai compatible i-appli IC card lock Receiving ToruCa etc.

Data Management 304

Displaying/Editing image Playing/Editing movies/i-motion Displaying Machi-chara Displaying Chara-den Playing melody microSD card Managing data Infrared communication/iC transmission Displaying PDF Displaying Word, Excel, PowerPoint files Displaying recorded data of 1Seg etc.

Convenient Functions 340

Multiaccess Multitask Quick search Auto power ON/OFF Countdown timer Alarm clock Scheduler Shortcut icons Custom menu Slide and edit Turn-display option Search key shortcut Fake call Voice memo/Movie memo Call duration/Call cost Calculator Notepad Dictionaries Pedometer/Activity monitor Earphone/Microphone with switch Bluetooth® function etc.

Character Entry 372

5-touch input method Save phrase Copying/Cutting characters KUTEN code input Save word Password manager DL dictionary 2-touch input Text input method etc.

Network Services 388

Voice Mail Service Call Waiting Call Forwarding Service Nuisance Call Blocking Service Caller ID Request Service Dual Network Service English guidance Service numbers Arrival call act Remote control Multi Number 2in1 OFFICEED Additional

service etc.

Overseas use 398

Overview of international roaming service (WORLD WING) Services available Preparing and checking for overseas use Making/Receiving a call Network search mode PLMN setting 3G/GSM setting Area service status Roaming guidance Bar calls at roaming Network services etc.

PC Connection 408

Data communication DOCOMO keitai datalink etc.

Appendix/Troubleshooting ... 414

Menu list Combination of Multiaccess/Multitask functions Services available Introduction of options and related devices Error messages Warranty and After-Sales Service Software update Scanning function SAR certification information Intellectual Property Right etc.

Index/Quick Manual 476

Index Quick Manual in English version (Domestic use/Oversea use)

Main functions of F-08A

i-concier

i-concier is a service to use FOMA terminal conveniently in which a character on the stand-by display (Machi-chara) notifies you of useful information and you can download schedules/i-schedule from a site. With i-concier, downloaded schedule or ToruCa is automatically updated with the latest information, and address information etc. of stores and companies are automatically added to the phonebook. →P203

i-αpli call

i-αpli call is a function allows a third party or content providers to prompt predetermined i-αpli to be activated and it is used for activating other party's applications to play a versus game etc. →P275

i-Widget

i-Widget is a function that allows you to easily access frequently-used contents (widget applications) such as calculator, clock, a TV program guide and stock price information. You can also check the latest information at a glance by activating i-Widget screen. →P279

1Seg

You can watch "1Seg", a terrestrial digital TV broadcast for mobile devices. You can also shoot still images and record video while watching 1Seg. Dubbing+10 (→P320) is supported for recording video. →P225

i-mode

In addition to the higher operability and more convenient use of website information, you can enjoy a greater variety of video contents now that Flash® Video and Windows Media® Video are supported. →P177, 199

International Roaming

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G/GSM Areas are supported). You can check the current location with the GPS function overseas. You can also use 3G/GPRS compatible i-αpli in the 3G/GPRS areas. →P399
And, "日英版しゃべって翻訳 for F (J-E Speech Translation for F)", which interprets your Japanese into English or your English into Japanese, is preinstalled. →P264

Battery display

You can specifically display the remaining battery level in 100 levels. Also, the self-check function that notifies you of the timing to replace the battery pack is provided. →P60, 61

Lock when immobile

You can lock keypad operations by pressing the dedicated lock keys and prevent unintended operations of FOMA terminal. FOMA terminal is equipped with various lock functions such as Lock when immobile with Immobile sensor to lock keypad operation when no operations are performed for the specified time.→P128

High-performance camera

FOMA terminal is equipped with a camera with approximately 5.2 million pixels (effective pixels) that offers functions such as auto scene detection to select the appropriate shooting mode by detecting scenes or people, smile finder to release a shutter by detecting people's smiles, skin tone enhancer to enhance the skin tone to beautifully shoot people.→P207

Quick search

On the stand-by display or while performing a function, search functions of i-mode, Full Browser, Map, dictionaries, phonebook or mail can be used by pressing the search key.→P342

Shortcut icons

Only by selecting the icon pasted on the stand-by display for function, file or mail being created, you can start the target operation quickly. And, icon on the stand-by display can be changed freely.→P351

Pedometer/Activity monitor

You can check the number of steps, walking distance, consumed calories and burned fat on FOMA terminal. You can also measure "Brisk walk" that is a measure of your aerobic exercise and "Activity amount" that is calculated by exercise duration and exercise intensity of your physical activity.→P361
You can enjoy using the preinstalled stand-by display (Flash graphics) such as "スペースジム (Space gym)" and "ウォーキング×フラワー (Walking × Flower)" that work with the activity monitor and pedometer.

* In this manual, they are described as "Pedometer/Activity monitor" according to the menu name of FOMA terminal.

Other functions




- Videophone call→P67
- Chaku-moji→P71
- Kisekae Tool→P106
- Security Settings→P113
- i-mode mail/Deco-mail/Deco-mail pictogram→P139
- Chaku-uta full^{®*1}/Uta-hodai/Music&Video Channel^{™2}/MUSIC Player→P241
- i-appli/Mega i-appli/Chokkan Game→P257
- Osaifu-Keitai/ToruCa→P283
- Network services→P389
- High-speed communication compatibility→P409

*1 "Chaku-uta full" is registered trademark of Sony Music Entertainment (Japan) Inc.







*2 A charged service requiring subscription.

Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 DANGER	This sign denotes that death or serious injury may directly result from improper use.
 WARNING	This sign denotes that death or serious injury may result from improper use.
 CAUTION	This sign denotes that bodily injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.
 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (common).....	11
Handling FOMA terminal	12
Handling battery pack.....	14
Handling optional devices (AC Adapter/DC Adapter/Desktop Holder/In-Car Holder)	15
Handling UIM	16
Handling mobile phones near electronic medical equipment	16

◆ Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (common)

DANGER



Don't

Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.

May cause the equipment to be deformed or malfunction, and battery pack to leak, heat, burst or ignite, and the capability or life to be reduced or shortened. Overheating on parts of the case may cause burns or injuries.



No disassembly

Do not disassemble or remodel the equipment. Do not solder items onto the equipment.

May cause fire, injuries, electric shock, or malfunction. It may also cause the battery pack to leak, heat, burst or ignite.



No liquids

Do not let the equipment get wet.

Contact with water or other liquids can cause heating, electric shock, fire, malfunctions or injuries. Take care of the place for use and treatment of the equipment.



Do

Use the battery pack and adapter (including battery charger) specified by NTT DOCOMO for your FOMA terminal.

Use of equipment not specified by DOCOMO can cause FOMA terminal, battery pack and other parts to leak, heat, burst, catch fire or malfunction.

* Contact a sales outlet such as docomo Shop for information on other compatible products.

WARNING



Don't

Do not put the battery pack, FOMA terminal, adapter (including battery charger) or UIM in microwave ovens or other heating appliances or high-pressure containers.

May cause the battery pack to leak, heat, burst or ignite, FOMA terminal, adapter (including battery charger) or UIM to heat, smoke, ignite, or damage circuits.



Don't

Do not throw the equipment or give hard shock to it.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



Don't

Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal.

May be subject to electrical short and could cause fire or malfunction.



Do

Turn FOMA terminal OFF before entering a place such as a gas station where flammable gases are generated. Do not charge the battery. The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.

1. Remove the power plug from the wall outlet or cigarette lighter socket.
2. Turn FOMA terminal OFF.
3. Remove the battery pack from FOMA terminal.

May cause the equipment to heat, burst or ignite or the battery pack to leak if you keep using the equipment.

⚠ CAUTION

Do not leave the equipment on unstable or sloping surfaces.

Don't

May cause malfunction or injuries.



Do not store the equipment in extremely humid, dusty or hot areas.

Don't

May cause malfunction.



Do

Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.
May cause injuries.



Do

Store the equipment out of reach of small children.

May be accidentally swallowed or cause injuries.



Do

Be careful especially when using FOMA terminal connected to the adapter (including battery charger) continuously for a long time.

If you execute i-appli, use videophone call or watch 1Seg while charging the battery pack, FOMA terminal, battery pack and adapter (including battery charger) may become hot. Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

◆ Handling FOMA terminal**⚠ WARNING**

Don't

Do not direct the infrared data port toward your eye and transmit signals.

May affect your eyes. Faulty operation could result from directing the infrared data port toward other infrared equipment and transmitting signals.



Don't

Do not turn on the light by getting the lighting part closer to other person's eyes.

May impair eyesight. And may cause accidents like injury etc., by dazzling or astounding other people.



Don't

Do not put FOMA terminal in the place such as the dashboard near the air-bag, where the influence of air-bag explosion is expected.

When the air-bag explodes, FOMA terminal may hit yourself or others and could cause injury, equipment malfunction or damage.



Don't

When you use electronic medical equipment, do not keep the terminal in your chest pocket or inside pocket.

Using your FOMA terminal near medical electronic equipment could cause equipment failure.



Don't

Do not put foreign objects such as liquid like water, metal pieces or burnable things into UIM or microSD card slot.

May cause fire, electric shock or malfunction.



Don't

Do not turn on the light aiming directly at the driver of the car etc.

May disturb driving and cause an accident.



Do

Turn FOMA terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.

May cause electronic equipment or electronic medical equipment to fail or malfunction. If the function which automatically turns the power ON is set, cancel the setting before turning the power OFF.

When using the phone in a medical facility, be sure to observe the regulations of the facility. If you do prohibited act such as using the phone in an airplane, you may be punished according to law.



Do

When you talk by setting handsfree, always keep FOMA terminal away from your ear.

And, when connecting the earphone/microphone to FOMA terminal and play a game or music, adjust the volume moderately.

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.