

<Functions of parts>**1 Light sensor**

Sense the ambient luminance (automatic adjustment of the brightness of the display).

* Blocking the light sensor may disable correct adjustment of the brightness.

2 Earpiece

Hear other party's voice from here.

3 In-camera

Shoot your own image, or send your image via videophone.


4 Display → P29**5 Microphone**

Send your voice from here.

* Do not cover the microphone during a call or sound recording.

6 Sub-display → P33**7 Mark → P270, 307**

Installation of IC card

* You can use Osaifu-Keitai by placing  mark over IC card reader or send/receive data by iC transmission. The IC card cannot be detached.

8 Light → P35**9 Call light → P35****10 Mail light → P35****11 FOMA Built-in antenna**

* The terminal has a built-in FOMA antenna. For better voice quality, do not cover the antenna with your hand.

12 Out-camera

Shoot still images or moving pictures, send images over a videophone call.

13 Speaker

Hear ring alert or voice of the caller using the speakerphone etc. from here.

14 Infrared data port → P307, 310

Infrared communication, Infrared remote control.

15 Back cover

* Remove a back cover, open an inner lid, then remove a battery pack to access a microSD card slot. →P295



16 Charging jack**17 Back cover lever → P43****18 Strap opening****19 External connection jack**

An integrated connection jack for charging or connecting earphone etc.


* Available to connect an optional AC adapter, DC adapter, FOMA USB Cable with Charge Function, Earphone Plug Adapter for External connector terminal etc.

<Functions of keys>


The functions available by pressing keys are as follows.


 : Press  : Press for 1 second or more


1  MENU key


 Display menus, perform the operation shown at the upper left of the guide area.


2  i-mode/i-appli/▲ (scroll)/Character


 Establish i-mode connection and display iMenu.


 Scroll upward the mail screen or site/website display by pages.

 Perform the operation shown in the lower-left corner of the guide area, switch character entry modes.

 Display i-appli folder list.


3  ch/α/Clear key


 Display i-Channel list, switch i-appli stand-by display and i-appli activation.


 Delete characters or return to previous screen.


 Start/Cancel Self mode.

4  Start a voice call/  Speakerphone/AF key

 Make/Receive a voice call, return to the previous character while entering characters.


 Switching the speakerphone function, start/cancel auto-focus.


 Make a voice call using the speakerphone function.

 Restore the character string to its previous state.


5 Keypads


 - 


 Enter phone numbers (1-9) or characters, select menu/items.

 Perform the function registered in Custom menu.

 


 Enter phone number (0) or characters, select menu/items.

 
 Use Auto switch of Int'l call assist when making international calls.

6  *** / A/a/Line feed/Public mode (Drive mode) key**

- Enter " * ", " * ", " * ", " * ", etc., switch upper/lower case.
- Line feed while entering characters, select menu/items.
- Switch display/hidden of guide area when shooting a still image.
- Switch horizontal and vertical displays while playing moving picture/i-motion or Music&Video Channel.
- Start/Cancel Public mode (Drive mode).

7  **i-Widget/TV key**

- Start/Exit i-Widget
- Watch 1Seg or switch Multi windows.



8  **Search key**

- Enter the target word, place or name and search.
→P315

9 **Multi-cursor key**

- Enter key
 - Perform the operation, activate Focus mode.
 - Start i-appli registered for one-key shortcut.
- Schedule/ ↑ key
 - Display Scheduler.
 - Adjust volume, move the cursor upward.
- Display alarm list
- Phonebook/ ↓ key
 - Display phonebook.
 - Adjust volume, move the cursor downward.
- Add to the phonebook.
- Received calls/← (previous) key
 - Display Received calls, switch displays, move the cursor leftward.
 - Start/Cancel privacy mode when "Activate/Deactivate" of Activation option is set to "Hold L-cursor key".
- Redial/ →(next) key
 - Display Redial, switch displays, move the cursor rightward.

- Start/Cancel IC card lock.


* May be described as  .

10  **Camera key**

- Start still image shooting, perform the operation shown at the upper right of the guide area.
- Start moving picture shooting.

11  **Mail/▼ (scroll) key**


- Display mail menu, perform the operation shown at the lower right of the guide area.
- Scroll downward the mail screen or site/website display by pages.
- Pressing twice : Check new message
- Display mail creation screen

12  **Power/End key**

- Terminate on-hold, calling/operating function, display/hidden calendar layout.
- Press for 2 seconds or more : Turn power ON/OFF.

13  **#/Macro shooting/Silent mode key**

- Enter " # ", " . ", " ° ", " ? ", " ! ", " . ", select menu/items.
- Turn Macro mode on or off while using the camera.
- Start/Cancel Silent mode.

14  **Multitask key**

- Perform another function while talking or operating (Multiaccess/Multitask).

15 **Side key**

- Music key
 - Operate MUSIC Player or Music&Video Channel player.
 - Activate MUSIC player.
- Stop ring alert, alarm sound or vibrator.
- Adjust volume, turn up volume during a call.
- Turn on the light or switch displays of the sub-display when FOMA terminal is closed.

- Activate quick message recorder while receiving a call, activate/stop voice memo or moving picture memo during a call.

- Start/Cancel Silent mode*¹ or activate high-pitched alarm*² when FOMA terminal is closed. Activate Record msg.&Voice memo on the standby display when it is opened.



- Adjust volume, turn down volume during a call.
- Turn on the light or switch displays of the sub-display when FOMA terminal is closed.
- Check new message*¹ or activate high-pitched alarm*² when FOMA terminal is closed. Mute sound of 1Seg watching or video playback, check new message on the standby display when it is opened.

*¹ Side key shortcut is the operation in the default state.

*² Operation when High-pitched alarm is "ON".

Viewing display












 
 



 




 




 







 









The current state can be checked by the icon appearing on the screen.



- ① : Battery icon→P48
 ② : Antenna icon→P49
 圏外 : Out of service area→P49
 SELF : Self mode ON→P108
 : Data transfer mode ON^{*1}→P115, 295, 307
 ③ : In i-mode (during i-mode connection)/(during packet communication)→P164

- ④ : Infrared communication in operation→P307
 : Infrared remote control in operation→P310
 : The total calls cost exceeds the limit→P331
^{*2}
 ⑤ : Communication using handsfree-compatible device in progress→P64
 : Speakerphone function in use→P57
 (blue)/ (red)/ (red)/ (red) : Network in use→P362
 : Power saving mode activated→P93
 ⑥ : High-pitched alarm is set to "ON"
 ⑦ : Lock on close/Lock when immobile is activated
^{*2}
 ⑧ : Unread Area Mail, mail, i-concier information or MessageR/F state→P136, 154, 156, 159, 190
 : Unread Area Mail
 : Unread i-mode mail and SMS storage space is full on UIM
 : Unread i-mode mail and SMS storage space is full
 : SMS storage space is full on UIM
 : Unread i-mode mail and SMS exist
 : Unread i-mode mail exists
 : Unread SMS exists
 : Arrival i-concier information exists
 (red)/ (blue) : Unread MessageR storage space is full or unread MessageR exists
 : Unread MessageR exists
 : Unread mail and unread i-concier information exist
 (red)/ (green) : Unread MessageF storage space is full or unread MessageF exists
^{*2}
 ⑨ : Storage state in i-mode Center, browser screen display→P136, 154, 168, 179

- : i-mode mail and MessageR/F storage are full or one of these spaces is full and unreceived mails exist in Data Center
 : i-mode mail or MessageR/F storage space is full in Data Center
 : Unreceived i-mode mail and MessageR/F exist in Data Center
 : Unreceived i-mode mail, MessageR or MessageF exists in Data Center
 : Scrolling the browser screen by tilting the terminal
 : Browser screen is displayed (Keitai mode)
 : Browser screen is displayed (PC layout mode)
^{*2}
 ⑩ : Displaying SSL/TLS page/Executing SSL/TLS session with i-appli, using i-appli downloaded from SSL/TLS page→P165
 : Frame of SSL/TLS page is enlarged→P170
 : Mail failed to Auto-send exists→P135
 : Auto-send mail exists→P135
 : Frame is enlarged→P170
 : Music&Video Channel program obtaining reservation exists→P229
 ⑪ : i-appli/i-appliDX/i-appli call state→P245, 261, 262
 : During i-appli operation
 (gray) : i-appli stand-by display ON
 (orange) : i-appli is being started from the i-appli stand-by display
 : i-appli is running
 (gray) : i-appliDX stand-by display ON
 (orange) : i-appli is being started from the i-appli stand-by display
 : i-appli call received while i-appli is running

-  (gray) : i-αappli call received while displaying i-αappli stand-by display
-  (orange) : i-αappli call received while i-αappli is being started from i-αappli stand-by display
-  (gray) : i-αappli call received while i-αappliDX is running
-  (gray) : i-αappli call received while displaying i-αappliDX stand-by display
-  (orange) : i-αappli call received while i-αappli is being started from i-αappliDX stand-by display
-  : i-αappli call received
- ^{*3}  : Alarm clock ON→P317
-  : 1Seg watching/recording reservation, schedule reminder ON→P221, 320
-  : Schedule reminder or 1Seg watching/recording reservation and alarm clock are simultaneously ON→P221, 317, 320
- ^{*3}  : Inside OFFICEED area→P357
-  : Arrival information→P38
-  : Shortcut icons→P324
-  : Silent mode ON→P87
-  : Personalized silent mode ON→P88
- ¹⁶  : Call alert volume is Silent→P84
-  : Vibrator for voice call ON→P85
-  : Call alert volume is Silent and vibrator for voice call ON→P85
- ¹⁷  : In Public mode (Drive mode)→P66
- ¹⁸  : Record message ON/recorded messages full→P68
- ^{*2}  : Keypad dial lock ON→P109
- ¹⁹  : Side key hold→P116
- ^{*2}  : Personal data lock ON→P108
- ²⁰  : Music&Video Channel obtaining failure/success→P229
-  : 1Seg recording reservation completed/failed→P223
- ^{*2}  : Reading UIM→P41, 49
-  (key is yellow) : IC card lock ON→P272
-  : Individual IC card lock→P272
- ²²  : Displaying available multi-cursor key in Focus mode→P38
-  : Remote customization ON→P123
- ²³  : Performing 1Seg recording reservation/1Seg recording (only watching stopped)→P220, 223
-  : i-αappli Auto start failed→P261
- ²⁴  : State of USB mode settings and microSD card→P295, 302
-  : microSD card installed during Communication mode
-  (blue)/  (gray) : microSD card installed or not during microSD mode
-  (blue)/  (gray) : microSD card installed or not during MTP mode
- ^{*2}  : Connected to external device using USB cable→P72, 302
- ²⁵  : Pedometer/Activity monitor is set→P335
- ^{*2}  : Software update notice→P420
- ²⁶  : Software update pre-specified→P421
-  : Update notification icon→P420
-  /  : Auto-update of the latest pattern definition failed/succeeded→P423

*1 When data transfer mode is activated, the terminal is in the same state as out of service area and Multitask becomes unavailable.

*2 The current highest-priority item is displayed. These icons are listed in descending order of the priority from the top.


*3 Time appears on a screen other than the stand-by display.

✓ INFORMATION

- Depending on the displayed function, an icon may be displayed at a different position, or some or all icons may not be displayed.

◆ Task area

The icon indicating the function (task) in progress appears in the task area. During Multiaccess or Multitasks, the icons show which functions are running.

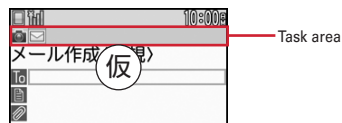


◆ Icons indicated on the task area



- : Voice call
- : Received calls
- : Redial
- : Record message/Voice memo
- : Videophone call
- : Videophone using an external device
- : Call (switching)
- : Call (disconnecting)
- : FOMA terminal phonebook
- : Contact setting of Privacy mode
- : Kisekai Tool
- : Mail/MessageR/F
- : Area Mail
- : Receiving i-mode mail
- : Checking new message/SMS
- : Sent msg. log/Received msg. log
- : Receiving SMS
- : i-mode (including when Last URL or Screen memo is displayed)
- : Full Browser
- : Displaying Bookmark/Access shortcuts of i-mode or Full Browser
- : i-concier
- : Still camera
- : Movie camera
- : Bar code reader
- : 1Seg
- : Activating Music&Video Channel
- : Music&Video Channel program obtaining

- : MUSIC Player
- : i-appli
- : ToruCa
- : My Picture
- : Moving picture/i-motion
- : Chara-den
- : Melody
- (blue) / (gray) : Accessing microSD card/Standing by for accessing
- : Sound recorder
- : Adjusting volume by Multitask
- : Countdown timer
- : Alarm clock
- : High-pitched alarm
- (including activation notification of 1Seg)
- : Fake call
- : Toy's world
- : User information
- : Calculator
- : Pedometer/Activity monitor
- : Search engine
- : Notepad
- : Dictionaries
- : Accessing Data Center
- : Displaying synchronization log
- : Network services set
- : Calling or communicating packets via USB/Sending or receiving packets via USB
- : 64K data communication
- : Accessing external data
- : Updating software/Software update notified
- : Updating pattern definition/Displaying version
- (gray) : Each function set or on hold


◆ Guide area

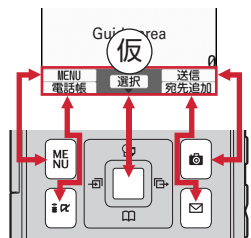Operations that can be performed by pressing , , , and are displayed in the guide area. Displayed operations vary by the screen. Display locations and keys correspond as shown in the figure.

 



 



 
 
 
 


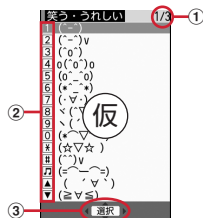-  on the guide area corresponds to multi-cursor keys  (It may be different depending on the function you are using or how the site or website is made).

◆ List screen








 
- ① When a list extends to multiple pages, the currently displayed page number and the total number of pages appear.

- ② Items that are associated with displayed numbers, symbols or side key icons can also be selected by pressing the corresponding keys (-, , , , , ,).
- ③  indicates that there are items that can be selected above and below the cursor position. Press  to move the cursor. When  is pressed on the last item of the page, the next page appears, when  is pressed on the first item of the page, the previous page appears.
 - ◀ ▶ indicates that there are items that can be selected over the multiple pages. Press  to change the page. Some screens such as an icon selection screen cannot be switched.

◆ i-Widget screen



例：iウィジェット画面

- While i-Widget is running, operations that correspond to , , , , ,  are displayed on the screen as in the guide area. Displayed operations differ depending on screens.
- Using i-Widget → P266

Sub-display/Light overview


With sub-display or light of FOMA terminal, various information or states can be checked.

◆ Displaying sub-display

When FOMA terminal is folded, icons or messages appear on the sub-display.


 
- When FOMA terminal is closed, the sub-display light turns on, animation is displayed, then a clock appears. When no operation is performed for approximately 15 seconds, the light turns off.
- When the sub-display light is turned off, pressing or , or setting time notification on the hour in Time tone turns on the light. When there is arrival information, press to operate the vibrator once. When you pick up and tilt FOMA terminal with ★自動点灯設定★ or ★背面ディスプレイ設定★ set to "ON", the light turns on in a second. If you move FOMA terminal just before the light turns on, the light may not turn on.
- When opening FOMA terminal with information displayed on the sub-display, the information disappears.
- In All lock, Omakase Lock or Side key hold, pressing or shows a message indicating the lock is set, and after a period of time, the clock display screen appears.

❖ Icons or states displayed

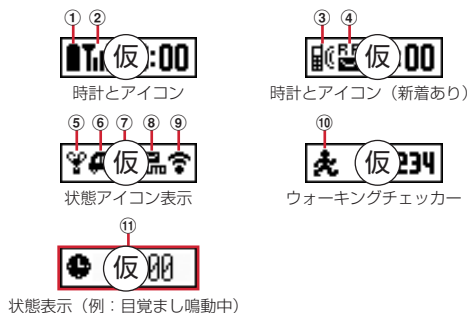


- ① : Battery icon
 - ② : Antenna icon
 : Out of service area
 : Self mode ON
 : In data transfer mode
 - ③ : In i-mode communication (i-mode site)/(packet communication)
 - ④ : IC card lock ON
 - ⑤ : Unread Area Mail exists
 : Unread i-mode mail/SMS exists
 : Unread MessageR/F exists
 : Arrival i-concier information exists
 : i-mode mail or MessageR/F storage space is full in Data Center
 : i-mode mail or MessageR/F exists in Data Center
 - ⑥ : Silent mode ON
 : Personalized silent mode ON
 : High-pitched alarm is set to "ON"
 - ⑦ : Pedometer/ACT monitor is set
 - ⑧ The states below are notified by message or image.
 - Status display of a voice call, videophone call (including Chaku-moji) and recorded message
 - While checking/receiving i-mode mail, SMS or Message R/F, or reception of Area Mail
 - While watching/recording 1Seg (except reserved recording), playing a melody, playing movie/i-motion (playlist play and continuous play), using Music&Video Channel player, using Music player or using the microSD card
 - While alarm clock or schedule reminder (including activation notification of 1Seg) is sounding, Countdown timer is operating/sounding
 - Status display of packet communication, 64K communication, communication via USB, infrared communication or iC transmission
 - When the battery is exhausted or Lock on close is activated, in Side key hold, All lock or Omakase Lock
- * The current highest-priority item is displayed. These icons are listed in descending order of the priority from the top.

❖ Switching displays

When a clock is displayed, press  to switch displays in the order of icons and a clock→date and a clock→a big clock. When Set Pedometer/Activity monitor is "Use", press  to switch displays in the order of steps→amounts of activity→a clock.

- Restored to the clock display when no operation is performed for a certain period of time.

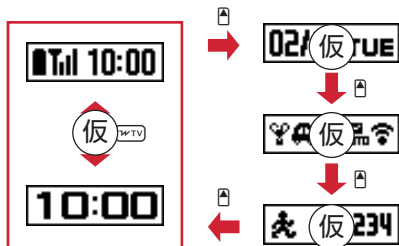

❖ Displaying information for Missed call or Unread message



When there are voice messages in Missed call, Recorded messages, Unread messages, Unread MessageR/F or Voice Mail Service, you can check the number or detail information on the sub-display.

- The detail information of voice messages in Voice Mail Service is not displayed.

<Example> Viewing the number and detail information of Missed call


1 When the clock is displayed,

The vibrator operates once and the number is displayed.

- If there is not other arrival information, press  to switch to the clock display. When there are the multiple types of arrival information, each time you press , the number is displayed in the order of Missed call→Recorded message→Unread messages or unread MessageR/F→Voice messages in Voice Mail Service.

2 While displaying the number,

Reception date/time and the arrival information of the other party are scrolled.

- If there are multiple each information, when the detail is displayed, press  to check up to 10 items.



- Restored to the clock display when no operation is performed for a certain period of time.
- During the clock display, detail information can be displayed by double-tapping the side of FOMA terminal. If there are multiple items, each time you double-tap, the next information is displayed.

✓INFORMATION

- Because of the characteristics of surface panel, sub-display may not be seen clearly at places in the sunlight. In this case, check the display in the shade, or make a shadow with your hand to check the display.

◆ Displaying light

- Turn on or blink in the cases below.
 - When receiving a call or mail/i-concier information, during a call, when obtaining ToruCa or accessing IC card
 - When opening/folding FOMA terminal or notifying time on the hour by Time tone
 - When activating Lock on close or Auto keypad lock, shooting a still image, recording a movie, operating Music&Video Channel player or Music player
 - When alarm clock, schedule reminder or countdown timer is sounding
 - During iC transmission
- For some functions, operation is performed according to Light alert setting.

◆ Displaying call light and mail light

When Indicator light is set to "ON", a missed call or unread mail, if any, is notified with the blink of the light.

- (call light) : Unchecked missed calls exist
- (mail light) : Unread mail (including SMS) exists
- After the missed call or unread mail is checked, the blink stops.
- The light blinks when a call or mail is received regardless of the setting of Indicator light.

Selecting functions from menu

- This manual mainly gives descriptions assuming that Kisekai Tool is set to "White".
- Menus are categorized by function.→P376

◆ Menu screen and switching method

❖ Menu screen

The following menu screens are available.

Kisekai menu : A menu that you can change the design using Kisekai tool.

In addition to menus compatible with moving pictures, "拡大メニュー (enlarged menu)" that is easy to view with large font and "Simple Menu" are available. A Kisekai menu matched with the color of FOMA terminal is set by default.

- Some Kisekai menu changes the menu structure according to usage frequency. In the Kisekai Tool stored by default, "切替メニュー (Switch menu)" and "ダイレクトメニュー (Direct menu)" in the "Preinstalled" folder support this function.
- Some Kisekai menu does not support English display when バイリンガル (Select language) is set to "English".


Basic menu : A basic menu that the menu structure and menu numbers are fixed.

- Menu icons or background design can be changed by customizing Kisekai Tool or menu.→P95, 97
- The font size of the menu changes synchronized with Kisekai Tool.

Custom menu : A menu that menu items can be freely registered.→P325

❖ To switch the menu screen temporarily

In each menu screen, you can temporarily switch to a different menu screen by the following operations. You can also set which menu to display when pressing **[MENU]** on the stand-by display. → P95

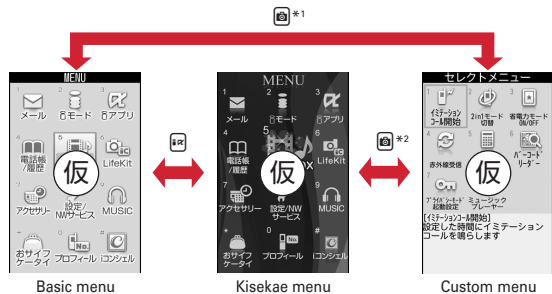

*1 Cannot be switched when Kisekae menu or Shortcut menu is set as Select startup menu.

*2 Cannot be switched when Basic menu is set as Select startup menu.

✓ INFORMATION

Some types of Kisekae menus change the menu structure according to usage frequency. Also, the number assigned to menu item (item number) may not be applied.

◆ Selecting a function

Press **[MENU]** in stand-by and select and perform the functions from the menu displayed. There are 2 ways. One method involves using the keypad corresponding to the menu items (Shortcut operation). In the other method, the multi-cursor key is used to select from among the menu items.

- If any function is restricted by lock functions or no UIM is installed, **[LOCK]** icon appears or the font color changes indicating that the function is disabled. Note that the display does not change for Kisekae menu. When a function is disabled, the reason that the function cannot be performed etc. is displayed.
- Function description about the menu item at the cursor position may appear for some types or levels of the menu. The current setting may also be displayed in some menu items.


❖ Selecting menu items by keypad (Shortcut operations)

When numbers (item number) are assigned to menu items, a menu item can be selected by pressing the corresponding keypad (**[1-9]**, **[0]**, **[*]**, **[#]**).

- Press the item number displayed with the preferred menu item.
- Item numbers differ when "Simple Menu" is set by Kisekae Tool. → P388
- Item number of the menu → P376

<Example> Selecting "Calculator"

1 **[MENU]** **[7]** **[4]**

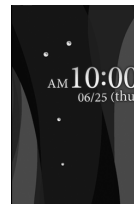

❖ Selecting menu items by multi-cursor key

<Example> Selecting "Calculator"

1 ▶ Move the cursor to "Accessory" ▶



- If you press to move the cursor, the color and/or design of the cursor position change. Moving by is unavailable for some menus.
- When "Simple Menu" is set for Kisekai menu, you can also move the cursor and press to select a menu (second level or upper).

2 Move the cursor to "Calculator" ▶

❖ To return to stand-by display or previous menu

After selecting a menu item, you can return to the stand-by display or previous menu by pressing the following keys.

: Return to the stand-by display.


: Return to the previous menu. Depending on the menu, you can return to the previous menu also by pressing .

◆ Selecting method of submenu

When "MENU" is displayed at upper-left of the guide area, various operations can be performed with submenus.

<Example> Selecting the redial submenu

1 On the redial list screen, ▶ Press a keypad for the submenu item number

 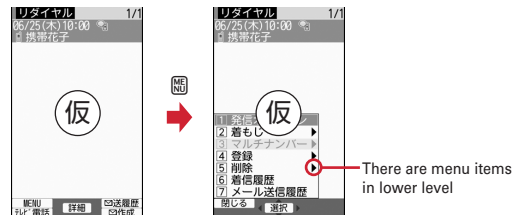


- You can also select an item by moving the cursor to and pressing or .
- Item numbers of the submenu with the same functions may vary by the operating screen.
- Pressing or closes the submenu.

◆ Operating procedure of each item


■ Selection of an item

 
When numbers or is displayed, press the corresponding keys. You can also select an item by moving the cursor with and press . When moving the cursor, the item at the cursor may be framed or change in color.




- Depending on the function, you can check vibration pattern of the vibrator, color or lighting pattern of light alert, the color scheme of screen settings or brightness of the display by moving the cursor to an item.

■ Pulldown menu operation

 
Move the cursor to the item to set and press , and then press the keypads corresponding to the item number.


 
 




- You can also select an item by moving the cursor to it and pressing .


■ Check box operation

 
Press the keypads corresponding to the item number.



- You can also select an item by moving the cursor to it and pressing .
- Pressing keypad for the item number or pressing  after placing the cursor, the check box switches  (Select) and  (Cancel).
- For some functions, you can select or cancel all items by pressing .


■ Confirmation screen operation

If a confirmation screen for performing functions appears while deleting, setting data, etc., move the cursor to "Yes" or "No" and press .



- For some functions, items other than "Yes" or "No" may appear.

◆ Displaying information quickly <Focus mode>

When  is pressed on the stand-by display with arrival information icon or i-concier information displayed, or with Info/calendar layout or Shortcut icons set, the display is changed to Focus mode that allows you to quickly display the related information.

- i-concier information → P190
- Shortcut icons → P324
- When i-concier information is displayed with Info/calendar layout set, the cursor cannot be moved to Info/calendar layout.





 
 




 
 
 
 





1 ▶ Move the cursor to an icon ▶



An icon at the cursor position is surrounded with a red frame.

The direction is indicated that it can be moved to by using multi-cursor key.

- A screen matched for the selected icon appears.

-   (Missed calls) : Received call list appears. With 2in1 in Dual mode,   appears when there is a missed call only to Number B and   appears when there are missed calls to both Number A and B.
-   (Recorded messages) : The recorded message list appears.
-   (Voice messages in Voice Mail service) : A confirmation screen for playing message appears. With 2in1 in Dual mode,   appears when there is a message only to Number B and   appears when there are messages to both Number A and B.
-   (Unread messages) : The folder list of Inbox appears.
-   (Unread ToruCa) : The ToruCa list of the folder containing the latest unread ToruCa appears.
-  (i-appli call) : i-appli call log appears.

- You can perform the same operations when following icons appear.
 - : Connect to external device using USB cable
 - : Software update advance notice/notification
 - : Auto-update of latest pattern definition success/failure
 - : Music&Video Channel program obtaining success/failure
 - : 1Seg recording reservation completion/failure
 - : Performing 1Seg recording reservation/1Seg recording (only watching stopped)
 - : Pedometer/Activity monitor

Canceling Focus mode: or

✓INFORMATION


- When moving the cursor to the icon for arrival information and press for 1 second or more, the icon disappears temporarily. For a voice message icon of Voice Mail service, a confirmation screen appears asking you to delete the display. Select "Yes" to delete the display. It reappears when the number of items is changed by accumulating new information or viewing existing information.
- In Focus mode, you cannot display the menu by pressing .

Using motion sensor

With the use of motion sensor, you can use various operations by double-tapping or tilting FOMA terminal.

❖ Double-tapping FOMA terminal

There are 2 kinds of effective areas for double-tapping (tapping twice) depending on functions : only the front side or back side, or only lateral sides of FOMA terminal.

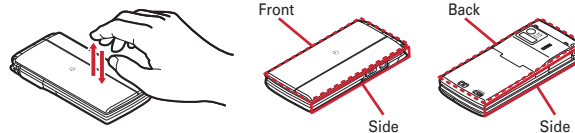

■ Stopping an alarm

When Alarm clock, schedule alarm or Countdown timer sounds with FOMA terminal closed, double-tap the front or back side of FOMA terminal to stop the sound. Alarm clock stops or starts snooze.

■ Displaying details of arrival information


Double-tap the lateral side of FOMA terminal with a clock displayed on the sub-display to display details of arrival information.→P34

◆ Tilting FOMA terminal

■ Auto rotation

While a browser screen is displayed or 1Seg video, moving pictures/i-motion (except continuous playback) or Music&Video Channel is played, tilt FOMA terminal 90 degrees clockwise or counterclockwise to display it in the horizontal display.

- When Auto rotation of Motion sensor is set to "ON", you can set individual functions to ON or OFF.
- While a JPEG image is displayed, the screen automatically switches to the vertical/horizontal display or change the display size by detecting the orientation of FOMA terminal regardless of rotation direction.

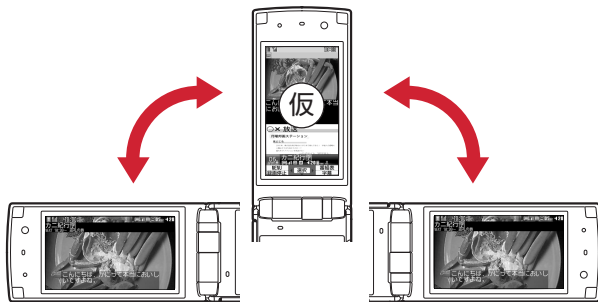

■ Flash graphics change

When setting Flash graphics compatible with motion sensor to stand-by display, image changes by moving FOMA terminal with the terminal opened.

■ Changing vertical/horizontal position or orientation of an image automatically when shooting a still image

The orientation of still image to be saved changes automatically according to the orientation of FOMA terminal. → P203

■ Scrolling a browser screen

You can scroll a browser screen up, down, to the right, left, or obliquely by tilting FOMA terminal while holding down \uparrow or \downarrow . The more you tilt the terminal, the faster the scrolling speed becomes. For example, tilt the terminal forward to scroll down and backward to scroll up.

- The pointer does not move even after the screen scrolls.

✓INFORMATION

- While walking or in the place with much vibration, scrolling a browser screen by tilting FOMA terminal may not work correctly. Also, do not walk while watching a screen because it is dangerous.

◆ Enabling Motion sensor <Motion sensor>

1 ME [Settings & NW services] 7 6 > Set required items > ME

Motion sensor : Set whether to enable Motion sensor.

Auto rotation : When "OFF" is set, the auto rotation for all the functions is disabled. When "ON" is set, you can set whether to enable each function.

Press ME to view the description of auto rotation of the function at the cursor position.