

General Inquiries <docomo Information Center>

☎ 0120-005-250 (toll free)

* Service available in: English, Portuguese, Chinese, Spanish, Korean.

* Available from mobile phones and PHSs.

■ From DOCOMO mobile phones
(In Japanese only)

■ From land-line phones
(In Japanese only)

☎ (No prefix) 151 (toll free) ☎ 0120-800-000 (toll free)

* Unavailable from land-line phones, etc. * Available from mobile phones and PHSs.

● Please confirm the phone number before you dial.

● For Applications or Repairs and After-Sales Service, please contact the above-mentioned information center or the docomo shop etc. near you on the NTT DOCOMO website or the i-mode site.

▶ NTT DOCOMO website <http://www.nttdocomo.co.jp/english/> ▶ i-mode site iMenu⇒お客様サポート (user support)⇒ドコモショップ (docomo Shop) * In Japanese only

Loss or theft of FOMA terminal or payment of cumulative cost overseas <docomo Information Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code for
the country you stay (table 1)

-81-3-5366-3114* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.

※If you use F-09A, you should dial the number +81-3-5366-3114 (to enter '+',
press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

International prefix number for
the universal number (table 2)

-800-0120-0151*

* You might be charged a domestic call fee according to the call rate for the country you stay.

※See page XXX and XXX for international call access codes for major countries
(table 1) and international prefix numbers for the universal number (table 2).

- If you lose your FOMA terminal or have it stolen, immediately take the steps necessary for suspending the use of the FOMA terminal.
- If the FOMA terminal you purchased is damaged, bring your FOMA terminal to a repair counter specified by DOCOMO after returning to Japan.



Li-ion 00

To prevent damage to the environment, bring used battery packs to a docomo service counter, a docomo agent or a recycle center.



This manual is printed using an ink based on soy bean oil.

Don't forget your mobile phone ... or your manners!
When using your mobile phone in a public place, don't forget to show common courtesy and consideration for others around you.

Repairs

■ From DOCOMO mobile phones
(In Japanese only)

☎ (No prefix) 113 (toll free)

* Unavailable from land-line phones, etc.

■ From land-line phones
(In Japanese only)

☎ 0120-800-000 (toll free)

* Available from mobile phones and PHSs.

Failures encountered overseas <Network Technical Operation Center>

(available 24 hours a day)

■ From DOCOMO mobile phones

International call access code for
the country you stay (table 1)

-81-3-6718-1414* (toll free)

* You are charged a call fee to Japan when calling from a land-line phone, etc.

※If you use F-09A, you should dial the number +81-3-6718-1414 (to enter '+',
press and hold the '0' key for at least one second).

■ From land-line phones <Universal number>

International prefix number for
the universal number (table 2)

-800-5931-8600*

* You might be charged a domestic call fee according to the call rate for the country you stay.

※See page XXX and XXX for international call access codes for major countries
(table 1) and international prefix numbers for the universal number (table 2).

Sales: NTT DOCOMO, INC.
Manufacturer: FUJITSU LIMITED

2009.X (1st Edition)
CA92002-5491

docomo

F-09A

INSTRUCTION MANUAL

'09.X

F-09A

ISSUE DATE: '09.X

NAME:

PHONE NUMBER:

MAIL ADDRESS:

INSTRUCTION MANUAL

NTT docomo

docomo PRIME series

Easy Search/Contents/Precautions	■
Before Using the Handset	■
Voice/Videophone Calls	■
Phonebook	■
Sound/Screen/Light Settings	■
Security Settings	■
Mail	■
i-mode/Full Browser	■
i-motion/Movie/i-Channel/i-concier	■
Camera	■
1Seg	■
Music	■
i-appli/i-Widget	■
Osaifu-Keitai/ToruCa	■
Map/GPS Function	■
Data Management	■
Convenient Functions	■
Character Entry	■
Network Services	■
Overseas Use	■
PC Connection	■
Appendix/Troubleshooting	■
Index/Quick Manual 簡易手冊	■

DOCOMO W-CDMA, GSM/GPRS System

Thank you for purchasing "docomo PRIME series F-09A" mobile terminal.

Before and during use of your FOMA terminal, be sure to thoroughly read this manual and instruction manuals that come with other optional devices to ensure you are able to correctly use your FOMA terminal. For more detailed information, contact "General Inquiries" using the phone number on the back of this manual. F-09A is your capable partner. Please treat it with care and enjoy using it for years.

Before using your FOMA terminal

- Because your FOMA terminal uses wireless transmission, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio waves are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there are strong radio waves and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave conditions, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Notepad, Recorded messages, Voice memos, Movie memo, etc.) you registered in your FOMA terminal. Note that DOCOMO assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of FOMA terminal.
- You are recommended to save important data to microSD card. Using DOCOMO keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.

- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL/TLS. Neither DOCOMO nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL/TLS. If the data should be erased, DOCOMO assumes no responsibility for the loss of any data.
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., SECOM Trust Systems Co., Ltd., Comodo CA Ltd.
- This FOMA terminal supports FOMA Plus-Area and FOMA HIGH-SPEED Area.
- FOMA terminal can be used only via the FOMA network provided by DOCOMO and DOCOMO's roaming area.

Before using this manual

This FOMA terminal supports Kisekai Tool (→P103). When changing the design of the menu screen using Kisekai Tool, the structure of some menus may be changed according to the usage frequency depending on the menu type. Also, the number assigned to menu item (item number) may not be applicable to some menu items.

Latest information about this manual can be downloaded from NTT DOCOMO website.

- User's Manual Download
<http://www.nttdocomo.co.jp/english/support/manual/index.html>
* The URL and contents are subject to change without prior notice.

Viewing/Searching this manual

This manual provides the methods below for necessary function's easy search.

Searching from Easy Search

▶ P4

Search for frequently used or convenient functions by plain words.

Searching from Menu list

▶ P412

Search from menu displayed on the display of F-09A.

Searching from thumb indices

▶ Front cover

Search from the index on the front cover.

*See P2-3 for examples.

Searching from Contents

▶ P6

Search from Contents categorized into chapters by functions.

Searching by main functions

▶ P8

Search from featured functions or new functions of F-09A.

Searching from the Index

▶ P472

Search from the function name, item keyword or service name.

Using the Quick Manual

▶ P482

You can cut out Quick Manual from this manual and carry it with you anywhere.

"Quick Manual in Chinese version (simplified Chinese)", which corresponds to "Quick Manual" in Japanese version and "Quick Manual (Overseas Use)" that is useful when you use FOMA terminal overseas, is appended.

 
- In this "Manual for F-09A", "F-09A" mobile terminal is usually referred to as "FOMA terminal". Please be forewarned.
- This manual explains functions performed with a microSD card. A microSD card is required separately.
microSD card→P314
- The images or illustration used in this manual are examples. They may differ from the actual displays.
- The icons and screens that appear on the display have been initialized to the default settings selected from the combinations prepared in FOMA terminal depending on FOMA terminal color.
This manual mainly gives descriptions assuming that Kisekai Tool is set to "White". →P103
- In this manual, "i-αppli compatible with Osaifu-Keitai which supports IC card function" is referred to as "Osaifu-Keitai compatible i-αppli".
- The description of "authenticate" indicates the operating procedure for entering the terminal security code in 4-8 digits or performing fingerprint authentication.
Terminal security code→P110
Fingerprint authentication→P112
- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents of this manual are subject to change without prior notice.

Viewing/Searching this manual

Methods to search pages are described, taking "Record message" for example.


Searching from Easy Search

Functions frequently used and convenient functions are categorized by their purposes and with simple words.

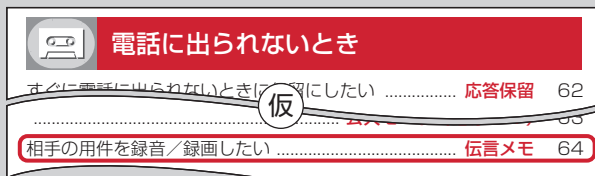


Searching from Menu list

 Functions can be searched from the words displayed on the FOMA terminal screen.

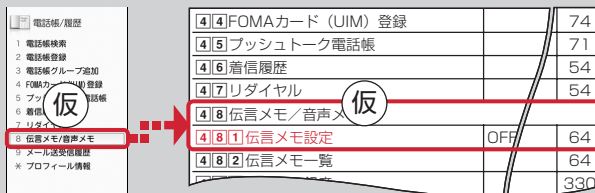

Searching from thumb indices

 Functions can be searched by using indices in the order of the front cover, chapter top page and function description page. The chapter top page also gives the list of detailed contents.

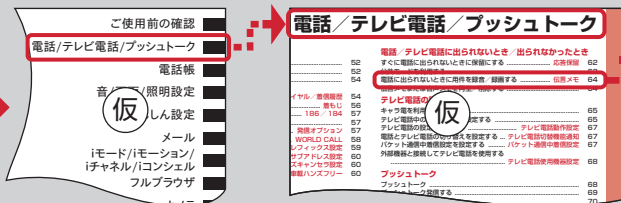

Function name

This name is listed in Index.

Outline and supplementary description of the function**Typical operating procedure****伝言メモ****電話に出られないときに用件を録音／録画する**

- 伝言メモを起動しておくと、電話に出られないときに応答ガイダンスが流れ、相手の用件が録音／録画されます。
- 音声電話とテレビ電話を合わせて最大4件、1件につき約30秒間録音／録画できます。
 - 2in1利用時、AナンバーとBナンバーに着信した伝言メモを合わせて最大4件録音／録画できます。表示はモードによって異なります。
 - フッシュトークでは利用できません。

◆ 伝言メモを起動する

1 **【電話帳/履歴】** または

「ON」にする、待受画面にが表示されます。

■ 伝言メモの起動中に電話がかかってくると

1 電話がかかってくる

伝言メモ応答時間設定の応答時間が経過すると、相手には伝言メモ応答ガイダンスが流れ、待受画面にが表示され、電話が流れます。

64 電話/テレビ電話/フッシュトーク

Index related to thumb index

* The page shown here represents an example. Images may differ from actual page in this manual.

2 相手のメッセージが録音／録画される

- 開始時と終了時に相手には確認音（ピーツ）が鳴ります。また、開始時から約25秒後に終了予告音（ピビツ）が鳴ります。

3 録音／録画が終了すると、電話が切れる**※クイック伝言メモに対応する（クイック伝言メモ）**

伝言メモを起動していなくても、着信中にを1秒以上押し、その着信に限り伝言メモを1回だけ動作させられます。この操作は、伝言メモを開始に設定する操作ではありません。

仮**お知らせ**

- 応答ガイダンス中、伝言メモ録音／録画中でもを押すと電話に出ることができます。テレビ電話の場合はで自分の映像が、で代替画像が送信されます。このとき、電話を受けるまでの録音／録画内容は記録されません。
- 圏外や電源が切れているときは、伝言メモは動作しません。留守番電話サービスをご利用ください。
- 伝言メモが4件録音／録画されると、待受画面にが表示され、伝言メモおよびクイック伝言メモは動作しません。不要な伝言メモを削除してください。留守番電話サービスまたは転送でんわサービスを開始している場合は各サービスが動作します。

Supplementary description of the operation**Detailed description and convenient information about the function**

- In this manual, operation by pressing keys is represented by graphic symbols.→P24 "Part names and functions"
- The representations and meanings of operating procedures are as shown below.

Representation example	Meaning
(1 sec. or more)	Press for 1 second or more.
[Settings & NW services] -	On the stand-by display, , move the cursor to [Settings & NW services] and press . Successively, press , then press any of - .

- In this manual, to select an item by placing the cursor with (Multi-cursor key) and pressing (Enter key) is referred to as "select". Regarding an operation to enter characters in the entry field, the final step of pressing [OK] is omitted.
- This manual uses the default settings to describe operations. If the settings are changed, the displays or operations of FOMA terminal may differ from the ones described in this manual. For the default settings, see Menu List.→P412

Easy Search

Functions which you want to know can be searched for using friendly words.



Convenient functions for calls

Showing/Hiding your phone number	Caller ID notification	60
Putting the call on hold	On hold	65
Changing the volume of the other party's voice	Listen volume	65
Switching from voice call to videophone call	Switching to videophone call	66



When you cannot answer the call

Putting the call on hold when you cannot answer it immediately	Respond and Hold	74
Notifying the caller that you have to refrain from talking	Public mode (Drive mode)	75
.....	Public mode (Power OFF)	75
Recording the other party's voice or image	Record message	76



Changing sound, lighting color and vibration

Setting different ring tone etc. for incoming calls from specific parties	Alert by contact	83
Changing ring alert	Ring alert	91
Changing loudness of ring tone	Adjust volume	92
Making vibration when there is an incoming call	Vibrate alert/effect	93

Muting keypad sound	Keypad/touch sound	94
Setting silent mode	Silent mode	95
Changing the color of keypad light	Keypad light	101
Changing color such as light	Light alert	107



Changing displays

Meanings of icons on display	Viewing display	30
Switching the menu display	Selecting functions from menu	35
Changing stand-by display	Stand-by display	97
Displaying a calendar on stand-by display	Info/calendar layout	98
Changing font size	Font size	107



Safety and security

Hiding contents of phonebook	Secret attribute	87
Locking FOMA remotely in case of misplacement etc.	Omakase Lock^{*1}	116
Rejecting calls with no caller IDs	Anonymous caller	128
Rejecting calls from parties not saved in phonebook	Unregistered caller	130
Saving data such as phonebook in case of data loss	Data Security Service^{*2}	130



Making full use of mail

Sending Deco-mail	Deco-mail	138
Sending images and/or melodies	Attachment	143
Automatically sorting mails	Sort method	158



Making full use of camera

Saving shot still images to microSD card	Save to	208
Changing image size	Still image settings/Recording settings	213
Viewing shot still images	Displaying image	302



Making full use of 1Seg

Watching 1Seg	Activate 1Seg	225
Recording 1Seg	1Seg recording	231
Reserving watching/recording 1Seg	Watching/Recording reservation	232
Changing settings of images and sounds	User setting	235

*1 A charged service.

*2 A charged service requiring subscription.

- For procedures to search for other functions, see "Viewing/Searching this manual". → P1
- Quick Manual introduces you procedures for using convenient functions. → P482



Other convenient functions

Reading QR and/or bar code	Bar code reader	218
Listening to music	MUSIC Player	243
Using GPS function	GPS function	290
Using microSD card	microSD card	314
Sending or receiving data via infrared communication	Infrared communication	327
Using alarm clock	Alarm clock	341
Using calculator	Calculator	356
Using a mobile phone overseas	International Roaming	396
Updating software	Software update	455
Keeping security software updated	Scanning function	459

Contents

■ Before using your FOMA terminal	Inside front cover
■ Viewing/Searching this manual	1
■ Easy Search	4
■ Main functions of F-09A	8
■ Precautions (ALWAYS FOLLOW THESE DIRECTIONS)	10
■ Handling precautions	18
■ Accessories and main options	22

Before Using the Handset 23

Part names and functions Available styles
Viewing display Selecting menu Touch panel
Pointing device Motion sensor Using UIM
(FOMA card) Attaching/Removing battery
pack Charging battery Battery level Self-
check Power ON/OFF Select language Date &
time Caller ID notification User information
etc.

Voice/Videophone Calls 63

Making a call Redial/Received calls Chaku-
moji 186/184 Tone signal (DTMF) Call option
WORLD CALL Receiving a call Any key
answer Slide and answer Close settings
Respond and Hold Public mode Recorded
messages Using Chara-den Videophone
settings Notify of switchable mode etc.

Phonebook 81

Phonebook new entry Alert by contact Group

6 Easy Search/Contents/Precautions

settings Search/Edit/Delete phonebook
Secret attribute Quick dial etc.

Sound/Screen/Light Settings 89

Ring alerts & Sounds Adjust volume Vibrate
alert/effect Silent mode Timed theme Stand-
by display Call image Mail image Power
saving mode Select startup menu Display
Machi-chara Kisekai Tool Light alert Clock
display format etc.

Security Settings 109

Security code Terminal security code change
PIN code Fingerprint authentication All lock
Omakase Lock Self mode Personal data lock
Keypad dial lock Privacy mode Operation lock
Lock when immobile Accept/Reject call Data
Security Service Reset Delete all data
Initializing remotely Remote customization
etc.

Mail 135

Creating/Sending i-mode mail Deco-mail
Decome-Anime Attachment Saving i-mode
mail Quick mail Receiving i-mode mail Check
new message Operating Inbox/Outbox Mail
settings Messenger/F Area Mail Creating/
Sending SMS etc.

i-mode/Full Browser 173

Site display Change i-mode password
Internet connection Bookmark Screen memo
Downloading from site Uploading to site i-
mode settings Operating certificate etc.

i-motion/Movie/i-Channel/i- concier 195

i-motion Movie i-Channel i-Channel ticker i-
concier etc.

Camera 203

Still camera Movie camera Sound recorder
Advanced settings Setting for shooting Bar
code reader etc.

1Seg221

Setting channels 1Seg watching Program guide i-αppli Data broadcasting TVlink Multi window Recording Reserving Remote controller with microphone etc.

Music237

Setting program Operating Music&Video Channel Saving music data Playing/Managing music data BGM play Remote controller with microphone etc.

i-αppli/i-Widget253

Downloading Starting i-αppli i-αppli call i-αppli To i-αppli stand-by display Managing i-αppli i-Widget etc.

Osaifu-Keitai/ToruCa279

iC transfer service Starting Osaifu-Keitai compatible i-αppli IC card lock Receiving ToruCa etc.

Map/GPS Function289

Position location GPS compatible i-αppli Location request Notify location Loc. history Loc. history Map setting Setting GPS etc.

Data Management 301

Displaying/Editing image Playing/Editing movies/i-motion Displaying Machi-chara Displaying Chara-den Playing melody microSD card Managing data Infrared communication/iC transmission Displaying PDF Displaying Word, Excel, PowerPoint files Displaying recorded data of 1Seg etc.

Convenient Functions 337

Multiaccess Multitask Quick search Auto power ON/OFF Countdown timer Alarm clock Scheduler Shortcut icons Custom menu Slide and edit Turn-display option Search key shortcut Fake call Voice memo/Movie memo Call duration/Call cost Calculator Notepad Dictionaries Pedometer/Activity monitor Earphone/Microphone with switch Bluetooth® function etc.

Character Entry 369

5-touch input method Save phrase Copying/Cutting characters KUTEN code input Save word Password manager DL dictionary 2-touch input Text input method Entering Chinese Touch entry etc.

Network Services 385

Voice Mail Service Call Waiting Call Forwarding Service Nuisance Call Blocking Service Caller ID Request Service Dual Network Service English guidance Service numbers Arrival call act Remote control

Multi Number 2in1 OFFICEED Additional service etc.

Overseas use..... 395

Overview of international roaming service (WORLD WING) Services available Preparing and checking for overseas use Making/Receiving a call Network search mode PLMN setting 3G/GSM setting Area service status Roaming guidance Bar calls at roaming Network services etc.

PC Connection..... 405

Data communication DOCOMO keitai datalink etc.

Appendix/Troubleshooting ... 411

Menu list Combination of Multiaccess/Multitask functions Services available Introduction of options and related devices Error messages Warranty and After-Sales Service Software update Scanning function SAR certification information Intellectual Property Right etc.

Index/Quick Manual 471

Index Quick Manual in Japanese version (Domestic use/Oversea use) Quick Manual in Chinese version (simplified Chinese) (Domestic use/Oversea use)

Main functions of F-09A

i-concier

i-concier is a service to use FOMA terminal conveniently in which a character on the stand-by display (Machi-chara) notifies you of useful information and you can download schedules/i-schedule from a site.

With i-concier, downloaded schedule or ToruCa is automatically updated with the latest information, and address information etc. of stores and companies are automatically added to the phonebook. →P200

i-αpli call

i-αpli call is a function allows a third party or content providers to prompt predetermined i-αpli to be activated and it is used for activating other party's applications to play a versus game etc. →P272

i-Widget

i-Widget is a function that allows you to easily access frequently-used contents (widget applications) such as calculator, clock, a TV program guide and stock price information. You can also check the latest information at a glance by activating i-Widget screen. →P276

1Seg

You can watch "1Seg", a terrestrial digital TV broadcast for mobile devices. You can also shoot still images and record video while watching 1Seg. Dubbing+10 (→P317) is supported for recording video. →P222

i-mode

In addition to the higher operability and more convenient use of website information, you can enjoy a greater variety of video contents now that Flash[®] Video and Windows Media[®] Video are supported. →P174, 196

International Roaming

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan (3G/GSM Areas are supported). You can check the current location with the GPS function overseas. You can also use 3G/GPRS compatible i-αpli in the 3G/GPRS areas. →P396

And, "日英版しゃべって翻訳 for F (J-E Speech Translation for F)", which interprets your Japanese into English or your English into Japanese, is preinstalled. →P261

Battery display

You can specifically display the remaining battery level in 100 levels. Also, the self-check function that notifies you of the timing to replace the battery pack is provided. →P57, 58

Slide YOKO-MOTION with touch-enabled 3.4-inch large screen

You can use the 3.4 inch large screen according to functions and usage scenes in 3 styles: Slide style, YOKO-MOTION style and touch style. You can use intuitive touch operation in any of these styles. In the launcher menu that is designed for the touch operation, frequently-used menus/arrival information, Shortcut icons, etc. are displayed with large buttons so that you can easily touch them. →P28, 39

Operation lock and Lock when immobile

You can lock touch operations or keypad operations by pressing the dedicated lock keys and prevent unintended operations of FOMA terminal. When FOMA terminal is opened, the lock is canceled temporarily, but you can also set to lock again when FOMA terminal is closed. And, FOMA terminal is equipped with various lock functions such as the touch operation lock to lock only the touch operation during a call and Lock when immobile with Immobile sensor to lock the touch operation and keypad operation when no operations are performed for the specified time. →P125

High-performance camera

FOMA terminal is equipped with a camera with approximately 8 million pixels (effective pixels) that offers functions such as auto scene detection to select the appropriate shooting mode by detecting scenes or people, smile finder to release a shutter by detecting people's smiles, skin tone enhancer to enhance the skin tone to beautifully shoot people. →P204

Vicinity viewer

You can search for facilities around the current location and get guidance of airline distance and direction to the destination. You can also use it with Map Application to view directions to the destination. →P263

Quick search

On the stand-by display or while performing a function, search functions of i-mode, Full Browser, Map, dictionaries, phonebook or mail can be used by pressing the search key. →P339

Shortcut icons

Only by selecting the icon pasted on the stand-by display for function, file or mail being created, you can start the target operation quickly. And, icon on the stand-by display can be changed freely. →P348

Pedometer/Activity monitor

You can check the number of steps, walking distance, consumed calories and burned fat on FOMA terminal. You can also measure "Brisk walk" that is a measure of your aerobic exercise and "Activity amount" that is calculated by exercise duration and exercise intensity of your physical activity. →P358

You can enjoy using the preinstalled stand-by display (Flash graphics) such as "スペースジム (Space gym)" and "ウォーキング×フラワー (Walking × Flower)" that work with the activity monitor and pedometer.

* In this manual, they are described as "Pedometer/Activity monitor" according to the menu name of FOMA terminal.

Bluetooth

A wireless connection can be established between FOMA terminal and a Bluetooth device. You can talk with handsfree or play 1Seg sound or music while keeping FOMA terminal in a bag etc. →P361

Entering Chinese character

You can enter Chinese characters (simplified Chinese) in the character entry screens of i-mode mail, SMS, fixed phrases, etc. →P379
Quick Manual in the Chinese version (simplified Chinese) is appended at the end of this manual.

Other functions




- Videophone call →P64
- Chaku-moji →P68
- Kisekai Tool →P103
- Security Settings →P110
- i-mode mail/Deco-mail/Deco-mail pictogram →P136
- Chaku-uta full^{*1}/Uta-hodai/Music&Video Channel^{*2}/MUSIC Player →P238
- i-appli/Mega i-appli/Chokkan Game →P254
- Osaifu-Keitai/ToruCa →P280
- Map/GPS Function →P290
- Network services →P386
- High-speed communication compatibility →P406

*1 "Chaku-uta full" is registered trademark of Sony Music Entertainment (Japan) Inc.







*2 A charged service requiring subscription.

Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.
- The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines.

 DANGER	This sign denotes that death or serious injury may directly result from improper use.
 WARNING	This sign denotes that death or serious injury may result from improper use.
 CAUTION	This sign denotes that bodily injury or damage to property may result from improper use.

- The symbols below show specific directions.

 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.
 No wet hands	This symbol denotes that using the phone or its components with wet hands is not allowed.
 No liquids	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Unplug	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below.

Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (common).....	11
Handling FOMA terminal	12
Handling battery pack.....	14
Handling optional devices (AC Adapter/DC Adapter/Desktop Holder/In-Car Holder)	15
Handling UIM	16
Handling mobile phones near electronic medical equipment	16

◆ Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (common)

⚠ DANGER



Don't

Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.

May cause the equipment to be deformed or malfunction, and battery pack to leak, heat, burst or ignite, and the capability or life to be reduced or shortened. Overheating on parts of the case may cause burns or injuries.



No disassembly

Do not disassemble or remodel the equipment. Do not solder items onto the equipment.

May cause fire, injuries, electric shock, or malfunction. It may also cause the battery pack to leak, heat, burst or ignite.



No liquids

Do not let the equipment get wet.

Contact with water or other liquids can cause heating, electric shock, fire, malfunctions or injuries. Take care of the place for use and treatment of the equipment.



Do

Use the battery pack and adapter (including battery charger) specified by NTT DOCOMO for your FOMA terminal.

Use of equipment not specified by DOCOMO can cause FOMA terminal, battery pack and other parts to leak, heat, burst, catch fire or malfunction.

Battery Pack F10
 Desktop Holder F31
 FOMA AC Adapter 01/02
 FOMA DC Adapter 01/02
 FOMA Dry Battery Adapter 01
 FOMA USB Cable with Charge Function 02
 FOMA Portable Charging Adapter 01
 FOMA AC Adapter 01 for Global use

* Contact a sales outlet such as docomo Shop for information on other compatible products.

⚠ WARNING



Don't

Do not put the battery pack, FOMA terminal, adapter (including battery charger) or UIM in microwave ovens or other heating appliances or high-pressure containers.

May cause the battery pack to leak, heat, burst or ignite, FOMA terminal, adapter (including battery charger) or UIM to heat, smoke, ignite, or damage circuits.



Don't

Do not throw the equipment or give hard shock to it.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



Don't

Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charging jack or external connection jack. Do not put those materials inside the terminal.

May be subject to electrical short and could cause fire or malfunction.



Do

Turn FOMA terminal OFF before entering a place such as a gas station where flammable gases are generated. Do not charge the battery. The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations.

1. Remove the power plug from the wall outlet or cigarette lighter socket.
2. Turn FOMA terminal OFF.
3. Remove the battery pack from FOMA terminal.

May cause the equipment to heat, burst or ignite or the battery pack to leak if you keep using the equipment.