

DoCoMo W-CDMA, GSM/GPRS System

Thank you for purchasing FOMA F905i mobile terminal.

Both before and during use of your FOMA F905i mobile terminal, be sure to thoroughly read this manual and instruction manuals that come with the battery pack and other devices to ensure you are able to correctly use your FOMA F905i mobile terminal. For more information, you may contact us as mentioned on the back of this manual.

Treated with care, your FOMA F905i mobile terminal will be your able partner.

Before using your FOMA terminal

- Because your FOMA terminal uses radio waves, it may not function in locations where it is difficult for radio waves to penetrate, such as tunnels, underground passages and some buildings, in areas where radio wave signals are weak, or out of service area. Even when you are high up in a tall building or condominium and nothing blocks your view outside, your FOMA terminal may not be able to receive or transmit signals. Also, communication may be interrupted even when the signal meter on your FOMA terminal indicates there is a strong signal and you are not moving (traveling).
- Use your FOMA terminal in a way that does not disturb others in public spaces, crowded locations or quiet places.
- Because your FOMA terminal uses radio waves to communicate, it is possible that a third party may attempt to tap your calls. However, the W-CDMA, GSM/GPRS system automatically applies a confidential communication function to all calls, so even if a third party could somehow tap a call, they only hear noise.
- Your FOMA terminal encodes voice communication as digital data. When you are operating your FOMA terminal while moving to a location subject to weaker radio wave signals, the transmitted digital data may not be correctly decoded and as a result the decoded voice may differ somewhat from the actual voice.
- Maintain a separate record of the data (Phonebook, Schedule, Notepad, Recorded messages, Voice memos, Movie memo) you registered in your FOMA terminal. Note that DoCoMo assumes no responsibility for any loss of saved contents of data resulting from malfunction, repair, changing of the model or other handling of the FOMA terminal.
- You are recommended to save important data to microSD memory card. Using DoCoMo keitai datalink, you can transfer and save phonebook, mail, schedule and other data to a PC.
- The user hereby agrees that the user shall be solely responsible for the result of the use of SSL. Neither DoCoMo nor the certifier as listed herein makes any representation and warranty as for the security in the use of SSL. If the data should be erased, DoCoMo assumes no responsibility for the loss of any data.
Certifier : VeriSign Japan K.K., Cybertrust Japan Co., Ltd., GlobalSign K.K., RSA Security Japan Ltd., Secom Trust Systems Co., Ltd.
- This FOMA terminal is applicable to FOMA Plus-Area and FOMA HIGH-SPEED Area.
- The FOMA terminal can be used only via the FOMA network provided by DoCoMo and DoCoMo's roaming area.

Before using this manual

This FOMA terminal is applicable to Kisekai Tool (→P98). When changing the design of the menu screen using Kisekai Tool, the structure of some menus may be changed according to the usage frequency depending on the menu type. Also, the number assigned to menu item (item number) may not be applicable to some menu items. In such a case, as operations cannot be performed as described in this manual, switch to the basic menu (→P31) or reset the menu settings (→P100).

Latest information about this manual can be downloaded from DoCoMo's website.

- User's Manual Download

<http://www.nttdocomo.co.jp/english/support/manual/index.html>

* The URL and contents are subject to change without prior notice.

How to use this manual

This manual provides the methods below for necessary function's easy search :

Searching from Easy Search

▶ P4

Using friendly words, search for functions frequently used or convenient functions.

Searching from Menu list

▶ P398

Search from menu displayed on the display of F905i. Default settings are described in Menu list.

Searching from thumb indices

▶ Front cover

Use indices on the front cover to search for functions.

*See P2-3 for examples.

Searching from CONTENTS

▶ P6

Use CONTENTS categorized into chapters based on operations to search for functions.

Searching by main functions

▶ P8

Functions can be searched from specific features of F905i.

Searching from Index

▶ P452

Search from the function name, item keyword or service name.

Using Quick Manual

▶ P458

You can cut out Quick Reference Manual from this manual and carry it with you anywhere.
Also refer to described "Quick Manual (Overseas Use)" when using FOMA terminal overseas.

- In this "Manual for FOMA F905i", "FOMA F905i" mobile terminal is usually referred to as "FOMA terminal".
- This manual explains functions performed with a microSD memory card. A microSD memory card is required separately.
microSD memory card → P291
- The images or illustration provided in this manual are for information purposes only and may differ from the actual displays.
- The icons and screens that appear on the display and sub-display have been initialized to the default settings selected from the combinations prepared in FOMA terminal depending on the FOMA terminal color.
This manual mostly gives description assuming that Kisekae Tool is set to "White". → P98
- This manual gives descriptions based mainly on the default settings. If settings are changed, the displays or operations of the FOMA terminal may differ from the ones described in this manual.
- In this manual, "i-appli compatible with Osaifu-Keitai which supports IC card function" is referred to as "Osaifu-Keitai compatible i-appli".
- The description of "authenticate" indicates the operating procedure for entering the terminal security code (4-8 digits) or authenticating your fingerprint in this manual.
Terminal security code → P106 Fingerprint authentication → P108
- Unauthorized copying of parts of or this entire manual is prohibited.
- The contents of this manual are subject to change without prior notice.

How to use this manual

Methods to search pages are described, taking "Answer machine" for example.

Searching from Easy Search

Functions frequently used and convenient functions are categorized by their purposes and with simple words.

When you cannot answer the call

- Putting the call on hold when you cannot answer it immediately Respond and Hold 57
- Notifying the caller that you have to refrain from talking Public mode (Drive mode) 57
- Public mode (Power OFF) 59
- Recording the other party's voice or image Answer machine 60

Searching from Menu list

Functions can be searched for using the words displayed on the FOMA terminal screen.

Phone & Logs

- 1 Phonebook
- 2 Phonebook new entry
- 3 Phonebook(UIM) new entry
- 4 PushTalk phonebook
- 5 Received calls
- 6 Redial
- 7 Ans.Machine&Voice memo
- 8 Mail logs
- 9 User information

Menu	Page
1 Phonebook	P77
2 Phonebook new entry	P75
3 Phonebook(UIM) new entry	P76
4 PushTalk phonebook	P70
5 Received calls	P47
6 Redial	P47
7 Ans.Machine&Voice memo	1 Answer machine P60
	2 Recorded messages P61
	3 Record voice memo P351
	4 Voice memos P351
	P191

Searching from thumb indices

Functions can be searched for using indices of the end of the right side of the front cover in the order of the front cover, chapter top page and function description page.

The chapter top page also gives the list of detailed contents.

Easy Search/Contents/
Precautions

Before Using the
Handset

Voice/
Videophone Calls

Push Talk

Phonebook

Mail/Screen/
Logs

Voice/Videophone Calls

- Making voice/videophone calls 44
- Videophone 44
- Making voice/videophone calls Redial/Received calls 46
- Switching voice/videophone call Chatting 47
- Making a call using Redial/Received calls 186/184 47
- Using Chatting 48
- Setting to either Notify/Not notify caller ID for each call 50
- Sending tone signal (DTMF) 51
- Making a call Call option 51
- WORLD CALL 52
- Int'l call assist 53
- Receiving voice/videophone calls Media dialing 53
- Switching voice/videophone call when receiving Sub address 54
- Enabling use of keypad to answer call Noise reduction 54
- Hands-Free 54
- Ending/putting on hold/continuing a call by folding FOMA terminal Priority control item 54
- Setting priority screen for incoming calls during call or packet communication 54
- When you can/could not answer a voice/videophone call Respond and Hold 57
- Putting calls on hold when you cannot answer immediately Status message 57
- Setting status message Public mode (Drive mode) 57
- Using Public mode (Drive mode) Public mode (Power OFF) 59
- Using Public mode (Power OFF) 59
- Allowing the caller to record message when you cannot answer call Answer machine 60
- Playing/setting recorded messages 61

Outline and supplementary description of the function

Supplementary description of the operation

Index related to thumb index

Answer machine

Allowing the caller to record message when you cannot answer call

By activating Answer machine, a greeting message is played and the caller can record a message when you cannot answer the call.

- You can record up to 4 voice and videophone calls in total, approximately 30 seconds for each call.
- With Zin1 ON, messages of up to 4 incoming calls to Numbers A and B can be recorded in total. In A mode, only recorded messages of incoming calls to Number A appear in A mode and only those to Number B appear in B mode. In Dual mode, all recorded messages appear.
- Answer machine is not started for an incoming PushTalk call.

◆ **Activating Answer machine**

MENU [Phonebook & Logs] 71

You can set if you activate Answer machine.

- Operate FOMA terminal in open state.

1 Side key [▲] (1 sec. or more) ▶ 1 ▶ 1 or 2

☐ appears on the stand-by display when Answer machine is activated.

◆ **Responding with Quick answer machine <Quick answer machine>**

When Answer machine is not active, you can activate it once by pressing and holding side key [▲] for 1 second or more while receiving a call. This operation does not set Answer machine to active.

◆ **When there is an incoming call with**

60 Voice/Videophone Calls

✓ **INFORMATION**

- Even while playing greeting or recording a message, a call can be answered by pressing [☐]. For videophone call, you can answer also by pressing [☐]. A substitute image is sent to the other party by pressing [☐]. The contents of the recorded message before receiving the call are not recorded.
- When the FOMA terminal is out of service area or the power is OFF, answer machine does not operate. Use Voice Mail service.
- When 4 messages are recorded in Answer machine, ☐ appears on the stand-by display and the Answer machine or Quick answer machine does not operate. Delete unnecessary recorded messages. While the Voice Mail or Call forwarding service is used, each service is operated.
- In Personalized silent mode, the FOMA terminal depends on the settings of "Answer machine" of Personalized silent mode. →P92
- The recording of the messages may be distorted or the image may be blurred if the signal quality is poor.

◆ **Setting the response time before the greeting starts <Greeting msg resp time>**

MENU [Phonebook & Logs] 713

- The default is "13 seconds".

1 Side key [▲] (1 sec. or more) ▶ 1 [3] ▶ Enter the response time

- Set duration from 0 to 120 seconds.

◆ **Setting the greeting message <Set greeting message>**

MENU [Phonebook & Logs] 714

You can record your own voice as greeting message.

- 1 message approximately 10 seconds long can be recorded.

Function name
This name is listed in Index.

Detailed description and convenient information about the function

Typical operating procedure

Additional shortcut operation

* The page shown here represents an example. Images may differ from actual page in this manual.

Operating procedure and representation of key

- In this manual, operations of pressing keys are represented by graphical symbols. Keys are represented with simplified symbols as shown below.

Actual key	Key representation in this manual
1	1

Graphical symbols of keys used in this manual →P24 "Names and functions of parts"

- The representations and meanings of operating procedures are as shown below.

Representation example	Meaning
[ME] (1 sec. or more)	Press and hold [ME] for 1 second or more.
[ME] ▶ [Settings & NW services] ▶ 5 [7] 2 ▶ 1 - 3	On the stand-by display, press [ME], place the cursor on [Settings & NW services] and press [Enter]. Successively, press 5 [7] 2, then press any of 1 - 3.
	<ul style="list-style-type: none"> If the menu in [] is not displayed by pressing [ME], see precautions of Kisekai menu. →P31

- In this manual, to select an item by placing the cursor with [Multi-cursor key] and pressing [Enter key] is referred to as "select". Regarding an operation to enter characters in the entry field, the final step of pressing [OK] is omitted.

3

Easy Search

Functions which you want to know can be searched for using friendly words.



Convenient functions for calls

Showing/Hiding your phone number	Caller ID notification	41
Putting the call on hold	On hold	45
Changing the volume of the other party's voice	Listen volume	46
Switching from voice call to videophone call	Switching to videophone call	46



When you cannot answer the call

Putting the call on hold when you cannot answer it immediately	Respond and Hold	57
Notifying the caller that you have to refrain from talking	Public mode (Drive mode)	57
.....	Public mode (Power OFF)	59
Recording the other party's voice or image	Answer machine	60



Changing sound, lighting color and vibration

Setting different ring tone, etc. for incoming calls from specific parties	Alert by contact	76
Changing ring alert	Ring alert	87
Changing loudness of ring tone	Adjust volume	88
Making vibration when there is an incoming call	Vibrate alert/effect	89
Muting keypad sound	Operation sound	90
Setting silent mode	Silent mode	91
Changing color such as light	Light alert	102



Changing displays

Meanings of icons on display	Display overview	26
Switching the menu display	Selecting functions from menu	30
Changing stand-by display	Stand-by display	93
Displaying a calendar on stand-by display	Info/calendar layout	94
Changing font size	Font size	103



Making full use of mail

Sending Deco-mail	Deco-mail	171
Sending images and/or melodies	Attachment	175
Automatically sorting mails	Sort method	194



Making full use of camera

- Saving shot still images to microSD memory card [Save to](#) 131
- Changing image size [Image settings/Recording settings](#) 136
- Viewing shot still images [Displaying image](#) 278



Safety and security

- Hiding contents of phonebook [Secret attribute](#) 82
- Locking FOMA remotely in case of misplacement, etc. [Omakase Lock*1](#) 111
- Rejecting calls with no caller IDs [Anonymous caller](#) 121
- Rejecting calls from parties not saved in phonebook.....[Unregistered caller](#) 122
- Saving phonebook and other data as a precaution against data loss
..... [Data Security Service*2](#) 122



Making full use of 1Seg

- Watching 1Seg [Activate 1Seg](#) 255
- Reserving watching/recording 1Seg [Timer reception/recording reservation](#) 258
- Recording 1Seg [1Seg recording](#) 265
- Changing settings of images and sounds [User setting](#) 266



Other convenient functions

- Reading QR and/or bar code [Bar code reader](#) 143
- Using microSD memory card [microSD memory card](#) 291
- Sending or receiving data via infrared communication [Infrared communication](#) 307
- Listening to music [Music player](#) 326
- Using alarm clock [Alarm clock](#) 340
- Using calculator [Calculator](#) 353
- Using a mobile phone overseas [Overseas use](#) 388
- Updating software [Software update](#) 441
- Keeping security software updated [Scanning function](#) 444

*1 This is charged service.

*2 This is an optional subscriber service to be charged requiring subscription.

- For procedures to search for other functions, see "How to use this manual". → P1
- Quick Manual introduces you procedures for using convenient functions. → P458

CONTENTS

■ Before using your FOMA terminal.....	Inside front cover
■ How to use this manual	1
■ Easy Search	4
■ Main functions of FOMA F905i	8
■ Making full use of FOMA F905i	10
■ Precautions (ALWAYS FOLLOW THESE DIRECTIONS)	12
■ Handling instructions	17
■ Intellectual property rights	20
■ Basic package and optional accessories.....	22

● Before Using the Handset..... 23

Names and functions of parts Display overview
 Selecting menu Using UIM (FOMA card)
 Attaching/removing battery pack Charging
 battery Battery level Power ON/OFF Select
 language Date & time Caller ID notification User
 information etc.

● Voice/Videophone Calls 43

Making calls Redial/Received calls Chaku-moji
 186/184 Tone signal (DTMF) Call option WORLD
 CALL Receiving calls Any key answer Close
 settings Respond and Hold Public mode
 Recorded messages Using Chara-den
 Videophone settings Notify switchable mode
 etc.

● Push Talk..... 67

Making PushTalk calls Receiving PushTalk calls
 PushTalk phonebook PushTalk alert etc.

● Phonebook..... 73

Phonebook new entry Alert by contact Group
 settings Search/Edit/Delete phonebook Secret
 attribute Quick dial etc.

● Sound/Screen/Light Settings 85

Ring alert Alarm sound Adjust volume Vibrate
 alert/effect Silent mode Timed theme Stand-by
 display Ring alert settings Outgoing/Incoming
 mail/Retrieving image Select startup menu Style
 theme Light alert Clock display format etc.

● Security Settings..... 105

Security code Terminal security code change
 PIN code Fingerprint authentication All lock
 Omakase Lock Self mode Personal data lock
 Keypad dial lock Privacy mode Side key hold
 Lock on close Accept/Reject call Data security
 service etc.

● Camera 125

Still camera Movie camera Advanced settings
 Setting for shooting Bar code reader etc.

● i-mode/i-motion/i-Channel 147

Site display Change i-mode password Go to
 location Bookmark Screen memo Downloading
 from site i-mode settings Operating certificate i-
 motion i-Channel i-Channel ticker etc.

● Mail 169

Creating/sending i-mode mail Deco-mail
 Attachment Saving i-mode mail Quick mail
 Receiving i-mode mail Check new message
 Operating Inbox/Outbox Mail settings
 MessageR&F Area Mail Creating/sending Chat
 mail Creating/sending SMS etc.

● i-appli 211

Downloading Starting i-appli i-appli To i-appli
 stand-by display Managing i-appli etc.

● Osaifu-Keitai/ToruCa 227

iC transfer service Starting Osaifu-Keitai
 compatible i-appli Downloading ToruCa
 Managing ToruCa IC card lock etc.

● GPS Function..... 239

Position location GPS compatible i-appli
Location request Notify location Loc. history
Setting GPS etc.

● 1Seg..... 251

Channel setting 1Seg watching Program guide i-
appli Reserve program Data broadcasting
TVlink Multi window Recording Remote
controller with microphone FM transmitter etc.

● Full Browser..... 269

Viewing websites for PCs Setting for Full
Browser etc.

**● Data Display/Edit/Management
..... 277**

Displaying/editing image Playing/editing movie/
i-motion Chara-den Playing melody microSD
memory card Managing data Infrared
communication/iC transmission Sound recorder
Displaying PDF Displaying Word, Excel,
PowerPoint files Displaying recording data of
1Seg etc.

**● Music&Video Channel/Music
Playback 319**

Setting program Operating Music&Video
Channel Saving music data Reading Music
player folders and screen Playing/managing
music data Setting Music player Remote
controller with microphone FM transmitter etc.

● Other Convenient Functions..... 337

Multitaccess Multitask Auto power ON/OFF
Countdown timer Alarm clock Scheduler
Custom menu Turn-display option Side key
shortcut Voice memos/Movie memo Call
duration/Call cost Calculator Notepad
Dictionaries Earphone/Microphone with switch
Reset Delete all data etc.

● Character Entry361

5-touch input method Save phrase Copying/
cutting characters KUTEN code input Save word
Password manager DL dictionary 2-touch input
Text input method etc.

● Network Services371

Voice Mail service Call waiting Call forwarding
service Nuisance Call Blocking Service Caller ID
request service Dual network service English
guidance Service numbers Arrival call act
Remote control Multi number 2in1 OFFICEED
Additional service etc.

● PC connection setting.....381

Data Communication AT commands DoCoMo
keitai datalink etc.

● Overseas use387

Overview of international roaming service
(WORLD WING) Services available Preparing
and checking for using FOMA terminal overseas
Making/Receiving a call Network search mode
PLMN setting 3G/GSM setting Roaming
guidance Bar calls at roaming Services available
overseas etc.

**● Appendix/External Devices/
Troubleshooting397**

Menu list Combination of Multiaccess/Multitask
functions Services available Options and related
devices Error messages Warranty and After-
Sales Service Software update Scanning
function SAR certification information etc.

● Index/Quick Manual.....451

Index Quick Manual Quick Manual (Overseas
Use)

Main functions of FOMA F905i

FOMA is a DoCoMo's service name based on W-CDMA recognized as one of the global standards for 3rd generation wireless communication (IMT-2000).

It's amazing because it's i-mode!

i-mode is an online service used with i-mode terminal. This service supports connection to i-mode sites (programs) or i-mode compatible sites that provide a variety of useful information and allows you to exchange i-mode mail.

Main features of FOMA F905i

i-mode mail and Deco-mail pictograms

In addition to message text, you can attach up to 10 files (images, ToruCa, PDF, etc.) or files of up to 2 Mbytes in total to a message. →P175
Moreover, because Deco-mail and Deco-mail pict are available, you can change a font color and size or background color for the message text, or you can insert image or moving pictogram. →P171

Mega i-appli, Chokkan Game

Using i-appli downloaded from sites, you can enjoy games or automatically update stock prices, weather information or other information. This FOMA terminal is compatible with large-capacity Mega i-appli, allowing you to play high-resolution 3D and long roll-playing games.

Also, compatible with Chokkan Game enjoyed by sensuous operations such as "declining" or "shaking" the FOMA terminal.

High-speed communication compatibility

Compatible with FOMA HIGH- SPEED Area, and high speed communication with the receiving speed of up to 3.6 Mbps and sending speed of up to 384 Kbps can be performed.

International Roaming

While staying overseas, you can use the same FOMA terminal, phone number and mail address as those used in Japan. You can use voice/videophone calls, i-mode, i-mode mail, SMS and network services. →P388

GPS

Using acquired location information by GPS, you can search for the map or peripheral information of your current location, notify your location by attaching it to mail or navigate to a destination. Since "地図アプリ (Map application)" is preinstalled, precise maps can be used handily. →P240

Chaku-uta full®/Uta-hodai/ Music&Video Channel™/Video clip

Compatible with Chaku-uta full® that a whole tune can be downloaded, and Uta-hodai that you can enjoy as many favorite tunes as you want at a flat rate. Also, compatible with Music&Video Channel that you can enjoy music programs, etc. by downloading them at night by setting in advance. You can also enjoy programs with animations by F905i. Moreover, since compatible with i-motion of up to 10 MB, you can enjoy a video clip containing a whole tune as well.

* This is charged service requiring subscription.

* "Chaku-uta full" is registered trademark of Sony Music Entertainment (Japan) Inc.

Osaifu-Keitai/ToruCa

By downloading Osaifu-Keitai compatible i-appli, you can deposit electronic money from the site into the IC card in the FOMA terminal, and check the balances and payment records. Moreover, i-appli of "DCMX" (DoCoMo's credit service) is preinstalled (→P220). And, compatible with "iお引っこしサービス (iC transfer service)" that you can easily transfer data in IC card when replacing the FOMA terminal by changing of the model etc. →P228

ToruCa is an electronic card that can be downloaded from the IC card reader, site, etc. and can be easily exchanged using messages, infrared communication. →P230

Kisekai Tool

You can change the stand-by display, menu icons, etc. collectively by downloading images of your favorite characters, etc. from i-mode. With F905i, since you can change the display order of the menu according to the frequency of usage, the menu screen can be customized to your taste. →P98

Various functions of FOMA F905i

3.2 inch wide display

Equipped with a large 480×864 dots LCD of 3.2 inch, the FOMA terminal provides comfortable mail and Full Browser operations, displaying vigorous images of 1Seg and high-quality video clips. By rotating the display, you can use the right half of the display for functions such as mail and the left half for watching 1Seg.→P264

Swing display (YOKO-MOTION)

By rotating the display 90 degrees to the right or left, you can use the horizontal screen to watch 1Seg, shoot and play still images/movies or operate mails, Full Browser, etc. Some functions and i-appli are applicable to Wide display that can display fully on the horizontal screen.→P26

You can also activate the function by rotating the display.→P348

FM transmitter

Using FM radio wave, you can listen to music program of 1Seg or Music&Video Channel, or music of Music player with home audio device or car stereo.→P267, 336

Voice clear and Voice slowing

"Voice clear" that makes the other party's voice clear and adjusts the volume even in noise, and "Voice slowing" that adjusts the speed of other party's voice. Supports 2 functions that make other party's voice easy to hear for voice calls.→P46

Infrared communication/ iC transmission

You can send/receive data to/from other FOMA terminals, mobile phones or PCs equipped with the infrared communication function.

Viewing PDF data, Word, Excel or PowerPoint files

PDF data, Microsoft Word/Microsoft Excel/Microsoft PowerPoint files stored in FOMA terminal or microSD memory card can be displayed.→P312, 315

Security Settings→P106

Omakase Lock*

Omakase Lock is a service that locks FOMA terminal on request from the subscriber. Even if the holder of FOMA terminal is different from its subscriber, the terminal may be locked on request from the subscriber.→P111

* This is charged service. If you request unlocking at the same time as service interruption or during interruption, no charges occur. Even in Omakase Lock, if Request permit/deny is "ON", the FOMA terminal responds to location request of GPS function. For precautions and detailed procedure for using this service, see "Mobile Phone User's Guide [Procedures and After-Sales Service]".

Fingerprint authentication

Fingerprint authentication can be performed with FOMA terminal folded. You can restrict the use of FOMA terminal more strictly by setting "Fingerprint access" that does not allow entry of security codes.→P109

Data Security Service*

This service allows you to store phonebook, mails and/or images saved in FOMA terminal to Data Center and, in case of misplacement, etc. of FOMA terminal, restore the data to FOMA terminal. In addition, you can edit or manage data stored in Date Center from a PC and reflect the edited data to FOMA terminal.→P122

* This is an optional subscriber service to be charged requiring subscription.

For precautions and detailed procedure for using this service, see "Mobile Phone User's Guide [i-mode]".

Wide array of network services

- Voice Mail service (Charged)→P372
- Catch Phone (Call waiting service) (Charged)→P373
- Call forwarding service (Free)→P373
- Dual Network service (Charged)→P375
- Multi Number (Charged)→P376
- 2in1 (Charged)→P377

* All these services require application.

Making full use of FOMA F905i

 
The superior functions of F905i are explained in actual displays.

Videophone

You can have a conversation with a party in the distance seeing each other's face. You can start conversation as other party's voice is set to be heard from the speaker by default. And, even during a usual voice call, it can be switched to a videophone call without disconnecting the call. →P44




Participating in a conference by videophone from a remote place

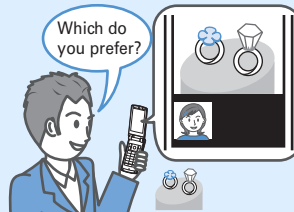

Shopping consultation from outside

PushTalk

 You can talk with multiple parties (up to 5 parties including yourself) by a simple operation of selecting the parties from the PushTalk phonebook and pressing . →P68

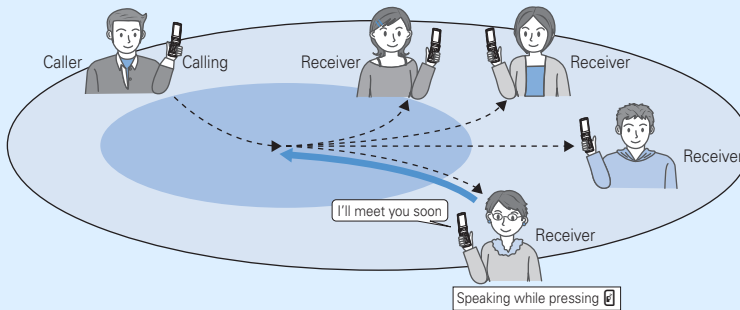

i-Channel


You can periodically receive graphical information such as news and weather information with no specific operations. Rich detailed information created with Flash (→P150) can be acquired by selecting a channel from the channel list. →P166

Before	After subscribing	

* This is an optional subscriber service to be charged requiring subscription.

2in1

 
This service allows to use 2 phone numbers/mail addresses for 1 mobile phone; you can use the FOMA terminal as if you have two different mobile phones by using the specific mode function. You can categorize phonebooks, mailboxes, call logs, stand-by displays, etc. to "A mode" and "B mode" for separate management; "Dual mode" is available to simultaneously manage A and B modes. →P377

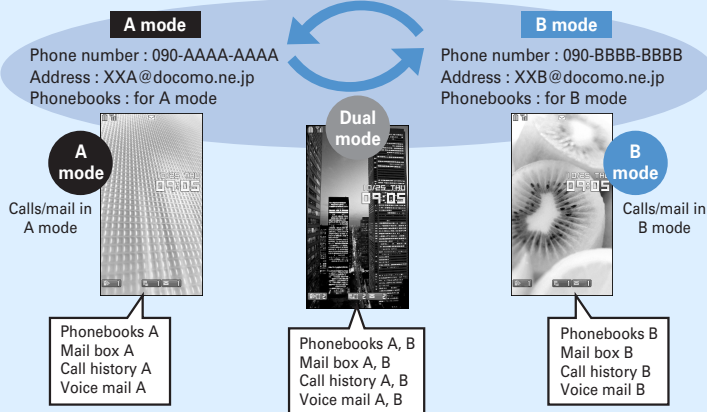

* This is an optional subscriber service to be charged requiring subscription.

Music player

 Chaku-uta full® (compatible with Uta-hodai) downloaded from sites and Windows Media® Audio (WMA) files transferred from music CDs etc. can be played in stereo sound. Compatible with background playing, operation using Music key specifically for music or using Remote controller with microphone F01 (optional) are also available. → P326

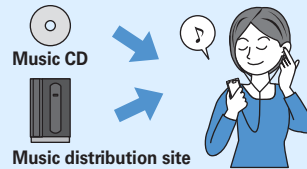

Chaku-moji

 
When making a call, you can keep displaying a message on the receiver's incoming call screen before the called party answers. The receiver can check the message displayed on the screen and know the purpose, feelings, etc. of the caller. →P49



1Seg

You can receive Digital Terrestrial TV broadcasting for mobile object (1Seg). You can easily enjoy participating in quiz program or TV shopping, etc., by sending and receiving information to/from TV broadcasting companies (stations).

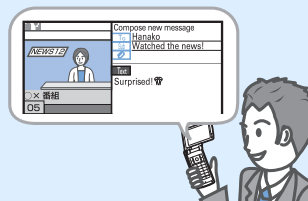


1Seg is activated only by pressing a specific key (TV), and it provides convenient functions such as OFF timer, subtitle display with large font, Timer reception, and recording or recording reservation of video or still image. You can use another function while watching 1Seg (Multi window). →P252









Precautions (ALWAYS FOLLOW THESE DIRECTIONS)

- Before using your FOMA terminal, or when necessary, read the precautions below to ensure safe use and handling. After reading this manual, keep it carefully.
- These precautions are intended to protect you and others around you. Read and follow them carefully to avoid injury, damage to the product or damage to property.

■ The signs below differentiate between the levels of danger that can occur if the product is not used within the specified guidelines :

 DANGER	This sign denotes that death or serious injury may directly result from improper use.
 WARNING	This sign denotes that death or serious injury may result from improper use.
 CAUTION	This sign denotes that bodily injury or damage to property may result from improper use.

■ The symbols below show specific directions :


 Don't	This symbol denotes that the action is prohibited.
 No disassembly	This symbol denotes that disassembling the phone or its components is not allowed.
 Avoid water	This symbol denotes that using the phone or its components with wet hands is not allowed.
 Avoid water	This symbol denotes that using the phone or its components in a bathroom or other highly humid area is not allowed.
 Do	This symbol denotes that an instruction must be obeyed at all times.
 Pull the power plug out	This symbol denotes that the equipment should be unplugged.

■ Precautions contain the description below:


Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (Common)	12
Handling FOMA terminal	13
Handling battery pack	15
Handling optional devices (AC adapter/DC adapter/desktop holder/in-car holder)	16
Handling UIM	17
Handling mobile phones near electronic medical equipment	17

◆ Handling FOMA terminal, battery pack, adapter (including battery charger) and UIM (Common)


DANGER


 **Do not use, store, or leave the equipment in hot areas such as near flames or in areas under strong direct sunlight such as inside a vehicle.**

May cause the equipment to be deformed or malfunction, and battery pack to leak, heat, burst or ignite, and the capability or life to be reduced or shortened. Overheating on parts of the case may cause burns or injuries.

 **Do not disassemble or remodel the equipment. Do not solder items onto the equipment.**

May cause fire, injuries, electric shock, or malfunction. It may also cause the battery pack to leak, heat, burst or ignite.

 **Do not let the equipment get wet.**
Contact with water or other liquids can cause heating, electric shock, fire, malfunctions or injuries. Take care of the place for use and treatment of the equipment.

 **Use equipment specified by the DoCoMo Group companies with your FOMA terminal.**

Use of equipment not specified by DoCoMo can cause the FOMA terminal, battery pack and other parts to leak, heat, burst, catch fire or malfunction.

- Battery Pack F10
- Desktop Holder F20
- FOMA AC Adapter 01/02
- FOMA DC Adapter 01/02
- FOMA Dry Battery Adapter 01
- FOMA USB Cable with Charge Function 01
- FOMA Portable Charging Adapter 01
- FOMA AC Adapter 01 for Global use

* Contact a sales outlet such as DoCoMo Shop for information on other compatible products.

WARNING

Don't

Do not put the battery pack, FOMA terminal, adapter (including battery charger) or UIM in microwave ovens or other heating appliances or high-pressure containers.

May cause the battery pack to leak, heat, burst or ignite, the FOMA terminal, adapter (including battery charger) or UIM to heat, smoke, ignite, or damage circuits.



Don't

Do not throw the equipment or give hard shock to it.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



Don't

Keep conductive materials (metal pieces, pencil lead, etc.) from coming in contact with the charger terminal or external connection terminal. Do not put those materials inside the terminal.

May be subject to electrical short and could cause fire or malfunction.



Do

Turn the FOMA terminal OFF before entering a place such as a gas station where flammable gases are generated.

Do not charge the battery. The gas may catch fire.

When using Osaifu-Keitai in a place as a gas station, turn OFF the terminal before using it. (When IC card lock is activated, deactivate it before turning OFF the terminal.)



Do

If the equipment starts giving off a strange smell, overheats, becomes discolored or deformed during use, charging or in storage, immediately perform the following operations :

1. Remove the power plug from the wall outlet or cigarette lighter socket.
2. Turn the FOMA terminal OFF.
3. Remove the battery pack from the FOMA terminal.

May cause the equipment to heat, burst or ignite or the battery pack to leak if you keep using the equipment.

CAUTION

Don't

Do not leave the equipment on unstable or sloping surfaces.

May cause malfunction or injuries.



Don't

Do not store the equipment in extremely humid, dusty or hot areas.

May cause malfunction.



Do

Children using the equipment should be instructed in proper operation by an adult. Do not allow them to use the equipment without adult supervision.

May cause injuries.



Do

Store the equipment out of reach of small children.

The equipment can be accidentally swallowed or cause injuries.



Do

Be careful especially when using the FOMA terminal connected to the adapter (including battery charger) continuously for a long time.

If you execute i-appli, use videophone call or watch 1Seg while charging the battery pack, the FOMA terminal, battery pack and adapter (including battery charger) may become hot. Directly touching a hot part for a long time, you may have redness, itching or rash on your skin, or it may result in low-temperature burns depending on your constitution and/or health condition.

Handling FOMA terminal**WARNING**

Don't

Do not direct the infrared data port toward your eye and transmit signals.

May affect your eyes. Faulty operation could result from directing the infrared data port toward other infrared equipment and transmitting signals.



Don't

Do not put the FOMA terminal in the place such as the dashboard near the air-bag, where the influence of air-bag explosion is expected.

When the air-bag explodes, the FOMA terminal may hit yourself or others and could cause injury, equipment malfunction or damage.



Don't

When you use medical electrical equipment, do not keep the terminal in your chest pocket or inside pocket.

Using your FOMA terminal near medical electronic equipment could cause equipment failure.



Don't

Do not put foreign objects such as liquid like water, metal pieces or burnable things into the UIM or memory card slot.

May cause fire, electric shock or equipment failure.



Don't

Do not turn on the light aiming directly at the driver of the car, etc.

It hinders driving, and may result in an accident.



Do

Turn the FOMA terminal OFF in areas where use is prohibited, such as in airplanes and hospitals.

Use in these areas can cause electronic medical equipment and electronic equipment to malfunction or fail.

If the function which automatically turns on the power is set, cancel the setting before turning the power off.

When using the phone in a medical facility, be sure to observe the regulations of the facility. If you do prohibited act such as using the phone in an airplane, you may be punished according to law.



Do

When you talk by setting handsfree, always keep the FOMA terminal away from your ear.**And, when connecting the earphone/microphone to the FOMA terminal and play a game or music, adjust the volume moderately.**

Too loud volume may cause a hearing loss. And, if you cannot hear the sound around you clearly, it may cause an accident.



Do

If you have weak heart, be careful when setting the Vibrate alert (vibration) or alert volume setting.

Could affect heart function.



Do

If it starts thunder while using the phone outside, retract antenna and turn the power OFF immediately, and move to a safe location.

May be subject to lightning strike and could cause electric shock.



Do

Turn the FOMA terminal OFF near high-precision electronic control equipment or electronic equipment using low-power signals.

Using the phone near this type of equipment can cause the equipment to fail or malfunction.

* Examples of electronic equipment to avoid :

Hearing aids, implanted pacemakers or defibrillators, other electrical medical equipment, fire alarms, automatic doors, other automatic control equipment.

Users wearing implanted pacemakers or defibrillators or other electrical medical equipment should check with the manufacturer or sales outlet about the effect of radio frequencies on the equipment.



Do

When the display or camera lens is accidentally broken, be careful of broken glass or exposed internal parts of the FOMA terminal.

Surfaces of display and camera lens are made of plastic panels and they are structured for the glass not to scatter, however, if you mistakenly touch broken or exposed parts, you may be injured.

**CAUTION**

Don't

Do not swing the FOMA terminal by its antenna or strap.

May cause the terminal damage or failure, or injury to yourself or others.



Don't

Do not use the FOMA terminal in crowded places.

The antenna may hit other people causing injuries.



Don't

Do not use the FOMA terminal with its antenna damaged.

May hurt your skin.



Don't

When using the motion tracking, check the safety around you, hold the FOMA terminal firmly, and do not shake it unnecessarily.

The motion tracking is a function to operate by tipping or shaking the FOMA terminal. There is a risk that the FOMA terminal hits people or objects around you by shaking it too much, causing a serious accident or damage.



Don't

If you put a metal strap and the like to the FOMA terminal, be careful not to let the strap hit people or objects around you when performing the motion tracking.

Accidents such as injury, malfunction or damage may result.



Don't

Do not place magnetic disks or cards with magnetic stripes near the FOMA terminal or place inside and fold the terminal.

Data stored on media such as cash cards, credit cards, telephone cards and floppy disks may be erased if the storage medium is placed near the phone.



Don't

Do not bring magnetized objects close to the FOMA terminal.

Bringing strong magnetism close may cause a malfunction.



If the display part is accidentally broken and liquid crystal leaks out, do not put the liquid in your mouth, inhale, or make contact with your skin.

If the liquid gets into your eyes or mouth, rinse it with clean water and see a doctor immediately.

And, if the liquid adheres to skin or clothing, use alcohol, etc. to wipe it off, then wash with soap.

Otherwise, it may cause loss of sight or skin problems.



Do not bring the speaker close to your ear when the ring alert is sounding or you are playing a melody with the FOMA terminal.

It may cause hearing loss.



In rare cases, using the phone in some vehicle models can cause the vehicle's electronic equipment to malfunction or fail.

In this case, do not use the phone because it may hamper safe driving.



Mobile phones can give some users skin problems such as itching, allergic reactions or rashes. If you develop skin problems, stop using the phone immediately, and see a doctor.

The FOMA terminal contains metal in the parts below :

Place of use	Material	Surface finishing
Model name panel on the back	Aluminum	Coating (Terminal color : White, Magenta) Alumite finishing (Terminal color : Black, Blue)
Display frame	Stainless	Coating
Fingerprint sensor	Stainless	Trivalent chrome plating
Metal part of the TV antenna	Front edge, Center part, Lower hinge	Brass
	Extendable shaft	Stainless
	Upper hinge	Stainless
Charging jack	Copper	Gold plating



When opening or closing FOMA terminal, take care not to have your fingers or strap caught by the terminal.

May cause injuries or damages.



When watching 1Seg, take a certain distance from the display in a fully bright place.

May cause your eyesight to be impaired.

◆ Handling battery pack

- **Check that the battery type matches the type displayed on the battery pack label :**

Display	Battery type
Li-ion	Li-ion battery



DANGER



Do not connect a wire or other metal objects to the jack. And, do not carry or store the FOMA terminal with objects like a metal necklace.

May cause the battery pack to leak, heat, burst or ignite.



Do not try to force the battery pack onto the FOMA terminal if you are having trouble attaching it. Always attach it after checking that it is correctly oriented.

May cause the battery pack to leak, heat, burst or ignite.



Do not throw the battery pack into the fire.

May cause the battery pack to leak, heat, burst or ignite.



Do not nail the battery pack, hit with a hammer or step on it.

May cause the battery pack to leak, heat, burst or ignite.



If the battery pack's fluid contacts eyes, immediately flush the eyes with clean water and see a doctor right away. Do not rub the eyes.

Battery fluid in the eyes may cause blindness.



WARNING



If the battery pack does not have a full charge after being charged for the specified time, stop charging it.

May cause the battery pack to leak, heat, burst or ignite.



If the battery pack leaks or gives off a strange smell, immediately remove it from the vicinity of open flames.

The vapors from leaking battery pack fluid may ignite or explode.



If the battery pack seems to have abnormalities such as deformation or scratches due to an external impact or falling, stop using it immediately.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



Be careful not to let your pet bite the battery pack.

May cause the battery pack to leak, heat, burst or ignite, and the equipment to malfunction or catch fire.



CAUTION



Do not discard old battery packs together with other garbage.

May cause igniting or environmental destruction. Tape the terminals of old battery packs to insulate them, and then bring them into a sales outlet such as DoCoMo Shop. If your local municipality has a battery recycling program, dispose of them as provided for.



Do not charge a wet battery pack.

It may cause heat generation, ignition or rupture of the battery pack.



If the battery pack's fluid contacts skin or clothes, immediately flush the contacted area thoroughly with clean water.

The fluid may damage the skin.

◆ Handling optional devices (AC Adapter/DC Adapter/Desktop Holder/In-Car Holder)



WARNING



Do not use the adapter (including battery charger) cord or power code if it gets damaged.

May cause electric shock, heat or fire.



Do not use the AC adapter or desktop holder (battery pack's battery charger) in a bathroom or other highly humid area.

May cause electric shock.



Always use the DC adapter with a negative-ground vehicle. Do not plug it into a positive-ground vehicle.

May cause fire.



When it starts to thunder, do not touch the FOMA terminal and adapter (including battery charger).

May be subject to lightning strike and could cause electric shock.



Do not short the charger terminal while it is connected to the outlet or cigarette lighter socket. Do not touch the charger terminal with a part of your body such as your hand or finger.

May cause fire, malfunction, electric shock or injuries.



Place battery charger and desktop holder in a stable location during charging. Do not cover or wrap battery charger and desktop holder with a cloth or blanket, etc.

May cause the FOMA terminal to be removed or the optional devices to be heated, resulting in fire or troubles.



Do not place heavy objects on the adapter (including battery charger) cord or power code.

May cause electric shock or fire.



Do not touch the adapter (including battery charger) cord or outlet with wet hands.

May cause electric shock.



Only use with the specified power source and voltage.

If incorrect voltage is used, this may cause fire or failure. When using FOMA terminal overseas, use AC Adapter for global use.

AC adapter : AC100V

DC adapter : 12 or 24V DC (specific for negative ground vehicle)

AC adapter for global use : Between 100V and 240V AC (Connect to 240V AC outlet for internal household use)



If the DC adapter's fuse blows, replace it only with the specified fuse.

Using other fuses may cause fire or equipment failure. For the specified fuse, see the instructions that come with the DC adapter.



Wipe off any dust that accumulates on the power plug.

May cause fire.



When you connect the AC adapter to an outlet, make sure not to touch with metal such as metal straps and firmly connect to the outlet.

May cause electric shock, electrical short or fire.



When you disconnect the adapter (including battery charger) from the outlet or cigarette lighter socket, do not pull the adapter (including battery charger) cord or power cord with excessive force; instead hold the plug to disconnect.

Pulling the cord could damage it, possibly leading to electric shock or fire.



Always remove the power plug from the outlet when not using the adapter for an extended period.

May cause electric shock, fire or malfunction.



Immediately remove the power plug from the outlet or cigarette lighter socket if water or other fluids get into the adapter.

May cause electric shock, smoke or fire.



Always remove the power plug from the cigarette lighter socket when cleaning the equipment.

May cause electric shock.

◆ Handling UIM



CAUTION



Take care with a sharp edge when removing the UIM (ICs).

Hands or fingers may be injured.

◆ Handling mobile phones near electronic medical equipment

- These precautions are based on the guidelines produced at the **Electromagnetic Compatibility Conference Japan, regarding the protection of electronic medical equipment from radio waves emitted by mobile phone units.**



WARNING



Obey the following rules inside medical facilities :

- Do not bring the FOMA terminal into operating rooms (ORs), intensive care units (ICUs) or coronary care units (CCUs).
- Turn the FOMA terminal OFF in hospital wards.
- Turn the FOMA terminal OFF in hospital lobbies and corridors if electrical medical devices could be nearby.

- If the medical facility has specified zones where use or possession of mobile devices is prohibited, obey those instructions.
- If the function to automatically turn on the power is set, cancel the setting before turning the power off.



Turn the FOMA terminal OFF in crowded trains or other public places where pacemaker or defibrillator wearers could be nearby.

The FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



Wearers of implanted pacemakers or defibrillators must carry and use the FOMA terminal at least 22 cm away from the implanted device.

The FOMA terminal's signals may affect the operation of implanted pacemakers or defibrillators, and other devices.



When electrical medical devices other than implanted pacemakers or defibrillators are in use outside of medical facilities (such as in home care settings), check with the device manufacturer to determine how the device is affected by electrical signals.

The FOMA terminal's signals may affect the performance of electrical medical devices.

Handling instructions

◆ General

- Keep water away from FOMA terminal.
 - FOMA terminal, battery pack, adapter (including battery charger) and UIM are not waterproof. Do not use FOMA terminal in bathrooms or other high-humidity areas, or in the rain. When carrying FOMA terminal in a pocket near your body, sweat may corrode the inner components, causing malfunction.
- Malfunctions deemed to be caused by water are not covered by the warranty, and may be impossible to repair. Since these conditions are outside the scope of the warranty, a repair, if at all possible, is charged.

- Clean FOMA terminal with a dry soft cloth (such as a cloth for eyeglasses).
 - The display of FOMA terminal may have been applied special coating to improve clearness of the color LCD. When cleaning FOMA terminal, rubbing it roughly with a dry cloth can scratch the display. Take care when handling the unit, and clean it with a dry soft cloth (such as a cloth for eyeglasses). Drops of water or dirt left on the display can cause stains or remove the coating.
 - If FOMA terminal is wiped with alcohol, paint thinner, benzine or detergent, the printing may disappear or color may fade.
- Clean the jack occasionally with a dry cotton swab.
 - If the jack is dirty, the contact may become poor and the power may shut off. A dirty jack can result in poor charging, so clean it with a dry cloth or cotton swab.
- Do not place FOMA terminal near an air-conditioner outlet.
 - The rapid change in temperature may cause condensation, causing internal corrosion and malfunction.
- When using, be careful not to subject excessive force to the FOMA terminal or the battery.
 - If crammed into a brimming bag or placed in a pocket and sat on, FOMA terminals LC display, internal PCBs or battery may be damaged or malfunctioned. And, if external devices are plugged into the external connection terminal or earphone/microphone jack, the breakage of the connector or malfunction may result.
- Carefully read the separate instructions that come with the FOMA terminal, battery pack, adapter (including battery charger) and desktop holder.
- Do not rub or scrape the display with a metal piece, etc.
 - It may scratch the display, causing malfunction or damage.

◆ FOMA terminal

- Avoid temperature extremes.
 - Use FOMA terminal in an ambient temperature range of between 5 and 35°C, and in a humidity range of between 45 and 85%.
- FOMA terminal may affect general subscriber phones, TVs or radios in use nearby, so use it as far as possible from these appliances.
- Maintain a separate record of the data you register in your FOMA terminal.
 - If the data should be deleted, DoCoMo assumes no responsibility for the loss of any data.
- Do not plug external devices into the external connection terminal or the earphone/microphone jack at a slant, or do not pull it forcibly while it is plugged.
 - Malfunction or breakage may result.
- Do not fold FOMA terminal with the strap held inside.
 - May cause malfunction or damage.
- It is normal for FOMA terminal to become warm during use or charging. Continue to use it.
- Do not leave the FOMA terminal with the camera in areas under strong direct sunlight.
 - May cause discoloring or burn-in of materials.

- Usually, use FOMA terminal with the earphone/microphone jack cover, external connection terminal cap and memory card slot cover placed.
 - Dust and/or water brought into FOMA terminal cause troubles.
- Do not use the FOMA terminal with the back cover removed.
 - It may cause the battery to come off, or may cause a malfunction or damage.
- Do not put a extremely thick seal, etc. on the display or keypad.
 - May cause malfunction.
- Do not rotate the display with the FOMA terminal folded.
 - It may cause the display and around the keys to be scratched, causing a malfunction or damage.
- Do not give a hard shock to the fingerprint sensor and take care not to scratch its surface.
 - May cause the fingerprint sensor to malfunction or disable authentication.
- Clean the fingerprint sensor by wiping with a dry soft cloth (e.g. eyeglass cleaner).
 - Any soil or water attached to the surface of the fingerprint sensor may cause fingerprint scan failure, which may lead to reduction of the authentication performance or an error where the sensor operates as authenticating when the finger is not in contact.
- While using memory card, do not remove memory card or turn OFF the FOMA terminal.
 - It may cause data loss or malfunction.

◆ Battery pack

- The battery pack is a consumable part.
 - Replace the battery pack if FOMA terminal has extremely short operation time on a full charge, though it may vary by operating conditions. Purchase a new battery pack of the specified type.
- Charge the battery in an area within the proper ambient temperature range (5-35°C).
- Always charge before using it for the first time or after extended disuse.
- The operation time provided by the battery pack varies by the operating environment and battery pack's deterioration.
- The battery pack may swell out as it comes to near the end of its lifetime depending on the usage conditions, but it is not a problem.
- Do not preserve or leave the battery pack as it is empty.
 - It may cause the battery pack performance to be degraded or its lifetime to be shortened.

◆ Adapter (including battery charger)

- Charge the battery in an area within the proper ambient temperature range (5-35°C).
- Do not charge the battery in the areas below :
 - In areas of excessive humidity, dust or vibrations
 - Near general subscriber phones, TVs or radios
- It is normal for the adapter (including battery charger) to become warm during charging. Continue charging with a warm adapter.
- When using the DC adapter for charging, keep the vehicle engine running.
 - The vehicle's battery could become flat.
- When using an outlet with a mechanism preventing unplugging, follow the handling instructions for that outlet.
- Do not give hard shock to the adapter (including battery charger). Do not deform the charger terminal.
 - May cause malfunction.

◆ UIM

- Do not use excessive force to insert/remove the UIM.
- It is normal for the UIM to become warm during use. Continue using a warm card.
- Note that DoCoMo assumes no responsibility for malfunctions occurring as the result of inserting and using a UIM with another IC card reader/writer.
- Always keep UIM ICs clean.
- Clean the UIM with a soft, dry cloth (such as a cloth for eyeglasses).
- Maintain a separate record of the data you register on the UIM.
 - If the data should be deleted, DoCoMo assumes no responsibility for the loss of any data.
- To preserve the environment, bring the old UIM to a sales outlet such as DoCoMo Shop.
- Avoid temperature extremes.
- Take care not to scratch, touch accidentally or short IC.
 - May cause data loss or malfunction.
- Do not drop the UIM or subject it to shocks.
 - May cause malfunction.
- Do not bend the UIM or place heavy objects on it.
 - May cause malfunction.
- Do not insert UIM into the FOMA terminal with a label or sticker put on UIM.
 - May cause malfunction.

◆ FM transmitter

- FM transmitter of FOMA terminal uses weak waves requiring no licenses for radio stations.
- It uses 83.5 to 87.4 MHz frequency band. When using it, set the frequency avoiding falling on the bandwidth of the local FM station of the area you use it.

◆ CAUTION

- Do not use a remodeled FOMA terminal. Using a remodeled terminal violates the Radio Law. FOMA terminal is certified according to technical standard conformance of specified wireless equipment based on the Radio Law, and as a proof of it, the "Technical Compliance Mark" is depicted on the engraved sticker of FOMA terminal. If you remodel FOMA terminal by removing its screws, your certification of technical standard conformance becomes invalid. Do not use FOMA terminal with its certification of technical standard conformance invalid as it violates the Radio Law.
- Be careful when you use the FOMA terminal while driving a car, etc. Using a mobile phone while driving is subject to penal regulations. If you inevitably receive a call, tell the caller that you will "call back" by handsfree, then park in a safe place and call back.
- Use the FM transmitter only in Japan. FM transmitter of FOMA terminal is compliant with the wireless standard and authorized for using only in Japan. If you use this function overseas, you may be punished.

Intellectual property rights

◆ Copyrights and portrait rights

Except for the case protected by copyright laws such as personal use, use of FOMA terminal to reproduce, alter, or publicly transmit recorded pictures or sounds, or copyrighted text, images, music or software downloaded from websites without the copyright holder's authorization is prohibited.

Note that taking photos or recordings at some demonstrations, performances or exhibitions may be prohibited even when only for personal use. Avoid taking pictures of others with FOMA terminal without their consent or disclosing recorded pictures of others without their consent to general public through Internet websites, etc., because they may infringe on portrait rights.

◆ Trademarks

Company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.

- "FOMA", "mova", "i-motion", "i-mode", "i-appli", "i-motion mail", "i-shot", "DoPa", "mopera", "mopera U", "WORLD CALL", "WORLD WING", "Short Mail", "Chaku-motion (Movie ringtone)", "Deco-mail", "V-live", "i-area", "Chara-den", "i-appliDX", "i-Channel", "Dual Network", "FirstPass", "sigmarion", "Security Scan", "musea", "Public mode", "PushTalk", "PushTalkPlus", "ToruCa", "iD", "2in1", "DCMX", "OFFICEED", "IMCS", "Chokkan Game" and logos of "FOMA", "i-mode", "i-appli", "DCMX", "iD", "WORLD WING" and "HIGH-SPEED" are trademarks or registered trademarks of NTT DoCoMo.
- Microsoft®, Windows®, Windows Vista™, Windows Media® and PowerPoint® are trademarks or registered trademarks of "Microsoft Corporation" in the US and other countries.
- Microsoft Excel and Microsoft Word are product names of Microsoft Corporation in the U.S.A. In this manual, they may be described as Excel and Word.
- Java and all Java-related trademarks are trademarks or registered trademarks of Sun Microsystems, Inc. in the US and other countries.
- "Multitask" is a trademark of NEC Corporation.
- "Catch Phone (Call waiting service)" is a registered trademark of Nippon Telegraph and Telephone Corporation.
- Free Dial logo mark is a registered trademark of NTT Communications Corporation.

- This product contains NetFront Sync Client of ACCESS CO., LTD. Copyright© 2007 ACCESS CO., LTD. All rights reserved. ACCESS and NetFront are trademarks or registered trademarks of ACCESS CO., LTD.in Japan and other countries. Copyright©1996-2007 ACCESS CO.,LTD.
- Contains Flash® Lite™ and Adobe® Reader® technology by Adobe Systems Incorporated. Flash Lite copyright© 1995-2007 Adobe Macromedia Software LLC. All rights reserved. Adobe Reader copyright© 1984-2007 Adobe Systems Incorporated. All rights reserved. Adobe, Flash, Flash Lite and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- FlashFX® Pro™ is a registered trademark of DATALIGHT, Inc. FlashFX® Copyright 1998-2007 DATALIGHT, Inc. U.S.Patent Office 5,860,082/6,260,156
- QR code is a registered trademark of Denso Wave Inc.
- miniSD™ and  are trademarks of the SD Association. (miniSD™ memory card is described as miniSD memory card.)
- microSD logo is a trademark.
- Powered by JBlend™ Copyright 2002-2007 Aplix Corporation. All rights reserved. JBlend and JBlend-related trademarks are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.
- Word, Excel and PowerPoint file display technologies are powered by Pictel  Pictel Technologies. Pictel, Pictel File Viewer and the Pictel cube logo are trademarks or registered trademarks of Pictel Technologies, Pictel File Viewer.
- McAfee® is registered trademarks or trademarks of McAfee, Inc. and/or its affiliates in the US and/or other countries.
- G-GUIDE, G-GUIDE MOBILE and their logos are registered trademarks in Japan of U.S. Gemstar-TV Guide International, Inc. and/or its affiliates.
- QuickTime is a registered trademark of Apple Inc. in the US and other countries.
- ATOK + APOT of Justsystem Corporation is installed in this product as Japanese character conversion function. "ATOK" "APOT (Advanced Prediction Optimization Technology)" are registered trademarks of Justsystem Corporation.

NetFront®

ADOBE®
FLASH®
ENABLED

micro
JBlend

pictel

G-GUIDE

- This product contains software licensed by Symbian Software Ltd © 1998-2007. **symbian** and Symbian OS are trademarks of Symbian Ltd.
- Ryumin is a registered trademark of Morisawa Ltd.
- "Privacy mode" is a registered trademark of FUJITSU LIMITED.
- Napster is a registered trademark of Napster, LLC. and/or its affiliates in the US and/or other countries.
- Google is registered trademark of Google Inc.
- Other company and product names mentioned in this manual are trademarks or registered trademarks of their respective holders.
- The abbreviations of operating systems (Japanese versions) below are used in this manual :
 - Windows Vista stands for Windows Vista™ (Home Basic, Home Premium, Business, Enterprise and Ultimate).
 - Windows XP indicates the Microsoft® Windows® XP Professional operating system or Microsoft® Windows® XP Home Edition operating system.
 - Windows 2000 indicates the Microsoft® Windows® 2000 Professional operating system.

◆ Others

- This product contains a module developed by the Independent JPEG Group.
- This product is equipped with the technologies of GestureTek, Inc.
Copyright© 2007, GestureTek, Inc. All Rights Reserved.
- "明鏡モバイル国語辞典 (Meikyo Mobile Japanese Dictionary)", "Gモバイル英和辞典 (G-Mobile English-Japanese Dictionary)" and "Gモバイル和英辞典 (G-Mobile Japanese-English Dictionary)" are copyrighted by TAISHUKAN Publishing Co., Ltd.
- This product is licensed based on MPEG-4 Visual Patent Portfolio License. The use of MPEG-4 Video Codec function is allowed for personal and nonprofit use only in the cases below :
 - Recording movies and i-motion that conform to MPEG-4 Visual Standard (hereinafter referred to as MPEG-4 Video)
 - Playing MPEG-4 Videos recorded personally by consumers not engaged in profit activities
 - Playing MPEG-4 Video supplied from the provider licensed from MPEG-LA
For further utilizing such as promotion, in-house use or profit-making business, please contact MPEG LA, LLC in U.S.

- Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations;
Licensed by QUALCOMM Incorporated under one or more of the following United States Patents and/or their counterparts in other nations;

 
4,901,307	5,504,773	5,109,390
5,535,239	5,267,262	5,600,754
5,416,797	5,490,165	5,101,501
5,511,073	5,267,261	5,568,483
5,414,796	5,659,569	5,056,109
5,506,865	5,228,054	5,544,196
5,337,338	5,657,420	5,710,784
5,778,338		

- Content owners use Windows Media digital rights management technology (WMDRM) to protect their intellectual property, including copyrights. This device uses WMDRM software to access WMDRM-protected content. If the WMDRM software fails to protect the content, content owners may ask Microsoft to revoke the software's ability to use WMDRM to play or copy protected content. Revocation does not affect unprotected content. When downloading licenses for protected content, you agree that Microsoft may include a "Revocation List" with the licenses. Content owners may require you to upgrade WMDRM to access their content. If you decline an upgrade, you cannot access a content that requires the upgrade.


Basic package and optional accessories

<Basic package>

FOMA F905i
(including the Back Cover F23
and the written warranty)

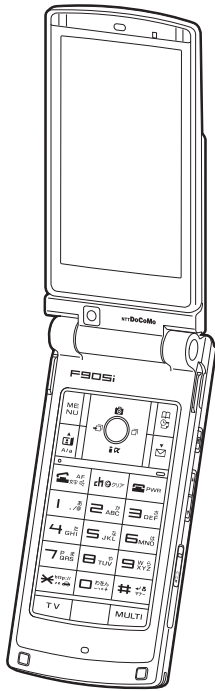


Instruction manual

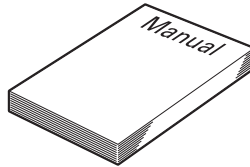 

* Quick Manual is appended on P458.

 
CD-ROM for FOMA F905i

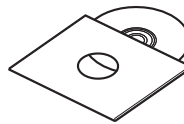


* The PDF version "Manual for PC connection setting" and "Kuten Code List" are contained in the CD-ROM.

<Optional accessories>

 
FOMA AC Adapter 01/02
(including the written warranty,
operation manual)

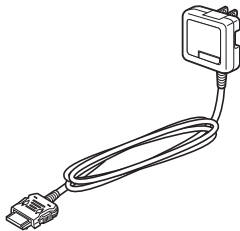

 Desktop Holder F20
(including operation
manual)

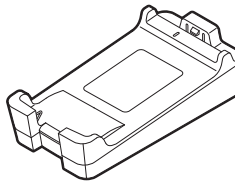

 Battery Pack F10
(including operation
manual)

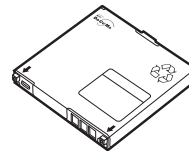


Other optional accessories → P429

Before Using the Handset

Names and functions of parts	24
Swinging display (YOKO-MOTION)	26
Display overview	26
Sub-display overview	29
Selecting functions from menu	30
Selecting a function from menu on sub-display	33
Using UIM (FOMA card)	34
Attaching/removing battery pack	35
Charging the FOMA terminal	36
Checking remaining battery level Remaining battery level	39
Turning power ON/OFF	Power ON/OFF 39
Switching to English	Select language 40
Setting date and time	Date & time 40
Notifying your phone number to the other party	Caller ID notification 41
Checking your own phone number	User information 42

 Names and functions of parts

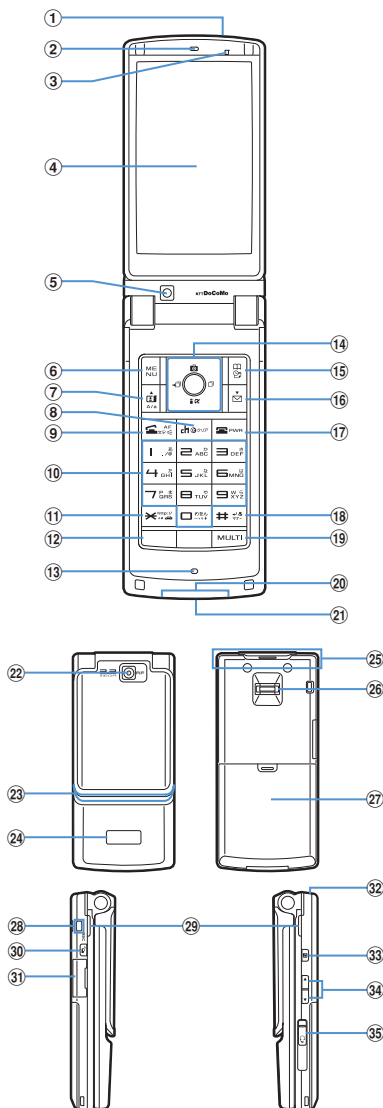

① Infrared data port → P307, 310

Use for Infrared communication, Infrared remote control.

② Earpiece

Use to hear other party's voice from here.

③ Light sensor

Sense the ambient luminance (automatic adjustment of the brightness of the display).

* Blocking the light sensor may disable correct adjustment of the brightness.

④ Display → P26

⑤ In-camera

Use to shoot the image of yourself, send the image of yourself over a videophone call.

⑥ MENU key

Use to display menus, perform the operation shown in the upper left part of the guide area.

Press and hold for 1 second or more : Start/Cancel Side key hold.

⑦ Videophone start/▲(scroll)/A/a key

Use to make/receive videophone calls, scroll upward by pages of the mail screen or site/website display, switch cases when entering characters, perform the operation shown in the lower-left corner of the guide area.

Press and hold for 1 second or more : Make a videophone call using the speakerphone.

⑧ ch/α/Clear key

Use to display i-Channel list, switch i-αppli stand-by display and i-αppli activation, delete characters or return to previous display.

Press and hold for 1 second or more : Start/cancel Self mode.

⑨ Start voice call/Character/Speakerphone/AF key

Use to make/answer voice calls, switch character entry modes, switch ordinary and speakerphone calls or activate/cancel Auto focus.

Press and hold for 1 second or more : Make a voice call using the speakerphone.

⑩ Keypads

Use to enter phone numbers or text, perform menu items.

Press **1** - **9** for 1 second or more : Perform the functions registered in the custom menu.

Press **0** for 1 second or more : Set auto switch of Int'l call assist when making international calls.

⑪ * /Public mode (Drive mode) key

Use to enter " * ", " ^ ", " ° ", etc., switch status display/hide of guide area in wide display.

Press and hold for 1 second or more : Start/cancel Public mode.

⑫ TV key

Watch 1Seg or switch Multi window.

Press and hold for 1 second or more : Video recording during 1Seg watching

⑬ Microphone

Send your voice from here.

* Do not cover with your finger while talking or recording sound.

⑭ Multi-cursor key

Enter key



Use to perform the selected operation, activate Focus mode.



Press and hold for 1 second or more : Start i-αppli set for one-key shortcut.

 
Camera/↑ key

Use to activate Still camera, adjust volume, move the cursor upward.

Press and hold for 1 second or more : Activate Movie camera.

- Q i-mode/i-appli/ ↓ key**
Use to display i-mode menu, adjust volume, move the cursor downward.
Press and hold for 1 second or more : Display i-appli folder list.
- ☒ Received calls/← (previous) key**
Use to display Received calls, switch displays, move the cursor leftward.
Press and hold for 1 second or more : Set/cancel Privacy mode.
- ☑ Redial/→ (next) key**
Use to display Redial, switch displays, move the cursor rightward.
Press and hold for 1 second or more : Start/cancel IC card lock.
* Representation of the icon may vary by the key operations as 
- 15 ☒ Phonebook/Schedule key**
Use to display Phonebook, perform the operation shown in the upper right part of the guide area.
Press and hold for 1 second or more : Display Scheduler.
- 16 ✉ Mail/▼ (Scroll) key**
Use to display mail menu, scroll downward the mail screen or site/website display by pages, perform the operation shown in the lower-right corner of the guide area.
Press 2 times : Check new message
Press and hold for 1 second or more : Display Compose message screen.
- 17 ⏻ Power/End key**
Use to terminate on-hold, calling/operating function, display/hide calendar layout.
Press and hold for 2 seconds or more : Turn power ON/OFF.
- 18 # Line-feed key/Macro shooting/Silent mode**
Use to enter "#", start a new line when entering characters, switch Macro mode while using out-camera.
Press and hold for 1 second or more : Start/cancel Silent mode.
- 19  Multitask key**
Use to perform another function while talking or perform an operation (Multiaccess/Multitask).
- 20 Charging jack**
- 21 Jack**
Connect various optional devices.
- 22 Out-camera**
Use to shoot still images or movies, send images over a videophone call.
- 23 Light→P62, 102, 138, 349, 102**
Turn on or blink when activating Lock on close, shooting an image, recording a movie, operating Music&Video Channel player or Music player operate according to the settings of Indicator light or Light alert, Simple light or Light.
- 24 Sub-display→P29**
- 25 FOMA Built-in antenna**
* The terminal has a FOMA built-in antenna. To talk in better conditions, do not cover the antenna with your hand.

- 26 Fingerprint sensor→P108**
Register/authenticate fingerprint
- 27 Back cover**
- 28 Strap opening**
- 29 Speaker**
Hear ring alert or voice of the caller using the speakerphone, etc. from here.
- 30  PushTalk/REC key**
Use to operate PushTalk, display a menu on the sub-display, save still image during 1Seg watching.
Press and hold for 1 second or more : Video recording during 1Seg watching
- 31 microSD memory card slot→P294**
- 32 1Seg antenna→P253**
- 33  Music key**
Use to perform menu items on the sub-display, operate Music&Video Channel player or Music player
Press and hold for 1 second or more : Start/Stop Music player
- 34 Side keys [▲▼]**
Side key [▲] : Stop ring tone, alarm or vibrate effect, increase the volume during a call or PushTalk call, turn on the light of the sub-display while the FOMA terminal is folded, switch display, select menu
Side key [▲](1 sec. or more) : Start Quick answer machine while a call is incoming, start/stop voice memo/movie memo during a call, start/cancel Silent mode while the FOMA terminal is folded*, activate answer machines/voice memos on the stand-by display while the FOMA terminal is open
Side key [▼] : Decrease the volume during a call or PushTalk call, Turn sub-display light ON while the FOMA terminal is open, switch display, select menu item
Side key [▼] (1 sec. or more) : Silence while watching 1Seg or playing video, check new message on the stand-by display.*
* The setting of pressing and holding the side keys is the operation in the default state.
- 35 Earphone/microphone jack→P356**
Connecting the Earphone/microphone with switch
Slide cover in the direction of **1**, connect an optional Flat-plug Earphone/Microphone with Switch, etc (**2**).

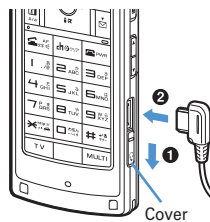

- * Securely insert the plug.
* Avoid wrapping the cord around FOMA terminal or bringing it close to the antenna. Doing so may lower wave reception level or generate noise.