

Pictogram	Reading
	やじるし、ひだりした、さがる、さげる、だうん、ひだりななめした
	やじるし、ぐっと、あがる、あげる、ぐっと
	やじるし、ぼっと、さがる、さげる、ぼっと
	かお、め、からだ
	かお、みみ、からだ
	ぐー、ぐう、じゃんけん、て、こぶし、ばんち、からだ
	ちよき、じゃんけん、て、ぴーす
	ぱー、ぱあ、じゃんけん、て、ばい、さんせい
	あし、あしあと、あるく、とほ、からだ、きつく、けり、ける
	とらんぶ、はーと、あい、こころ
	とらんぶ、すぺーど
	とらんぶ、だいや
	とらんぶ、くらぶ
	のりもの、こうつう、でんしゃ、れっしゃ、えき
M	のりもの、こうつう、ちかてつ、えむ
	のりもの、こうつう、しんかんせん、のぞみ、ひかり、こだま
	のりもの、こうつう、じどうしゃ、くるま、たくしー、どらいぶ、せだん
	のりもの、こうつう、じどうしゃ、くるま、たくしー、どらいぶ、あーるぶい
	のりもの、こうつう、ばす
	のりもの、こうつう、ふね、ふえりー、こうかい
	のりもの、こうつう、ひこうき、じえっと、じえっとき、ふらいと、くうこう
	のりもの、よっと、ふね、りぞーと
	つりー、くりすます、き
	いえ、うち、おうち、じたく

Pictogram	Reading
	びる、かいしゃ、しょくば、がっこう
	ゆうびん、ゆうびんきょく、ほすと
	びょういん、びょうき、けが
	ぎんこう、ばんく
	えーていーえむ、えいていえむ、ぎんこう
	ほてる
	こんびに、こんびにえんす、こんびにえんすすとあ
	がそりんすたんど、がそりん、がすすた、すたんど
	ちゅうしゃじょう、ちゅうしゃ、ぱーきんぐ
	しんごう、しんごうき
	といれ、かつぶる、でーと、けっこん
	しょくじ、ごはん、れすとらん、ふあみれす
	こーひー、どりんく、のみもの、かつぶ、こつぶ、きっさてん、さてん、おちゃ
	かくてる、おさけ、さけ、ぱー
	びーる、おさけ、さけ、いざかや、のみかい、こんば、かんばい
	はんぱーがー、ぱーがー、けいしょく、ふあーすとふーど
	はいひーる、ひーる、くつ、あし
	はさみ、かっつ、びょういん、びょうしつ、さんぱつ、とこや
	まいく、からおけ、うた、うたう
	えいが、えいがかん、しねま、かめら、さつえい、びでお
	うま、けいば、もくば、めりーごーらんど、ゆうえんち
	おんがく、おと、きく、へつどほん、へつどふおん
	え、あーと、げいじゅつ、びじゅつ、ぱれつと
	えんげき、ひと、しんし、ほうし
	いべんと、はた
	ちけつと、きつぷ
	すぼーつ、うんどう、しゃつ、たんくとつぷ

Pictogram	Reading
	すぼ一つ、うんどう、やきゅう、そふと、ぼーる、そふとぼーる
	すぼ一つ、うんどう、ごるふ
	すぼ一つ、うんどう、てにす、たつきゅう、らけつと
	すぼ一つ、うんどう、さっかー、ぼーる
	すぼ一つ、うんどう、すきー、すのーぼーど、ぼーど、すけーと、すのぼ、すべる
	すぼ一つ、うんどう、ぼすけつと、ぼすけ、ぼすけつとぼーる
	すぼ一つ、うんどう、ごーる、はた、れーす、えびわん、もーたーすぼ一つ
	ぼけべる、ぼけつとべる、ペーじゃー
	たぼこ、しがー、しがれつと、きつえん、いっぷく
	たぼこ、しがー、しがれつと、きんえん
	かめら、しゃしん、さつえい、げきしゃ
	かばん、ぼつぐ、てさげ、りょこう
	ほん、のーと、しょしんしゃ
	りほん、ちょうねきたい、ねきたい、あめ
	ぶれぜんと、たんじょうび、おくりもの
	ろうそく、きゃんどる、たんじょうび、ぼーすでい、ぼーすでー
	でんわ、くろでん、てれふおん、てれほん、てる、てれ
	けいたいでんわ、けいたい、けーたい、でんわ、ぴっち、ふぉーん、ふぉん
	めーる、てがみ
	めも、しよるい、れぼーと、しゅくだい、しけん
	てれび、がめん、ぼんぐみ
	げーむ、こんとろーら
	しーでいー、あるぼむ、しんぐる、でいすく
	くつ、しゅーず、すにーかー、あし
	めがね

Pictogram	Reading
	くるまいす
	せいざ、おひつじざ、おひつじ
	せいざ、おうしざ、おうし
	せいざ、ふたござ、ふたご、すなどけい
	せいざ、かにざ、かに
	せいざ、ししざ、しし
	せいざ、おとめざ、おとめ
	せいざ、てんびんざ、てんびん、おもち、もち
	せいざ、さそりざ、さそり
	せいざ、いてざ、いて、あがる、あつぷ
	せいざ、やぎざ、やぎ
	せいざ、みすがめざ、みすがめ、なみ
	せいざ、うおざ、うお、さかな
	つき、しんげつ、まる
	つき
	つき、はんげつ
	つき、みかつき
	つき、まんげつ、まる
	でんわ、けいたいでんわ、けいたい、けーたい、ふぉーん、ふぉん、ぴっち、ちゃくしん
	めーる、てがみ、じゅしん
	ふぁくす、ふぁくす、じゅしん
	あいもーど、あい、どこも
	あいもーど、あい、どこも
	どこもていきょう、でい、でー、でいー
	どこもほいんと、ほいんと、でい、でー、でいー
	えん、かね、きんがく、ねだん、りょうきん
	ただ、むりょう、じゅう、ひま、ふりー

Pictogram	Reading
	あいでい、あいでいー、あいでー
	かぎ、きー、ひみつ、ばすわーど、ろっく
	かいぎょう、まがる、つづく、つづき
	さくじよ、しーえる、くりあ、くーる
	さがす、しらべる、むしめがね、さーち
	にゆー、にゆー、あたらしい、しん
	はた、もくひょう、ごるふ、いちじょうほう、いち
	だいやる、だいある、ふりーだいやる、ふりーだいある
	しゃーぶ
	もばきゆー、もばきゆう、しつもん、きゆう、きゆー
	いち、すうじ、ばんごう
	に、すうじ、ばんごう
	さん、すうじ、ばんごう
	よん、し、すうじ、ばんごう
	ご、すうじ、ばんごう
	ろく、すうじ、ばんごう
	しち、なな、すうじ、ばんごう
	はち、すうじ、ばんごう
	きゆう、く、きゆー、すうじ、ばんごう
	ぜろ、れい、すうじ、ばんごう
	かちんご、さつえい、すたーと、はこ
	ふくろ、つぼ
	べんさき、べん
	はんご、ひと、ひとかげ
	いす、ざせき、すわる
	よる、よなか、しんや、れいと
	すぐ、もうすぐ、すーん
	おん

Pictogram	Reading
	おわり、えんど
	じかん、じこく、たいむ、とけい
	じてんしゃ、ちゃり、ちゃりんご、のりもの
	れんち、すばな、こうぐ、どうぐ
	ぼそこん、ぴーしー、こんびゆーた、こんびゆーたー
	えんぴつ、ぶんぼうぐ
	くりつぶ、ぶんぼうぐ、てんぶ
	やじるし、ざゆう
	やじるし、じょうげ
	やじるし、りさいくる、かいてん、まわる
	えぬじー、だめ
	ひみつ、まるひ
	きんし、げんきん、だめ
	くうしつ、くうせき、くうしゃ、あき、あく、から
	ごうかく
	まんじつ、まんせき、まんしゃ、いっばい、まんたん、ぶる
	けいこく、きけん、びっくり
	こびーらいと、しー、まるしー
	とれーどまーく、ていーえむ
	れじすたーどとれーどまーく、とれーどまーく、あーる、まるあーる
	あいあがり、あるふあ、あがり
	あいあがり、あるふあ、あがり
	どるぶくろ、どる、かね、おかね
	うでどけい、とけい、うおっち
	すなどけい、とけい
	おにぎり、おむすび、ごはん、おべんとう、べんとう
	けーき、しょーとけーき、でざーと、おかし、かし

Pictogram	Reading
	ぼん、ぶれっど
	どんぶり、らーめん、めん、うどん、そば
	ゆのみ、おゆのみ、おちゃ、ちゃ
	とっくり、おちよこ、おさげ、さげ、にほんしゅ
	わいんぐらす、わいん、おさげ、さげ
	ばなな、くだもの
	りんご、あつがる、くだもの
	さくらんぼ、ちえりー、くだもの
	くろーぼー、よつば、はつば
	ちゅーりっぷ、はな
	わかば、ふたば、はつば
	もみじ、こうよう、はつば
	さくら、はな
	かたつむり、まいまい、でんでんむし、どうぶつ、むし
	ひよこ、とり、どうぶつ
	べんざん、とり、どうぶつ
	さかな、おさかな、どうぶつ
	うま、どうぶつ
	ぶた、どうぶつ、ぶー
	しゃつ、ていーしゃつ、ふく、ようふく、ていしゃつ
	すぽん、ぼんつ、じーぼん、じーんす、ふく、ようふく
	けしよう、くちべに、るーじゅ、りっぷ
	ゆびわ、あくせさりー、りんぐ
	おうかん、かんむり、おうさま
	べる、ちゃべる、かね
	どあ、とびら、と
	がっこう、だいがく
	なみ、うみ、つなみ、おおなみ

Pictogram	Reading
	ぶじさん、やま
	すぼーつ、うんどう、すのーぼーど、ぼーど、すのぼ、すべる
	すぼーつ、うんどう、はしる、にげる
	かお、こまる、うーむ、うーん、うむ、むすっ、かんがえる
	かお、ほっ
	かお、ひやあせ、たらー、だらー、あせ、あせる
	かお、ひやあせ、たらー、だらー、あせ、あせる
	かお、おこる、ぶー、ぶー
	かお、ぼけー、しらー、しらけ
	かお、はーと、らぶ、すき、わーい、うれしい
	かお、あっかんべー、べー、いたずら
	かお、ういんく、ういんく、ばちっ、ばち
	かお、うれしい、わーい、きゃっ、きゃ
	かお、がまん
	かお、どうぶつ、ねこ
	かお、かなしい、なく、えーん、わーん、なきがお
	かお、なみだ、かなしい、ぼろり、なく、なきがお
	かお、おいしい、うまい、まんぞく
	かお、えがお、わらう、うっしっし、うしし、ししし
	かお、さけぶ、さけび、げっそり、ひゃー、むんく
	て、おっけー、おーけー、おーけい、おうけい、ぐっど、ゆび、おやゆび、ぐっど
	てがみ、めーる、らぶれたー、こいづみ
	がまぐち、さいふ、おかね、かね

Special symbol list

You can convert characters by entering the readings in hiragana/kanji mode.

Reading	Symbol	Reading	Symbol	Reading	Symbol	Reading	Symbol		
あーる	R r ㇼ	えっち	H h	かぶしきがいしゃ	(株) KK	くさい	ㇼㇼ		
あい	I i	えぬ	N n	から	～	くざい	ㇼㇼ		
あすたりすく	*	えふ	F f	かるー	ㇼ	くしー	ㇼㇼ		
あすてりすく	*	えむ	M m	がんま	ㇼㇼ	くらむ	ㇼㇼ		
あっとまーく	@	える	L l	がんまー	ㇼㇼ	くろぼし	★		
あるふあ	A a	えん	¥	きー	X x	くろまる	●		
あるふあー	A a	おう	O o	きごう	<>@/ // ±々×≠÷ ≦≧.:§\ ∞∧∈∨∩ ∃∪⊂⊃∅ ∠∟∩∪∩ ∪∩∩∩∩ Σ≡≠≠≠≠ " " ≫ ≪ √ ∞∞∞∞∞∞ Å%‰†‡†	けい	K k		
あんだーばー	_	おー	O o			けー	K k	こ	ㇼ V
あんど	&	おーむ	Ω ω			ごうどう	≡	こめ	※
あんばさんど	&	おす	♂			こめじるし	※	ころん	:
いー	E e	おなじ	々 //			さん	ㇼ III	さんかく	△▲▽▼
いーた	H η	おみくろん	O o			し	ㇼ IV	しー	C c
いおた	I i	おめが	Ω ω			しー	G g	しーしー	cc
いこーる	=	おんぐすとろーむ	Å			しーた	θ θ	じーた	Z z
いち	ㇼ I	おんぶ	ㇼ			じーた	Z z	じえい	J j
いぶしろん	E e	かい	X x						
うぶしろん	Y y	かける	×						
えい	A a	かっこ	□] [] [] " "" " " () [] # < > < >	きゅー	Q q				
えいち	H h	かっぱ	K k	きゅう	ㇼ IX				
えー	A a	かぶ	(株)	きろ	ㇼ				
えす	S s			きろぐらむ	kg				
えつくす	X x			きろめーとる	km				
				く	ㇼ IX				

Reading	Symbol	Reading	Symbol	Reading	Symbol	Reading	Symbol
じえー	J j	すらっしゅ	∧	てん	“ ”	はてな	?
しかく	□■◆◇	ぜーた	Z z	てん	“ ”	はんだくてん	°
しくま	Σ σ	せくしょん	§	てん	“ ”	びー	B b
しち	⑦ VII	せっし	℃	てんてん	“ ”	びー	P p Π π
しめ	♯	ぜっと	Z z	てんてん	“ ”	ひく	—
しゃーぶ	#	せみころん	;	てんてん	“ ”	ひしがた	◇◆
しゃせん	∧	せんち	cm 釐	てんてん	“ ”	びっくり	!
じゅう	⑩ X	せんちめーとる	cm 釐	てんてん	“ ”	びょう	”
じゅういち	⑪	せんと	¢ 分	てんてん	“ ”	ふあい	Φ φ
じゅうきゅう	⑲	だい	(代)	てんてん	“ ”	ぶい	V v
じゅうく	⑲	たいしょう	炬	てんてん	“ ”	ふいー	Φ φ
じゅうご	⑮	だいなり	>	てんてん	“ ”	ぶさい	Ψ ψ
じゅうさん	⑬	だいひょう	(代)	てんてん	“ ”	ぶしー	Ψ ψ
じゅうし	⑭	たう	T t	てんてん	“ ”	ふとうごう	<> ≤ ≥ ≠ «»
じゅうしち	⑰	だがー	†	てんてん	“ ”	ぶらす	+
じゅうなな	⑰	だくてん	°	てんてん	“ ”	ぶらすまいなす	±
じゅうに	⑫	たず	+	てんてん	“ ”	ふらっと	b
じゅうはち	⑱	だぶりゅ	W w	てんてん	“ ”	ふん	’
じゅうよん	⑭	だぶりゅー	W w	てんてん	“ ”	へいせい	〒
じゅうろく	⑯	だぶるだがー	‡	てんてん	“ ”	へいほうめーとる	m
しょうなり	<	たんい	° ’ ” °C ¥ \$ ¢ £ %	てんてん	“ ”	べーじ	¢
しょうわ	隣	ていー	T t	てんてん	“ ”	べーた	B β
しろぼし	☆	でいー	D d	てんてん	“ ”	べーたー	B β
しろまる	○	てー	T t	てんてん	“ ”	へくたーる	‰
ずけい	☆☆○○●● ◇◆□■▲ ▲▼▼	でー	D d	てんてん	“ ”	ほし	☆☆※
		でるた	Δ δ	てんてん	“ ”	ぼんど	£

Reading	Symbol	Reading	Symbol	Reading	Symbol	Reading	Symbol
まいなす	—	みり	mm \equiv μ	やじるし	$\rightarrow \leftarrow \uparrow \downarrow$ $\Rightarrow \Leftrightarrow$	よん	④ IV
まる	○ ● ◎ ◦	みりぐらむ	mg	ゆう	(有)	らむだ	$\wedge \lambda$
	① ② ③	みりばー	μ g	ゆー	U u	りっとる	μ g
	④ ⑤ ⑥ ⑦	みりめーとる	mm	ゆー	(有)	ろー	P ρ
	⑧ ⑨ ⑩ ⑪	むげん	∞	ゆうげんがいしゃ	(有)	ろく	⑥ VI
	⑫ ⑬ ⑭ ⑮	むげんだい	∞	ゆうびん	$\bar{\tau}$	わい	Y y
	⑯ ⑰ ⑱ ⑲	めいじ	明治	ゆうびんばんごう	$\bar{\tau}$	わっと	τ °
	⑳ ㉑ ㉒ ㉓	めーとる	メートル	ゆえに	\therefore	わる	\div
	㉔ ㉕	みゆー	M μ	ゆぶしろん	Y U		

* Some may differ from actual displays.

* There are types of entered characters as two-byte only, one-byte only and both two/one-byte characters.

Smiley list

You can convert characters by entering the readings in hiragana/kanji mode. can also be converted by entering "かお" or "かおもじ".

• Greeting/Reply (19 items)

Smiley	Reading
(^_^)/	あいさつ、ばい
(^ ^)/	あいさつ、ばいばい
(^_^)/	あいさつ、ばいばい
∨ (^_^) byebye!!	あいさつ、ばいばい
(^^)/	あいさつ、おーい、 じゃあ、どーも、 よろしく
(^^)/	あいさつ、おーい、 じゃあ、どーも、 よろしく
(^^)/	あいさつ、ばいばい
(^^)/	あいさつ、おーい
(// ^ ^ //) f°	あいさつ、にこっ
~(°*)	あいさつ、やあ
(*^)/	あいさつ、ちわっ
∨ (´ω` = ´ω`)/	あいさつ、おはよう
(o^.)b	へんじ、ぐっ、ぐー
(≥ω≤) b	へんじ、ぐっ、ぐー
(・∨・n)	へんじ、はい

Smiley	Reading
(^_^)ok	へんじ、おっけー
(`´)ゞ了解!	へんじ、りょうかい
(o°_°o)/	あいさつ、やあ
(=° ω°)/	あいさつ、やあ

• Smile/Glad (34 items)

Smiley	Reading
(^^)	わらう、にこっ
(^^)v	うれしい、にこっ
(^o^)	うれしい、うほほ、 にこっ、わーい
o(^o^o	うれしい、うきうき
(o^_^o)	うれしい、にこっ
(*^_^*)	うれしい、にこっ
(・∨・)	わらう、きたー、 にこっ
∨ (^∇^)/	うれしい、わーい
∨ (´-`)/	うれしい、わーい
(*^∇^*)	うれしい、にこっ
(☆∇☆)	うれしい、きらーん

Smiley	Reading
(^^)v	うれしい、やったね、 ぴーす、にこっ、 ぶい
(=^_^=)	うれしい、にこっ
(´∨`)	うれしい、にこっ
(≥∨≤)	うれしい
:)	わらう、にこっ、 すまいる
V(^O^)	うれしい、ぴーす
(^g^)/ヲヅ	わらう、ちゅっ、 にこっ
((o(^-^o))	うれしい、わくわく
(^^)	わらう、にこっ
v(^o^)	うれしい、いえい、 ぶい、ぴーす
(^_^)v	うれしい、やったね、 ぴーす、にこっ、 ぶい
(^・^)	わらう、にこっ
(^O^)	わらう、わーい

Smiley	Reading
(^O^)/	わらう、おーい、はーい
(^O^)v	わらう、やったね、びーす、にこっ、ぶい
)^o^(わらう、ほっぺがおちる
\(^o^)/	わらう、わーい
:-)	わらう、にこっ、すまいる
\(≥▽≤)/	うれしい、きゃー
d=(^o^)=b	うれしい、ぐー
ε=∇(*∇*)ノ	うれしい、きゃー
(@^O^@)	うれしい
(´∩`)	うれしい、むふふ

• Bashful/Angry (18 items)

Smiley	Reading
(^^ゞ	てるる、ぼりぼり
f(^_^)	てるる、てへ
(#^.^#)	てるる、にこっ、ぼっ
(*^.^*)	てるる、えへっ
(//▽//)	てるる、てれ
(*'-)	てるる、てへっ
(=° ω° =)	てるる、てへっ

Smiley	Reading
(*´ ㇀ `*)	てるる、こまる、てれ
:p	てるる、てへっ
(´▽´)	てるる、うふふ
\(*´ ㇀ `*)ノ	おこる、こら、ごるあ、ごるあ
o_)=O☆	おこる、ばんち
(ノ"")ノ┐┐┐	おこる、ちゃぶだい
(-_#)	おこる、こらっ
:-)	おこる、ふまん
ψ(´◇´)ψ	おこる、こら
(ノ`△´)ノ	おこる、こらっ
(●´ε´●)	おこる、ぶんぶん、むっかっ

• Cry/Sad (19 items)

Smiley	Reading
(>_<)	なく、あいた、いた、いてー、ひえー
(T^T)	なく、うるうる
(T_T)	なく、しくしく
(/_:)	なく、しくしく
(+_+)	かなしい、びくっ
(x_x;)	かなしい、がっくり
(/_.)	なく、くすん

Smiley	Reading
(つ ㇀ `)	なく、くすん
〇 _ _	かなしい、がっくし
(´·ω·`)	かなしい、しょぼん
(;O;)	なく、しくしく
(>_<.)	なく
(;:)	なく、しくしく
(T-T)	なく、なき、うるうる
(TOT)	なく、なき、うるうる
(/_.)	なく、いたい
:<	なく、かなしい
(;´ ㇀ ㇀)	なく、なき、ぐすん
°·(ノ ㇀ `)·°·	なく、えーん

• Surprise (28 items)

Smiley	Reading
(*_*)	おどろき、びくっ
(..?)	おどろき、めがてん
(..:)	おどろき、めがてん
(°°)	おどろき、うーん
(@_@)	おどろき、びくっ
(-;)	おどろき、ぎくっ
(-☆)	おどろき、きらーん
(□_□;!!)	おどろき、がーん

Smiley	Reading
(° ° ;)	おどろき、ぼかーん
Σ(□□)!	おどろき、びっくり、 がーん、ぎく
(□◇;)	おどろき、えっ
＼(° □° ;)/	おどろき、えっ
(;° □°)	おどろき、えっ
(((((° ㊦° ;))))	おどろき、がくがく
(=.=;)	おどろき、ぎくっ、 てつや
(.∴;)	おどろき、めがてん
(° °)	おどろき、ぎくっ、 ぎょ
(° °;	おどろき、ぎくっ、 ぎょ
@_@.	おどろき、びくっ、 ぎょっ
(° ㊦°)	おどろき、ぼかーん
(° _°)	おどろき、うーん
(.∴;	おどろき、めがてん
(.∴.)	おどろき、めがてん
(.∴;	おどろき、めがてん
(.∴.)	おどろき、めがてん
(° °)/	おどろき、おおー、 びっくり
(° °;;	おどろき、ぎくっ
Σ(° □° ;)	おどろき、がーん

・ Doubtful/Impatient (21 items)

Smiley	Reading
(^^;)	あせり、ぎくっ、 あせ
(?_?)	ぎもん、なぜ
(-.;)	あせり、ぎくっ、 あせ
w=(° °)=w	ぎもん、ぼたぼた
σ(^_^)?	ぎもん、えっ
(;¬¬)ゞ-	ぎもん、じー
Q(><);(><)Q	あせり、あたふた
(° ㊦° ;≡;° ㊦°)	あせり、あたふた
^^;	あせり、ぎくっ
(^^;;	あせり、ぎくっ、 あせ
(^_^;)	あせり、ぎくっ、 あせ
(^_^;	あせり、ぎくっ、 あせ
(¬¬;)	あせり、ぎくっ、 あせ
(¥_¥;	ぎもん、ぎくっ、 あせ
(*_*;	あせり、びくっ
^_^;	あせり、ぎくっ、 あせ

Smiley	Reading
(?_?;	ぎもん、ぎくっ、 なぜ
ε=┐(·_·)┐	あせり、にげる
(° ▽° ;)	あせり、ぎくっ、 あせ、えっ
((O(>_<)O))	あせり、じたばた
(;° O°)	あせり、ぎくっ、 あせ

・ Others (61 items)

Smiley	Reading
(^▽^@)♪♪♪	うたう
(^◇^)ゞ	りょうかい、 おっけー、らじゃ
m(_ _)m	ぺこり
()_	ぺこり
<(_ _)>	ありがと、おねがい、 ごめん、ぺこり
≡≡≡≡^(*-)/	いそぐ、にげる
(^_^;)))))コソコソ...	こそこそ
p(^_^)q	がんばれ、ふあいと
;)	ういんく
(^_^)	ういんく
(・v・)イイ	いい
(^人^)	かんしゃ、 ありがとう

Smiley	Reading
!(^ ^)!	びんぼーん
\ (^ ^)	よしよし、おい
(* ≥ m ≤ *)	ぶっ
(σ · √ ·)σ	げっつ
(—)	にやり
(· √ ·)つ	どうぞ
(^ ^)旦~	どうぞ、おちゃ
(∩° □°)∩	きて、かもん、 おいで
♪~(—ε—)	くちぶえ
(—。—)y~~~	たばこ
(` ω `)	しゃきーん
ㄸ(· √ ·)ㄸ	せーふ
(-:-)y-~	いっぷく
(-o-)y-°°°	いっぷく
(—~—)	うまい、たべる
(—人—)	おねがい
(^ ^)人(^ ^)	かんばい、なかま、 たっち
(i_i) \ (^ ^)	よしよし
(^ ∇ ^) σ ` O `)	つんつん
~~(m ` 冫 `)m	たすけて

* Some may differ from actual displays.

Smiley	Reading
~~(m ` √ `)m	いひひ
φ(. _)ㄨㄨㄨ	めもめも、かきかき
(° ∇ ^)] ㄨㄨㄨ	もしもし
(` □)	あーん
ㄱ (` ∇ ` ;) ㄱ	やれやれ
(` ^ ` ;)	はあ、ためいき
(; -_-)=3	ためいき
(-:-)	うーん
(` - `)	ぶいぶん、じまん
(` - `)	よだれ
(— + —)ㄱ	ぶっ
(—)	ほへー
(σ)	ほへー
(p_-)	むしめがね
(-_-)	じとっ
(-:-)	じとっ
(-:-)凸	ちちち
(..)	どれどれ
[壁]_-)	ちらっ
(+。+)	いたい
(-_-)zzz	ねてる、ねる
(_)。oO	ねむい

Smiley	Reading
(` _ > `)	ぶーん
(UoU)	ねむい
(^ (I) ^)	くま
U^I^U	いぬ
ホ`イ(-_-)ノ	ぼい
\ (° ∇、 °)ノ	よだれ
>°)))≡	さかな

Combination of Multiaccess functions

Availability of operations of processes generated/performed for each operation currently in progress is shown below.

- In i-mode (i-mode connection) includes i-Channel communication (except information reception) and Full Browser or data broadcasting site communication.
- i-mode mail reception includes reception of MessageR/F and i-Channel information.

○ : New operations are available △ : New operations are available depending on the condition × : New operations are unavailable

Current status		During a voice call	During a videophone call	During a PushTalk session	In i-mode	In Packet communication connected with a PC	In 64K data communication connected with a PC	
Processes that occur or are performed	Voice call	Send	△*1	×	×	○	○	×
		Receive	△*1, 2, 3	△*2, 3, 4	△*8	○	○	△*2, 3, 15
	Videophone call	Send	×	×	×	○*10	×	×
		Receive	△*2, 3, 4	△*2, 3, 4	△*2	△*11	△*5, 14	△*2, 3, 4
	PushTalk	Send	×	×	△*9	○*10	×	×
		Receive	×*5	×	×*5	△*12	×	×
	i-mode	Connect	○	×	×	△*13	×	×
	i-mode mail	Send	○	×	×	○	×	×
		Receive	○*6	×	×	○	×	×
	SMS	Send	○	×	×	○	○	×
		Receive	○*6	○*6	○*6	○	○	○*6
	Packet communication connected with a PC	Send	○	×	×	×	×	×
		Receive	○	×	×	×	×	×
	64K data communication connected with a PC	Send	×	×	×	×	×	×
		Receive	△*3, 5, 7	△*3, 5, 7	△*5, 7	△*5, 7	△*5, 7	△*5, 7

*1 During a call, a subscriber to Call waiting can make or receive a call to/from another party.

*2 Voice Mail or Call forwarding service, if subscribed to, can be used.

*3 When Set arrival act is Activate, Arrival call act is used.

*4 Recorded as a missed call when Call waiting is Activate.

*5 Recorded as a missed call.

- *6 The ring tone does not sound.
- *7 If Call forwarding service is active and Ring time is "0 Sec.", it is available by Call forwarding service.
- *8 Depend on PushTalk arv. act.
- *9 Only the caller can make a call for adding members.
- *10 You are disconnected from i-mode.
- *11 Depend on DataSession arv. act.
- *12 Depend on i-mode arv. act:PT.
- *13 Only connecting to data broadcasting site is available.
- *14 If Voice Mail or Call forwarding service is active and Ring time is "0 Sec.", it is available by each service.
- *15 When Call waiting is Activate, you can select either exiting current communication to answer the phone or rejecting the call.

Combination of Multitask functions

The table below indicates whether an item in New Task start menu can be activated combined with the currently running function/group.

- Functions that can be activated may be unavailable depending on the condition of FOMA terminal.

○ : Available × : Unavailable

Menu items	Voice call	Videophone call	PushTalk	Data communication	Dial	Mail	i-mode	i-appli	Phonebook & Logs	Data Box	LifeKit/ Osaifu-Keitai	Accessory	Settings	Music/1Seg	Silent mode ON/OFF		
Executing functions/group																	
During a voice call	Combination of Multiaccess functions → P448				×	○	○	○	○*2	○*2	○*2	○	○*2	○*2	×		
During a videophone call					×	×	×	×	×	×	×	×	○*2	○*2	○*2	×	
During a PushTalk session					×	×	×	×	○*2	×	×	○	○*2	○*2	×		
In Packet communication					○	×	×	○	○	○*2	○	○*2	○	○	○	○*2	○
In 64K data communication					×	○*2	×	○	○*2	○*2	○	○*2	○*2	○	○*2	○*2	○*2
Dial	○	○	○	○	×	○	○	○	○	○*2	○	○	○	○	○		
Mail	○	○	○	○*2	○	○*2	○*2	○	○	○*2	○	○	○	○	○		
i-mode	○	○	○	○*2	○	○*2	○*2	×	○	○*2	○*2	○	○	○*2	○		
i-appli	○	○	○	○	○	○*2	×	×	○	×	○*2	○	○	○*2	○		
Phonebook & Logs	○	○	○	○	○	○	○	○	○*2	○*2	○*2	○	○	○*2	○		
Data Box	○	○	○	○	○	○	○	○	○*2	○*2	○*2	○	○	○*2	○		
LifeKit (except infrared communication/iC transmission)	○	○	○	○*2	○	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2		
Accessory	○	○	○	○	○	○	○	○	○	○*2	○	○*2	○	○*2	○		
Settings & NW services	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2	○*2		
MUSIC	○	○	○	○	○	○	○	○	○*2	×	×	○	○	×	○		
Osaifu-Keitai	○	○	○	○*2	○	○*2	○*2	○*2	○	○*2	○*2	○	○	○	○*2		
User information	○	○	○	○	○	○	○	○	○*2	○*2	○	○	○	○	○		
1Seg	○	○	○	○	○	○*2	○*2	○*2	○	○*2	○*2	○*2	○	○*2	○		

*1 Some functions may be activated depending on the running function.

*2 Some functions may not be activated depending on the running function.

Services available for FOMA terminal

Service	Phone number
Directory assistance service (charged : service fee + call fee) (Not provided for those who do not require Directory assistance service)	104 (no area code)
Sending telegrams (charged : telegram fee)	115 (no area code)
Time (charged)	117 (no area code)
Weather (charged)	Area code + 177
Police emergencies	110 (no area code)
Fire and ambulance	119 (no area code)
Marine emergencies and accident reports	118 (no area code)
Disaster recorded message service (charged)	171 (no area code)
Collect call (charged : service + call)	106 (no area code)

✓ INFORMATION

- If you use the directory assistance service (104), the call charge is billed together with a service charge of 100 yen (105 yen including tax). This service is available without charge for those visually impaired or physically disabled in the upper body. For further information, inquire at 116 (NTT sales center) from a land-line phone (as of April, 2008).
- This FOMA terminal is applicable to "Emergency Location Report". When making an emergency call to 110, 119, 118, etc., information of your location (location information) is automatically informed to an emergency call receiving organization such as police. For some locations and/or wave reception conditions, the emergency call receiving organization cannot recognize the correct location. When location information is notified, the name of the emergency call receiving organization the information is sent to appears on the stand-by display. When the caller ID is hidden for the call, i.e., by appending "184" to the dialed number, none of location information or your phone number is notified; however, the organization may acquire the location information and phone number regardless of your settings, if they have determined that such information is necessary for the protection of life etc. The area and timing of implementing "Emergency Location Report" vary by the preparatory state of respective emergency call receiving organizations.

- When calling to 110, 119 or 118 from FOMA terminal, inform them that you are calling from a mobile phone and give your phone number and your current location precisely since the police or fire department has to call you back for confirmation. To make sure that you are not cut off during the call, do not move when making the call and do not turn OFF the phone after the call, but keep it on for about 10 minutes.
- For some areas you are calling from, you are not connected to the local police or fire department. Use a public payphone or land-line phone in that case.
- If you use the collect call service (106), the call charge is billed to the receiver together with a commission of 90 yen (94.5 yen including tax) per call (as of April, 2008).
- Customers who use Call forwarding from a land-line phone whose forwarding destination is a mobile phone, may still hear the ring tone even when the mobile phone is busy, out of service area or turned OFF due to the settings.
- You may not be able to call 116 (NTT sales center), Dial Q2, Message Dial and make credit card calls. However, credit card calls can be made from a land-line phone or a payphone to a FOMA terminal.

Options and related devices

Combining FOMA terminal with optional accessories supports a wide variety of uses from personal use to business use. Some products are unavailable depending on the area.

For details, contact a sales outlet such as DoCoMo Shop. For details about the optional devices, refer to the instruction manual for each device.

- FOMA AC Adapter 01/02^{*1}
- FOMA DC Adapter 01/02
- FOMA Dry Battery Adapter 01
- In-Car Hands-Free Kit 01^{*2}
- FOMA In-Car Hands-Free Cable 01
- Battery Pack F10
- In-Car Holder 01
- Desktop Holder F24
- Back Cover F27
- Carry Case L 01
- FOMA USB Cable^{*3}
- FOMA USB Cable with Charge Function 01^{*3}/02^{*3}
- FOMA Portable Charging Adapter 01
- Flat-plug Earphone/Microphone with Switch P01/P02
- Flat-plug Stereo Earphone Set P01

- Earphone Plug Adapter P001
- Earphone/Microphone with Switch P001*4/ P002*4
- Stereo Earphone Set P001*4
- Remote controller with microphone F01
- Earphone Terminal P001*4
- FOMA AC Adapter 01 for Global use*1
- FOMA Indoor Booster Antenna*5
- FOMA Indoor Booster Antenna (Stand Type)*5
- Bone conduction microphone/receiver

*1 Charging battery using AC adapter→P44

*2 FOMA In-Car Hands-Free Cable 01 is required for USB connection/charging of F906i.

*3 If you use USB HUB, operations may not be performed correctly.

*4 Earphone Plug Adapter P001 is required to connect to F906i.

*5 Use this only in Japan.

Playing movie using FOMA terminal, PC, etc.

You can play movies (MP4 format) created with a PC etc. on FOMA terminal by recording it in microSD card. And, you can play movies (MP4 format) recorded with FOMA terminals on a PC by data-transferring by microSD card, mail attachment, etc.

- Playing data in microSD card→P313
- MP4 format that can be played on FOMA terminal→P299
- When playing the recorded movie with FOMA terminal on a PC, record it in MP4 format. Especially for recording with Quality "HQ(High quality)", set Codec type to "HQ(H.264)".→P138, 147

* For compatible external devices, refer to the website below.

From a PC

FMWORLD (<http://www.fmwORLD.net/>)→携帯電話 (Mobile phone)→動画再生機能の対応状況 (Support of movie playing function)

- To play movies recorded in microSD card, save to the specific folders using FOMA F series SD utility etc.

microSD card folder structure→P308

Updating the microSD card information→P315

* For SD utility of FOMA F series, refer to the website below.

From a PC

FMWORLD (<http://www.fmwORLD.net/>)→携帯電話 (Mobile phone)→データリンクソフト (Data link software)

❖ Movie playing software

Playing movies on a PC (MP4 format) requires QuickTime Player (free of charge) ver. 6.4 or later (or ver. 6.3 + 3GPP), which is provided by Apple Computer, Inc. QuickTime Player can be downloaded from the website below.

<http://www.apple.com/jp/quicktime/download/>

- Downloading software requires a PC with Internet access. Communication charges are separately required for downloading.
- For details including the operating environment, downloading procedure and operating procedure, refer to the website shown above.

Troubleshooting


Check for the necessity of software update first, and update the software if necessary. →P463

■ Power supply and charging

● FOMA terminal cannot be turned ON (the terminal cannot be used).

- Is the battery pack installed correctly? →P43
- Is the battery exhausted? →P44, 47
- When the mova terminal is active in Dual network service, FOMA terminal service is unavailable. Check whether FOMA terminal is active or not. For details, refer to "Mobile Phone User's Guide [Network Services]".

● FOMA terminal cannot be turned OFF

By pressing  for 10 seconds or more, power can be forcibly turned OFF.

● FOMA terminal cannot be charged.

- Is the battery pack installed correctly? →P43
- Is the charging jack dirty? Clean the jack with dry cotton swab etc.
- Is the AC adapter connector securely inserted to the external connection jack of FOMA terminal or the desktop holder connection jack? Is FOMA terminal correctly mounted on the desktop holder? Is FOMA terminal correctly installed in the Desktop holder? →P46

● The light blinks while charging.

- If you are talking, communicating or during PushTalk session, end it immediately. Remove the AC adapter (Desktop holder) and DC adapter from FOMA terminal, then charge again in the proper way. →P44
- If the problem still persists, contact a sales outlet such as DoCoMo Shop.

● All the icons on the top of the display blink and alarm sounds.

The battery is almost exhausted. Charge the battery. →P44, 47

■ Phone

● Calls cannot be made using the keypads.

Have you activated All lock, Omakase Lock, Self mode, Keypad dial lock or Lock on close? →P120, 121, 122, 123, 129

● After dialing a number, you hear a busy tone and cannot establish a call.

- Have you dialed the area code?
- Did you hear the dial tone before dialing?
- Is 圏外 (out of service area) displayed? →P47

● The ring alert does not sound.

- Is Call alert volume of Adjust volume set to "Silent"? →P96
- Have you activated Public mode, Silent mode, Self mode or Privacy mode? →P65, 99, 122, 124
- Is Specified caller, Anonymous caller, Ring alert delay or Unregistered caller set? →P131, 132, 133
- Is Ring time for Voice Mail service or Call forwarding service "0 Sec."? →P388, 390
- Is Greeting msg resp time "0 Sec."? →P67
- Is Delayed time(Sec) in Auto answer setting "0 sec."? →P375

● During a voice call, the distant party's voice is hard to listen to or too loud.

- Has Listen volume of Adjust volume been changed? →P54, 96
- If you set Voice clear or Voice slowing to ON, the other party's voice becomes easy to hear. →P54

● When there is an incoming call, the terminal operates in a ring alert, image or light not set.


- Call ring alert, incoming call image or light alert, if any, set for multiple functions operate according to the priority levels. →P96, 105, 113
- Have you activated All lock, Omakase Lock, Personal data lock or Privacy mode? →P120, 121, 122, 124

● When there is an incoming call, functions for displaying the name or sounding the ring alert as saved in the phonebook are not activated.

- Does the phone number of the caller match that saved in phonebook? (Name displays →P82).
- Have you activated All lock, Omakase Lock, Personal data lock or Privacy mode? →P120, 121, 122, 124

■ Settings and operations

- **The menu icon becomes a key, which cannot be selected.**

When a function cannot be performed because of no UIM installed, Personal data lock, Privacy mode, etc., the icon is displayed in →P41, 122, 124

- **"Insert UIM." appears when FOMA terminal is powered on.**

UIM may not be correctly installed or may be damaged.→P41

- **The authentication screen appears every time FOMA terminal is opened.**

Lock on close is ON.→P129

-  **appears on the stand-by display and no operation can be made.**

Lock on close is ON.→P129

- **The authentication screen appears if trying to display the phonebook, mail, etc**

Privacy mode is ON. Perform authentication or cancel the setting.→P124

- **With FOMA terminal folded, the operation such as pressing side keys has no effect.**

Side key hold is ON.→P129

-  **appears on the stand-by display.**

Side key hold is ON.→P129

- **The date and time are deleted.**

With Auto time adjust "OFF" in Date & time, removing the battery pack or leaving it exhausted for a long time may delete the date and time.→P49

- **The display is dim.**

- Is power saving mode active?→P49
- Is Brightness of Display & Key light changed?→P107
- During 1Seg, if setting 1Seg Eco-mode ON, the light becomes dark.→P273

- **Display or Keypad light does not turn on.**

- Is Normal use in Display light time in Display & Key light "0 sec"?→P106
- Display & Key light set to "OFF"?→P107

- **Alarm clock or schedule reminder is set, but it does not operate at the specified date and time when the power is turned OFF.**

Is Alarm auto power ON "OFF"?→P356

- **Call cost is not totalized.**

The total calls cost to UIM may have reached the upper limit (approximately ¥16,770,000). It can be reset to ¥0.→P369

- **The cursor/pointer moves or Keypad sound sounds with no operation.**

When touching the fingerprint sensor lightly with Pointing device ON, the cursor/pointer may move or Keypad sound may sound. Do not touch the fingerprint sensor or set Pointing device to "Not use" not to activate Pointing device.→P40

■ Mail, i-appli and data

- **Still images and movie taken with the camera are blurred.**



- When shooting an object nearby, switch to macro shooting.→P149
- Shoot in Shake reduce:Auto.→P151

- **When a mail is received, the terminal operates in a ring alert, image or light not set.**

- Mail ring alert or light alert, if any, set for multiple functions operate according to the priority levels.→P96, 113
- When movie/i-motion containing sound and image is set as Mail ring alert, the set i-motion is used as the image.
- If multiple mails are received at the same time, the terminal operates as set for the last mail received.
- Have you activated All lock, Personal data lock or Privacy mode?→P120, 122, 124

- **Names do not appear or ring alert does not sound at the time of mail reception even if they are registered in the phonebook.**

- Does the phone number or mail address of the caller match that saved in phonebook? (Name displays→P82).
- Have you activated All lock, Personal data lock or Privacy mode?→P120, 122, 124
- Is Receive display option set?→P129

- **The still image and movie appear as  and .**

Destroyed data cannot be displayed correctly.

- **The screen reacts slowly when a key is pressed.**

While transferring large-size data between FOMA terminal and microSD card, the reactions on the screen may be delayed.

- **i-appli/i-appli stand-by display cannot be activated.**

- Unavailable due to UIM operation restriction.→P42
- Has i-appli been in suspended condition by IP (Information Provider)?
- With i-appliDX, communication may be made to confirm the validity of i-appli regardless of the network transmission setting of i-appli. Some i-appli may not be activated until confirmation of the validity finishes. And, the date and time require to be set for activation.→P49
- Have you activated All lock, Omakase Lock, Personal data lock or Privacy mode?→P120, 121, 122, 124

- **The lighting for the display does not go ON while i-appli is running.**

- The light does not turn on when Normal use in Display light time in Display & Key light is "0 sec" and i-appli is "Terminal setting".,→P106, 227
- Even if setting Display light of i-appli settings to "Software", the light turns off in Public mode when the time specified in Display light time (Normal use) of Display & Key light has elapsed.

- **Data transfer is not performed**

Are you using USB HUB? If you use USB HUB, operations may not be performed correctly.

■ Other

● Osaifu-Keitai function is unavailable.

- When removing the battery pack or activating Omakase Lock, IC card functions become unavailable regardless of the IC card lock settings. →P43, 121
- Have you activated IC card lock?→P249

● At the time of authenticating or registering fingerprint, "Scan failed." appears even if your finger is not in contact with the sensor.

The surface of the sensor may be wet or dew may have condensed on the surface. Wipe the water off with a soft cloth before use.

● 1Seg watching is unavailable.

- Are you out of terrestrial digital TV broadcasting service area or in a place where airwave is weak?
- Is UIM installed correctly?→P41
- Is channel set?→P270

● Sub-display is not seen clearly

Sub-display is displayed immediately after FOMA terminal is folded, when the Side key etc. is pressed or when a call is received. And because of the characteristics of surface panel, sub-display may not be seen clearly at places in the sun light. In this case, check the display in the shade, or make a shadow with your hand to check the display.

● Fingerprint authentication is unavailable with FOMA terminal connected to a PC etc.

When connecting FOMA terminal using a USB cable to a device which requires grounding such as a desktop PC, make sure that the device is grounded in advance. If the connected device is not grounded, fingerprint authentication may be disabled. In such a case, perform fingerprint authentication while touching a metallic part (frame, external connector, etc.) of the connected device or after disconnecting FOMA terminal from the device.

● The display has afterimages.

- If the battery pack is removed from FOMA terminal before the terminal power is turned off, afterimages may remain. Remove the battery pack after turning OFF the power.
- If FOMA terminal is left open for a while with the same screen displayed, afterimages of that screen may remain even after changing the screen for a certain operation.

● The display has some dots always lit or unlit.

FOMA terminal displays are manufactured by taking advantage of highly advanced technology but some dots may be always or never lit. Note that, this shows characteristics of liquid crystal displays and not defects in FOMA terminals.

● Difference in lighting color and/or brightness

- Note that, the phenomena below are caused by characteristics of LEDs used for lighting, not defects of FOMA terminal :
 - The lighting color and/or brightness varies among FOMA terminals or by LEDs.
 - The actual lighting color seems to discord from the lighting color name for some FOMA terminals.
 - Though the lighting color name described indicates the major light source color of the LED, the lighting may appear in a different color because the light source settings are delicately different among functions.
- Check that the Key lighting turns on in "Blueberry", "Kiwi" and "Strawberry", and the light in the center turns on in "Aqua", "Lime" and "Garnet" by Light alert. If one or more of these colors do not turn on, contact a sales outlet such as DoCoMo Shop.→P107, 112

■ Using FOMA terminal overseas

● 国外 (out of service area) is displayed, and international roaming service is unavailable.

- You are out of the international roaming service area or in an area with poor signal strength.
- Check whether the service area and telecommunications carrier are available, referring to international service guides such as "Mobile Phone User's Guide [International Services]".
- Using Network search mode, search for a telecommunications carrier available for the service.→P411
- Switch 3G/GSM setting to "AUTO" or any available network after moving from Japan to overseas. If "AUTO" is set in Japan, once turn OFF FOMA terminal and then turn it ON.→P412

● No incoming voice or videophone calls are received. Is Bar calls at roaming activate?→P414

● Videophone call, i-mode or SMS is unavailable.



- Check whether the service area and telecommunications carrier are available, referring to international service guides such as "Mobile Phone User's Guide [International Services]".
- Check the settings of 3G/GSM setting.→P412

● No caller ID is notified/A notified caller ID is different from that of the caller/Functions for using contents saved in phonebook or those using Caller ID notification do not operate.

Even when a caller notifies its caller ID, it is not displayed on FOMA terminal unless notified from the network or telecommunications carrier used. And, a notified caller ID is different from that of the caller by some networks or telecommunications carriers used.

Error messages

Error messages

- The "(number)" or "(xxx)" in error messages is a code used to distinguish the error sent from i-mode Center.
- **A Network error has occurred.**
Press  to close GPS function, and retry later.
- **All locked.**
All lock is ON.→P120
- **Apply secret attribute to mail address and SMS?**
This message appears when external phonebook entries with Secret attribute set are loaded or when Secret attribute is set for phonebook entries.→P128
- **Authentication interrupted.**
Displayed when stopping authentication by pressing  in the Authentication screen.
- **Authentication type is not supported.(401)**
The authentication type is not supported and connection to the specified site or website is disabled.
- **Cannot execute because of other tasks.**
When updating pattern data, terminate all other functions in advance.
- **Caution! This SMS includes Phone Nos. or URLs. Be careful if you do not recognize the sender.**
 - With Message scan of Set scan set to "Valid", you make an attempt to display SMS containing a phone number and/or URL description.
 - It does not appear when mopera mail or voice mail reception notification is received in SMS.
- **Certificate is rejected.(tampered)**
The site certificate has been altered. Connection is suspended.
- **Check address.**
An incorrect or no mail address was input to the mail group.
- **Check SMS center setting.**
SMS settings (SMSC) are incorrect.→P220
- **Connection failed.(403)**
Failed to connect to the site for a certain reason such as connection rejection.
- **Connection failed.(503)**
Failed to connect to the server due to the maintenance or the rate of congestion. Retry later.
- **Connection failed.(562)**
Failed to connect to the i-mode Center. Please retry in a place with good radio wave conditions.
- **Connection interrupted.**
Please retry in a place with good radio wave conditions. If the error persists, retry later.
- **Content length exceeds maximum size for i-motion.**
Download has suspended because the data exceeds savable size while downloading i-motion.→P175
- **Continue using i-appli and transmit data? Yes/Terminate i-appli**
After "Data transmission is frequent. Continue transmission?" appears, an attempt was made by i-appli to make communications.
- **Corrupted data.**
i-appli cannot be started from invalid data read with Bar code reader.
- **Corrupted data or microSD.**
Accessing microSD card is disabled due to a problem in data saved in the microSD card or the card itself. Install new microSD card, or format or restore microSD card.→P308, 315, 316
- **Corrupted data or microSD. Saving to phone memory.**
When "microSD" is the destination for saving still images or movies and the microSD card cannot be accessed, the destination automatically switches to "Phone".
- **Current UIM is not registered as IC owner. Unable to download/update/run. Details are given in IC owner in Osaifu-Keitai Menu**
This message appears when UIM is replaced after registering as IC owner and an attempt is made to download, update or activate Osaifu-Keitai compatible i-appli.→P243
- **Data in IC card is full. Unable to download/update/run. Delete service?**
Memory space in IC card is insufficient when downloading, upgrading or starting Osaifu-Keitai compatible i-appli. Delete data from IC card according to instructions on the screen and delete the Osaifu-Keitai compatible i-appli.→P239, 243
- **Data transmission is frequent. Continue transmission?**
This message appears when communications using i-appli are made very frequently in a predetermined period of time. Select "Yes" to continue using i-appli, "No" to continue i-appli stopping i-appli communications or "Terminate i-appli" to stop i-appli.
- **Date and time not set. Unable to start.**
Some functions cannot be activated before date and time are set.→P49

● **Delete software and IC card data?**

Osaifu-Keitai compatible i-αppli which also deletes data in the IC card is included in the i-αppli. Select "Yes" to delete the i-αppli and the data in the IC card.

● **Dial callout restricted.**

This prohibited operation is unavailable in Keypad dial lock ON. →P123

● **Error in IC card data. Unable to delete software.**

Osaifu-Keitai compatible i-αppli containing errors in the IC card data cannot be deleted.

● **Error in image. Does not work correctly.**

Unable to display the Flash graphics due to image error.

● **Error in storage area. Unable to use password manager. Quitting.**

Password save/quote is disabled due to an error in Password manager memory space.

● **Exceeds max number of simultaneous calls.**

This message appears when a call is made selecting 5 or more members. Make a call after selecting 4 or less members.

● **Failed to activate.**

Activate 1Seg could not be activated due to an error in activation or station selection process.

● **Failed to read/clear call cost information.**

UIM is not correctly installed or the card is faulty. →P41

● **Failed to view message data.**

Mail data cannot be referenced in chat mail.

● **i-αppli stand-by display terminated due to security error.**

The i-αppli stand-by display has been closed due to an unpermitted operation or i-αppli action.

● **Infrared/iC transmission Connection interrupted.**

An error occurred during infrared communication/iC transmission. During infrared communication/iC transmission, do not move FOMA terminal from the right location before data sending/receiving completes. →P322

● **Infrared/iC transmission Failed to connect via authentication.**

Sending all data was failed because the authentication password is not correct. →P324

● **Infrared/iC transmission No response. Retry data exchange?**

A certain period of time elapsed in infrared communication/iC transmission state, but no communicating parties are found. Locate your and the other party's FOMA terminals correctly. →P322

● **Infrared/iC transmission No UIM, requested software failed to start.**

Even if an i-αppli To is set to data received by infrared communication/iC transmission, it is not activated due to UIM operation restriction. →P42

● **Input error (205)**

Input data for the site or website is incorrect.

● **Insufficient memory.**

Operation interrupted due to insufficient memory. If it appears frequently, once turn OFF FOMA terminal and then turn it ON.

● **Insufficient memory. Quitting application.**

Insufficient memory. The application is terminated stopping operation.

● **Invalid data**

The data contains an error and cannot be downloaded.

● **Invalid data. Connection cannot be established. (400)**

Cannot be connected because of the error in the site or website. Make sure the URL.

● **Invalid data. Unable to save.**

Data received through infrared communications/iC transmission cannot be saved because it is in a format incompatible with FOMA terminal.

● **Invalid data.(xxx)**

- Unable to display because there is an error in the received data.
- Sending auto-send message failed.

● **Invalid microSD. Unable to use DRM function.**

Accessing the authentication area in microSD card is disabled for a certain reason. Data compatible with data transfer cannot be saved to microSD card with errors.

● **Invalid UIM. Requested service not available.**

Operation is disabled by UIM operation restriction. →P42


● **Invalid UIM. Requested software failed to start.**

i-αppli cannot start by UIM operation restriction. →P42

● **Is the ToruCa automatic reading function in a mobile phone used through the reader/writer?**

Select "Yes" and set ToruCa auto-read to "ON".

● **以下の宛先にはメール送信できませんでした (561) Mails could not be sent to following address.(561) 〇@△△△.ne.jp**

Sending i-mode mail to the following address failed : Press  to display the receiver address of the failed message sending. Check the receiver address and retry sending in a place with good radio wave conditions. Mail addresses displayed in the message vary by the destinations.

● **Message cannot be read. Still retrieving message data.**


The message cannot be viewed because the message or the folder is used by the other process.


● **Message kept in center.**

The SMS have already been sent.

● **No content is available.(204)**

Could not find data at the specified site.

- **No response.(408)**
Unable to receive a response from a site or website within the specified time and the communication is disconnected. Retry later.
- **Omakase Lock activated.**
Omakase Lock is ON. →P121
- **Out of service area.**
Unable to perform because the terminal is in a place where radio waves do not reach or out of the service area.
- **Page is not found.(404)**
Make sure the URL is correct.
- **Password is not correct.(401)**
The user name or password entered on the Authentication screen of sites or website is incorrect.
- **Play limit reached. Unable to retrieve.**
When the replay restriction set to a Music&Video Channel program is exceeded, downloading cannot be resumed. →P338
- **Please wait.**
 - Failure in the voice line/packet communications facilities or congestion in voice line network/packet communications network. Retry later.
 - A call can be made to 110, 119 and 118. However, the connection is not established by some conditions.
- **Please wait for a while (Packet)**
Failure in the packet communications facilities or congestion in packet communications network. Retry later.
- **PUK blocked.**
Contact a sales outlet such as DoCoMo Shop.
- **Receiving messages stopped. Some messages unreceived.**
Unable to receive all SMS because an error occurred during reception. Please perform the Check new message function for SMS in a place with good radio wave conditions again. →P220
- **Registration is in progress. (554)**
User registration with i-mode is in process. Retry later.
- **Remotely Controllable services denied**
Voice Mail service or Call forwarding service that you tried to control remotely has not subscribed yet. A subscription is required separately.
- **Replay period has not yet started.**
Replaying is disabled as it is still before the replay period set to i-motion, Music&Video Channel or music data. Check the detail information or the program information. →P319, 338, 348
- **Requested software unavailable.**
i-αppli cannot be started because of an error in i-αppli. Starting i-αppli To is disabled if there is a problem in i-αppli settings or start-up conditions.
- **Root certificate has expired. Connect?**
The CA certificate has expired. (→P172)
This may appear when date and time are not set or wrong. →P49
- **Root certificate is not valid.**
FOMA terminal certificate is invalidated by setting. To connect, change the setting. →P172
- **Run software and delete data in IC card. Then delete software.**
Deleting the data in the IC card is required. Delete the data in the IC card in advance to delete the Osaifu-Keitai compatible i-αppli.
- **Save unsaved data to phone memory or delete.**
Infrared communication/iC transmission INBOX is full. Save the data from INBOX into FOMA terminal or delete it. →P325
- **Saved data corrupted. Restore default?**
Select "Yes" to return to the default setting. Functions cannot be started without restoring the default setting.
- **Service is used by the previous software. Unable to download/update. Delete a service?**
Download or update of similar Osaifu-Keitai compatible i-αppli is disabled before deleting the existing one. Select "Yes" and delete saved Osaifu-Keitai compatible i-αppli.
- **Service not registered.**
 - Unable to run because you are not an i-mode subscriber. You need to subscribe to use the service.
 - If you have subscribed to i-mode after purchasing FOMA terminal, once turn FOMA terminal power OFF and then turn ON.
- **Service unavailable.**
The SMS service is unavailable.
- **Services are full. MUSIC of overwritten service is unable to play. Overwrite?**
The service of Uta-hodai that can be saved exceeds the limit. Select "Yes" to overwrite from services with the oldest replay expiration. In addition, music data downloaded from overwritten services becomes unavailable.
- **Size of this page is not supported.**
 - The size of site or Web page was larger than the limit size. Press  to display the data already acquired normally.
 - The downloading data was larger than the limit size.
- **Software terminated due to security error.**
i-αppli has been terminated due to an unpermitted operation or i-αppli action.
- **Software updated.**
The i-αppli has already been upgraded to the latest version.

- **Some data are needed to update replay period. Send phone/terminal and UIM ID, and connect to site?**
This appears if there is expired Uta-hodai when an attempt is made to play music with Music player. Select "Yes" to update music data (you are charged for packet communications for updating the data). When "No" is selected, expired Uta-hodai becomes unavailable.→P343
- **SSL session cannot be established.**
SSL session was interrupted due to a session error or an authentication error on the server side.
- **SSL session failed.**
A problem was detected with the authentication process during SSL session. Session is suspended.
- **SSL/TLS session cannot be established.**
SSL/TLS session was interrupted due to a session error or an authentication error on the server side.
- **SSL/TLS session failed.**
A problem was detected with the authentication process during SSL/TLS session. Session is suspended.
- **The data cannot be saved. Download?**
The data cannot be saved. Select "Yes" to download.
- **This certificate has expired. Connect?**
The term of validity of the site certificate is premature or overdue. →P172
This may appear when date and time are not set wrong.→P49
- **This certificate is not valid for this URL. Connect?**
CN name (server name) of the site certificate does not match the actual server name.→P172
- **This data may not be replayed.**
i-motion or movie file format is not supported on FOMA terminal.
- **This software contains an error.**
Unable to import because i-appli data contains an error.
- **This site is not certified. Connect?**
The site certification is not supported by FOMA terminal.
- **This software is presently out of use.**
Using i-appli is stopped by the IP (Information Provider).
- **This UIM cannot be recognized.**
UIM is not correctly installed or the card is faulty.→P41
- **Time out**
The i-mode Center is busy. Retry later.
- **Time reset. Unable to download/play data. Set auto time adjustment ON in Date & Time and restart phone.**
With Auto time adjust "OFF" in Set date and time, removing the battery pack or leaving it exhausted for a long time may cause the date and time to be deleted.→P49
- **Too much data was entered.**
Unable to transmit data because too many characters were entered in the entry field of the site or Web page. Please reduce the number of characters and retry transmission.
- **Too much text entered. Entry uncompleted.**
An attempt is made to save an item containing characters exceeding the limit selected from a site etc. to phonebook. Press  to display phonebook registration screen with excess characters erased.
- **Transmission failed.(552)**
Failed to transmit the i-mode mail because of an error of the i-mode Center. Retry later.
- **UIM full.**
UIM does not have enough storage space and SMS cannot be saved. Move to FOMA terminal or delete SMS in UIM.→P222
- **Unable to check new messages.**
Please retry in a place with good radio wave conditions. If the error persists, retry later.
- **Unable to delete some applications in IC card. Delete others?**
i-appli items to be deleted include Osaifu-Keitai compatible i-appli that cannot be deleted because its related data cannot be deleted from the IC card. To delete other i-appli items, select "Yes".
- **Unable to play. Connect phone to PC and start application to update music if necessary.**
The music data cannot be replayed because it already expired, its replay expiration cannot be confirmed or information specific to FOMA terminal is changed due to a trouble, repair or replacement of the terminal. To play, check that it does not expire using a PC and connect FOMA terminal to the PC for synchronization.→P340
- **Unable to retrieve the requested URL.(504)**
Failed to connect to the specified site etc. for a certain reason.
- **Unable to save specified image.**
Failed to save because the image contains error.
- **"○○○.ne.jp"宛のメールが混み合っているため、送信することができません (555) Unable to send. "○○○.ne.jp" is not available temporarily.(555)**
i-mode Center is busy. Please wait for a while and retry. The domain name displayed in the message varies by the receiver.
- **Unable to shoot serially.**
You cannot shoot serially because of insufficient memory space. Continuous shoot is canceled automatically.
- **Unable to start fingerprint sensor.**
Failure in Fingerprint sensor. Contact the numbers for "General Inquiries" on the back of this manual.
- **Unable to switch to data transfer mode.**
As FOMA terminal is performing communication, data transfer mode cannot be set. Try again after the communication ends.

- **Unable to update pattern definitions.**
Updating the pattern definitions has failed. Stop all other functions currently running and retry the update in a place with good radio wave conditions.
- **Unable to use data type.**
Data in a file format incompatible with FOMA terminal cannot be moved/copied from a microSD card to FOMA terminal or searched for.
- **Unable to use this function**
When the 2in1 function is ON in B mode, messages cannot be created.
- **Unavailable channel.**
 - Reception fails because you are out of broadcasting service area. Retry the operation in a place with good radio wave conditions.
 - Reception fails because the channel is the charged one or for a certain reason.
 - The selected channel is stopped.
- **Unmatched to saved fingerprint.**
Retry fingerprint authentication or perform authentication operation with terminal security code. Note that authentication with terminal security code is disabled when Fingerprint access is "ON".→P116, 119
- **URL address changed.(301)**
The site or website automatically performs URL transfer or the URL was changed.
- **URL address is not valid.(xxx)**
Make sure the URL.
- **Usage is currently restricted. Try again later.**
This message appears when a very large volume of data was sent or received in a predetermined period of time with the i-mode packet flat-rate service used. Connection may be disabled for a predetermined period of the time; use i-mode after a while.
- **Work area full. Quit other applications.**
For the lack of memory space for operation, quit other functions.
- **You have no certificate. Connect?**
The user certificate has not been downloaded.
- **Your HTTP version is not supported.(505)**
The specified site or website does not support i-mode.

Warranty and After-Sales Service

❖ Warranty

- FOMA terminal is provided with a written warranty. Make sure that you receive it. Check the written contents and items such as "shop name/date of purchase" and keep it in a safe place. If it does not contain the necessary information, immediately contact the shop where you bought it. The warranty is valid for a period of one year from the date of purchase.
- This product and all accessories are subject to change, in part or whole, for the sake of improvement without prior notice.
- Since troubles, repair or other handling of FOMA terminal may cause contents in the phonebook etc. to be modified or deleted. DoCoMo recommends making a copy of the phonebook data etc., in case. And, in repairing etc. of FOMA terminal, information downloaded through i-mode or i-appli is not transferred to repaired FOMA terminal with some exceptions according to the copyright law.
 - * The data of phonebook, i-motion or data used by i-appli in FOMA terminal can be saved in microSD card.
 - * This FOMA terminal allows you to save phonebook and other data in Data Center by using Data Security Service (a charged service requiring subscription).
 - * If a PC is available, you can use DoCoMo keitai datalink (→P404) and FOMA USB Cable with Charge Function 01/02 (optional) or FOMA USB Cable (optional) to transfer stored contents in phonebook etc. to the PC and store.

❖ After-Sales Service

■ When problems occur

Before requesting repair, read the section of "Troubleshooting" (→P453). If the problem still persists, contact "Repairs" on the back of this manual.

■ If the result of inquiries indicates that a repair is required

Take your FOMA terminal to DoCoMo-specified repair office. Be sure to check the opening hours of the office before you go. Note that you must bring the warranty.

■ In the warranty period

- FOMA terminal is repaired at no charge subject to the conditions of the warranty.
- The warranty must be presented to receive warranty service. The subscriber is charged for the repair of items not covered in the warranty or repairs of defects resulting from misuse, accident, neglect, etc. even during the warranty period.
- The subscriber is charged even during the warranty period for the repair of failures caused by the use of devices or consumable items that are not DoCoMo-specified.
- The subscriber is charged for the repair of the color LCD or connector if broken after purchase.

■ Be careful that repairs may not be possible in the cases below. Also, since these conditions are outside the range of the warranty, a repair, if at all possible, is charged.

- When judged as malfunction due to moisture at the repair office (e.g. when detected in a moisture seal reaction)
- When corrosion due to moisture, condensation, perspiration, etc. is detected, or if any of the internal boards are damaged or deformed (Also, it may not be possible when external connection charging jack, earphone/microphone jack, liquid crystal are damaged or the terminal is rifted)

■ After expiration of the warranty

- All repairs that are requested are charged.

■ Replacement parts

- Replacement parts (parts required to maintain the product functions) are basically kept in stock for at least 6 years after termination of production. However, repair may not be possible due to lack of repair parts etc. Depending on the nature of the required repair, it may still be possible to repair your phone even after this period. Call the contacts listed on the back of this manual, "Repairs".

■ Notes

- Do not modify FOMA terminal or its accessories.
 - May cause fire, injury or damage.
 - Modified FOMA terminals etc. are repaired only after the customer accepts that the modified parts are to be restored to the condition at the time of purchase. However, repair may be refused depending on the nature of modification.
- The cases below may be regarded as modifications.
 - A sticker etc. is put on the LCD or keypad part
 - FOMA terminal is embellished with adhesive material etc.
 - Exteriors are replaced with other than DoCoMo's genuine parts
- Repair of failures or damage caused by modification is charged even during the warranty period.
- Do not remove any inscription stickers attached to the FOMA.

 
The inscription stickers certify that FOMA terminal satisfies specific technical standards. Note that, if stickers are removed intentionally or reattached in such a way that confirmation of the sticker's contents is impossible, repair or servicing may be refused because confirmation of whether the phone conforms to relevant technical standards cannot be made.
- Function settings and information such as total calls may be cleared (reset) by malfunctions, repair or other handling of FOMA terminal. Should that happen, set up the functions again.
- Magnetic components are used in the earpiece, speaker, etc. of FOMA terminal. Do not allow cash cards or other devices that are vulnerable to magnetism to come into contact with the phone.
- If FOMA terminal becomes wet or moist, turn the power off and remove the battery pack immediately and bring the terminal to the repair office as soon as possible. However, repair may not be possible depending on the condition of FOMA terminal.

▲Phonebook, and downloaded data, etc.▼

- Maintain a separate record of the data you register in your FOMA terminal. DoCoMo assumes no responsibility whatsoever for changes of information or loss of information.
- Data created, imported or downloaded by the subscriber may be changed or lost when changing models or repairing FOMA terminal. DoCoMo assumes no responsibility for such incidents. DoCoMo may, at its option, replace your mobile phone instead of repairing it. Data downloaded to FOMA terminal including images and ring tones and data you created is transferred only at repairing (Some data may not be transferred. Also cannot be transferred depending on the failure level).
 - Depending on the size of data saved in FOMA terminal, transfer may take a time or be disabled.

i モード故障診断サイト (i-mode fault diagnostic site)

Using your FOMA terminal, you can check whether sending/receiving of messages and downloading of images and melodies are normally performed.

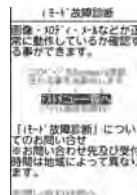

TOP screen



Screen of テストメニュー一覧 (test menu list)

- Access method to "iモード故障診断サイト" (In Japanese only)
iMenu→お知らせ (Notice)→サービス・機能 (Services/Function)→iモード (i-mode)→iモード故障診断 (i-mode fault diagnostic site)

QR code for
site access



- * The access method may be changed without previous notice.
- Packet communication for iモード故障診断 is free of charge. However when accessing from overseas, you are charged for packet communications.
- Test items vary by FOMA terminal models. And test items are subject to change.
- Before checking operations using individual test items, carefully read the precautions given in the site.
- When connecting to iモード故障診断サイト or conducting message transmission test, information specific to your FOMA terminal (model name, mail address, etc.) is automatically sent to the server (i-mode fault diagnostic server). DoCoMo does not use the received information for purposes except iモード故障診断.
- When FOMA terminal is assumed to have malfunctions as the result of the diagnosis, contact the phone number given in "Repairs" on the back of this manual.

Software update

Software update

This function makes network connection to check for the necessity of updating FOMA terminal software and, when necessary, downloads a part of the software through packet communication* to update the software.

When software update is required, the information is posted in "お知らせ (Notice)" on DoCoMo website or iMenu.

- * Packet communication for software update is free of charge.
- Software may be updated in the 3 methods below.
 - Automatic update: Download new software automatically, and overwrite at the time specified in advance.
 - Immediate update: Updates on the spot as preferred.
 - Reserved update: Specifies the day and time-slot for automatic update of the software in the specified day and time-slot.

INFORMATION

- Do not remove the battery pack while updating software. The update may fail.
- Software update can be done even when various data, such as a phonebook registered in FOMA terminal, camera images, downloaded data, are remaining; note that data protection sometimes cannot be secured according to the conditions of your FOMA terminal (such as malfunction, damage, or water leak). DoCoMo recommends backing up necessary data. However some data such as downloaded data may not be backed up.
- Software update is available even when Host selection is other than "i-mode (UIM)".
- Software update should be done with battery fully charged and enough battery power (→P47).
- Software cannot be updated in the cases below.
 - When UIM is not inserted
 - When the battery is not fully charged
 - When the power is OFF
 - When 圏外 (out of service area) is displayed
 - When date and time are not set
 - During a call
 - While using other functions
 - When PIN code is being entered
 - When PIN is blocked
 - In Omakase Lock
 - In Self mode
 - In Packet communication with a PC
 - In 64K data communication
- Software update (downloading or rewriting) may take time.
- If software update is executed when PIN1 code ON/OFF is "ON", the PIN code entry screen does not appear at the time of automatic reload after completion of software updating.
- Making/Receiving calls, communications functions and other functions are disabled during software update. Only incoming voice calls can be answered while downloading.
- For software update, SSL session is established to the server (our site). Validate SSL certificate from Manage certificate. It is set to valid by default.→P172
- It is recommended that software update be executed in good radio wave conditions with three bars of the antenna icon displayed (→P47) and the terminal not moved. If radio wave conditions become weaker during software download or the download is stopped, retry software update in a place with strong radio wave conditions.

- An icon indicating stored mail in i-mode Center disappears after software update. And, if Receive option is "ON" and mail arrives during software update, the screen that notifies arrival of mail in the i-mode Center may not appear after the software update is completed. →P191
- When updating software, your private information concerning FOMA terminal (model, serial number, etc.) is automatically sent to the server (the server for software update managed by DoCoMo). DoCoMo does not use the sent information for purposes except software update.
- When software update has failed, "Rewrite failed" appears and all operation becomes unavailable. In that case, please bring FOMA terminal to DoCoMo-specified repair office.
- Software cannot be updated overseas.

◆ Performing software update automatically <Set auto-update>

You can set if you update automatically or to be notified that software update is necessary.

- The Set auto-update is set to "Auto-update", Day is set to "Unspecified" and the Time is set to "03:00" by default.

1 [Settings & NW services] ▶ Authenticate ▶ [Set auto-update] ▶ Set the required items



- When setting Set auto-update to "Auto-update", set Day and Time to perform Auto-update. When setting to "Disable", a confirmation screen of auto-update disability appears. Select "Yes" if you do not update automatically.

 
◆ When update is necessary

- When setting Set auto-update to "Auto-update", the update file is downloaded automatically, and (rewrite notice icon) appears on the stand-by display. If you select (rewrite notice icon), the start time of update can be confirmed or changed.
- When setting Set auto-update to "Only notification", (update notification icon) appears. →P465 "Starting Software update"

<Example> Confirm the time of update

1 Select (rewrite notice icon)

The day of the week and the time to update are displayed. Select "OK" to return to the stand-by display, and (update notification icon) disappears.

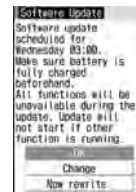

Changing time : "Change" ▶ Authenticate ▶ Set the required items


Rewriting immediately : "Now rewrite" ▶ Authenticate

The next procedure →P465 Step 2 and the following steps in "Updating software immediately"

✓INFORMATION

 
- (rewrite notice icon) appears in the cases below.
 - When the downloading of the update file is completed
 - When update was unavailable since other functions were activated
 - When update was terminated
 - When changing the start time of rewriting
- (update notification icon) appears in the cases below.
 - When there is notification from DoCoMo
 - When the reserved update has failed
 - When canceling the reserved update
 - When software update screen appears

◆ Starting Software update

You can start software update in two ways : selecting  (update notification icon) on the stand-by display or selecting an item number from menu.

<Example> Start by selecting update notification icon

1  ▶  Select (update notification icon) ▶ "Yes" ▶ Authenticate

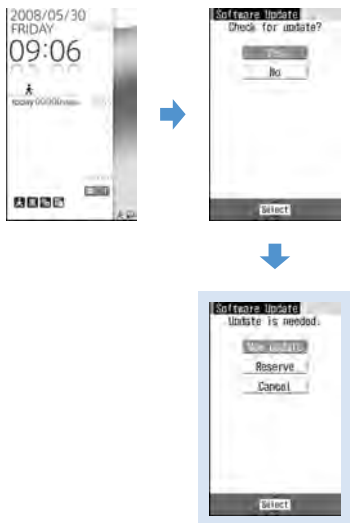


Software update screen

- When "No" is selected, a clearing confirmation screen of update notification icon appears.

Starting from Menu :   [Settings & NW services]

  ▶ Authenticate ▶ "Update"


- When update is necessary, "Update is needed" is displayed. Select "Now update (→P465)" or "Reserve (→P466)".

 
- When update is not necessary, "No update is needed. Please continue to use as before." is displayed. Press  and continue using.

◆ Updating software immediately <Immediate update>

- Immediate update may not be available when the server is busy.

1 "Now update" on the Software update screen ▶ After about 5 seconds, download starts automatically

Pressing  starts downloading immediately.

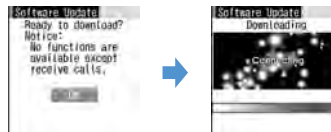



- To cancel downloading, press .

 
When the server is busy :




- Select "Reserve" to reserve the date of update.→P466

2 Download is complete and after about 5 seconds, software updating is automatically started

Pressing  starts rewriting immediately. While rewriting, only the operation of pressing  for 10 seconds or more to turn OFF the power is available.



 3 Automatically reloaded after the completion of update

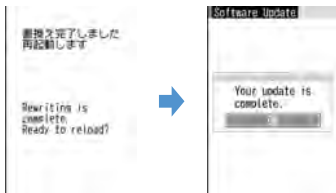

◆ Updating software at pre-specified time <Reserved update>

When downloading takes time or the server is busy, you can set the time to start software update in advance by communicating with the server.

<Example> Selecting from displayed options

1 On the Software update screen, "Reserve"

Available dates for reservation are shown by the time of the server.



2 Select preferred day and time-slot ▶ "Yes"



 
Reserving from other than displayed options :


① "Others".

② Select preferred day.

Availability for reservation at each time period is shown :

○ : available △ : barely available




• Press  to display the description of the symbol on the left of time-slot.

③ Select preferred time-slot.

Connection is made to the server and the options close to preferred day and time-slot are displayed.

④ Select preferred day and time-slot ▶ "Yes"

3

When the setting of the reservation is completed,  (reservation icon) appears on the stand-by display.

❖ Checking/Changing/Canceling reservation

<Example> Checking the day and time-slot reserved for software update

- 1  [Settings & NW services]
- 7  5 ▶ Authenticate ▶ "Update" ▶ Check the contents




- Select "OK" to stop checking.

Changing the reservation : "Change"


The option selection screen appears.

The next procedure→P466 Step ② and the following steps in "Reserving from other than displayed options"


Canceling reservation : "Cancel." ▶ "Yes" ▶ 

The reservation is canceled.

❖ When the reserved time arrives

When the reserved time arrives, the screen below appears and, after about 5 seconds, the terminal automatically starts software update. (Pressing  starts software update immediately). Before the reserved time, make sure that the battery is fully charged and FOMA terminal is in a location where radio waves reach and then show the stand-by display. When downloading is completed, software rewriting is automatically started, followed by reload.



- To cancel the software update, press  and select "Yes".

✓INFORMATION

- Reservation of software update may be canceled in the cases below.
 - When the battery pack is removed
 - When the battery is left exhausted without being charged
 - When Delete all data
 - When reserved date/time comes while activating Omakase Lock
- Note that the software update may not start if any other functions are used when the reserved time arrives. When the reserved date/time come during packet communication, the software update starts after completion of the packet communication.
- If alarm etc. is set for the same time, alarm etc. take precedence and the software update may not be activated.

Scanning function

Protecting FOMA terminal from hazardous data

Update pattern definition first, then keep the pattern definition up-to-date.


 
 


For the data or programs that are imported to FOMA terminal by downloading from a website, mails, this function detects data and deletes data or inhibits activation of applications that may cause troubles.

- Pattern definition used for the check is upgraded as needed for a new problem. When Set auto-update is "Enable", pattern definitions are automatically downloaded and updated when they are upgraded.
- The Scanning function provides a certain countermeasure against invasion of data which causes some trouble in the mobile phone, when viewing website, receiving messages, etc. Note that, if pattern definition corresponding to specific troubles has not been downloaded to the mobile phone or such pattern definition does not exist, this function cannot prevent those troubles from occurring.
- Different pattern definition is used for different mobile phone models. In addition, note that DoCoMo may stop distribution of pattern definition for models that have been on the market for 3 years or more.

- When updating pattern definition, your private information concerning the mobile phone (model, serial number, etc.) is automatically sent to the server (the server for the Scanning function managed by DoCoMo). DoCoMo does not use the sent information for purposes except scanning function.
- When the correct date and time are not set on FOMA terminal, the pattern definitions cannot be updated.
- Updating pattern definition is stopped by a voice call arrived.

◆ Setting Scanning function <Set scan>

When making this setting to "Valid", data or program to be executed is automatically checked. If data causing troubles is detected, a warning is indicated at 5 levels.→P468



1  [Settings & NW services]    ▶ Set the required items ▶ 

Scan : Set if you enable scanning function.


Message scan : Set if you enable the scan function when displaying SMS.

2 "Yes"

◆ Updating pattern definition automatically <Set auto-update>


- When the Auto-updating pattern definitions is completed,  appears on the stand-by display. Select the icon, check the message and press .


 


1  [Settings & NW services]   

2 "Enable" ▶ "Yes" ▶ "Yes" ▶ 

- Select "Disable" if you do not use auto-update.


◆ Updating pattern definition

When Set auto-update is "Disable" or  (Auto-update of the latest pattern definition data failed) appears on the stand-by display, manually update the pattern definitions data.

1  [Settings & NW services]    ▶ "Yes" ▶ "Yes"

Downloading and updating of the pattern definitions are started.

2 

 
- When updating of pattern definition is not necessary, "Pattern definitions are up-to-date." is displayed. Press  and continue using.

◆ Displaying scan results




■ Displaying problem element scanned



① "Detail" while displaying a warning level screen

When 6 or more problem elements have been detected, the names of the 6th and subsequent problem names are omitted and the total number of the detected problem elements is displayed.



■ Displaying scan results

Warning level	Handling method
Warning level 0 	"OK" : Continue processing of the started application "Detail" : List names of the detected problem elements
Warning level 1 	"Yes" : Stop processing of the application that may cause troubles "No" : Continue processing of the started application "Detail" : List names of the detected problem elements
Warning level 2 	"OK" : Stop processing of the application that may cause troubles "Detail" : List names of the detected problem elements

Warning level	Handling method
Warning level 3 	"Yes" : Delete data that may cause troubles "No" : Stop processing of the application that may cause troubles "Detail" : List names of the detected problem elements
Warning level 4 	"OK" : Delete data that may cause troubles "Detail" : List names of the detected problem elements

✓ INFORMATION

- When the problem factor is detected while downloading Music&Video Channel program and FOMA terminal is turned OFF without checking the warning message, the warning level screen appears next time you display the Music&Video Channel screen.
- When a problem element is detected on i-appli set for the stand-by display and the starting i-appli is stopped, i-appli stand-by display is canceled.
- For some problem elements, "Detail" button may not appear.

◆ Checking pattern definition version <Version>

ME [Settings & NW services] 4 7 4

Specifications

Phone

Product name		FOMA F906i
Size		108 (H) × 50 (W) × 18.7 (T) (Unit : mm, Folded)
Weight		Approx. 142 g (with battery)
Continuous stand-by time ^{*1, 2}	FOMA/3G	Stationary (Auto) : Approx. 620 H Moving (Auto) : Approx. 395 H Moving (3G static) : Approx. 430 H
	GSM	Stationary (Auto) : Approx. 340 H
Continuous call time ^{*2, 3}	FOMA/3G	Voice call : Approx. 210 min. Videophone call : Approx. 120 min.
	GSM	Approx. 210 min.
1Seg watching time ^{*4}		Approx. 260 min.
Charging time ^{*5}		AC adapter : Approx. 150 min. DC adapter : Approx. 150 min.
LCD	Type	Display : Color TFT 16,777,216 colors Sub-display : Monochrome FSTN 1 color
	Size	Display : Approx. 3.2 inch Sub-display : Approx. 0.8 inch
	Number of pixels	Display : 414,720 pixels (480×864) Sub-display : 2,880 pixels (96×30)
Image pickup device	Type	Out-camera : CMOS In-camera : CMOS
	Size	Out-camera : 1/4 inch In-camera : 1/7.4 inch
	Number of effective pixels	Out-camera : Approx. 3,200,000 pixels In-camera : Approx. 320,000 pixels
Camera section	Number of recording pixels (Max.)	Out-camera : Approx. 3,200,000 pixels In-camera : Approx. 310,000 pixels
	Zoom (digital)	Out-camera : Up to approx. 25.6× In-camera : Up to approx. 2×

Recording section	Number of still images recorded*6	Up to approx. 782 (default) Up to approx. 2,000 (deleted preinstalled data that can be deleted)
	Continuous shooting of still images	2-9
	File format for still image	JPEG
	Movie recording time*7	Up to approx. 66 min. (saved to phone/default) Up to approx. 104 min. (saved to phone/deleted preinstalled data that can be deleted) Up to approx. 59 min. (saved to 64MB microSD card)
	File format for Movie	MP4, ASF
	1Seg recording time	Up to approx. 30 min. (saved to phone) Up to approx. 640 min. (saved to 2GB microSD card)
Playing music	Continuous play time	i-motion : Approx. 808 min.*8,9 Chaku-uta full® : Approx. 1,395 min.*8,9 WMA file : Approx. 1,412 min.*9 Music&Video Channel (sound) : Approx. 1,395 min.*9 Music&Video Channel (movie) : Approx. 351 min.
Recording size	Chaku-uta® / Chaku-uta full®	Approx. 107 MB

*1 Continuous stand-by time indicates the estimated time that FOMA terminal can receive radio waves normally. The call and stand-by times is about half by some factors such as the battery charging condition, function settings, operating environment such as ambient temperature, and radio wave conditions in the area of use (whether the radio waves is weak or absent). Stationary continuous stand-by time indicates the average utilization time FOMA terminal is folded and able to receive radio waves normally remains stationary. Moving continuous stand-by time indicates the average utilization time when FOMA terminal is folded and able to receive radio waves normally with a combination of "stationary", "moving", and "out of service area" status.

- *2 The continuous stand-by and continuous call times are reduced by making i-mode communications, PushTalk session, creating i-mode mail, activating downloaded i-appli, making i-appli stand-by display settings, downloading or playing Music&Video Channel program, playing tune with Music player, activating, recording 1Seg, etc.
- *3 Continuous call time indicates the estimated call time that FOMA terminal can send or receive radio waves normally.
- *4 1Seg watching time is shortened by some factors such as the battery charging condition, function settings, operating environment such as ambient temperature, and radio wave conditions in the area of use (whether the radio waves are weak or absent).
- *5 Charging time indicates the estimated time for charging an empty battery with FOMA terminal turned OFF. Charging with FOMA terminal turned ON requires longer time.
- *6 The number of still images recorded is valid for image size "Sub-QCIF (128×96)", quality "Standard" and file size 10 Kbytes.
- *7 The movie recording time means allowable time for one movie. The number is valid for Image size "QCIF (176×144)" and Quality "Standard". It varies by the movie to record.
- *8 AAC format files
- *9 Background playing is available.

Battery Pack

Quality	Battery Pack F10
Battery used	Li-ion battery
Nominal voltage	3.7V
Nominal capacity	870mAh

Savable/Recordable/Protectable number in F906i

- The display of the data in FOMA terminal file size may contain some error depending on the function that handles the data.

Type	Savable/ Recordable number	Protectable number
Phonebook ^{*1}	Up to 1,000	—
Kisekai Tool ^{*1, 2}	Up to 50	—
Bookmark (i-mode)	Up to 100	—
Bookmark (Full Browser)	Up to 100	—
Screen memo ^{*1}	Up to 100	Up to 50
DL dictionary	Up to 10	—
Downloaded fonts ^{*3}	Up to 5	—
MessageR ^{*1}	Up to 100	Up to 50
MessageF ^{*1}	Up to 50	Up to 25
Mail	Received message ^{*1, 4, 5}	Up to 1,000
	Sent message ^{*1, 4}	Up to 200
	Unsent message ^{*1, 4}	Up to 200
	Decome-Anime template ^{*1, 6}	Up to 300
Deco-mail template ^{*1, 7}	Up to 300	—
Area Mail	Up to 30	Up to 15
SMS in UIM ^{*8}	Up to 20	—
i-appli ^{*1, 9}	Up to 300	—
ToruCa ^{*1}	Up to 100	—
Channel list	Up to 10	—
TVlink	Up to 50	—
Image ^{*1, 10}	Up to 2,000	—
Movie/i-motion/sound recorded with Sound recorder ^{*1, 11}	Up to 200	—
Playlists of movie/i-motion	Up to 100	—

Type	Savable/ Recordable number	Protectable number
Chara-den ^{*1, 12}	Up to 50	—
Melody ^{*1, 13}	Up to 500	—
PDF data ^{*1, 14}	Up to 100	—
Word, Excel, PowerPoint ^{*1}	Up to 100	—
Video/ Image ^{*1}	Video	Up to 10
	Image	Up to 100
Program of Music&Video Channel ^{*1, 15}	Up to 10	—
Music ^{*1}	Up to 30	—
Scheduler ^{*16}	Up to 300	—
Notepad	Up to 50	—

*1 Depending on the size of data or usage status of common memory space, the actual number of items that can be saved and recorded may be fewer.

*2 The number of Kisekai Tools recorded by default is included.

*3 The number of fonts (フリテイー桃) recorded by default is included.

*4 The total number of i-mode mail and SMS.

*5 The number of "Welcome ♡F906i" is included.

*6 The number of Decome-Anime template stored by default is included.

*7 The number of Deco-mail template stored by default is included.

*8 The total number of sent and received SMS. The SMS report request is not included.

*9 The number of i-appli stored by default (except for iD setting application) is included. Up to 5 items of message i-appli can be saved (included in the savable 300 items of i-appli).

*10 Number of data items of "Deco-mail picture", "Deco-mail pict" and "Item" folders recorded by default is included.

*11 The number of i-motion stored by default is included.

*12 The number of Chara-den items recorded by default is included.

*13 The number of melodies in "Mail attach melody" folder stored by default is included.

*14 The number of PDF recorded by default is included.

*15 The number of programs saved in other than Delivered program folder.

*16 Up to 100 watching reservations and recording reservations collectively can be recorded (included in the up to 300 Scheduler items that can be recorded).

SAR certification information

◆ SAR certification information

This model phone FOMA F906i meets the MIC's*¹ technical regulation governing exposure to radio waves.

The technical regulation established permitted levels of radio frequency energy, based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The regulation employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit is 2 watts/kilogram (W/kg)^{*2} averaged over 10 grams of tissue. The limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The value of the limit is equal to the international guidelines recommended by ICNIRP.^{*3}

All phone models should be confirmed to comply with the regulation, before they are available for sale to the public. The highest SAR value for this FOMA F906i is 1.230 W/kg. It was taken by the Telecom Engineering Center (TELEC). The test for SAR was conducted according to the MIC testing procedure using standard operating positions with the phone transmitting at its highest permitted power level in all tested frequency bands. While there may be differences between the SAR levels of various phones and at various positions, they all meet the MIC's technical regulation. Although the SAR is determined at the highest certified power level, the actual SAR of the phone during operation can be well below the maximum value.

For further information about SAR, please see the websites below.

World Health Organization (WHO) :

<http://www.who.int/peh-emf/>

ICNIRP :

<http://www.icnirp.de/>

MIC :

<http://www.tele.soumu.go.jp/e/ele/body/index.htm>

TELEC :

http://www.telec.or.jp/ENG/Index_e.htm

NTT DoCoMo :

<http://www.nttdocomo.co.jp/english/product/>

FUJITSU LIMITED :

<http://www.fmworld.net/product/phone/sar/>

*1 Ministry of Internal Affairs and Communications.

*2 The technical regulation is provided in Article 14-2 of the Ministry Ordinance Regulating Radio Equipment.

*3 International Commission on Non-Ionizing Radiation Protection.

◆ Declaration of Conformity

The product "FOMA F906i" is declared to conform with the essential requirements of European Union Directive 1999/5/EC Radio and Telecommunications Terminal Equipment Directive 3.1(a), 3.1(b) and 3.2. The Declaration of Conformity can be found on <http://www.fmworld.net/product/phone/doc/>.

This mobile phone complies with the EU requirements for exposure to radio waves.

Your mobile phone is a radio transceiver, designed and manufactured not to exceed the SAR* limits** for exposure to radio-frequency(RF) energy, which SAR* value, when tested for compliance against the standard was 1.33 W/Kg. While there may be differences between the SAR* levels of various phones and at various positions, they all meet*** the EU requirements for RF exposure.

- * The exposure standard for mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR.
- ** The SAR limit for mobile phones used by the public is 2.0 watts/kilogram (W/Kg) averaged over ten grams of tissue, recommended by The Council of the European Union. The limit incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
- *** Tests for SAR have been conducted using standard operation positions with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station antenna, the lower the power output.

◆ Federal Communications Commission (FCC) Notice

- This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions :
 - ① this device may not cause harmful interference, and
 - ② this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications made in or to the radio phone, not expressly approved by the manufacturer, will void the user's authority to operate the equipment.

◆ Industry Canada (IC) Notice

- Operation is subject to the following two conditions :
 - ① this device may not cause interference, and
 - ② this device must accept any interference, including interference that may cause undesired operation of the device.

◆ FCC and IC RF Exposure Information

This model phone meets the U.S. Government's and Canadian Government's requirements for exposure to radio waves.

This model phone contains a radio transmitter and receiver. This model phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy as set by the FCC of the U.S. Government and IC of the Canadian Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC and IC is 1.6 W/kg. Tests for SAR are conducted using standard operating positions as accepted by the FCC and IC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output level of the phone.

Before a phone model is available for sale to the public, it must be tested and certified to prove to the FCC and IC that it does not exceed the limit established by the U.S. and Canadian government-adopted requirement for safe exposure. The tests are performed on position and locations (for example, at the ear and worn on the body) as required by FCC and IC for each model. The highest SAR value for this model phone as reported to the FCC and IC, when tested for use at the ear, is 0.427 W/kg, and when worn on the body, is 0.651 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC and IC requirements).

While there may be differences between the SAR levels of various phones and at various positions, they all meet the U.S. and Canadian government requirements. The FCC and IC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC and IC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Equipment Authorization Search section at <http://www.fcc.gov/oet/> (please search on FCC ID VQK-FOMA-F906I).

For body worn operation, this phone has been tested and meets the FCC and IC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and which positions the handset at a minimum distance of 1.5 cm from the body.

* In the United States and Canada, the SAR limit for wireless mobile phones used by the general public is 1.6 Watts/kg (W/kg), averaged over one gram of tissue. SAR values may vary depending upon national reporting requirements and the network band.

◆ Important Safety Information

AIRCRAFT

Switch off your wireless device when boarding an aircraft or whenever you are instructed to do so by airline staff. If your device offers flight mode or similar feature consult airline staff as to whether it can be used on board.

DRIVING

Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

HOSPITALS

Mobile phones should be switched off wherever you are requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

PETROL STATIONS

Obey all posted signs with respect to the use of wireless devices or other radio equipment in locations with flammable material and chemicals. Switch off your wireless device whenever you are instructed to do so by authorized staff.

INTERFERENCE

Care must be taken when using the phone in close proximity to personal medical devices, such as pacemakers and hearing aids.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a mobile phone and a pace maker to avoid potential interference with the pacemaker. To achieve this use the phone on the opposite ear to your pacemaker and does not carry it in a breast pocket.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

For other Medical Devices :

Please consult your physician and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

Export Administration Regulations

This product and its accessories may be under coverage of the Export Administration Regulations of Japan ("Foreign Exchange and Foreign Trade Control Laws" and the related laws and regulations). And, they are also under coverage of Export Administration Regulations of the U.S. When exporting and reexporting this product and its accessories, take necessary procedures on your responsibility and expense. For details, contact Ministry of Economy, Trade and Industry of Japan or US Department of Commerce.

Index/Quick Manual

Index	476
Quick Manual	488

Index

Using Index

You can also use this index listing function names and keywords as "Alphabetical keyword reference". For functions such as "Save" and "Delete", first search by a function name of the first level (**bold**) and then by an index item of the second layer.

<Example> Download Chara-den

Chara-den	69, 304
Adding/Deleting folder	317
Deleting	321
Detail information/Edit detail information	319
Downloading	167
Moving	318

A	
AC adapter	46
Accept/Reject call	131
Access shortcuts	163
Add icon	362
Adding address	181
Additional service (Register USSD)	398
Adjust volume	96
After-Sales Service	461
Alarm auto power ON	356
Alarm clock	355
Alarm clock sound	96
Alarm sound	96
Album	317
Adding/Deleting	317
Moving/Copying data	318
Playing album	319
Alert by contact	84
Alert preference	375
Alert/Image by group	84
All lock	120

Anonymous caller	132
Answer machine	67
Quick answer machine	67
Any key answer	63
Area Mail	214
Receiving	214
Setting	215
Area service status	412
Arrival call act.	393
AT command	403
Attach location menu	253
Attachment auto-play	209
Attachment (auto receive)	193
Attachment (Receive option)	193
Attachment (sending)	187
Changing/Removing	188
Authentication	
Fingerprint authentication	118
Terminal security code	116
Auto answer setting	375
Auto power ON/OFF	354

Auto timer	148
Auto-send	188
Auto-sort	205

B	
Background play	339
Bar calls at roaming	414
Bar code reader	153
Adjusting flicker	154
Divided QR code	155
Quoting	382
Scanning code	154
Using scanned data	155
Basic menu	36
Battery	
Charging	44
Charging time	44
Operation time	45
Battery icon	112
Battery level	47
BGM play	349

Bookmark			
Access shortcuts	163	186/184	58
Changing title	163	Camera	136
Creating/Deleting folders	163	Adjusting	142
Deleting.....	164	Adjusting flicker	151, 152
Displaying.....	163	Auto timer	148
Displaying/Saving (i-mode mail)	193	Brightness	151
Moving/Copying.....	164	Compatible mode	149
Registering (Site/Website).....	163	Continuous panoramic shooting.....	144
Saving (Mail).....	204	Continuous shooting	142
Sorting	165	Creating i-mode mail	141, 146
Browser history	159	File details	138
		Frame	151
		Image size.....	152
		Light.....	149
		Macro shooting.....	149
		Movie camera	145
		Movie recording time	138
		Number of still images saved	138
		Quality	152
		Recording settings.....	147
		Restoring default camera setting	153
		Saving mirror image	142
		Shake reduce.....	151
		Shooting mode	150
		Shooting procedure.....	136
		Shutter sound	98, 147
		Size restrictions.....	152
		Sound recording screen.....	137
		Still camera	141
		Still image settings	147
		Switching cameras	141
		Switching normal/mirror display	142
		Switching portrait and landscape	150
		Switching shooting screens.....	149
		White balance	151
		Zoom.....	148
		Certificate	
		Certificate host	175
		Downloading.....	173, 174
		Manage certificate	172
		Skip password	174
		Certificate download	173
		Chaku-moji	57
		Chaku-uta full®	
		Downloading.....	340
		Change i-mode password	162
		Character encode (Switch encode)	162
		Character entry	378
		Block conversion	380
		Conversion options list	379
		Copying characters.....	383
		Deco-mail pictogram	381
		DL dictionary.....	385
		Fixed phrase entry	381
		Full-screen entry	378
		In-line entry	378
		Input mode.....	378
		Input prediction function	380
		Kana/kanji conversion.....	379
		KUTEN code input	384
		Line feed.....	379
		Password manager.....	385
		Pictogram entry	381
		Quoting.....	382
		Reset prediction.....	380
		Save phrase	382
		Save word	384
		Smiley entry.....	382
		Symbol entry	381
		Text input method	386
		2-touch input method.....	385
		5-touch input method.....	379
		Chara-den	69, 304
		Adding/Deleting folder.....	321
		Deleting	321
		Detail information/Edit detail information.....	319
		Downloading.....	168
		Moving	318

Settings	305
Sorting	321
Charge alert	99
Charging	44
Charging jack	26
Charging time	44
Chat mail	215
Broadcast address	217
Chat mail screen	215
Creating/Sending	216
Deleting history	218
Personal data setting	216
Quitting	218
Receiving	217
Chat mail alert	94
Chat mail screen	215
Chat member setting	216
Check box operation	38
Check IC owner	244
Check msg	106
Check msg option	207
Check new message	
i-mode mail	191
MessageR/F	191
Clock display format	114
Close settings	64
CODE39 code	154
Color scheme	107
Compatible with contents transfer	304, 313
Confirm	375
Confirmation screen operation	39
Connecting FOMA terminal and PC	316
Connecting to SSL page	159
Connection timeout	171
Contact image	106
Conversion options list	379
Copying characters	383
Countdown timer	354
Custom menu	36, 363

D

Data broadcasting full-screen	272
Data Center → Data Security Service	
Data communication	400
Data exchange settings	326
Data Security Service	133
Image	298
Mail	199
Phonebook	91
Data transfer	
OBEX™ communication	400
Data transfer mode	128
DataSession arv. act	71
Date & time	49
DC adapter	46
Deco-mail pictogram → Pictogram D	
Deco-mail picture	181
Deco-mail (Decoration mail)	
Creating	181
Template	185
Decome-Anime	
Creating	184
Template	185
Decoration selection screen	182
Default search setting	86
Default setting	48
Delete all data	376
Deleting attachment	195
Desktop holder	46
Dictionaries	372, 385
Downloading	168
Directory assistance service	451
Display	26, 29, 30
Color scheme	107
Display & Key light	106
Guide area	33
List screen	33
Task area	32

Display in English	49
Display priority	210
Display turn sound	98
Display & Key light	106
Brightness	107
Display light time	106
i-appli	227
Keypad light	107
Site	172
Displaying address	200
Displaying battery level	47
Displaying own phone number	50
Disp. operator name	413
DL dictionary	385
DoCoMo Cert	172
DoCoMo keitai datalink	404
Double-tapping	
Motion sensor	41
Pointing operation	40
Dual network service	392

E

Early Warning "AreaMail"	214
Earphone/Microphone jack	27
Earphone/Microphone with Switch	374
Alert preference	375
Auto answer setting	375
Headset key control	374
Headset quick-dial/Headset quick-answer	375
Earpiece	26
English guidance	392
Entry URL log	162
Excel → Word, Excel, PowerPoint	
Export Administration Regulations	474
External connection jack	27
External device	72

F

Fake call	367
------------------	-----

FeliCa	242
FeliCa mark	27
Fingerprint access	119
Fingerprint authentication	118
Authentication	120
Deleting	120
Registering	119
Fingerprint sensor	26
FirstPass	159, 402
Fixed phrase entry	381
Flash	160
FM transmitter	283, 350
Focus mode	39
Folder	317
Adding/Deleting	317
FOMA communication configuration file	403
Font	
Downloading	168
Selecting	113
Font size	113, 209
Frame	
During videophone call	69
Movie camera	151
Still camera	151
Full Browser	286
Access setting	292
Auto-access setting	292
Cookie set/delete	291
Display mode setting	291
Downloading	290
Frame	289
Home URL	291
Image&Effect setting	292
Multi window	289
Pointer	288
Referer setting	292
Screen view setting	292
Script setting	291
Searching	289

Uploading	290
Full Browser screen	287
Full-screen entry	378

G

GPS

LCS clients list	263
Location information menu	253
Location request	259
Loc. history	264
Notify location	263
Position location	252
Positioning alert	265
Request permit/deny	260
Setting	265
GPS alert	98
GPS compatible i-appli	254
GPS light alert	113
Greeting msg resp time	67
Guide area	33

H

Headset key control	374
Headset quick-dial/Headset quick-answer	375
Host selection	171

I

i-appli	224
Auto start	236
Changing ring tone/image	227
Checking number of i-appli in folder	240
Creating/Deleting folders	239
Deleting	239
Display light	227
Displaying history (Abnormal exit history)	238
Displaying history (Security error history)	226
Displaying history (Start failure hist)	237
Downloading	224
i-appli To	237

Icon information (Use icons)	227
Location usage setting	227
Motion tracking	228
Moving	239
Network transmission	227
One-key shortcut i-appli	236
Power saving	228
Preinstalled i-appli	228
Program guide key setting	227
Quitting	226
Set auto start info.	237
Software description	227
Software info disp.	225
Software information	240
Software settings	227
Sort software	240
Stand-by display	238
Starting	225
Trace information	226
Two-key shortcut i-appli	236
Upgrading	238
Using camera	240
Using infrared communication	240
Vibrate effect	228
View phonebook/call records	227
i-appli stand-by display	103, 238
Abnormal exit history	238
Terminating	238
IC card	242
IC card light	113
IC card lock	249
IC lock(power-off)	250
iC transfer service	243
iC transmission	322
Receiving	324
Sending	323
i-Channel	177
i-Channel ticker	177
Ticker	177

i-Channel ticker	177	Check No. of msgs	200	i-motion mail	
Icon list	30, 32	Copying	203	Creating	187
Identification mark	105, 395	Creating	85, 180	i-motion → Movie/i-motion	
Image	294	Creating/Deleting folders	199	In-camera	26
Adding/Deleting album	317	Deco-mail	181	In-Car Hands-Free	62
Creating animation	296	Deleting	201	Incoming call image	104
Deleting	321	Deleting attachment	195	Incoming msg. attach.	209
Detail information/Edit detail information	319	Display by type	209	Indicator light	112
Displaying	294	Display priority	210	Individual IC card lock	250
Displaying/Saving (i-mode mail)	193	Displaying mail address	200	Infrared communication	322
Downloading	166	Displaying new mail	190	Data exchange settings	326
Editing	296	Editing	189	Receiving	324
Moving/Copying	318	Folder list screen	196	Remote control function	325
Settings	298	Font size	209	Sending	323
Slideshow	295	Forwarding	192	Infrared data port	26
Sorting	321	Inbox/Outbox/Unsent messages	195	In-line entry	378
Uploading	169	Inserting signature	180	Input mode	378
Using images	295	List/details screen	196	Input prediction function	380
Image message alert	106	Mail group	207	Installing/Removing battery pack	43
Image setting	70	Mail logs	202	International call	60
Image & Effect	172	Message list	208	International roaming	406
i-melody	167	Moving	200	Internet connection	
i-mode	158	Phone call	204	Full Browser	286
Character encode (Switch encode)	162	Protecting	201	i-mode	162
Entering URL	162	Quick mail	189	Int'l call assist.	60
Entry URL log	162	Quick reply presets	208	ISP connection communication	171
Uploading	169	Receive option	190		
i-mode arv. actPT	79	Receive option attachment file	193		
i-mode fault diagnostic site	462	Receiving	189		
i-mode mail	180	Replying	192		
Activate quick reply	208	Saving	188		
Add bookmark	204	Search message	200		
Adding address	181	Sending	180		
Adding to phonebook	204	Sort method	205		
Address type	181	Sorting	201		
Attachment (sending)	187	Template	185		
Auto-send	188	WEBmail	190		
Changing read/unread state	201	i-mode password	116		
Check new message	191	i-mode settings	171		

J

JAN code	154
-----------------------	-----

K

Kana/Kanji conversion	379
Keypad dial lock	123
Keypad sound	98
Kisekai menu	36
Kisekai Tool	107
Adding/Deleting folder	317
Deleting	321
Detail information/Edit detail information	319

Downloading	168
Moving.....	318
Setting.....	109
Sorting	321
KUTEN code input	384

L

Last call cost.....	369
Last call duration	368
Light	26
Light alert	112
Call session light.....	113
GPS light alert	113
IC card light	113
Light alert.....	112
Open/close/turn.....	113
Line feed	379
List of fixed phrases	432
Listen volume.....	54, 74, 96
Lock on close.....	129
Lock preference.....	250
Low Battery alert	99

M

Macro shooting	149
Mail address	50
Mail alert	94
Mail attachment.....	187
Mail auto receive	189
Mail creation screen	180
Mail group	207
Mail image.....	106
Mail light.....	26
Mail logs	202
Mail settings (FOMA terminal)	205
Mail template	185
Creating i-mode mail.....	185
Deleting.....	186
Downloading.....	186

Editing detail information	186
Loading.....	185
Saving.....	185

Mail To

Mail	203
Site	169

Mail/Msg ring alert.....	95
---------------------------------	-----------

Map application

Map display screen.....	256
TOP screen	256

Media To

Mail	203
Site	169

Melody.....

Adding/Deleting album	317
Deleting	321
Detail information/Edit detail information.....	319
Downloading.....	167
List.....	429
Melodies for mail attachment.....	429
Moving/Copying	318
Playing/Saving (i-mode mail)	193
Settings.....	306
Sorting.....	321
Using melody.....	306

Melody Call**Memory status.....**

Menu	36
List.....	416

Message i-appli

Downloading.....	225
Message list	208

MessageF alert.....**MessageR alert****MessageR/F**

Auto-display	211
Check new message.....	191
Deleting	213
Display by type	213

Display priority	210
Displaying	212
Displaying new message.....	211
Displaying/Saving attachment	212
Font size	209
List/Details screen.....	212
Protecting	213
Sorting.....	213

Microphone.....**microSD card**

Adding/Deleting folder.....	317
Backup.....	311
Displaying i-appli data	315
Displaying i-motion (Compatible with contents transfer)	313
Displaying LCS client	315
Displaying multimedia data.....	313
Displaying other data	315
Displaying PDF data	314
Displaying PIM data	314
Displaying ToruCa	314
Folder structure	308
Formatting.....	315
Installing/Removing	308
Memory status.....	310
Moving/Copying	318
Moving/Copying data to FOMA terminal310, 311	
Operating from PC.....	316
Restoring backup data	312
Scan card.....	316
Sync data info	315

microSD card slot.....**Missed calls.....****Mobile phone serial number****Motion sensor.....****Motion tracking****Movie camera sound.....****Movie memo****Movie playing software**

Movie ringtone	95	Introduction play.....	343
Movie/i-motion		Playlist.....	345
Adding/Deleting album.....	317	Saving music data.....	340
Bookmark setting.....	300	Settings.....	349
Capturing.....	302	Sorting.....	347
Compatible mode.....	149	Music&Video Channel	334
Custom edit.....	303	Adding/Deleting folder.....	317
Deleting.....	321	Chapter list.....	337
Detail information/Edit detail information.....	319	Deleting.....	321
Downloading.....	175	Deleting program.....	338
Edit by size.....	303	FM transmitter.....	350
Editing.....	302	Moving.....	318
i-motion.....	176	Playing.....	336, 339
Moving/Copying.....	318	Program information.....	338
Playing.....	299	Saving program.....	338
Playing/Saving (i-mode mail).....	193	Setting program.....	335
Playlist.....	301	Sorting.....	321
Recording.....	145	Music&Video Channel player screen	336
Recording screen.....	137	Music&Video Channel screen	334
Recording settings.....	147	My Document → PDF data	
Settings.....	303	My Menu	161
Sorting.....	321	My phone number	50
Uploading.....	169	My Picture → Image	
Using movie/i-motion.....	302		
Multi number	393		
Call option.....	59		
Multi window (Full Browser)	289		
Multi window (1Seg)	280		
Multiaccess	352		
Combination of functions.....	448		
Multitask	352		
Combination of functions.....	450		
Music data list screen	342		
Music player	339		
Continuous play.....	343		
Delete all WMAs.....	349		
Deleting music data.....	345		
Displaying detail information.....	348		
FM transmitter.....	350		

O

OFFICEED	397
Omakase Lock	121
On hold	53
One-key shortcut i-appli	236
On-hold	64
On-hold tone	99
Open/Close sound	98
Open/close/turn	113
Options and related devices	451
Original certificate	172
Osaifu-Keitai	242
Other → Word, Excel, PowerPoint	
Out of service area	47
Out-camera	26
Outgoing call image	104

P

Packet communication	401
Password	
i-mode.....	116
Quoting.....	382
Password manager	385
Paste location menu	253
Pause ("P")	58
PDF data	326
Adding/Deleting folder.....	317
Deleting.....	321
Detail information/Edit detail information.....	319
Displaying/Saving (i-mode mail).....	193
Downloading.....	167
Moving/Copying.....	318
Settings.....	329
Sorting.....	321
Pedometer	372
Displaying information.....	374
Setting.....	373
Personal data lock	122

Personalized silent mode	100	PIN code ON/OFF	117	Privacy mode	124
Phone		PIN/PIN2 code	116	Contact setting.....	128
Call option	59	Changing	117	Program list screen	339
Call waiting ring tone	63	Player screen	343	Programed activation	250
Making calls.....	52	PLMN setting	412	P-Talk speakerphone	79
Making voice call (Overseas Use).....	410	Pointing device	39	Public mode	65
Operation possible while receiving calls	63	Power		Public mode (Drive mode)	65
Receiving calls.....	62	Auto power ON/OFF	354	Public mode (Power OFF)	66
Receiving voice call (Overseas Use).....	411	Power ON/OFF	47	PUK (PIN Unblocking Key)	117
Phone To		Power saving	228	Pulldown menu operation	38
Mail	203	Power saving mode	49	PushTalk	74
Site	169	PowerPoint → Word, Excel, PowerPoint		Making calls	74
Phonebook	82	Prefix dialing	61	Making calls (PushTalk phonebook)	77
Adding	83	Preinstalled i-appli	228	Making group calls	77
Call option	59	Avatar maker for F.....	231	Receiving calls	76
Caller ID settings.....	89	Chakuranger Cart Neo.....	229	PushTalk alert	94
Copying.....	88	DCMX Credit service application.....	235	PushTalk arv. act	79
Copying to UIM/FOMA terminal	89	FOMA communication environment check		PushTalk auto answer	78
Deleting.....	89	application	236	PushTalk phonebook	77
Details screen	87	G-Guide TV Remote Controller.....	232	Deleting	78
Displaying/Saving (i-mode mail)	193	i-appli banking.....	233	PushTalk Plus	74
Editing.....	88	iD setting application.....	234	PushTalk ring time	78
Group setting	84	J-C Speech Translation for F.....	231		
No. of items	90	J-E Speech Translation for F.....	230		
Quoting.....	382	Keitai Brain Stretching 2	229		
Switching order of phone numbers/mail		Map application	232, 254		
addresses.....	88	Master of Drums 4 F.....	230		
Switching phonebook numbers	88	Mobile Google Map.....	232		
Phonebook search		Rakuoku auctioning application 2	234		
Group search	86	Walking checker.....	230		
Number search.....	86	Priority			
Ph book No. search.....	86	Caller ID notification.....	50		
Rocket search	86	Incoming call image	105		
Search by freq	86	Light alert	113		
Secrecy search	86	Name displays	82		
Show all names.....	86	Outgoing call image	104		
Pictogram D	181, 381	Ring alert	96		
Pictogram entry	381	Vibrate alert.....	97		
List.....	436	Priority comm mode	64		

Q

QR code	154
Quality alarm	99
Quick answer machine	67
Quick dial	90
Quick mail	189
Quick Manual	488
Quick search	353
Search service.....	354
Quick zoom	198

R

Receive display option	129
Receive option	190
Receive option	207
Receive option attachment file	193

Received calls	55, 75
Received mail → i-mode mail	
Received signal level	47
Receiving screen	189, 219
Reception result screen	189, 219
Reconnect alarm	99
Recorded messages	
Playing/Deleting	68
Redial	55, 75
Register USSD	398
Remote control	393
Remote control function	325
Remote controller with microphone F01 ...	283, 349
Remote control(Int.)	414
Reply format	208
Request permit/deny	260
Reset	376
Delete all data	376
Menu preference	111
Reset	376
Total calls cost	369
Total calls duration	368
User information	366
Reset i-Channel	178
Reset prediction	380
Ring alert delay	132
Roaming guidance	413
Roaming guidance(Int.)	414

S

SAR	472
Savable/Recordable/Protectable number	471
When exceeding	322
Save phrase	382
Save word	384
Scanning function	467
Set auto-update	468
Set scan	468

Schedule	
Displaying/Saving (i-mode mail)	193
Schedule reminder	96
Scheduler	356
Alarm in advance	358
Calendar screen	356
Calendar view mode	356
Copying/Pasting	360
Creating mail	360
Day off of week	357
Day view screen	359
Days off	357
Deleting	360
Display by type mode	360
Holiday settings	357
Long-term schedule	358
Member list	361
Move date	356
No. of items	361
Quick schedule	358
Reminder option	359
Repeat schedule	358
Saving	358
Schedule details screen	359
Schedule reminder	358
Search message	360
Screen memo	165
Search by i-mode	298
Search message	200, 360
Secret attribute	
Mail	199
Phonebook	90
Schedule	361
Secret search	86
Secret code	89
Security codes	116
Security indicator	131
Security Scan → Scanning function	
Select language	49

Select startup menu	107
Self mode	122
Send DTMF	58
Send location menu	253
Sent mail → i-mode mail	
Service Dialing Number	392
Services available overseas	414
Set arrival act	392
Set greeting message	67
Set random image	102
Setting when folded	79
Shake reduce	151
Shortcut icons	361
Shortcut icons setting	363
Shortcut operations	37
Shutter sound	98
Side key hold	129
Side key shortcut	365
Signal level icon	112
Signature	
Inserting (i-mode mail)	180
Inserting (SMS)	218
Setting	206
Silent mode	99, 100
Simple light	365
Simultaneous sending	181
Site	
Adding to phonebook	170
Operating	160
Smiley entry	382
Smiley list	444
SMS	218
Add bookmark	204
Adding to phonebook	204
Check new SMS	220
Creating/Sending	85, 218
Deleting (FOMA terminal)	201
Deleting (UIM)	222
Display priority	210

Displaying (FOMA terminal)	195
Displaying (UIM)	221
Editing	219
Folder list screen	196
List/details screen	196
Moving/Copying (to FOMA terminal)	222
Moving/Copying (to UIM)	221
Quick mail	189
Receiving	219
Setting	220
Sort method	205
SMS report request	220
SMS To	
Mail	203
Site	169
Software update	
Auto-update	463
Immediate update	465
Reserved update	466
Rewrite notice icon	464
Set auto-update	464
Software update screen	465
Update notification icon	464, 465
Sort method	205
Sound recorder	147
Sound recording screen	137
Speaker	27
Speakerphone function	53
Special mode	109
Special symbol list	441
Specified caller	131
Stand-by display	47, 101
Battery icon	112
Clock display format	114
i-appli stand-by display	103
Info/calendar layout	103
Set random image	102
Signal level icon	112
Stand-by time	45

Status message	64
Stereo sound effect	96
Still image	
Continuous panoramic shooting	144
Continuous shooting	142
Displaying	294
Editing	296
Quality	152
Settings	147
Shooting	141
Shooting screen	137
Style theme	111
Sub address	61
Sub-display	34, 106
Clock & alert image	106
Displaying detail information	35
Menu	35
Sub-display light	106
Submenu operation	38
Switch Task menu	352
Symbol entry	381
Symbol list	435
T	
Task area	32
Terminal security code	116
Terminal security code change	117
Text input method	386
Timed lock	250
Timed pause ("T")	59
Timed theme	101
Tone signal (Send DTMF)	58
ToruCa	244
Check No. of items	247
Creating/Deleting folders	247
Deleting	247
Displaying	245
Displaying/Saving (i-mode mail)	193
Downloading	168, 245

Moving	247
Searching	246
Sorting	247
ToruCa alert	248
ToruCa auto-read	248
ToruCa preference	248
ToruCa sort rule	248
Total calls cost	369
Total calls duration	368
Turn-display option	365
Two time zone clocks	413
Two-key shortcut i-appli	236

U**UIM**

Installing/Removing	41
Operation restriction	42
Security codes	42
Serial number	159
Type	43
Unblocking PIN lock	118
Unregistered caller	133
Unsent mail → i-mode mail	
Upgrading	238
URL	162, 286
Adding to phonebook	170
Copying	169
USB	316
User Certificate	172
User information	
Checking	50, 366
Details screen	366
Quoting	382

V

Vibrate alert/effect	97
Vibrate effect	
i-appli	228
Videophone	52

Auto redial as voice.....	70
Brightness.....	69
Chara-den.....	69
Display settings.....	70
Flicker.....	69
Image quality settings.....	70
Light.....	69
Macro shooting.....	69
Making calls.....	52
Making videophone call (Overseas Use).....	410
Operation possible while receiving calls.....	63
Receiving calls.....	62
Receiving videophone call (Overseas Use).....	411
Scene mode/effect.....	69
Select frame.....	69
Send DTMF.....	59
Sending Camera-Off images.....	69
Sending still image.....	69
Switching cameras.....	69
Switching images.....	69
Zoom.....	69
Videophone settings (Operation).....	70
View preference.....	56, 87, 203
Voice clear.....	54
Voice Mail service.....	388
Voice mail(Int.).....	414
Voice memo.....	367
Voice memos	
Playing/Deleting.....	68
Voice slowing.....	54

W

Walking checker (i-appli).....	230
Warranty.....	461
Web To	
Mail.....	203
Site.....	169
WEBmail.....	190
Website.....	162, 286

Wide display.....	29
WMA file	
Saving.....	340
Word, Excel, PowerPoint.....	329
Adding/Deleting folder.....	317
Deleting.....	321
Detail information/Edit detail information.....	319
Moving/Copying.....	318
Settings.....	331
Sorting.....	321
WORLD CALL.....	60
WORLD WING.....	43, 406

Y

YOKO-MOTION.....	29
-------------------------	-----------

Numeric

1Seg.....	268
Channel setting.....	270
Close setting.....	283
Data broadcasting.....	278, 282
Deleting recorded data.....	321
Detail information/Edit detail information of recorded data.....	319
Display setting.....	282
Displaying recorded data.....	331
FM transmitter.....	283
Multi window.....	280
Program guide i-appli.....	275
Record setting.....	283
Recording.....	281
Recording reservation.....	276
Recording still image.....	282
Setting of recorded still image.....	332
Sorting recorded data.....	321
Sound setting.....	282
Subtitle.....	272
Time shift function.....	274
TVlink.....	279

User setting.....	282
Watching.....	272
Watching reservation.....	275
1Seg ECO mode.....	272
1Seg watching screen.....	272
2in1.....	394
2in1 setting.....	395
2-touch input method.....	385
List.....	431
3G-324M.....	52
3G/GSM setting.....	412
5-touch input method.....	379
List.....	430
64K data communication.....	401

MEMO

Quick Manual

◆ How to use Quick Manual

 
The "Quick Manual" appended to this manual briefly describes the basic screen displays and operating procedure of FOMA terminal. Cut along the cutoff line and fold up the manual as shown below.

For the use of international roaming service (WORLD WING), please refer to "Quick Manual (Overseas Use)".


1 Cut along the cutoff line

Take care not to hurt yourself when cutting.

2 Fold once horizontally

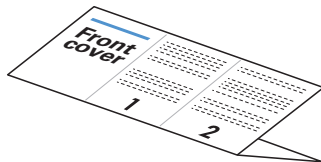

 3 Fold the left and the right so that the front cover faces outward

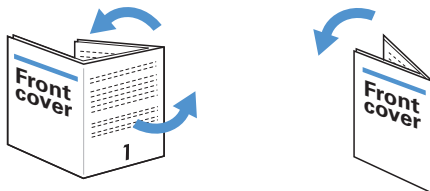



FOMA® F906i

Quick Manual

◆ General Inquiries <DoCoMo Information Center>

Contact for more detailed information :

<In English>

☎ 0120-005-250 (toll-free)

* Available from general subscriber phones, mobile phones and PHSs.

<In Japanese only>

☎ 0120-800-000 (toll-free)

No prefix 151 (toll-free)

* Available only from mobile phones and PHSs.

· Please check on the number before dialing.

◆ Adding from redial list or received call list

- 1
 - Place the cursor on the party and [4] [1]
 - Adding to phonebook data already saved : [4] [2]
- 3 (FOMA terminal phonebook) or (UIM phonebook)
 - To add to the saved entry, select the party to edit.
- 4 Set the required items

Editing the phonebook

- 1
 - Switching phonebook :
- 2 Place the cursor on the party and [3] [1]
 - For UIM phonebook, place the cursor on the party and [3]
- 3 Edit
 - Overwriting confirmation screen appears.

3

◆ Repairs

Contact for any problems :

<In Japanese only>

No prefix 113 (toll-free)

* Available only from mobile phones and PHSs.

☎ 0120-800-000 (toll-free)

* Available from general subscriber phones, mobile phones and PHSs.

· Please check on the number before dialing.

1

Searching the phonebook

- 1 [Phonebook & Logs] [4] [1]
 - Switching phonebook :
- 2 [1] [6]
 - For UIM phonebook, [1] [3].

Entering characters

◆ Entering/Converting characters (5-touch method)

<Example> Entering "企業 (kigyuu)"

 
- 1 Enter characters in hiragana/kanji mode
 - "き" : [2] twice
 - "ぎ" : When the cursor moves to the right, [2] twice
 - "よ" : [8] 3 times
 - "う" : [1] 3 times

4

Adding to the phonebook

◆ Adding to FOMA terminal phonebook

- 1 (1 sec. or more) Enter a name Set the required items



◆ Adding to UIM phonebook

- 1 [Phonebook & Logs] [4] Enter a name Set the required items

2

· Available operation before converting entered characters

: Change characters to Kana

: Return to the previous character

(e.g. : お→え→う→い→あ→お→え→…)

: Cancel entered characters

: Add voiced/semi-voiced sound, switch upper/lower case and insert a line feed (only after the entry is fixed)

(e.g. : ほ→ほ→ほ→ほ→…, つ→つ→つ→つ→…)

· Inserting characters : Move cursor to inserting point Enter character

- 2
 - Displaying conversion options list : /
 - Returning to state before converted :
- 3 "閉じる (Close)"

◆ Switching input modes

On the character entry screen, (several times)

· Press to switch input mode one-byte/two-byte.

5

❖ Deleting characters

When the cursor is in the text

[CLR] : Delete characters at the cursor

- Pressing for 1 sec. or more deletes characters at the cursor and all the characters on the right of the cursor.


When the cursor is at the end of the text

[CLR] : Delete a character at the left of the cursor



- Pressing for 1 sec. or more deletes all the characters entered.

❖ Entering pictograms, symbols and fixed phrases

Entering pictograms

On the character entry screen,  ▶ Select pictogram




 

Entering symbols

On the character entry screen,  ▶  ▶ Select symbol

 



6

Videophone

❖ Making videophone calls

- Enter a phone number ▶ 
- Talk with the other party
 - Putting a call on-hold : 
 - Switching earpiece/speaker : 
 - Switching image to send : 
- When ending the call, 

❖ Receiving videophone calls

- A call comes in ▶  or 
 - Respond and Hold : 
 - Operation during a call is the same as Step 2 in "Making videophone calls".
- When ending the call, 

9

Entering fixed phrases

On the character entry screen, **[NB]** **[4]** **[1]** (**[5]** **[1]**) on the message text entry screen) ▶ Select fixed phrase type ▶ Select fixed phrase

Copying/Pasting characters

Copying characters

On the character entry screen, **[NB]** **[1]** (**[3]** **[1]**) on the message text entry screen) ▶ Select the start position ▶ Select the end position

Pasting characters

On the character entry screen, place the cursor at the position to paste and **[NB]** **[3]** (**[4]**) on the message text entry screen)


7


i-mode mail

❖ No. of characters available

Item	Two-byte	One-byte
Subject	100 characters	200 characters
Mail address	—	50 characters
Message text	5,000 characters	10,000 characters

 ❖ Creating/Sending i-mode mail

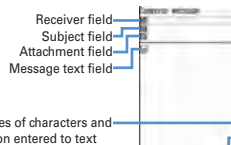


-  (1 sec. or more)






10

Camera function


Shooting still images

 ▶ Point the camera at the object and  


Recording movies

 (1 sec. or more) ▶ Point the camera at the object and  ▶ 





Displaying image

 [Data Box] **[1]** **[1]** ▶ Select an image



 
 

Playing movie

 [Data Box] **[4]** **[2]** ▶ Select a movie


 
Operation available in playing movie

-  : Side keys [**▲**/**▼**] : Adjust volume
-  : Reverse/Fast play
-  : Pause/Play
-  : Stop

8

- Select  ▶ Select input method ▶ Enter or select the receiver
- Select  ▶ Enter the subject
- Select  ▶ Enter message text
 - Creating Deco-mail :  ▶ Select a decoration type ▶ Enter characters
- 
 - Saving mail : **[NB]** **[3]**
 - Auto-send : **[NB]** **[2]**

❖ File attachment

- Select  on the mail creation screen
Displaying the mail creation screen → P10
 - Removing attachment :  ▶ "Yes"
- Select the type of the file to attach ▶ Select the attachment source ▶ Select a folder ▶ Select a file

11

Cutoff

❖ Editing/Sending sent/saved i-mode mail

<Example> Editing unsent mail

- 1 4
· Editing sent mail : 5
- 2 Select a folder
- 3 Select a mail
· Editing sent mail : Select a mail ▶
- 4 Edit ▶

❖ Check new message (mail)

- 1 Side key [▼] (1 sec. or more)

12

- Cutoff
- 11 : i-appli/i-appliDX is running
 : i-appli stand-by display ON
 : i-appliDX stand-by display ON
 - 12 : Performing 1Seg recording reservation/1Seg recording (only watching stopped)
 : i-appli Auto start failed
 - 13 : Inside OFFICEED area

❖ Bottom of the display

 


- 1 2 : Missed calls
- 2 1 : Recorded messages
- 3 1 : Voice messages in Voice Mail service

15

Display overview

❖ Top of the display



- 1 : Battery icon
- 2 : Signal level icon
 : Out of service area
 : Self mode ON
 : In data transfer mode
- 3 : In i-mode communication (i-mode site)/(packet communication)
- 4 : In infrared communication etc.
 : The total calls cost exceeds the limit

13

- 4 2 : Unread messages
- 5 2 : Unread ToruCa
- 6 : Shortcut icons
- 7 : Silent mode ON
 : Personalized silent mode ON
- 8 : Call alert volume OFF
 : Vibrator for voice call ON
 : Call alert volume OFF & vibrator for voice call ON
- 9 : In Public mode (Drive mode)
- 10 : Answer machine ON/recorded messages full
- 11 : Keypad dial lock ON
 : Side key hold ON
- 12 : Location request success/failure/end as unanswered
 : Personal data lock ON

16

- 5 : Communication using handsfree-compatible device in progress
 : Speakerphone function in use
- 6 : Positioning with GPS
 (blue)/ (gray) : Location request setting with GPS/Out of Permission period
- 7 : Phonebook entry or schedule data has secret attribute
- 8 : Unread Area Mail
 : Unread i-mode mail, SMS and SMS in UIM are full
- 9 : During PushTalk session
 : Downloading phonebook page on the network
 : Storage state in i-mode Center
- 10 : Displaying SSL page etc.
 : Mail failed to Auto-send exists
 : Auto-send mail exists

14

- 13 : Reading UIM
 : IC card lock ON
- 14 : Available multi-color key
 : Lock on close ON
- 15 : Alarm clock ON
 : Schedule reminder ON
 : Alarm clock and Schedule reminder are set together
- 16 : USB mode settings & microSD card inserted
- 17 : Connected to external device using USB cable
 : Pedometer ON
- 18 : Software update pre-specified/Update notification icon
 : Failed to Auto-update of latest pattern definition/Successful

17

Menu list

· Menu list for the case Select startup menu is set to "Basic menu" is described.

<Example> Activating Notepad

[Menu] [7] Accessory [2]

1 Mail
1 Inbox
2 Compose message
3 Compose Decome-Anime
4 Unsent messages
5 Outbox
6 Check new message
7 WEBmail
8 Chat mail
9 SMS/Area Mail

18

* User information
5 Data Box
1 My Picture
2 Music
3 Music&Video Channel
4 i-motion
5 Melody
6 My Document
7 Kisekae Tool
8 Chara-den
9 1Seg
* Other
6 LifeKit
1 Bar code reader

21

* Receive option
0 Template
* Mail settings
2 i-mode
1 iMenu
2 Bookmark
3 Screen memo
4 Browser history
5 Go to location
6 MessageR&F
7 i-Channel
8 i-mode settings
9 Full Browser

19

2 Ir/IC/PC connection
3 microSD
4 Camera
5 Sound recorder
6 Data Center
7 GPS
8 Pedometer
7 Accessory
1 Scheduler
2 Notepad
3 Alarm clock
4 Calculator
5 Dictionaries
6 Countdown timer
7 Fake call

22

3 i-appli
1 Software list
2 i-appli settings
3 Display history
4 Phonebook & Logs
1 Phonebook
2 Phonebook new entry
3 Add group
4 Phonebook(UIM) new entry
5 PushTalk phonebook
6 Received calls
7 Redial
8 Ans.Machine & Voice memo
9 Mail logs

20

8 Settings & NW services	
1 Alerts & Sounds	
2 Display	
3 Kisekae/Themes	
4 Security & Locks	Locks Privacy mode Security indicator Receive display option UIM Code & Fingerprint Scanning function Password manager
5 Call & Answer	Sound & Image Anonymous caller Any key answer

23

Cutoff

	Headset Reject/Accept call Make/Receive call Call session Self mode
6 V-phone/P-Talk	
7 Clock & Misc.	Turn-display option Clock Text input Font size Software update Info & Reset Side key shortcut Pointing device Motion sensor

24

4 Booking list
5 Recording result
6 TVlink
7 Channel list
8 User setting

1Seg

: Start 1Seg watching

: End 1Seg watching

Side keys [] () (without data broadcasting display area) : Adjust volume

: Select previous or next channel on TV station list

(1 sec. or more) : Search for previous or next frequency available

(with data broadcasting display area) : Scroll data broadcasting

27

8 NW Services	Voice Mail Call waiting/forward Chaku-moji Caller ID Roaming guidance OFFICEED 2in1 setting Melody Call Other
9 Roaming/Call assist	

9 MUSIC

1 Music player
2 Music&Video Channel

25

(1 sec. or more without data broadcasting display area)/side key [] (1 sec. or more) : Raise volume continuously

(1 sec. or more without data broadcasting display area)/side key [] (1 sec. or more) : Silent

: One-key channel selection from TV station list (for 10ch, for 11ch, for 12ch, 13ch and up can be selected from TV station list.)

: 1Seg ECO mode ON/OFF

(vertical display) : Switch standard screen/data broadcasting full-screen

(horizontal display) : Switch standard screen/full-screen (with no icons)/full-screen (with icons)

: Switch display/hidden subtitle

(1 sec. or more)/ (1 sec. or more) : Start/Stop video recording

: Save still image

: Activate Program guide i-appli

: FM transmission ON/OFF

28

* Osaifu-Keitai

1 IC card content
2 DCMX
3 ToruCa content
4 IC card settings
5 ToruCa setting
6 Check IC owner
7 Change IC owner
8 Search by i-mode

0 User information

1Seg

1 Activate 1Seg
2 Program guide
3 Saved image/video

26

Music&Video Channel/Music player

(1 sec. or more) *1 : Start/Stop

: Play/Pause

: Adjust volume

(1 sec. or more)/ (1 sec. or more) : Rewind/Fast forward

(1 sec. or more) : Move to the beginning of the current chapter/tune *2

(1 sec. or more) : Move to the next chapter/tune

: FM transmission ON/OFF

(pressing twice quickly) *1 : Save the current tune or tune in pause to Quick playlist

*1 Only valid for Music player.

*2 If playing time is within 3 seconds/less than 3 seconds, move to the previous chapter/tune.

29

Other Main Functions

Function	Operating procedure
Start/Cancel Side key hold	[M] (1 sec. or more)
Display i-Channel list	[CLR]
Start/Cancel Self mode	[CLR] (1 sec. or more)
Start/Cancel Public mode	[*] (1 sec. or more)
Display i-mode Menu	[IR]
Display i-appli folder list	[IR] (1 sec. or more)
Display received calls	[C]
Display redial	[C]
Start/Cancel IC card lock	[C] (1 sec. or more)
Display Scheduler	[C]
Power ON/OFF	[P] (2 sec. or more)
Start/Cancel Silent mode	[*] (1 sec. or more)
New Task start menu	[Menu]
Display PushTalk phonebook	[P] with FOMA terminal open
Display Answer machine/Voice memo menu	Side key [▲] (1 sec. or more) with FOMA terminal open

30

Call waiting

Application : Required Monthly fee : Charged

Activating/Deactivating the service

- [M] [Settings & NW services] [8] [2] [1] ▶ [1]
[Activate] or [2] [Deactivate] ▶ "Yes"

Answering another call

- [P] during a call.
- Switching to another party to talk : [IR]

Making another call

- During a call, [M] [0] ▶ Enter a phone number ▶ [P]
- Switching to another party to talk : [IR]

Ending a call

- When ending the call, [P].
- Switching to the other party on-hold : [P] or [C]

Call forwarding service

Application : Required Monthly fee : Free

33

* Authentication is required to cancel.

Services available

Services	Phone No.
Directory assistance service (charged : service + call) (not provided for those who do not require the service)	104 (no area code)
Sending telegrams (charged : telegram)	115 (no area code)
Time (charged)	117 (no area code)
Weather (charged)	Area code + 177
Police emergencies	110 (no area code)
Fire and ambulance	119 (no area code)
Marine emergencies and accident reports	118 (no area code)
Disaster recorded message service (charged)	171 (no area code)
Collect call (charged : service + call)	106 (no area code)

31

Activating the service

- [M] [Settings & NW services] [8] [2] [2] [1] ▶ "Yes" ▶ "Yes"
- Enter the phone number of the forwarding destination
· Entering the forwarding destination in the phonebook : [M]
- [P] ▶ "Yes" ▶ Enter ring time

Deactivating the service

- [M] [Settings & NW services] [8] [2] [2] [2] ▶ "Yes"

Caller ID request service

Application : Not required Monthly fee : Free

Activating/Deactivating the service

- [M] [Settings & NW services] [8] [4] [2] ▶ [1]
[Activate] or [2] [Deactivate] ▶ "Yes"

34

Network Service

Voice Mail service

Application : Required Monthly fee : Charged

Activating the service

- [M] [Settings & NW services] [8] [1] [1] [1] ▶ "Yes" ▶ "Yes" ▶ Enter ring time

Deactivating the service

- [M] [Settings & NW services] [8] [1] [1] [3] ▶ "Yes"

Playing voice messages

- [M] [Settings & NW services] [8] [1] [1] [5] ▶ "Yes" ▶ Operate following the voice prompt

32

Emergency number for misplacement

Omakase Lock

* Omakase Lock is a charged service. If you request unlocking at the same time as service interruption or during interruption, no charges occur. Even in Omakase Lock, if Request permit/deny is "Always permit", FOMA terminal responds to location request of GPS function.

Setting/Canceling Omakase Lock

[P] 0120-524-360

(24 hours)

Other emergency contact numbers

Contact : _____

Contact : _____

Contact : _____

- Please check on the number before dialing.

35

Cutoff



FOMA® F906i

Quick Manual (Overseas Use)

◆ Loss or theft of FOMA terminal or payment of cumulative cost overseas

<DoCoMo Information Center>

(24 hours) (in Japanese only)

● From DoCoMo mobile phone

International access number for your staying country (table 1) **-81-3-5366-3114***
(toll-free)

* Call to Japan is charged when calling from a general subscriber phone.

* When calling from an F906i, dial +81-3-5366-3114 to contact the DoCoMo Information Center. (Press **[0]** for 1 sec. or more to enter "+".)


● From general subscriber phone <Universal number>

International phone code for Universal number (table 2) **-800-0120-0151***

* Local call charges may be required.

Network and available communication services

Communication services	Network		
	3G	GPRS	GSM
Voice call	○	○	○
Videophone call	○	×	×
i-mode connection	○	○	×
i-mode mail	○	○	×
SMS	○	○	○
i-Channel	○	○	×
Position location of GPS	○	○	○
Data communication (Packet communication)*2	○	○	×

*1 When  (red) appears, only sending/receiving of voice call/SMS and position location of GPS are available.

*2 64K data communication by connecting with a PC etc. is unavailable overseas.

* For the latest information about International access number of major countries (table 1)/International phone code for Universal number (table 2), refer to DoCoMo's "International service web page".

◆ Failures encountered overseas

<Network Technical Operations Center>

(24 hours)

● From DoCoMo mobile phone

International access number for your staying country (table 1) **-81-3-6718-1414***
(toll-free)

* Call to Japan is charged when calling from a general subscriber phone.

* When calling from an F906i, dial +81-3-6718-1414 to contact the DoCoMo Information Center. (Press **[0]** for 1 sec. or more to enter "+".)

● From general subscriber phone <Universal number>

International phone code for Universal number (table 2) **-800-5931-8600***

* Local call charges may be required.


 

* For the latest information about International access number of major countries (table 1)/International phone code for Universal number (table 2), refer to DoCoMo's "International service web page".

1

Network search mode

 [Settings & NW services] **[9][1][1]** ▶ **[1]-[3]**


PLMN setting

 [Settings & NW services] **[9][1][1][4]** ▶ Place the cursor on the network and  **[2]** ▶ Select the priority ▶ 

Operator name disp.

You can display an operator name at the top of the display.



 [Settings & NW services] **[9][1][3]** ▶ **[1]**
[Display on] or **[2]** [Display off]

4

Preparing for using overseas


◆ i-mode settings

Setting in Japan : iMenu → "English" → "Options" →

"International Settings" → "i-mode services Settings"

Setting overseas : iMenu → "International Settings" → "i-mode services Settings"

◆ Activate Remote control


Setting in Japan :  [Settings & NW services]

[8][9][2][1] ▶ "Yes"

Setting overseas :  [Settings & NW services]

[9][1][6] ▶ "Yes" ▶ Operate following the voice prompt

◆ Two time zone clocks

 [Settings & NW services] **[9][3]** ▶ **[1]** [ON] or **[2]** [OFF]

2



Setting after returned to Japan

When FOMA terminal is turned ON after returned to Japan, it is automatically connected to FOMA network. When FOMA terminal cannot be connected to FOMA network, reset Network search mode to "Auto" and 3G/GSM setting to "AUTO".

Making voice/videophone calls

When making a call to a WORLD WING user staying overseas, enter "+" and Japan's country code "81" even if you are in the same country as the party to be called.

◆ International call (including to Japan)

[0] (1 sec. or more) ▶ Country code ▶ Area code (City code) ▶ Enter a phone number ▶  or 

5

3

◆ Call inside the country you stay

Enter a phone number ▶ or ▶ "No, use original"

Receiving voice/videophone calls

A call is received ▶ or

Roaming guidance

· Set before leaving Japan.

[Settings & NW services] **[8]** **[5]** ▶ **[1]** [Activate]
or **[2]** [Deactivate] ▶ "Yes"

Restricting incoming calls during international roaming

· Some may not be set depending on the overseas telecommunications carriers.

- [Settings & NW services] **[9]** **[1]** **[9]**
- [1]** ▶ **[1]** or **[2]**

· Canceling Bar calls at roaming : **[2]**

6

Area	Code	Area	Code
Indonesia	62	United Kingdom	44
Italy	39	USA	1
Japan	81	Viet Nam	84
Korea	82		

· For other country code and details, refer to DoCoMo's international service web page.

International access numbers of major countries (table 1)

(as of March, 2008)

Area	No.	Area	No.
Australia	0011	Macau	00
Belgium	00	Malaysia	00
Brazil	0021/0014	Monaco	00
Canada	011	New Zealand	00
China	00	Norway	00
Czech	00	Philippines	00
Denmark	00	Poland	00
Finland	00	Portugal	00
France	00	Russia	810
Germany	00	Singapore	001

9

3 "Yes" ▶ Enter the network security code

Network Services

To use overseas, Remote control must be set in advance.

◆ Voice Mail service

[Settings & NW services] **[9]** **[1]** **[4]** ▶ **[1]**
[Activate] or **[2]** [Deactivate] ▶ "Yes" ▶ Operate following the voice prompt

◆ Call forwarding service

[Settings & NW services] **[9]** **[1]** **[5]** ▶ **[1]**
[Activate] or **[2]** [Deactivate] ▶ "Yes" ▶ Operate following the voice prompt

◆ Roaming guidance

[Settings & NW services]
[9] **[1]** **[8]** ▶ "Yes" ▶ Operate following the voice prompt

7

Area	No.	Area	No.
Greece	00	Spain	00
Holland	00	Sweden	00
Hong Kong	001	Switzerland	00
Hungary	00	Taiwan	002
India	00	Thailand	001
Indonesia	001	Turkey	00
Ireland	00	UAE	00
Italy	00	United Kingdom	00
Korea	001	USA	011
Luxembourg	00	Viet Nam	00

International phone code for Universal number (table 2)

(as of March, 2008)

Area	Code	Area	Code
Argentina	00	Italy	00
Australia	0011	Korea	001
Austria	00	Luxembourg	00
Belgium	00	Malaysia	00
Brazil	0021	New Zealand	00
Canada	011	Norway	00
China	00	Philippines	00

10

Country code of major countries

For international calls or Int'l call assist, use country code listed below.

(as of April, 2008)

Area	Code	Area	Code
Australia	61	Macau	853
Austria	43	Malaysia	60
Belgium	32	Maldives	960
Brazil	55	New Caledonia	687
Canada	1	New Zealand	64
China	86	Norway	47
Czech	420	Peru	51
Egypt	20	Philippines	63
Finland	358	Russia	7
France	33	Singapore	65
Fuji	679	Spain	34
Germany	49	Sweden	46
Greece	30	Switzerland	41
Holland	31	Tahiti (French Polynesia)	689
Hong Kong	852	Taiwan	886
Hungary	36	Thailand	66
India	91	Turkey	90

8

Area	Code	Area	Code
Columbia	009	Portugal	00
Denmark	00	Singapore	001
Finland	950	South Africa	09
France	00	Spain	00
Germany	00	Sweden	00
Holland	00	Switzerland	00
Hong Kong	001	Taiwan	00
Hungary	00	Thailand	001
Ireland	00	United Kingdom	00
Israel	014	USA	011

Service inquiries

For loss or theft of FOMA terminal or payment of cumulative cost overseas, see "Loss or theft of FOMA terminal or payment of cumulative cost overseas" on the cover of Quick Manual (Overseas Use) or "Failures encountered overseas" on P1.

· Each inquiry number must be prefixed with "International access number (table 1)" or "International phone code for Universal number (table 2)" assigned to the country you stay.

11

Cutoff

Through DoCoMo e-site, you may change and confirm your user information, request information materials and also apply new services (in Japanese only).

From i-mode iMenu ⇒ 料金&お申込・設定 (Charges & Applications/ Settings) ⇒ 各種手続き (ドコモeサイト) (Various Procedures (DoCoMo e-site)) **No packet communication charges**

From PCs My DoCoMo (<http://www.mydocomo.com/>) ⇒ 各種手続き (ドコモeサイト) (Various Procedures (DoCoMo e-site))

- * You need your "Network security code" to use e-site from i-mode.
- * No packet communication charge applies to access e-site from i-mode. Packet communication charge applies to access from overseas.
- * You need "DoCoMo ID/Password" to access e-site from your PC.
- * If you do not have or forget "Network security code" or "DoCoMo ID/Password", contact to the numbers for "General Inquiries" on the back of this manual.
- * You may not use the services depending on your subscription.
- * There are cases where the site may not be available to system maintenance, etc.

About Proper Telephone Etiquette

Always turn OFF your FOMA terminal in cases below

- In a place where use of mobile phones is prohibited
Always turn OFF your FOMA terminal in an aircraft or hospital.
 - * Be aware that patients using electronic medical equipment are in many areas in hospitals. Your FOMA terminal must be turned OFF even in lobbies or waiting rooms.
- When you are in crowded train and near by someone using pacemakers, defibrillators or other devices
FOMA terminal's signals may negatively affect the operation of implanted pacemakers, defibrillators or other devices.

Always set Public mode in cases below

- When driving
Using a mobile phone by holding it with the hand while driving is subject to penalty.
 - * If you inevitably receive a call, tell the caller that you will "call back" by handsfree, then park in a safe place and call back.

- In public places such as a theater, movie theater or art museum
Using your FOMA terminal in quiet public places will likely bother other people.

Match the volume of voice and ring alert to your location

- In a quiet place like a restaurant or hotel lobby, pay attention to the volume of your voice etc. when using your FOMA terminal.
- In town areas, while using your FOMA terminal, be sure not to block foot or car traffic.

Consider privacy

- ! Please be considerate of the privacy of individuals around you when taking and sending photos using camera-equipped mobile phones.

Functions designed for public use

Your FOMA terminal has a number of useful functions designed for public use, such as a setting that instructs your terminal not to answer incoming calls and the ability to set the terminal for silent operation.

- Public mode (Drive mode/Power OFF)
The caller hears an announcement notifying that the receiver is driving a car or in a place (electric train, bus, movie theater, etc.) requiring control of calling, and the call is canceled. → P65
- Recorded messages
Allows the caller to leave a message/video message when you cannot answer the call. → P67
- Vibrate alert
Vibrates when there is an incoming call. → P97
- Silent mode/Personalized silent mode
Eliminates all sounds your FOMA terminal makes, such as keypad sound and ring alert (Silent mode). → P99
Allows the user to change Silent mode operations (Personalized silent mode). → P100

This printed matter is recyclable. Please recycle this manual when you no longer need it.