




## Owner's Manual

**Important!**  
Return your **Warranty Registration Card** within 10 days. See why inside.

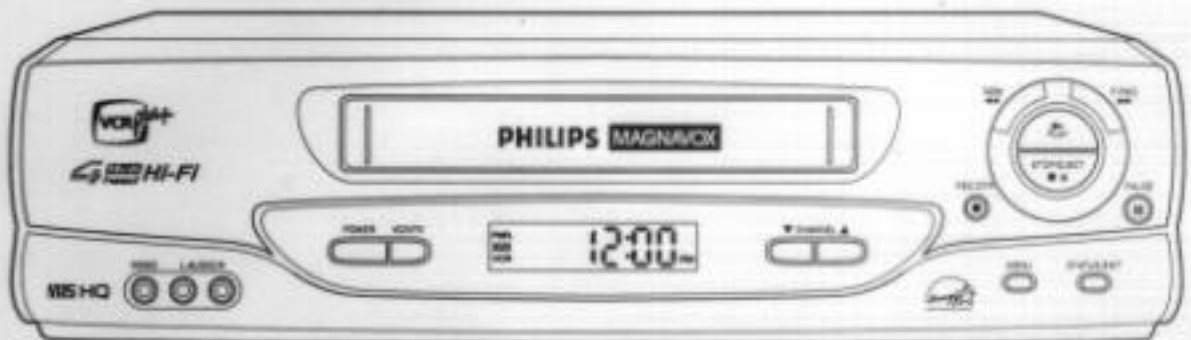

**PHILIPS MAGNAVOX**



## Return your Warranty Registration card today to ensure you receive all the benefits you're entitled to.

Once your PHILIPS MAGNAVOX purchase is registered, you're eligible to receive all the privileges of owning a PHILIPS MAGNAVOX product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

### Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your PHILIPS MAGNAVOX warranty.

### Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

### Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

## PHILIPS MAGNAVOX

*Congratulations on your purchase, and welcome to the "family!"*

### Dear PHILIPS MAGNAVOX product owner:

Thank you for your confidence in PHILIPS MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome-and thanks for investing in a PHILIPS MAGNAVOX product.

Sincerely,




Robert Minkhorst  
President and Chief Executive Officer

**P.S. Remember, to get the most from your PHILIPS MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!**



### Know these safety symbols

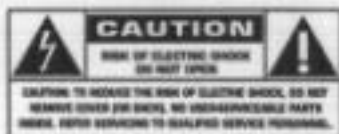

⚡ This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

⚠ The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

**ATTENTION:** Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

### For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

## Introduction 3

### Welcome to your VCR owner's manual.

This manual has seven sections: Setting Up Your VCR; Description of Controls; Basic Operations; Recording; Playing; Stereo Features; and Information You May Need. The instructions explain all of the VCR's features, which are listed below. You cannot hurt your VCR by trying the features! So read on – and relax.

### Features

- Auto DBS RecordLink™
- Automatic Channel Setup
- Automatic Clock Setting with Time Zone
- Automatic Head Cleaner
- Automatic Operation Features
- Automatic Tracking Adjustment
- Blue Background
- Child Lock
- Daylight-Savings Time
- Display Panel
- Front Panel Menu Access
- Hi-Fi Stereo Sound System
- High Quality (HQ) System
- MTS (Multi-Channel Television Sound) System
- On-Screen Displays in English or Spanish
- One-Touch Recording
- Real-Time Counter
- Remote Control with capability to operate TV, Cable Box, and Direct Broadcast System, with lighted buttons
- Remote Locator
- Repeat Play
- Search Functions: Quick Search; Time Search; Index Search; Record End Search; Skip Search
- Special Effects Playback: Forward and Reverse Searching; Still; Variable Slow; Frame Advance
- The VCR Plus+ Programming System
- Timer Recording with EPROM Backup Memory

### Safety Precautions

**Warning:** To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

**Federal Communications Commission Warning:** Any unauthorized changes or modifications to this equipment void the user's authority to operate it.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This VCR is equipped with a High Quality (HQ) system and is compatible with existing Video Home System (VHS) equipment. Philips Consumer Electronics Company recommends that you use only video cassette tapes which are labeled with the **MMS** mark. The use of other tapes may result in poor picture quality and excessive deposits on the video heads, which may not be covered by the warranty if damage occurs.

**Note to the Cable TV System Installer:** This reminder is provided to call the Cable TV system installer's attention to Article 820-40 of the National Electrical Code, which provides guidelines for proper grounding – in particular, specifying that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.



As an ENERGY STAR® Partner, Philips Consumer Electronics Company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR® is a U.S. registered mark.

Using products with the ENERGY STAR® label can save energy. Saving energy reduces air pollution and lowers utility bills.

Copyright 1999 Philips Consumer Electronics Company. All rights reserved. VCR Plus+™ and PlusCode® are trademarks of Gemstar Development Corporation. The VCR Plus+ Programming system is manufactured under license from Gemstar Development Corporation.

### Helpful Hint

- Your new product, its packaging, and this manual contain materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount that needs to be properly disposed. Your product uses batteries that should not be thrown away when depleted but should be disposed of as small chemical waste. Please find out about the local regulations on disposal of your old product, batteries, manual, and packaging whenever you replace existing equipment.

## 4 Table of Contents

### Setting Up Your VCR

Introduction	3
Table of Contents	4
Before Using Your VCR	5
Hookups Without a Cable Box/Direct Broadcast System	6-7
Hookups With a Cable Box/Direct Broadcast System	8-9
Hookups With a Stereo TV	10
Turning on Your VCR	11
Automatic Channel Setup	12-14
Setting the Clock	15-18
Daylight-Savings Time/Child Lock	19
Language Selection	20
Setting the Remote to Operate a TV	21
Setting the Remote to Operate a Cable Box/Direct Broadcast System	22
Remote Locator	23

### Description of Controls

Remote Control Buttons	24-26
On-Screen Status Displays	27
VCR Display Panel	28
Front Panel	29
Rear Panel	30

### Basic Operations

Playing	31
Recording	32

### Recording

Recording One Channel/Watching Another	33
One-Touch Recording	34
Timer Recording	35-38
Auto DBS RecordLink	39
Setting Up the VCR Plus+ Programming System	40-41
Timer Recording with the VCR Plus+ Programming System	42-43
Rerecording (Tape Duplication)	44

### Playing

Repeat Play	45
Time Search	46
Index Search	47
Record End Search/Skip Search	48
Quick Search	49
Real-Time Counter Memory	50
Special Effects Playback	51-52
Automatic Operation Features	53

### Stereo Features

Multi-Channel Television Sound System	54-55
Hi-Fi Stereo Sound System	56-57

### Information You May Need

Helpful Hints	58-59
Glossary	60
Specifications	61
Limited Warranty	62
Index	63
Supplied Accessories/Optional Accessories	64

## Before Using Your VCR 5

### Removing the Plastic Cover from the Front Panel

A thin, plastic cover may protect the front panel of your VCR. Before using the VCR, lift a corner of the plastic, then peel it off.

### Putting Batteries in the Remote Control

1


Remove the battery compartment lid on the bottom of the remote control by pressing the tab, then lifting the lid.

2

Place three AA batteries inside the battery compartment with their + and - ends aligned as indicated.

3

Replace the battery compartment lid.

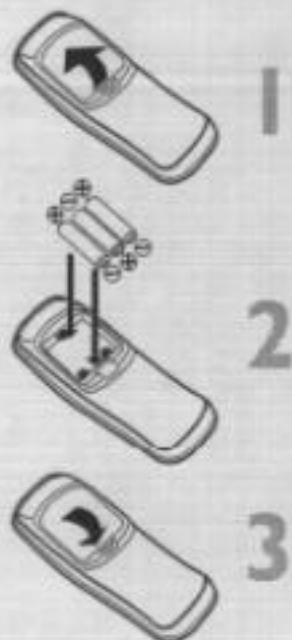

### Using the Remote Control

- Point the remote control at the VCR, then press the VCR button, when using the remote control to operate the VCR.
- Point the remote control at the TV, then press the TV button, when using the remote control to operate the TV.
- Point the remote control at the Cable Box or Direct Broadcast System (DBS), then press the CBL/DBS button, when using the remote control to operate the Cable Box or DBS.
- When you press the POWER button on the VCR to turn on the VCR, the remote control beeps. (The exception is when you plug the VCR power cord into the wall outlet for the first time.) Press any button on the remote control to stop it. LOCATING REMOTE will appear on-screen. See page 23 for details.

### Erasure Prevention

Video cassette tapes have record tabs to ensure that recordings are not accidentally erased.

1

To prevent erasure, break off the tab with a screwdriver.

2

To record again, cover the hole with cellophane tape.



### VCR maintenance

- Use only tapes with the **VHS** mark.
- Remove any light adhesive stick-on notes from the video cassette tape before putting the tape in the VCR. Removable labels can jam the VCR.
- Periodic maintenance is required to maintain your VCR's excellent performance. This VCR has an Automatic Head Cleaner. However, the video heads will require replacement eventually. Only an authorized service center should perform this service.


#### Helpful Hints

- Do not mix alkaline and manganese batteries.
- Do not mix old and new batteries.

## 6 Hookups Without a Cable Box / Direct Broadcast System


The basic VCR/TV connection – antenna/cable to VCR to TV – is shown below. If you have a Cable Box or a Direct Broadcast System, please see pages eight-nine. If you have a Stereo TV, please see page 10. After you hook up the VCR, go to page 11 to turn on the VCR.

Disconnect the antenna or cable from your TV.

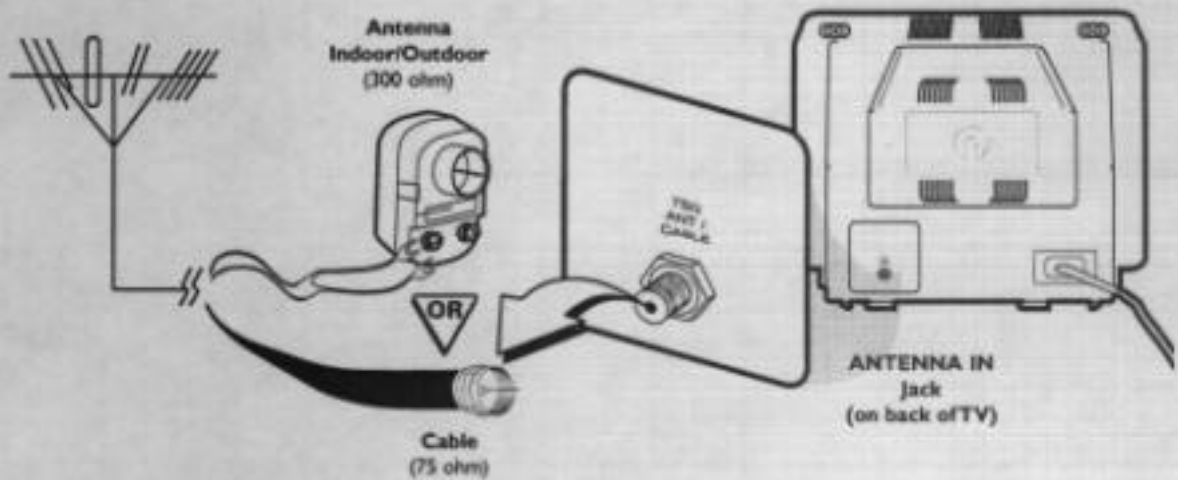

## 2


Connect the antenna or cable to the ANT(enna) IN Jack of your VCR.

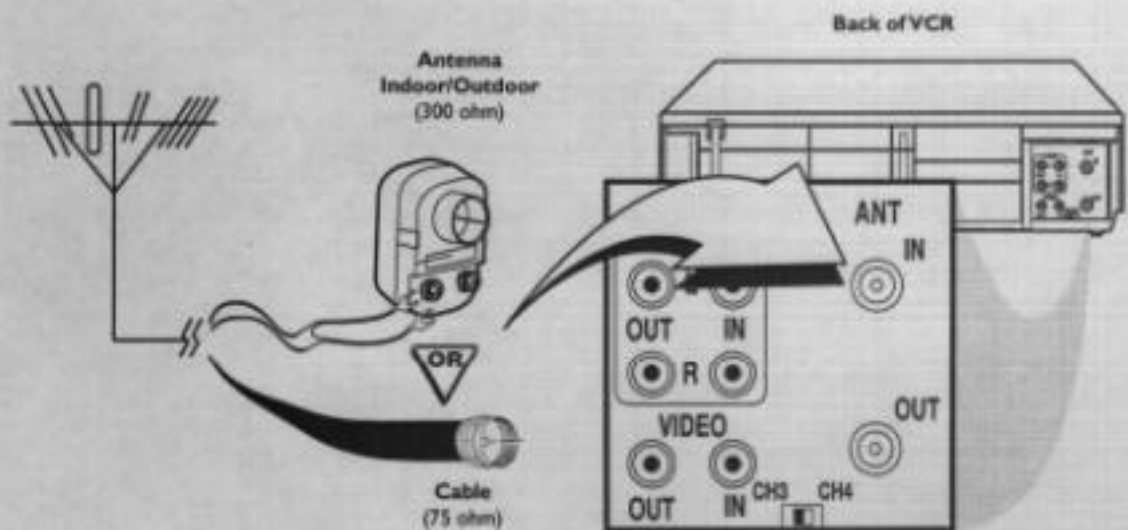

## Hookups Without a Cable Box / Direct Broadcast System (cont'd) 7

### 3

Connect the RF coaxial cable (supplied) to the **OUT** Jack on the back of the VCR and to the **ANTENNA IN** Jack on the TV. (You may use either a snap-on type (supplied) or screw-on type of coaxial cable, whichever you prefer.)

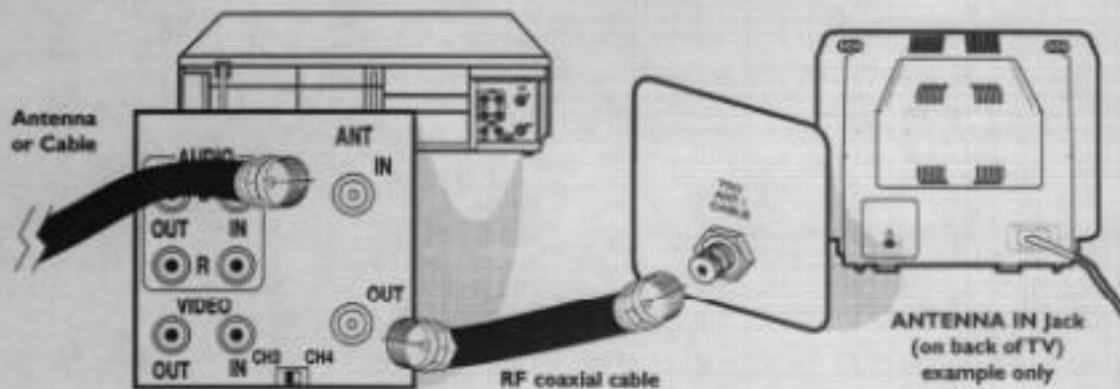


### 4

Plug in the TV and the VCR.

### 5

Set the **CH3/CH4** switch on the back of the VCR to **CH3** or **CH4**, whichever channel is not used or least used in your area. Set the **TV** to the same channel. For example, when playing a tape, if the CH3/CH4 switch is set to CH3, the TV should be on channel 03.

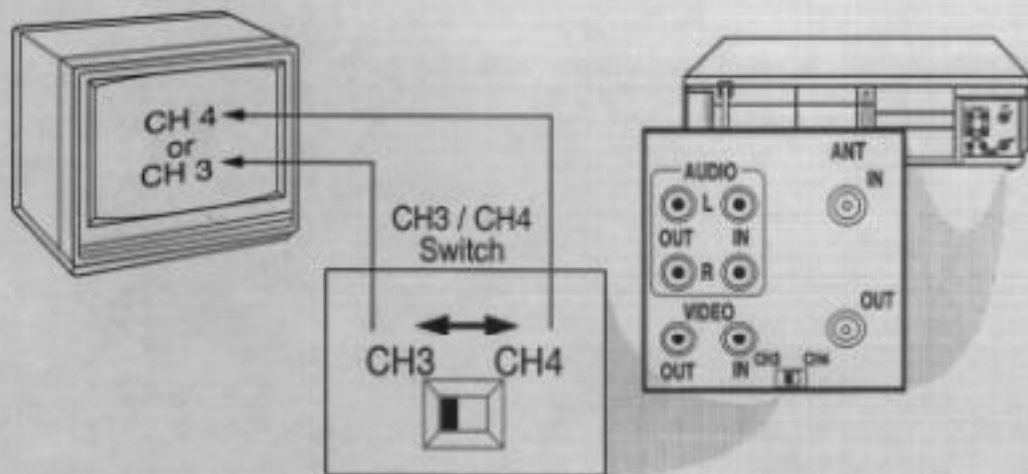


### 6

You are ready to turn on the VCR. Please go to page 11 before turning on the VCR.

## 8 Hookups With a Cable Box / Direct Broadcast System

There are two ways to connect your Cable Box/DBS to the VCR. With this connection:

- You may view any channel.
- You must select channels at the Cable Box/DBS. Channels cannot be changed at the VCR.
- You may not view a channel other than the one you are recording.
- You may not program channels at the VCR.
- You can only program a timer recording for one channel at a time. Set the TV and the VCR to the Cable Box/DBS output channel (channel 03 or 04), and set your Cable Box/DBS to the channel you want to record. When you enter the channel you want to record in a timer recording, select channel 03 or 04 (the Cable Box/DBS output channel). (This is step 5 on page 36.) Leave the Cable Box/DBS on for a timer recording.
- If you use the VCR Plus+ Programming system, set the Cable/TV channel to 3 or 4 (Cable Box/DBS output channel) for every VCR Plus+ channel in the VCR Plus+ Cross Reference Map. You must set the Cable Box/DBS to the channel you want to record; leave the Cable Box/DBS on for the timer recording. Details are on page 41.

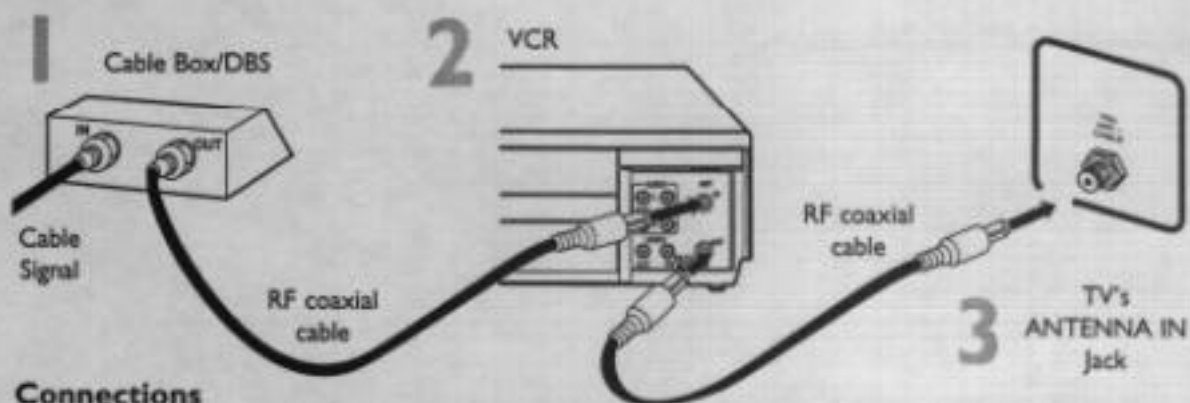

### Connections

1 Connect a Cable signal to the IN Jack on the Cable Box/DBS.

2 Use an RF coaxial cable (supplied) to connect the OUT Jack on the Cable Box/DBS to the ANT(enna) IN Jack on the VCR.

3 Use a second RF coaxial cable to connect the OUT Jack on the VCR to the TV's ANTENNA IN Jack.

### Recording/Viewing Any Channel

1 With the VCR on and in VCR position (the VCR light will appear on the display panel), use the CH(annel) ▲/▼ button to set the VCR to the Cable Box/DBS output channel (channel 03 or 04). Set the CH3/CH4 switch to the same channel.

2 Set the TV to the same channel to which you set the VCR.


3 Select the channel you want to view/record at the Cable Box/DBS.



## Hookups With a Cable Box / Direct Broadcast System (cont'd) 9

With this connection:

- You may watch one channel while recording another.
- You may not record scrambled channels.

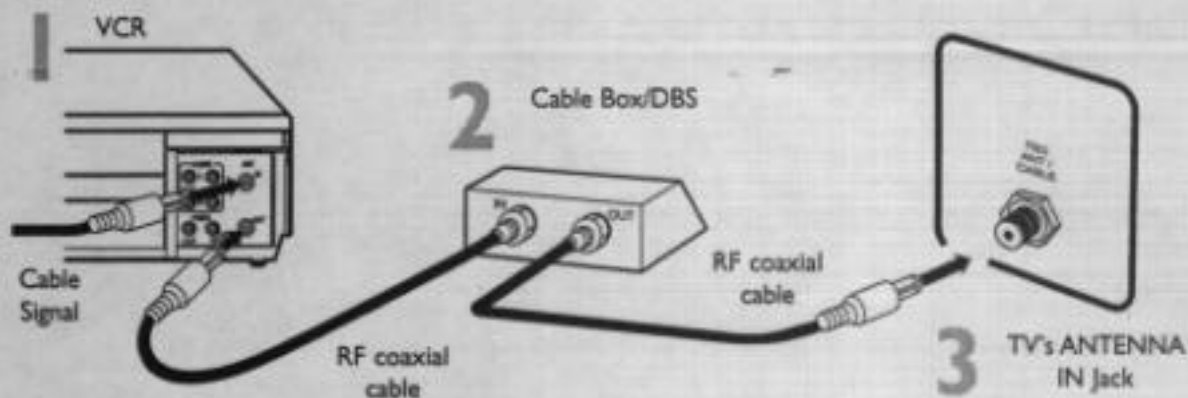

### Connections

1 Connect a Cable signal to the VCR's ANT(enna) IN Jack.

2 Use an RF coaxial cable (supplied) to connect the OUT Jack on the VCR to the IN Jack on the Cable Box/DBS.

3 Use a second RF coaxial cable to connect the OUT Jack on the Cable Box/DBS to the ANTENNA IN Jack on the TV.

### Recording One Channel/Watching Another

1 Put the Cable Box/DBS on the same channel as the VCR's CH3/CH4 switch. Set the TV to the Cable Box/DBS output channel (03 or 04).

Then, with the VCR in VCR position (the VCR light will appear on the display panel), use the CH(annel) ▲/▼ button to select the channel you want to record at the VCR. Start the recording.


2 Press the VCR/TV button once to put the VCR in TV position. (The VCR light will disappear.)

3 Select the channel you want to watch at the Cable Box/DBS.

#### Helpful Hint

- When you play a tape, make sure the Cable Box/DBS is set to the same channel as the CH3/CH4 switch on the VCR. Set the TV to the Cable Box/DBS output channel (03 or 04).

## 10 Hookups With a Stereo TV

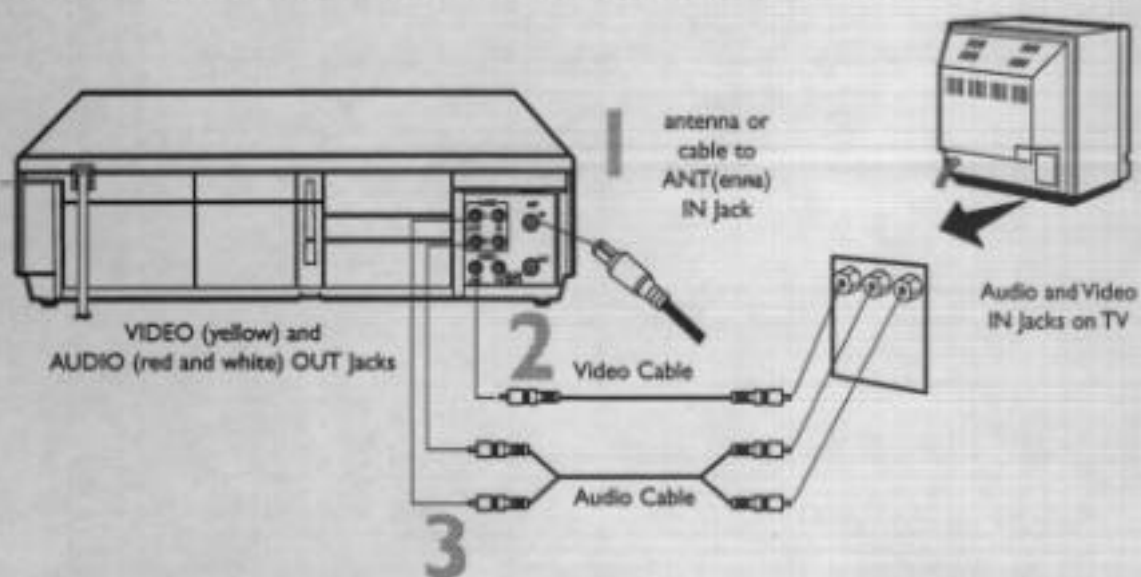

• Audio and Video cables are not supplied.

**1**

Connect the antenna or cable to the ANT(enna) IN Jack on the back of the VCR.

**2**

Connect a video cable to the yellow VIDEO OUT Jack on the back of the VCR. Then, connect the other end of the video cable to the VIDEO IN Jack on your TV.

**3**

Connect an audio cable to the red and white AUDIO OUT Jacks on the back of the VCR. Then, connect the other end of the audio cable to the AUDIO IN Jacks on your TV.

**4**

Turn on your TV, making sure it is in Line Input mode. Please refer to your TV owner's manual for details.

### Helpful Hints

- A stereo audio cable (not supplied) is used here to deliver audio to the TV's left and right channels.
- The TV must be in Line Input mode. Please refer to your TV owner's manual.


## Turning on Your VCR 11

Before turning on your VCR, make sure there are batteries in the remote control and the VCR and TV are connected correctly.

- Follow the steps on this page only when you plug the VCR power cord into the wall outlet for the first time.
- You can not program channels if you are using a Cable Box or a Direct Broadcast System.
- If you are not using a Cable Box/DBS, the clock may set itself automatically after you connect the antenna/Cable signal to the VCR and plug in the power cord. The time will appear on the display panel.


**1** Press the **VCR** button, then press the **POWER** button. The VCR light and the PWR. (power) light will appear on the display panel.

**2** Turn on the TV. Set it to the same channel as the **CH3/CH4** switch on the back of the VCR. The display shown below will appear. (If the display does not appear, check your hookups, then follow the steps on page 12 to set up channels and page 20 to select a language.)

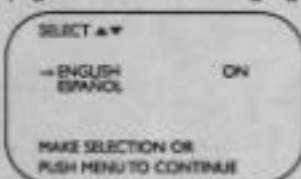


**3** Within 60 seconds, press the **PLAY/▲** button or the **STOP/▼** button to select English or Spanish on-screen displays.

**4** Press the **MENU** button. The display shown below will appear.

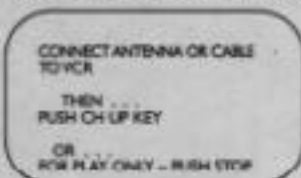

**5** Within 60 seconds, press the **CH(annel) ▲** button to begin automatic channel programming. **AUTO SET PROCEEDING PLEASE WAIT** will appear on-screen. The VCR will memorize all available channels. When all channels are programmed, **CHANNELS ARE SET** will appear on-screen briefly, then TV programming will appear. Now, when you press the **CH(annel) ▲/▼** button, you'll only scan through channels that you receive.

**2** Turn on the TV.

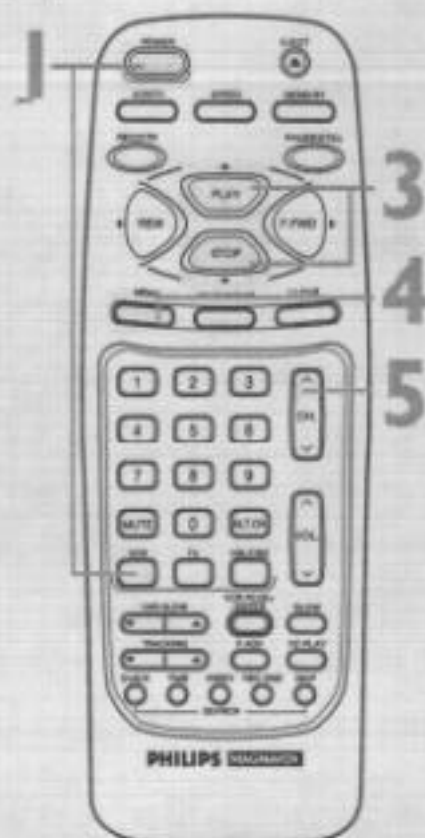

### Helpful Hints

- To skip this feature and play a tape immediately, insert a tape with its record tab removed. Or, to skip step 3, press the **MENU** button. All on-screen displays will be in English. To skip step 5, press the **STOP/▼** button. Channels will not be programmed, and **CHANNELS NOT SET** will appear on-screen.
- When you turn on the VCR again later, you may see a message regarding **AUTO CLOCK**. Details are on pages 15-18.
- If you try to program channels when there is no antenna or cable connected to the VCR, programming will appear to take place, but eventually a **NO TV SIGNALS** message will appear. Connect an antenna or cable to the VCR's **ANT(enna) IN** Jack and press the **CH(annel) ▲** button again. You may need to follow the steps on page 12.

## 12 Automatic Channel Setup


Although your VCR may automatically memorize the channels you receive when you turn it on for the first time, this function lets you set up the channels again.

1

Press the **VCR** button.


2

Press the **MENU** button.

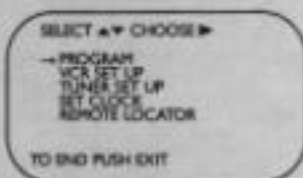

3

Press the **PLAY/▲** button or the **STOP/▼** button to select **TUNER SET UP**, then press the **F.FWD/▶** button.

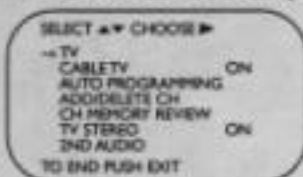

4

Press the **PLAY/▲** button or the **STOP/▼** button to select **TV** (if you have an antenna) or **CABLE TV** (if you have a cable connection). Then, press the **F.FWD/▶** button. **ON** will appear beside your choice.


5

Press the **PLAY/▲** button or the **STOP/▼** button to select **AUTO PROGRAMMING**, then press the **F.FWD/▶** button. The VCR will place all the channels you receive into its memory.

6

Wait for a few minutes while the VCR sets up the channels. When this is complete, **CHANNELS ARE SET** will appear on-screen. Then the programming of the lowest channel number placed in the VCR's memory will appear on-screen. Now when you press the **CH(annel) ▲/▼** button, you will scan only through channels you receive.

3-5

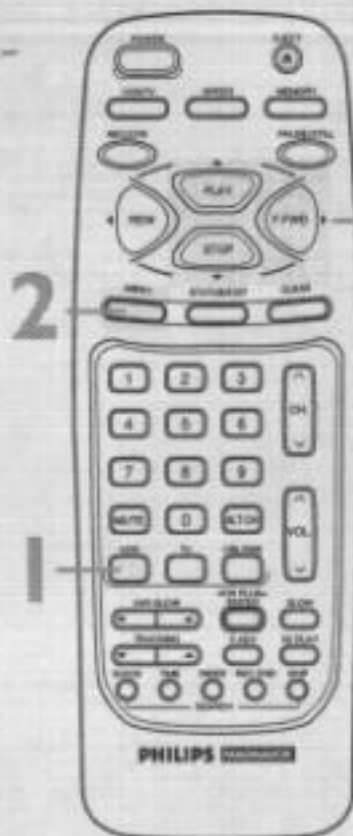

### Helpful Hints

- You can not enter the **TUNER SET UP** menu when you are in **Line Input** mode (channel 001 or 002). When you select channel 001 or 002, **AV REAR** or **AV FRONT** will appear on-screen briefly.
- You can not program channels if you are using a **Cable Box** or **DBS**.
- If you select **TV** at step 4, channels 2-69 will be available. If you select **CABLE TV** at step 4, channels 1-125 will be available.

## Automatic Channel Setup (cont'd) 13


## Adding/Deleting Channels

**1**  
Press the VCR button.

**2**  
Press the MENU button.


**3**  
Press the PLAY/▲ button or the STOP/▼ button to select TUNER SET UP, then press the F.FWD/▶ button.

**4**  
Press the PLAY/▲ button or the STOP/▼ button to select ADD/DELETE CH, then press the F.FWD/▶ button.

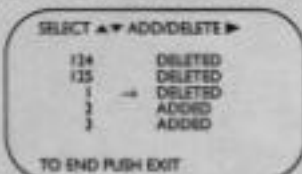


**NOTE:** If you select TV at the TUNER SET UP menu, channel numbers 2-69 will appear on the ADD/DELETE CH menu.

**5**  
Press the PLAY/▲ button or the STOP/▼ button until the channel number you want to add or delete appears beside the arrow.

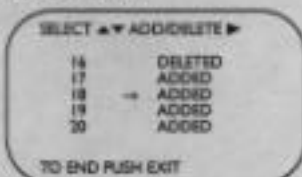

**6**  
Press the F.FWD/▶ button to select ADDED or DELETED. Repeat steps 5 and 6 until you have added or deleted all the channels you wanted to add or delete.

**7**  
Press the STATUS/EXIT button.

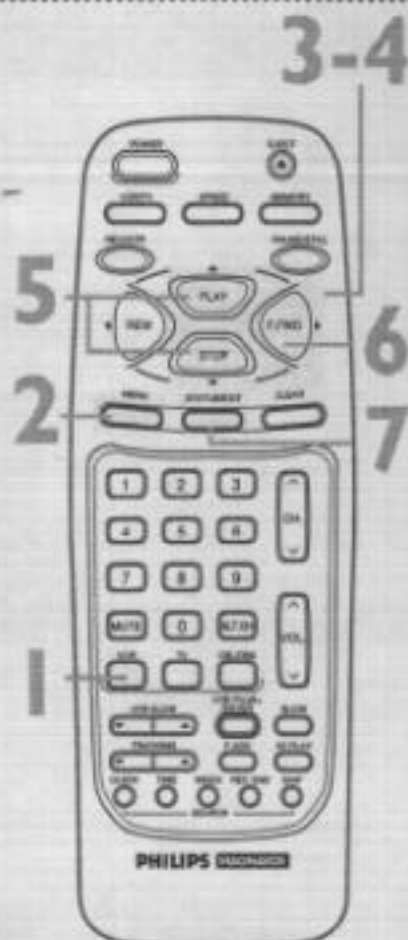

## Helpful Hint

- If you want the TV screen to be solid blue when a weak signal is received, set BLUE BACKGROUND to ON. The screen will be blue and the sound will be muted. Or, if you want to receive the weak signal, set BLUE BACKGROUND to OFF. When you select a channel that is receiving a weak signal, you will see and hear the static in the TV programming. To set BLUE BACKGROUND to ON or OFF, follow these steps.
  1. Press the VCR button.
  2. Press the MENU button.
  3. Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/▶ button.
  4. Press the PLAY/▲ button or the STOP/▼ button to select BLUE BACKGROUND. Then, press the F.FWD/▶ button repeatedly so that OFF (or ON) appears beside BLUE BACKGROUND.
  5. Press the STATUS/EXIT button.

## 14 Automatic Channel Setup (cont'd)


### Reviewing Memorized Channels

1

Press the **VCR** button.


2

Press the **MENU** button.

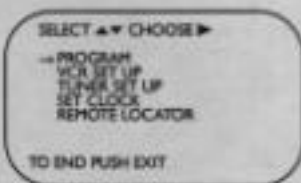

3

Press the **PLAY/▲** button or the **STOP/▼** button to select **TUNER SET UP**, then press the **F.FWD/►** button.

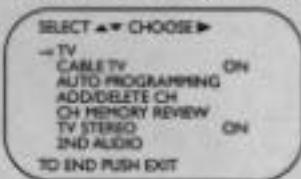

4


Press the **PLAY/▲** button or the **STOP/▼** button to select **CH MEMORY REVIEW**, then press the **F.FWD/►** button.

A list of programmed channels will appear on-screen.

- If all the programmed channels don't fit on the screen, press the **F.FWD/►** button to see the remaining channels. Then press the **REW(ind)/◀** button to return to the first screen of channels.
- If you do not press any buttons within 10 seconds, you will either go to the next screen of channels or you will return to the previous menu.

5

Press the **STATUS/EXIT** button once or twice to exit.

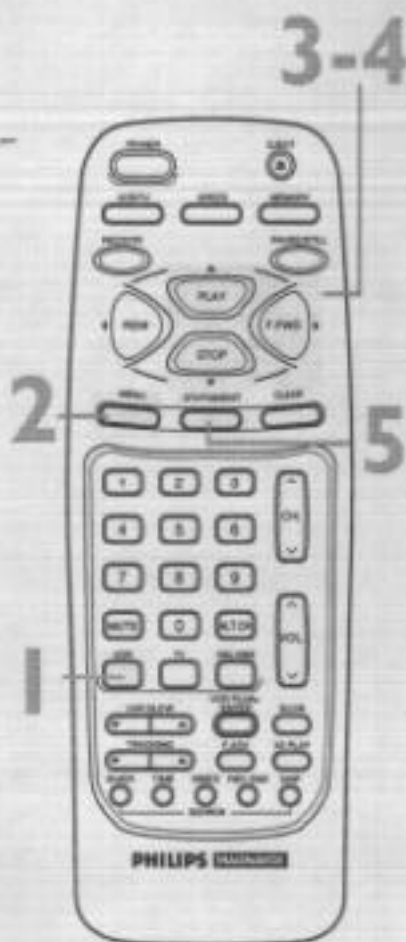

## Setting the Clock 15

There are two ways to set the clock. With manual clock setting, you tell the VCR the current time. With automatic clock setting, the VCR gets the current time from your local PBS station. It keeps track of the time by constantly referring to the time broadcasted by your PBS station.

**If you are using a Cable Box or Direct Broadcast System, you must set the clock manually.**

Follow the instructions under either manual clock setting or automatic clock setting (page 17) to set the VCR's clock. Before you begin, make sure:

- The VCR is hooked up and turned on, and channels are programmed into the VCR's memory (see pages six - 12).
- The VCR is in VCR position. The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.

Do each step within 60 seconds of the previous step.


### Manual Clock Setting

# 1

Press the **VCR** button.

# 2

Press the **MENU** button.

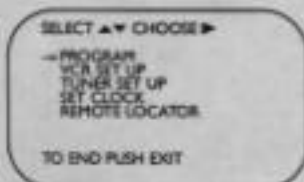


# 3

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET CLOCK**, then press the **F.FWD/▶** button.




# 4

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET MANUAL CLOCK**, then press the **F.FWD/▶** button.

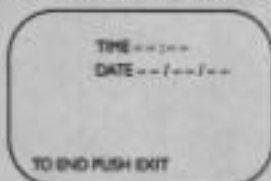

# 3-4

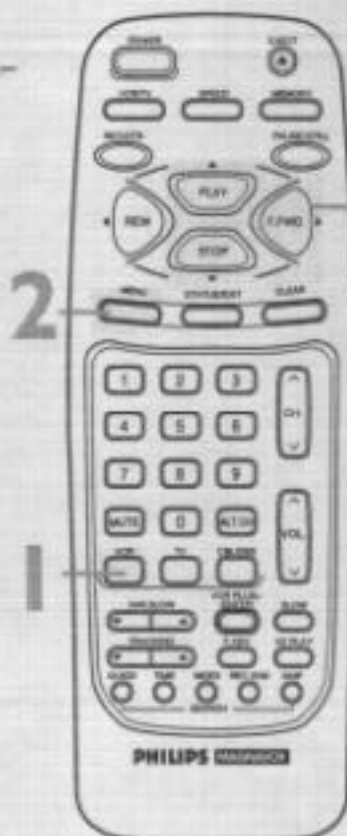

### Helpful Hints


- To display the time on the TV screen, press the **STATUS/EXIT** button. Details are on page 26.
- Power failures that last for more than one minute can cause you to lose your clock setting if you set the clock manually. If this happens, reset the clock.
- This VCR is ready for the year 2000 and the years beyond. To set a date in the year 2000, enter 00 for the year in step 6.

## 16 Setting the Clock (cont'd)

### 5


Press two **Number** buttons for the hour(s) and two **Number** buttons for the minute(s). Then press **1** for **AM** or **2** for **PM**. For example, for 2:15 PM, press 02, 15, 2.

- Enter a 0 before a single-digit number.
- Entries that do not match the VCR's internal calendar will cause a question mark (?) to appear on-screen.
- To make corrections, press the **CLEAR** button until the space for the number you want to correct is flashing. Then enter the correct number.

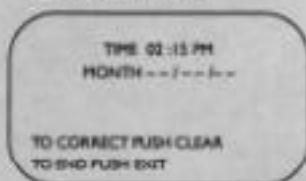


### 6

Press two **Number** buttons for the month, two **Number** buttons for the day, and two **Number** buttons for the year. For example, for July 1, 1999, press 07, 01, 99. The day of the week will appear automatically.

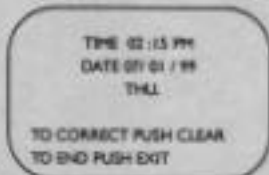

### 7

Press the **STATUS/EXIT** button to start the clock. The screen will return to the program you were watching. The time will appear on the VCR display panel.

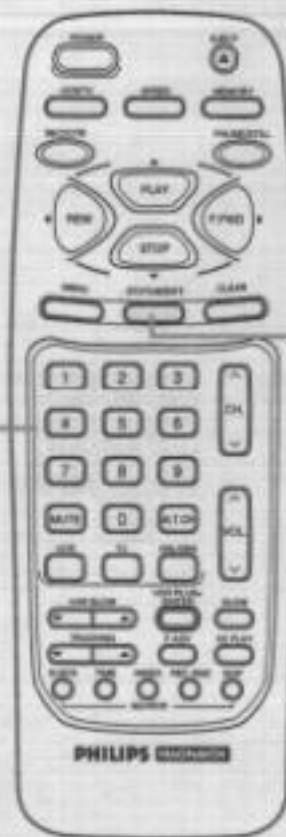


5-6



## Setting the Clock (cont'd) 17

## Automatic Clock Setting

1 Press the VCR button, then press the MENU button.

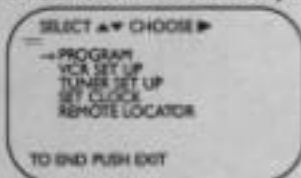


2

Press the PLAY/▲ button or the STOP/▼ button to select SET CLOCK, then press the F.FWD/▶ button.

3

If OFF appears to the right of AUTO CLOCK, press the F.FWD/▶ button to select ON. Then, press the MENU button. Or, if ON appears to the right of AUTO CLOCK, press the MENU button. Go to step 4.

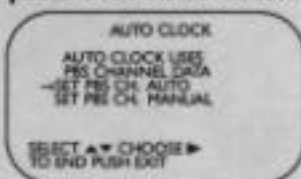


4

• If you want the VCR to locate a local PBS station from which to take the time, press the PLAY/▲ button or the STOP/▼ button to select SET PBS CH. AUTO. Then press the F.FWD/▶ button. When the current time appears on-screen, you're finished. Press the STATUS/EXIT button.

Or, you may be prompted to turn off the VCR. Turn off the VCR power, and leave it off for several minutes. When the current time appears on the VCR display panel, the clock is set. You may turn on the VCR again.

• If you want to tell the VCR the PBS station from which to take the time, press the PLAY/▲ button or the STOP/▼ button to select SET PBS CH. MANUAL. Press the F.FWD/▶ button, then use the Number buttons to enter the channel number of the desired PBS station. When the current time appears on-screen, you're finished. Press the STATUS/EXIT button.

NOTE: CANNOT FIND PBS CLOCK DATA may flash on-screen. Press the PLAY/▲ button or the STOP/▼ button to choose SELECT NEW PBS CH., then press the F.FWD/▶ button. Use the Number buttons to enter the channel number of another PBS station. Or, press the PLAY/▲ button or the STOP/▼ button to select SET PBS CH. AUTO. Press the F.FWD/▶ button. You will be prompted to turn off the VCR. Turn off the VCR power, and leave it off for several minutes. When the current time appears on the VCR display panel, the clock is set. You may turn on the VCR again.

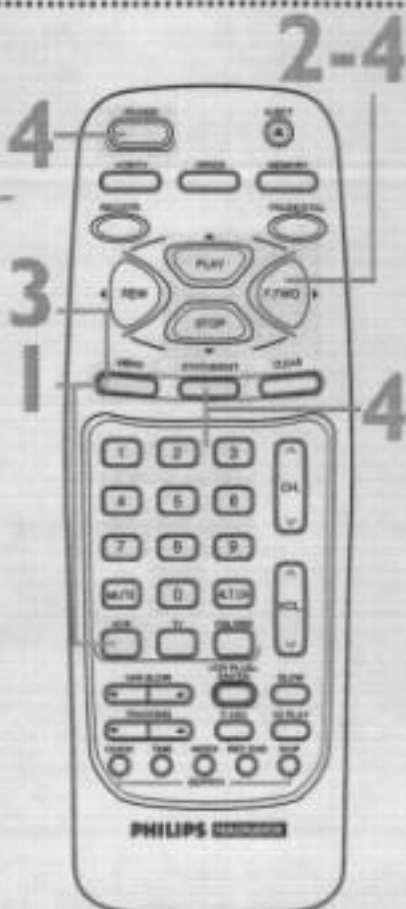

## Helpful Hints


- If you enter an incorrect PBS channel number at step 4, press the CLEAR button, then enter the correct channel number.
- If you have an antenna, you may select channels 2 - 69 at step 4. If you have a cable connection, you may select channels 1 - 125.
- The clock cannot be set automatically if you don't receive a channel that carries a time signal in your area. Set the clock manually.
- If there are only a few channels in your area that carry time signals, setting the clock automatically may take several minutes. If nothing happens even after you wait several minutes, set the clock manually.
- You cannot select AUTO CLOCK at step 3 during tape playback.

## 18 Setting the Clock (cont'd)

### Time Zone


When using the AUTO CLOCK function, you can specify your time zone. That way, the VCR will update the clock according to your time zone.

1 Press the **VCR** button, then press the **MENU** button.

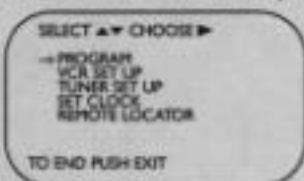


2

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET CLOCK**, then press the **F.FWD/▶** button.

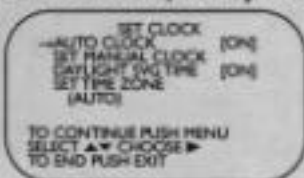


3

Press the **PLAY/▲** button or the **STOP/▼** button to select **SET TIME ZONE**, then press the **F.FWD/▶** button.

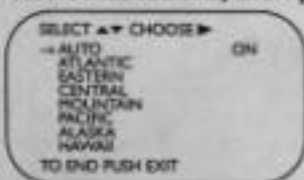

4

Press the **PLAY/▲** button or the **STOP/▼** button to select your time zone. **ON** will appear beside your choice.

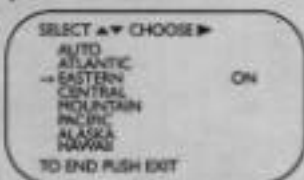

5

Press the **STATUS/EXIT** button.



#### Helpful Hint

- **SET TIME ZONE** will not appear in the menu if **AUTO CLOCK** is set to **OFF**.

## Daylight-Savings Time/Child Lock 19

### Daylight-Savings Time

You may program the VCR so its clock will automatically move forward one hour in April and turn back one hour in October. Daylight-Savings Time is set to ON when you receive your VCR. Turn Daylight-Savings Time ON or OFF by following the steps below. Before you begin:

- Make sure the clock is set.

1

Press the VCR button.

2

Press the MENU button.

3

Press the PLAY/▲ button or the STOP/▼ button to select SET CLOCK, then press the F.FWD/▶ button.

4

Press the PLAY/▲ button or the STOP/▼ button to select DAYLIGHT SVG TIME. Then, press the F.FWD/▶ button so that OFF (or ON) appears beside DAYLIGHT SVG TIME.

5

Press the STATUS/EXIT button.

### Child Lock

Child Lock prevents use of the VCR by deactivating the VCR feature buttons on the VCR and the remote control. To set the Child Lock, turn on the VCR power, then follow the steps below.

1

Press the VCR button.

2

Press and hold the POWER button on the remote control until PL appears on the display panel. The VCR will turn off.

#### When Child Lock is activated:


- The time will appear on the display panel. PL will appear on the display panel for two seconds every minute.
- You may insert a tape. However, the VCR power will remain off and tape playback will not begin.
- You may press the EJECT button to remove the tape (unless a timer recording is programmed).
- Timer recordings will take place as scheduled, even if Child Lock is activated. PL will appear steadily on the display panel during the timer recording.
- The TV and Cable Box/DBS feature buttons of the remote control will still operate when Child Lock is activated.

3

To cancel the Child Lock, press the VCR button, then press and hold the POWER button on the remote control for five seconds so that the VCR turns on.

### Daylight-Savings Time

3-4

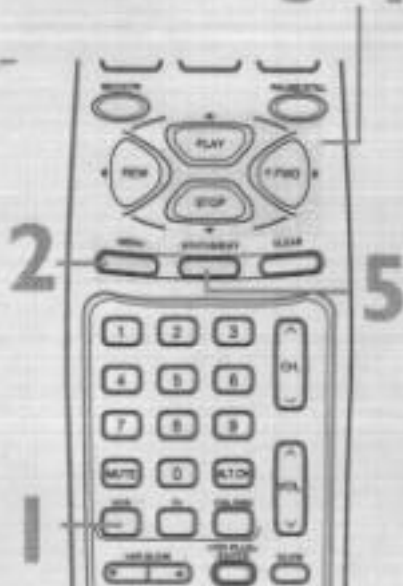

### Child Lock

2-3



## 20 Language Selection


Follow the steps below to change the language of the on-screen displays.

1

Press the **VCR** button.


2

Press the **MENU** button.

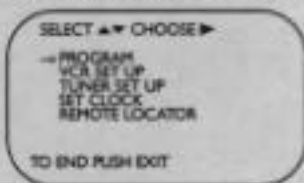


3

Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SET UP**, then press the **F.FWD/▶** button.

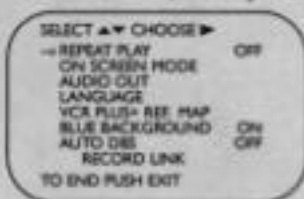

4

Press the **PLAY/▲** button or the **STOP/▼** button to select **LANGUAGE**, then press the **F.FWD/▶** button.

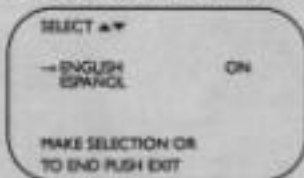


5

Press the **PLAY/▲** button or the **STOP/▼** button to select **English or Spanish** on-screen displays.

6

Press the **STATUS/EXIT** button.

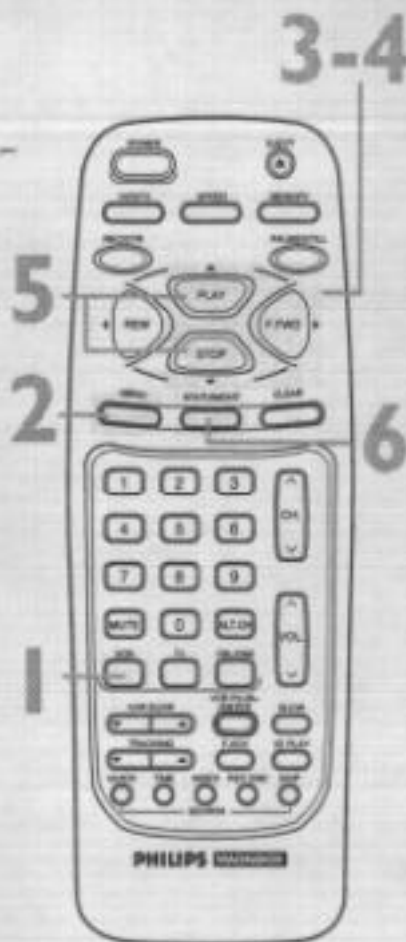

### Helpful Hint

- If you accidentally select Spanish on-screen displays and need English on-screen displays:
- 1. Press the **VCR** button.
- 2. Press the **MENU** button.
- 3. Press the **PLAY/▲** button or the **STOP/▼** button to select **PREPARE EL VCR**, then press the **F.FWD/▶** button.
- 4. Press the **PLAY/▲** button or the **STOP/▼** button to select **LENGUAJE**, then press the **F.FWD/▶** button.
- 5. Press the **PLAY/▲** button or the **STOP/▼** button to select **ENGLISH**.
- 6. Press the **STATUS/EXIT** button.

## Setting the Remote to Operate a TV 21

Your VCR remote control **may** operate your TV. If the remote control doesn't operate your TV now, follow the steps below.

**1**  
Point the remote control at your TV and press the **TV** button. Then, press the **POWER** button. If your TV turns on or off, try the other TV buttons (see pages 24 - 26). If your TV doesn't turn on or off, or if the other buttons don't work, go to step 2.

**2**  
Find the brand of your TV on the list below, and remember the two-digit number beside it.

TV CODES			
EMERSON .....	.14	PHILCO .....	.14
FISHER .....	.11	PHILIPS .....	.01
GE .....	.10	PHILIPS MAGNAVOX. .01, 02, 03	
GOLDSTAR .....	.04	QUASAR .....	.07
HITACHI .....	.12	RCA .....	.10
JVC .....	.05	SAMSUNG .....	.17
MAGNAVOX .....	.01, 02, 03	SANYO .....	.11
MARANTZ .....	.13	SEARS .....	.08, 11
MITSUBISHI .....	.13	SHARP .....	.16
MONTGOMERY WARD .....	.14	SONY .....	.09
PANASONIC .....	.07	TOSHIBA .....	.06
PANASONIC-GA00 .....	.07	ZENITH .....	.06, 15

**3**  
Press the **MUTE** button.


**4**  
Within 30 seconds, press the **TV** button.

**5**  
Within 30 seconds, press the **Number** buttons to enter the two-digit code for your TV brand. For example, if you have a Zenith TV, press Number buttons 0, 6.

**6**  
Repeat step 1. If the remote control works your TV, you're finished. If the remote control still doesn't work your TV, repeat steps 3 - 5, using a different code for your brand (if available).

**There is no guarantee that the remote will work your TV.**

**1 & 6** **2** Find your TV code.

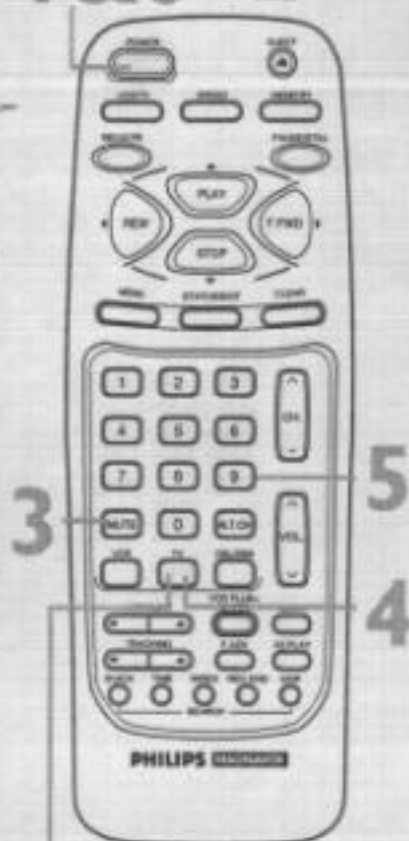

**1 & 6**

### Helpful Hints

- The remote control may only operate some features of your TV. For example, the remote control may turn on the TV power, but it may not change channels at the TV.
- If you can not change the channels at the TV using the Number buttons, press the VCR PLUS+/ENTER button after you press the Number buttons. It may change channels at the TV.
- When you replace the batteries in the remote control, you must program the remote control again.
- Remember to point the remote control toward the TV during steps 1-6.

## 22 Setting the Remote to Operate a Cable Box/Direct Broadcast System

Your VCR remote control may operate your Cable Box or Direct Broadcast System (DBS). If the remote control doesn't operate your Cable Box or DBS now, follow the steps below.

**1**

Turn on the Cable Box/DBS. Then, point the remote control at your Cable Box/DBS and press the CBL/DBS button. Then, press the POWER button. If your Cable Box/DBS turns off, try the other Cable Box/DBS buttons (see pages 24 - 26). If your Cable Box/DBS doesn't turn off, or if the other buttons don't work, go to step 2.

**2**

Find the brand of your Cable Box or DBS on the lists below and remember the two-digit number beside it.

CABLE BOX CODES		
ARCHER.....01, 06, 06, 44	MAGNAVOX.....26	SAMSUNG.....05, 06, 40, 42
CABLETENNA.....01, 44	MATSUSHITA.....16, 17, 97	SCIENTIFIC ATLANTA.....08, 09
CABLEVIEW.....04, 30, 42, 44, 52	MOVIE TIME.....42, 44	SIGNAL.....26
CENTURY.....44	NOVAVISION.....06, 09	SL MARX.....06, 40, 42, 44, 52
CITIZEN.....04, 30, 42, 44, 52	NSC/NEC.....40	SPRUCER.....16, 17, 97
CURTIS.....06, 09	OAK.....11, 46	STANDARD COMPONENTS.....42, 44
DIAMOND.....01, 44	OAK SIGMA.....11, 46	STARGATE.....04, 06, 30, 40, 42, 44, 52
EAGLE.....26, 40, 62	PANASONIC.....16, 17, 97	TELEVIEW.....06, 40, 42
EASTERN/REGENCY.....28	PHILIPS.....07, 23, 50	TOCOM.....01, 33, 34, 42
GC BRAND.....04, 30, 42, 44, 52	PIONEER.....05, 06	UNIKA.....01, 44
GEMINI/JASCO.....04	PULSAR.....04, 30, 42, 44, 52	UNIVERSAL.....42, 44, 52
GENERAL ELECTRIC.....01, 57	QUEST.....05, 06	VIDEOWAY.....07, 23, 50
GENERAL INSTRUMENT.....01, 02, 03, 04, 34, 83	RCA.....16, 17, 97	VIEWSTAR.....26, 40, 62
HAMLIN.....14, 15, 28, 41	REALISTIC.....44	ZENITH.....07, 23, 50
JERROLD.....01, 02, 03, 04, 34, 83	RECOTON.....44	
	REGAL.....14, 15, 28, 41	
	REMBRANDT.....01, 42, 44	

DIRECT BROADCAST SYSTEM CODES		
MAGNAVOX.....94, 95	RCA.....97	SONY.....98

**3**

Press the MUTE button.

**4**

Within 30 seconds, press the CBL/DBS button.

**5**


Within 30 seconds, press the Number buttons to enter the two-digit code for your Cable Box or DBS. For example, if you have a Zenith Cable Box, press Number buttons 2, 3.

**6**

Repeat step 1. If the remote control works your Cable Box or DBS, you're finished. If the remote control still doesn't work your Cable Box or DBS, repeat steps 2 - 5, using a different code for your brand, if available.

**2** Find your code.

**1 & 6**

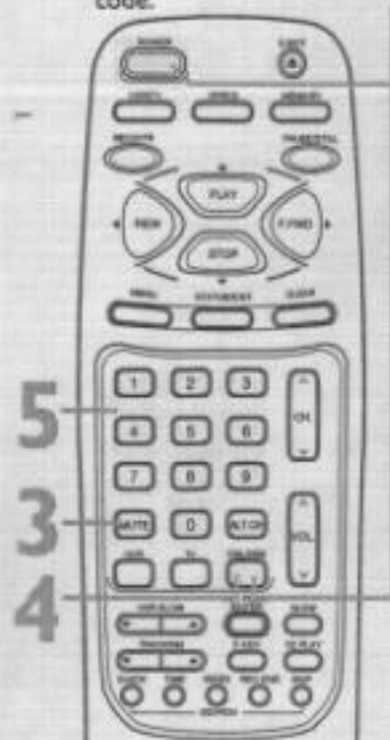

**There is no guarantee that the remote will work your Cable Box or DBS.**

### Helpful Hints

- The remote control may only operate some features of your Cable Box/DBS. For example, the remote control may turn off the Cable Box/DBS power, but it may not change channels at the Cable Box/DBS.
- If you can not change the channels at the Cable Box by using the Number buttons, press the VCR PLUS+/ENTER button after you press the Number buttons. It may change channels at the Cable Box.
- When you replace the batteries in the remote control, you will have to program the remote control again.
- Remember to point the remote control toward the Cable Box/DBS during steps 1-6.
- Some Cable Boxes can only be turned on at the Cable Box.

## Remote Locator 23

### Letting your VCR find your remote for you...

Press the **POWER** button on the **VCR** to turn on the VCR. Your remote control beeps and **LOCATING REMOTE** appears on-screen. The remote control will beep for about 30 seconds. (The exception is when you plug the VCR power cord into the wall outlet for the first time.) Or, press any button on the remote control to stop the beeping.

### If another remote control beeps...

The VCR may find other remote controls. If this occurs, follow the steps below to program the VCR to find only its remote control.

Press the **VCR** button, then press the **MENU** button.

Press the **PLAY/▲** button or the **STOP/▼** button to select **REMOTE LOCATOR**, then press the **F.FWD/▶** button.

PRESS MUTE THEN  
PAUSE KEY  
TO CHANGE CODE FROM 4

TO END PUSH EXIT

Press the **MUTE** button, then press the **PAUSE/STILL** button.

YOUR REMOTE LOCATOR  
CODE IS 4

PRESS ANY DIGIT  
TO CHANGE CODE

TO END PUSH EXIT

Press one **Number** button (**0 - 9**) to enter a new single-digit code for your remote control. Your remote control will beep briefly.


YOUR REMOTE LOCATOR  
CODE HAS BEEN CHANGED

NEW CODE IS 3

TO END PUSH EXIT

Press the **STATUS/EXIT** button.

If another remote control beeps...

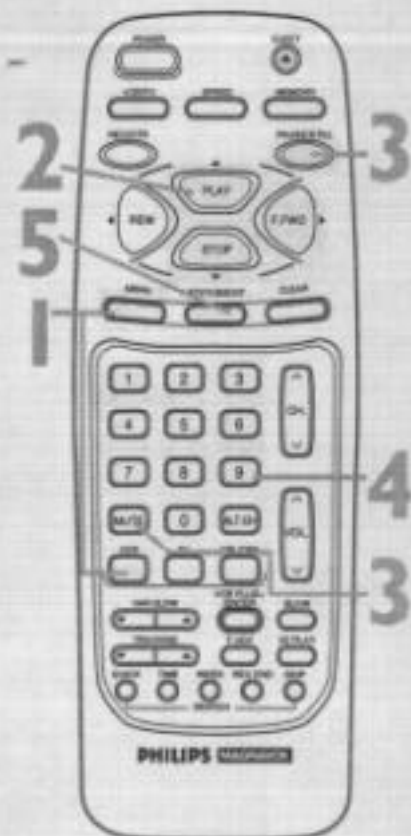


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Helpful Hint

- If there are no batteries in the remote control, the remote locator feature will not operate.

## 24 Remote Control Buttons

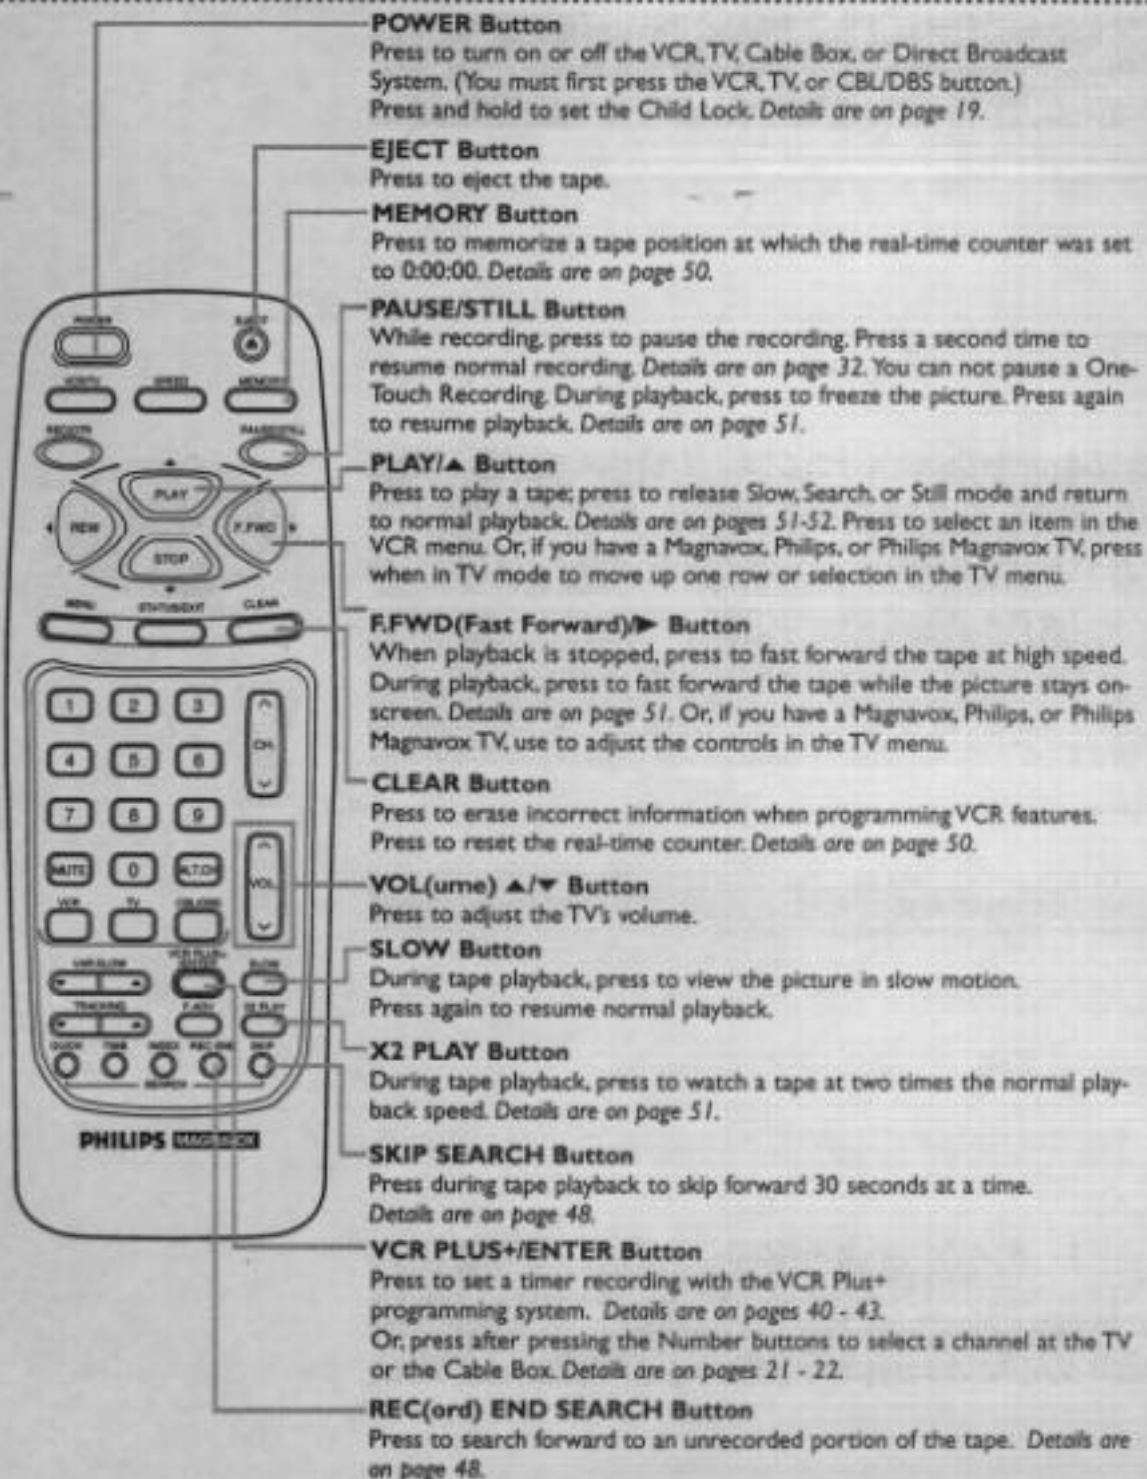

### Helpful Hints

- Press the VCR button before pressing other VCR buttons; press the TV button before pressing other TV buttons; press the CBL/DBS button before pressing other Cable Box/Direct Broadcast System buttons.
- The buttons with a shaded description may also operate features of your TV, Cable Box, or Direct Broadcast System.
- Buttons that are shaded in the illustration light up for five seconds when you press any button on the remote control.




## Remote Control Buttons (cont'd) 25



### Helpful Hints

- Press the VCR button before pressing other VCR buttons; press the TV button before pressing other TV buttons; press the CBL/DBS button before pressing other Cable Box/Direct Broadcast System buttons.
- The buttons with a shaded description may also operate features of your TV, Cable Box, or Direct Broadcast System.
- Buttons that are shaded in the illustration light up for five seconds when you press any button on the remote control.

## 26 Remote Control Buttons (cont'd)

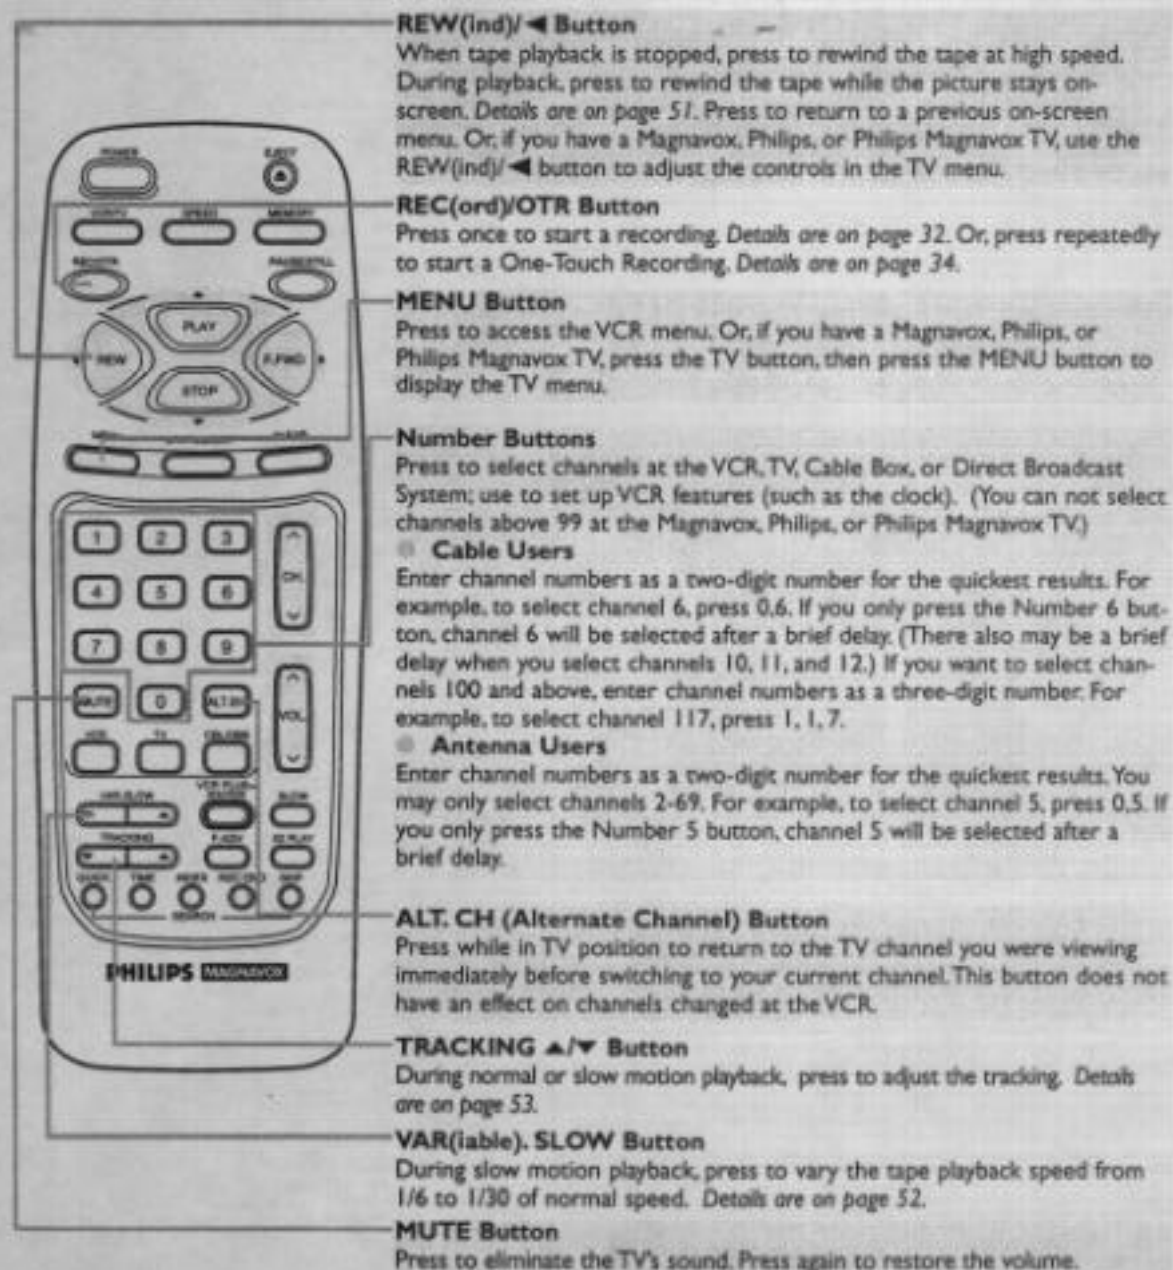

### Helpful Hints

- Press the VCR button before pressing other VCR buttons; press the TV button before pressing other TV buttons; press the CBL/DBS button before pressing other Cable Box/Direct Broadcast System buttons.
- The buttons with a shaded description may also operate features of your TV, Cable Box, or Direct Broadcast System.
- Buttons that are shaded in the illustration light up for five seconds when you press any button on the remote control.

## On-Screen Status Displays 27

A status display will appear when you press the STATUS/EXIT button or certain function buttons. The contents of the status display will vary. To choose the status display mode, follow the steps below.

**If you select STATUS ON, then select COUNTER ONLY ON:**

- Whenever you press the STOP/▼ button or the PLAY/▲ button, the status display will appear for five seconds. After five seconds, only the counter will remain on-screen. You must press the STATUS/EXIT button to remove it. Portions of the status display also may appear when you press other function buttons.

**If you select STATUS ON, then select COUNTER ONLY OFF:**

- Whenever you press the STOP/▼ button or the PLAY/▲ button, the status display will appear for five seconds. Portions of the status display also may appear when you press other function buttons.

**If you select STATUS OFF:**

- The status display will not appear when you press function buttons. You must press the STATUS/EXIT button to see the status display.

# 1

Press the VCR button, then press the MENU button.

# 2


Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/▶ button.

# 3

Press the PLAY/▲ button or the STOP/▼ button to select ON SCREEN MODE, then press the F.FWD/▶ button.

# 4

Press the PLAY/▲ button or the STOP/▼ button to select STATUS, then press the F.FWD/▶ button so that OFF (or ON) appears beside STATUS.

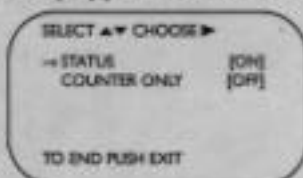


# 5

If you set STATUS to OFF, go to step 6. If you set STATUS to ON, press the PLAY/▲ button or the STOP/▼ button to select COUNTER ONLY, then press the F.FWD/▶ button so that OFF (or ON) appears beside it.

# 6

Press the STATUS/EXIT button.

### Status Display (example only)

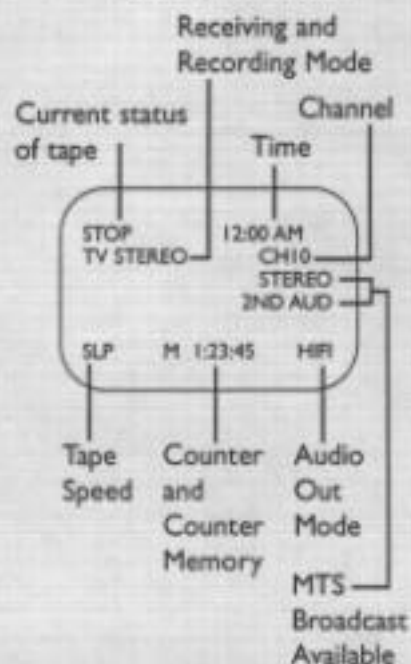

### Helpful Hints

- If the channel you select has no broadcast, the screen will become solid blue.
- You may not access a status display when viewing a still picture, during slow motion playback, or when the F.FWD/▶ or REW(ind)/◀ button is pressed during playback.

## On-Screen Status Displays 27

A status display will appear when you press the STATUS/EXIT button or certain function buttons. The contents of the status display will vary. To choose the status display mode, follow the steps below.

**If you select STATUS ON, then select COUNTER ONLY ON:**

- Whenever you press the STOP/▼ button or the PLAY/▲ button, the status display will appear for five seconds. After five seconds, only the counter will remain on-screen. You must press the STATUS/EXIT button to remove it. Portions of the status display also may appear when you press other function buttons.

**If you select STATUS ON, then select COUNTER ONLY OFF:**

- Whenever you press the STOP/▼ button or the PLAY/▲ button, the status display will appear for five seconds. Portions of the status display also may appear when you press other function buttons.

**If you select STATUS OFF:**

- The status display will not appear when you press function buttons. You must press the STATUS/EXIT button to see the status display.

# 1

Press the VCR button, then press the MENU button.

# 2


Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/▶ button.

# 3

Press the PLAY/▲ button or the STOP/▼ button to select ON SCREEN MODE, then press the F.FWD/▶ button.

# 4

Press the PLAY/▲ button or the STOP/▼ button to select STATUS, then press the F.FWD/▶ button so that OFF (or ON) appears beside STATUS.

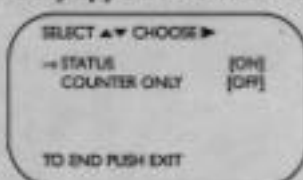


# 5

If you set STATUS to OFF, go to step 6. If you set STATUS to ON, press the PLAY/▲ button or the STOP/▼ button to select COUNTER ONLY, then press the F.FWD/▶ button so that OFF (or ON) appears beside it.

# 6

Press the STATUS/EXIT button.


### Status Display (example only)

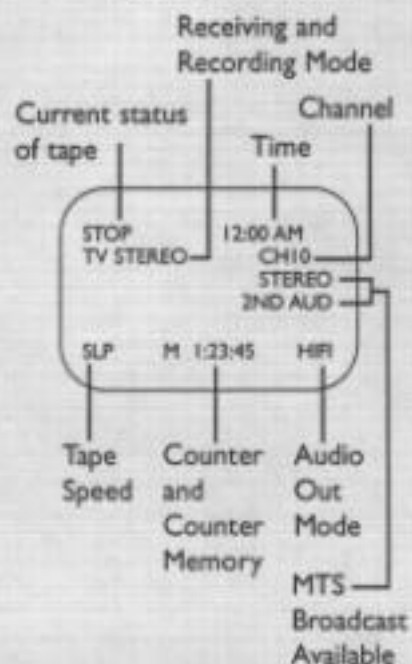

### Helpful Hints

- If the channel you select has no broadcast, the screen will become solid blue.
- You may not access a status display when viewing a still picture, during slow motion playback, or when the F.FWD/▶ or REW(ind)/◀ button is pressed during playback.

## 28 VCR Display Panel

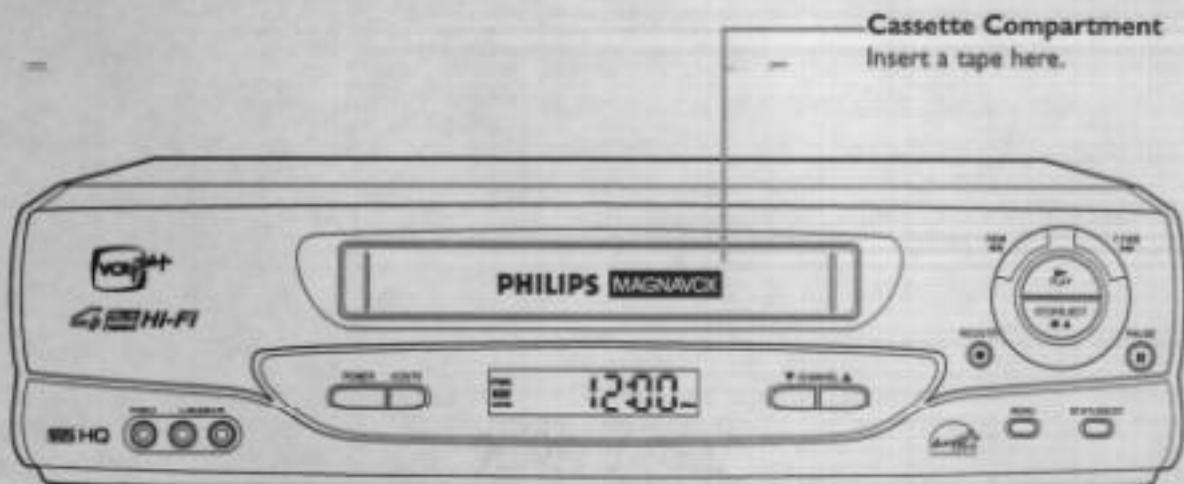

### REC(ord) Light

This light appears during a recording. It flashes when a recording is paused.

### Timer Light

This light glows when the VCR is turned off to set a timer recording or during a One-Touch Recording. It flashes if the power is off for a timer recording, but there is no tape in the VCR. It flashes when all timer recordings are finished.

### PWR.(power) Light


This light appears when the power is on.

### Cassette-Inside Light

This light appears when there is a tape in the VCR.

### VCR Light

This light appears when the VCR is in VCR position. This light does not appear when the VCR is in TV position.

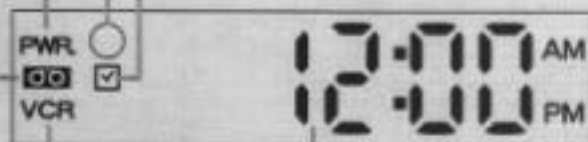

### Clock/Feature Display

This display tells you the current time (when the clock is set) and briefly displays which feature the VCR is currently performing.

PLAY	: Playback
FF	: Fast forward
REW	: Rewind
STOP	: Stop
REC	: Recording

## Front Panel 29

### F.FWD (Fast Forward) Button

When playback is stopped, press to fast forward the tape at high speed. During tape playback, press to fast forward the tape while the picture stays on-screen. Details are on page 51. Press to select an item in the VCR menu.

### Remote Sensor

Receives a signal from your remote control so you can operate your VCR from a distance.

### POWER Button

Press to turn the VCR power on and off. Press to activate the remote locator. Details are on page 23.

### AUDIO In Jacks

Connect cables coming from the audio out jacks of a camcorder, another VCR, or an audio source here. Details are on page 44.

### STOP/EJECT Button


Press once to stop the tape. When playback is stopped, press to eject the tape. Press to select an item in the VCR menu.

### PLAY Button

Press to play a tape. Press to release Slow, Search, or Still mode and return to playback. Details are on pages 51-52. Press to select an item in the VCR menu.

### REW(ind) Button

When playback is stopped, press to rewind the tape at high speed. During playback, press to rewind the tape while the picture stays on-screen. Details are on page 51. Press to return to a previous on-screen menu.

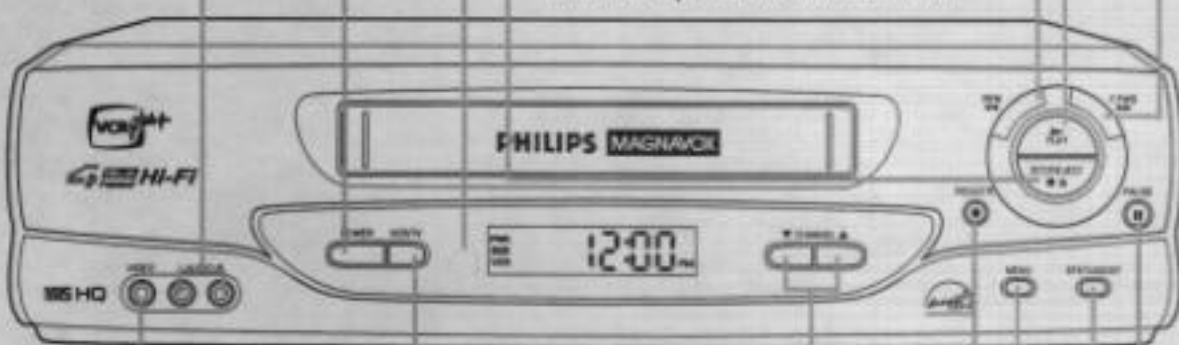

### VIDEO In Jack

Connect a cable coming from the video out jack of a camcorder, another VCR, or an audio-visual source (laser disc player, video disc player, etc.) here. Details are on page 44.

### VCR/TV Button

Press to select VCR or TV position.

#### ● VCR Position

Use to watch a tape, to watch a program while recording it, or to watch a TV program (changing channels at the VCR). When the VCR light appears on the display panel, the VCR is in VCR position.

#### ● TV Position

Use to watch TV (changing channels at the TV) or to watch one program while recording another. When the VCR light does not appear on the display panel, the VCR is in TV position.

### CHANNEL (v/a) Buttons

Press to change channels at the VCR. Or, press to adjust the tracking of a tape during normal playback or slow motion playback. Also, press to remove vertical jitter in a Still picture.

### REC(ord)/OTR Button

Press once to start a recording. Press repeatedly to start a One-Touch Recording. Details are on page 34.

### MENU Button

Press to access the VCR menu.


### STATUS/EXIT Button

Press to access or remove the on-screen status display. Details are on page 27. Press to exit on-screen menus.

### PAUSE Button

While recording, press to pause the recording. Press again to resume recording. Details are on page 32. You can not pause a One-Touch Recording. During tape playback, press to freeze the picture. Press again to resume playback. Details are on page 51.

## 30 Rear Panel

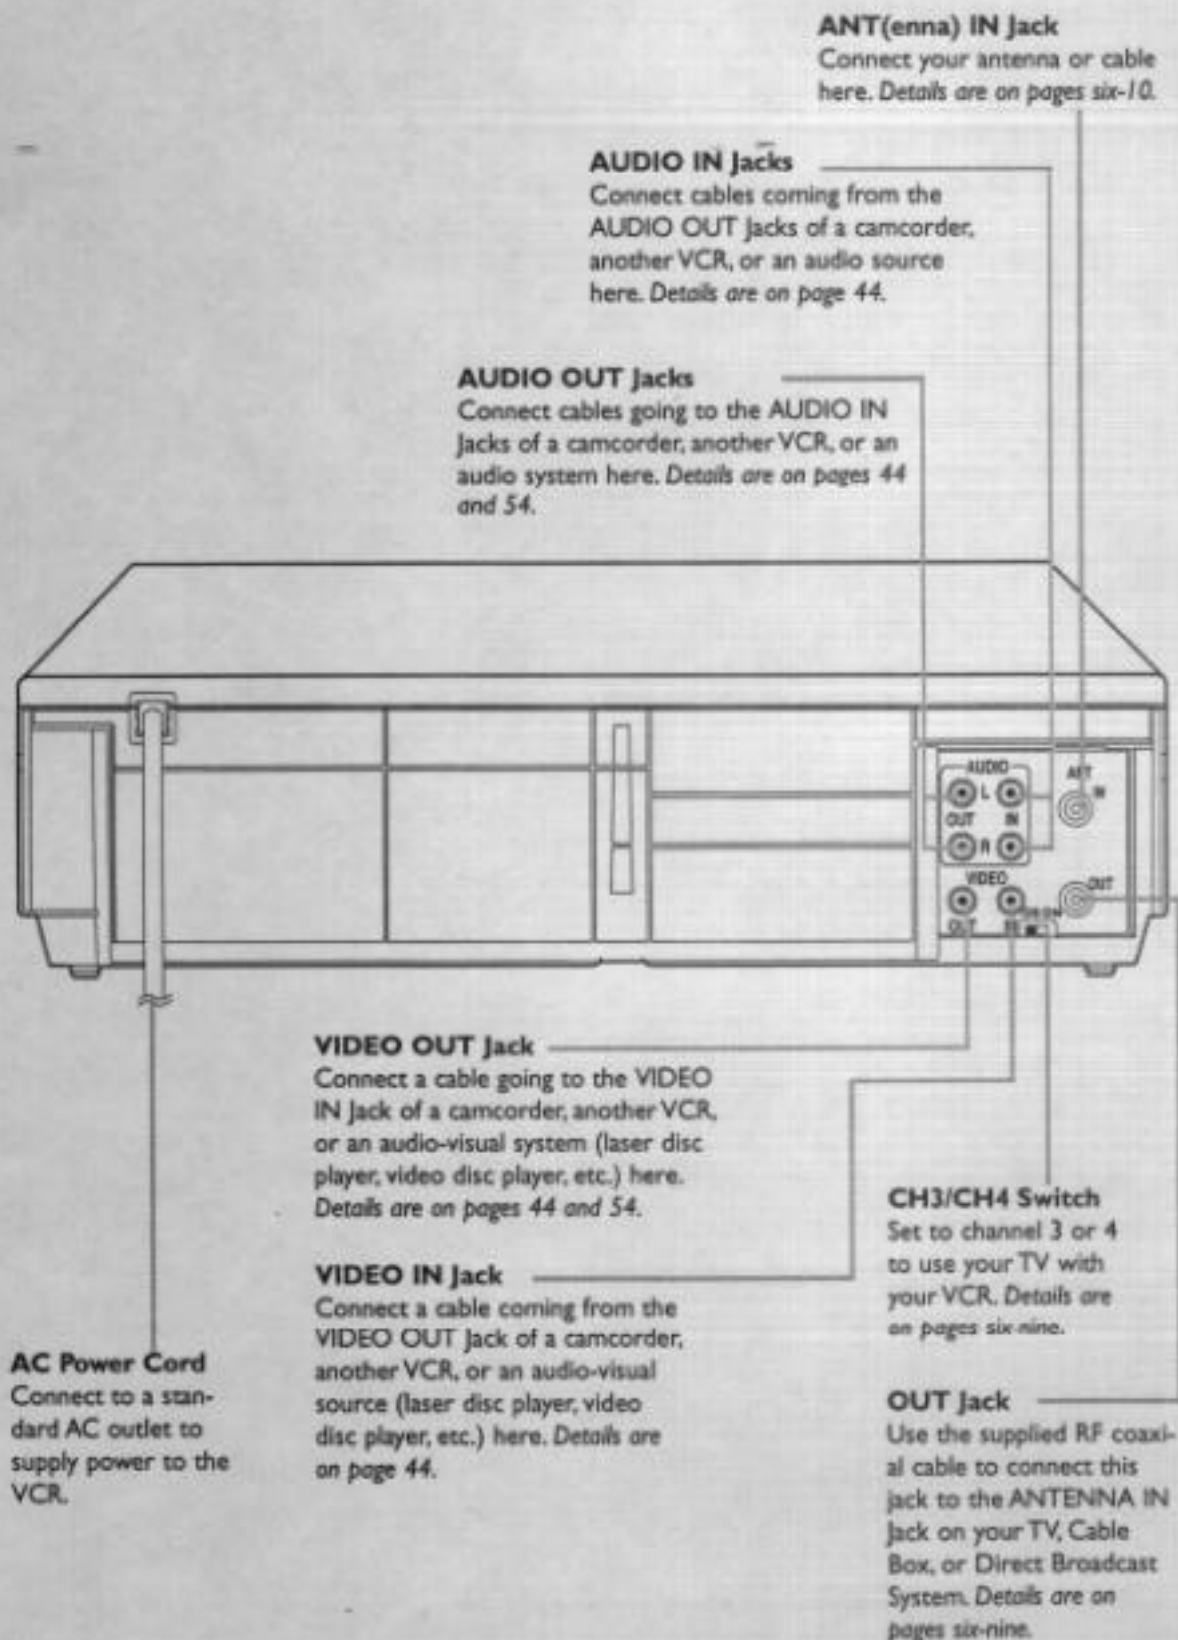

## Playing 31

Read and follow the steps below to play a tape.

# 1

Turn on the TV and set it to channel 3 or 4, whichever channel the CH3/CH4 switch on the back of the VCR is set to.

# 2

Insert a tape in the VCR. The PWR., VCR, and Cassette-Inside lights will appear on the display panel. If the tape's record tab has been removed, playback will start automatically.

# 3

If playback does not start automatically, press the **PLAY/▲** button.

# 4

Press the **STOP/▼** button to stop playback.

# 5

Press the **REW(ind)/◀** button to rewind the tape.

# 6

Press the **EJECT** button to remove the tape.

# 1

 Turn on the TV.

# 2

 Insert a tape in the VCR.


### Helpful Hints

- If the tape you want to play is already in the VCR, make sure the VCR power is on and the VCR is in VCR position. (The VCR light will appear on the display panel. If it does not, press the VCR/TV button.) Press the VCR button, then press the **PLAY/▲** button.
- Other playback options and features are on pages 45 - 57.



## 32 Recording

Read and follow the steps below to record a television program.

**1**  
Turn on the TV and set it to channel 3 or 4, whichever channel the CH3/CH4 switch on the back of the VCR is set to.

**2**  
Insert a tape with its record tab intact in the VCR.

**3**  
Press the VCR button.

**4**  
If the VCR light appears on the display panel, go to step 5. If the VCR light does not appear, press the VCR/TV button once.

**5**  
Press the SPEED button until the desired tape speed appears briefly on-screen. (Details about tape speed are on page 37.)

**6**  
Use the CH(annel)  $\Delta/\nabla$  button or the Number buttons to select the channel to be recorded.


**7**  
Press the REC(ord)/OTR button once to start recording. The REC(ord) light will appear.

**8**  
To pause the recording, press the PAUSE/STILL button once. The REC(ord) light will flash. To resume recording, press the REC(ord)/OTR button or press the PAUSE/STILL button again. The REC(ord) light will come on again.

**9**  
To stop recording, press the STOP/ $\nabla$  button.

**1** Turn on the TV.

**2** Insert a tape in the VCR.

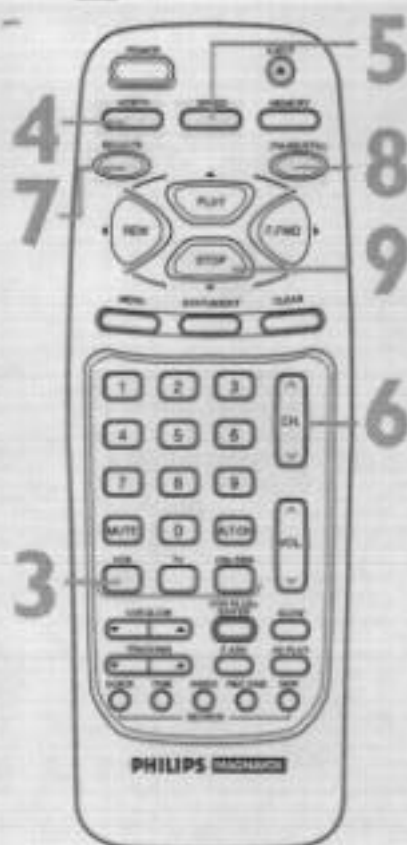

### Helpful Hints

- If you press the REC(ord)/OTR button when there is not a tape in the VCR, NO CASSETTE will flash on-screen.
- If you press the REC(ord)/OTR button while a tape without a record tab is in the VCR, the VCR will eject the tape and PROTECTED CASSETTE CANNOT RECORD will flash on-screen.
- Other recording options are on pages 33 - 44.
- You can change the tape speed during a recording, but some distortion will appear on the tape.
- The VCR will record in a preset volume.

## Recording One Channel/Watching Another 33

**1**

Press the **VCR** button.

**2**

Press the **REC(ord)/OTR** button to start a recording of the current channel. (See page 32.)

**3**

Press the **VCR/TV** button to put the VCR in TV position. The VCR light will disappear from the VCR's display panel.

**4**

Press the **TV** button, then press the **CH(annel) ▲/▼** or **Number** buttons to choose the channel you want to watch at the TV. (If the VCR remote control doesn't operate your TV, use the TV remote control to select the channel.)

**5**

To return to the channel being recorded, press the **TV** button, then use the **Number** buttons to select channel **03** or **04** at the TV (whichever channel the **CH3/CH4** switch on the back of the VCR is set to). (If the VCR remote control doesn't operate your TV, use the TV remote control to select channel 03 or 04.)

**6**

Press the **VCR** button.


**7**

Press the **VCR/TV** button to put the VCR in VCR position. The VCR light will appear on the display panel. The channel being recorded will appear on-screen.

**8**

Press the **STOP/▼** button to stop the recording.

**3 & 7**

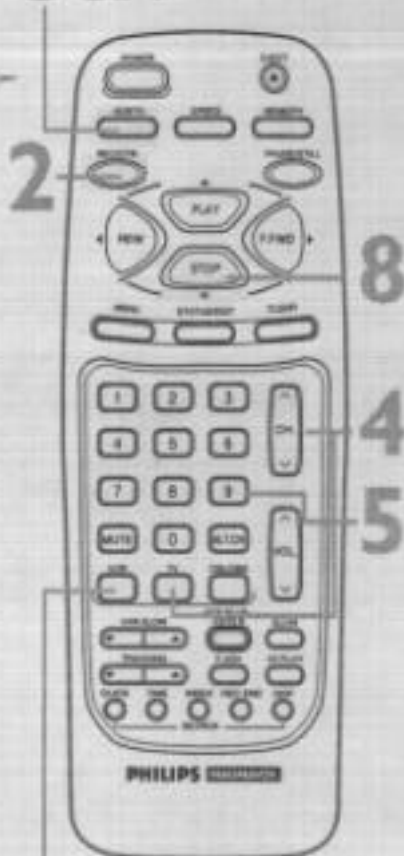

**1 & 6**

### Helpful Hints

- If your VCR remote control does not operate your TV, see page 21 for details.
- If you use a Cable Box or Direct Broadcast System hookup, you may not be able to watch one channel while recording another. See pages eight-nine for details.

## 34 One-Touch Recording


The One-Touch Recording feature allows you to set an immediate timed recording 30 minutes to eight hours long. Before you begin:

- Set up the channels at the VCR.
- Select a recording speed (SP, SLP) with the SPEED button.
- Put a tape in the VCR. Make sure the tape's record tab is intact and the tape is long enough to record the program(s).
- Place the VCR in VCR position. (The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.)


**1**  
Press the **VCR** button.

**2**  
Press the **CH(annel) ▲/▼** button or the **Number** buttons to select the channel you want to record.

**3**  
Press the **REC(ord)/OTR** button repeatedly until the desired recording length (30 minutes to eight hours) appears on-screen. Recording will begin immediately. The REC(ord) light and the Timer light will appear on the display panel.

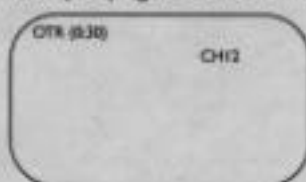

**4**  
To stop an OTR before recording is finished, press the **STOP/▼** button or the **POWER** button.  
To cancel the OTR but continue recording, press the **REC(ord)/OTR** button repeatedly until REC appears in the upper left corner of the TV screen. (STATUS must be set to ON. See page 27 for details.) The REC(ord) light will remain on the display panel of the VCR, but the Timer light will disappear.

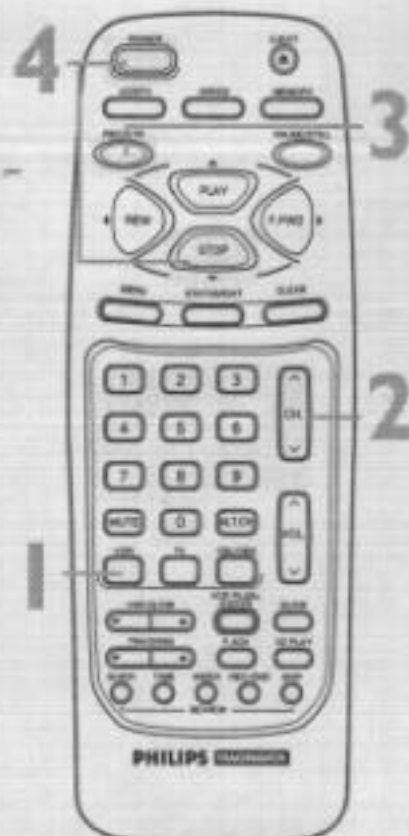

### Helpful Hints

- To check the time remaining for an OTR after the OTR has been set, press the **STATUS/EXIT** button.
- To change the recording length while an OTR is in progress, press the **REC(ord)/OTR** button until the desired length appears on-screen.
- If you begin an OTR when another recording is paused, the OTR will begin.
- You can not pause an OTR.
- If the preset time for a timer recording comes up during an OTR, the OTR has priority. A message will remind you when the timer recording was scheduled to begin. You may let the OTR continue; the timer recording will not take place. Or, stop the OTR and turn off the VCR immediately. The timer recording will take place if you turn off the VCR before the timer recording's scheduled start time.
- If the end of the tape is reached during a One-Touch Recording, the VCR will eject the tape and turn itself off.


## Timer Recording 35

Follow the steps below to program your VCR to record TV programs while you're away from home. The VCR will turn itself on, record, and turn itself off automatically. Before you begin:

- Set up the channels at the VCR.
- Set the clock.
- Put a tape in the VCR. Make sure the tape's record tab is intact and the tape is long enough to record the program(s).
- Put the VCR in VCR position. The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.


Do each step within 60 seconds of the previous step.

**1** Press the **VCR** button, then press the **MENU** button.

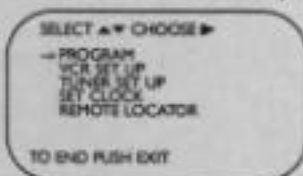

**2**

Press the **PLAY/▲** button or the **STOP/▼** button to select a **PROGRAM**, then press the **F.FWD/▶** button.

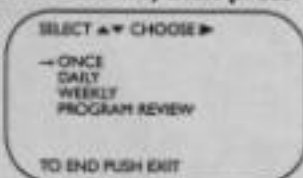


**3**

Press the **PLAY/▲** button or the **STOP/▼** button to select a **ONCE**, **DAILY**, or **WEEKLY** recording. Then, press the **F.FWD/▶** button.

- **ONCE:** The VCR will record a TV program on any day you choose, up to 12 months away.
- **DAILY:** The VCR will record the same channel every day from Monday to Friday – starting at the same time and recording for the same length of time.
- **WEEKLY:** The VCR will record the same channel on the same day, at the same time, and for the same length of time every week.

**Daily  
Recording  
(example)**

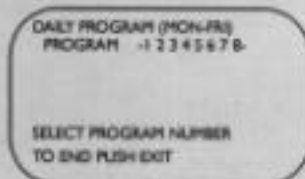

### Helpful Hint

- If you need to make a correction while programming a timer recording, press the **CLEAR** button until the cursor is flashing on the item you want to change. Then enter the correct information.

## 36 Timer Recording (cont'd)

### 4

Use the **Number buttons (1 - 8)** to select a slot in which to store the timer recording. There are eight slots. Numbers for open slots will flash on-screen.

**NOTE:** If you enter a number for a slot that has already been used to store a timer recording, **PREVIOUSLY SET PROGRAM** will appear on-screen briefly. Information about the program in that slot will appear on-screen. If this happens, press the **STATUS/EXIT** button, then select another number.

### 5

Use the **Number buttons** to enter the channel you want to record.

- **Cable Users**, enter channel numbers as a two-digit number for the quickest results. For example, to select channel 6, press 0,6. If you only press the Number 6 button, channel 6 will be selected after a brief delay. There also may be a brief delay when you select channels 10, 11, and 12. If you want to select channels 100 and above, enter channel numbers as a three-digit number. For example, to select channel 117, press 1, 1, 7.
- **Antenna Users**, enter channel numbers as a two-digit number for the quickest results. For example, to select channel 5, press 0,5. If you only press the Number 5 button, channel 5 will be selected after a brief delay.
- If you are recording from line input, press 0,0 to select AV REAR.
- If you are using a Cable Box/DBS, select the Cable Box/DBS output channel (03 or 04). Set the Cable Box/DBS to the channel you want to record. Leave the Cable Box/DBS on for the timer recording. See page eight for details.

### 6

Press two **Number buttons** for the hour you want the recording to begin. Press two **Number buttons** for the minute you want the recording to begin. Press **1** for **AM** or **2** for **PM**. For example, for 9:30 PM, press 09, 30, 2.

ONE TIME PROGRAM  
PROGRAM 1  
CHANNEL 10  
TIME ON ----

TO CORRECT PUSH CLEAR  
TO END PUSH EXIT

### 7

Follow the instructions in step 6 to enter the recording's stop time. (AM or PM will be set automatically.)

ONE TIME PROGRAM  
PROGRAM 1  
CHANNEL 10  
TIME ON 09:30 PM  
TIME OFF ----

TO CORRECT PUSH CLEAR  
TO END PUSH EXIT

Instructions continue on page 37.

### 4-7



### Helpful Hints

- Entries that do not match the VCR's clock or calendar will cause a question mark to appear on-screen.
- If you are recording from line input, connect the audio and video cables to the **AUDIO IN** and **VIDEO IN** jacks on the back of the VCR. (Please see illustration on page 44.)

## Timer Recording (cont'd) 37

8

Press the **Number 1** button to record in **SP** speed or the **Number 2** button to record in **SLP** speed. (See the chart below.) You cannot use the **SPEED** button at this time.

ONE TIME PROGRAM
PROGRAM 1
CHANNEL 10
TIME ON 09:30 PM
TIME OFF 11:00 PM
REC SPEED SLP
SP-1 SLP-2
TO CORRECT PUSH CLEAR
TO END PUSH EXIT

9

Press two **Number** buttons for the month and two **Number** buttons for the day you want to record the program. For example, for July 10, 1999, press 07, 10. The day of the week and the year will appear automatically (you cannot program the VCR to record more than one year in advance).

ONE TIME PROGRAM
PROGRAM 1
CHANNEL 10
TIME ON 09:30 PM
TIME OFF 11:00 PM
REC SPEED SLP
START DATE 07/10/99
SAT
TO CORRECT PUSH CLEAR
TO END PUSH EXIT

10

Press the **STATUS/EXIT** button. **PROGRAM WAS COMPLETED / PLEASE TURN OFF VCR FOR TIMER RECORDING** will appear on-screen briefly. (If **PROGRAM NOT COMPLETED** appears, try again from step 1.)

11

Press the **POWER** button to turn off the VCR power. The Timer light will appear on the display panel. If the timer recording will take place several hours or days from now, you may use the VCR until time for the recording. Turn off the VCR a few minutes before the recording starts. If you forget to turn off the VCR, **PLEASE TURN OFF VCR FOR TIMER RECORDING** flashes on your TV screen two minutes before a timer recording starts. Press the **CLEAR** button to remove the message.



**Turn off the VCR for the recording. Insert a tape in the VCR. Leave the Cable Box/DBS on (if applicable).**

**Tape Speeds**

This chart shows the recording/playback time for three types of video cassettes (T160, T120, and T60). There are three playback speeds: SP, LP, and SLP. When recording, you can change the tape speed (SP or SLP) using the **SPEED** button. You cannot record in LP speed.

Tape Speed	Cassette type / Playback Time		
	T160	T120	T60
SP (standard play)	2 hrs. 40 mins.	2 hrs.	1 hr.
LP (long play) (playback only)	5 hrs. 20 mins.	4 hrs.	2 hrs.
SLP (super long play)	8 hrs.	6 hrs.	3 hrs.

## 38 Timer Recording (cont'd)

### Checking or Cancelling Timer Recordings

**1** With the VCR on and in VCR position (the VCR light will appear on the display panel), press the **VCR** button, then press the **MENU** button.

**2** Press the **PLAY/▲** button or the **STOP/▼** button to select **PROGRAM**, then press the **F.FWD/▶** button.

**3** Press the **PLAY/▲** button or the **STOP/▼** button to select **PROGRAM REVIEW**, then press the **F.FWD/▶** button. The timer recording information for the program in the lowest numbered slot will appear on-screen. If no timer recordings are set, nothing will happen when you press the **F.FWD/▶** button.

**4** Press the **F.FWD/▶** button repeatedly to review all programmed timer recordings. If you don't press the **F.FWD/▶** button within 10 seconds, the VCR will automatically display information about the next programmed timer recording. This will continue until all timer recordings have been displayed. Then the menu will disappear.

**5** To cancel the timer recording displayed, press the **CLEAR** button. Either the display will disappear or information about other timer recordings will appear. If you do not press any other buttons, the display will disappear after all timer recordings have been displayed.

**6** Repeat steps 1 - 4 to make sure you have cleared the correct timer recording.



#### Helpful Hints

- CLASH may flash on-screen when you finish setting a timer recording. This means that the timer recording you just programmed and another timer recording overlap. The current timer recording will not take place. You may choose to cancel the overlapping timer recording.
- To stop a started timer recording, press the **STOP/EJECT** button on the VCR.
- If the power fails for more than one minute, programmed timer recordings will be restored when the clock is reset. (The clock will reset itself automatically if you are using the **AUTO CLOCK** feature. Details are on pages 17 - 18. If you are not using the **AUTO CLOCK** feature, reset the clock manually. Details are on pages 15 - 16.) The timer recording will not occur only if the timer recording was scheduled to take place during the power failure.
- If the preset time for a timer recording comes up during an OTR, the OTR has priority. A message will remind you when the timer recording was scheduled to begin. You may let the OTR continue; the timer recording will not take place. Or, stop the OTR and turn off the VCR immediately. The timer recording will take place if you turn off the VCR before the timer recording's scheduled start time.

See page 58 for more hints.

## Auto DBS RecordLink 39

If you connect your VCR to a satellite tuner that has the Electronic Program Guide, the VCR will turn itself on, record, then turn itself off. First, read the owner's manual of your satellite tuner; then, follow the steps below. Before you begin:

- Use audio and video cables to connect the VCR's AUDIO/VIDEO IN jacks to the satellite tuner's AUDIO/VIDEO OUT jacks.
- Press the SPEED button to select the desired recording tape speed (SP or SLP).
- Set the clock. Details are on pages 15-18.
- Put a tape in the VCR. Make sure the tape's record tab is intact and the tape is long enough to record the program(s).


**1** Set the program to be recorded on the satellite tuner. See your satellite tuner owner's manual for details.

**2** Press the VCR button, then press the MENU button.

**3** Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/▶ button.

**4** Press the PLAY/▲ button or the STOP/▼ button to select AUTO DBS RECORD LINK. Then, press the F.FWD/▶ button. The current time appears next to "AUTO DBS."

- If you want the VCR to begin recording immediately, press the F.FWD/▶ button again, then go to step 6.
- If you want to tell the VCR the time to start recording, go to step 5.

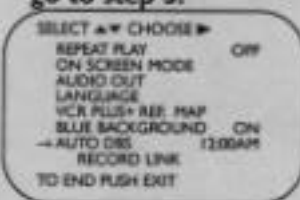

**5** First, press the PLAY/▲ button or the STOP/▼ button until the desired hour (AM or PM) appears. Then, press the F.FWD/▶ button. Next, press the PLAY/▲ button or the STOP/▼ button until the desired minute appears.

**6** Press the F.FWD/▶ button. [ON] will appear briefly beside AUTO DBS RECORD LINK, then "FOLLOW THE STEPS..." message will appear. After 30 seconds, the VCR will turn itself off and the Timer light will appear on the VCR display panel.

Set the program to be recorded on the satellite tuner.



### Helpful Hints

- To stop an Auto DBS RecordLink recording that is in progress, press the STOP/EJECT button on the VCR.
- If a program has copy guard protection, it may not record clearly.
- When you use this feature, the first few seconds of a program may not be recorded.
- If your satellite tuner synchronizes the recording start time with the broadcasting start time, refer to the tuner's owner's manual.
- When you turn on the VCR power, the Auto DBS RecordLink will be cancelled.





## Setting Up the VCR Plus+ Programming System (cont'd) 41

# 2


Now, compare the channel numbers you have written in the VCR PLUS+ CH. and CABLE/TV CH. columns. For stations whose VCR Plus+ and Cable/TV channels do not match, you must tell the VCR the VCR Plus+ and Cable/TV channel numbers by following steps 3 - 7. Make each entry within 60 seconds of the previous entry.

# 3

Press the VCR button, then press the MENU button.


# 4

Press the PLAY/▲ button or the STOP/▼ button to select VCR SET UP, then press the F.FWD/▶ button.

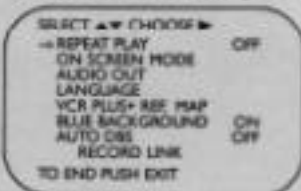

# 5


Press the PLAY/▲ button or the STOP/▼ button to select VCR PLUS+ REF. MAP, then press the F.FWD/▶ button.

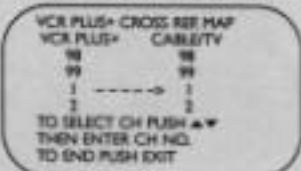

# 6

Look at the lists you filled in on page 40. For stations whose VCR Plus+ and Cable/TV channels do not match, press the PLAY/▲ button or the STOP/▼ button until the arrow is beside the VCR Plus+ channel you need. Then, press the Number buttons to enter the corresponding Cable/TV channel from your list. Enter all the stations on your list.

- If you are recording from line input, press 0,0 to select AUX.
- If you are using a Cable Box/DBS, the Cable/TV channel will be 3 or 4 (the Cable Box/DBS output channel) for every VCR Plus+ channel. You must set the Cable Box/DBS to the channel you want to record; leave the Cable Box/DBS on for the timer recording.

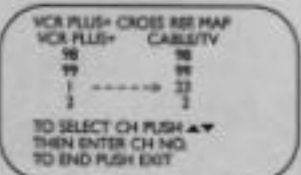


# 7

Press the STATUS/EXIT button.

# 2

Examine the lists on page 40.

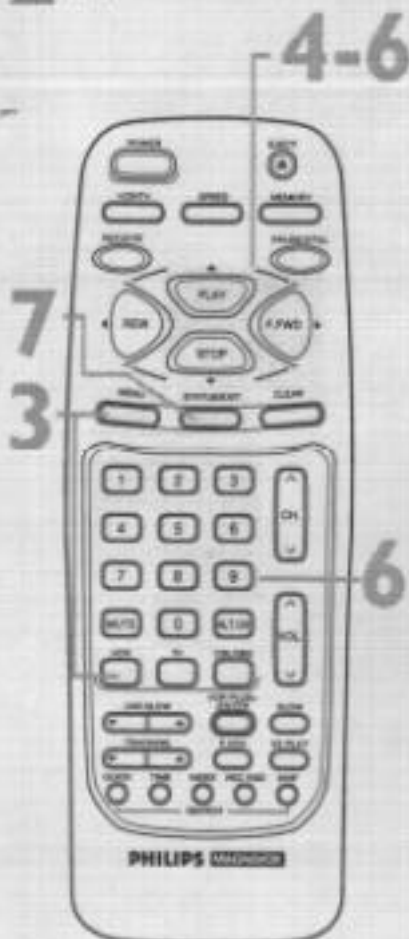

### Helpful Hints

- To erase a Cable/TV channel number, repeat steps 3-5 on this page. Then, press the PLAY/▲ button or the STOP/▼ button until the arrow appears beside the Cable/TV channel you need to erase. Press the CLEAR button, then press the STATUS/EXIT button.
- When you receive the VCR, all the VCR Plus+ channel numbers and Cable/TV channel numbers are the same.
- If you are recording from line input, connect the audio and video cables to the AUDIO IN and VIDEO IN jacks on the back of the VCR. (Please see illustration on page 44.)

## 42 Timer Recording with the VCR Plus+ Programming System

Follow these steps to set a timer recording with the PlusCode programming numbers in your TV guide. Before you begin:

- Set up the channels at the VCR (page 12).
- Set up the VCR Plus+ and Cable/TV channel numbers (pages 40 - 41).
- Set the clock (pages 15 - 18).
- Put a tape in the VCR.
- Make sure the VCR light appears on the display panel. If it does not, press the VCR/TV button once.


Do each step within 60 seconds of the previous step.

# 1

Press the VCR button.


# 2

Press the VCR PLUS+/ENTER button.

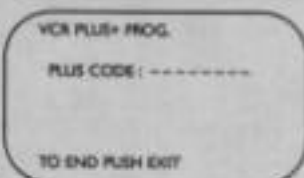

# 3



Press the Number buttons to enter the PlusCode programming number of the program you wish to record. Then, press the VCR PLUS+/ENTER button.

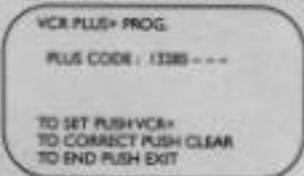

# 4

Press the PLAY/▲ button or the STOP/▼ button to select a ONCE, DAILY, or WEEKLY recording. Then, press the F.FWD/▶ button.

- **ONCE:** The VCR will record a TV program on any day you choose, up to 12 months away.
- **DAILY:** The VCR will record the same channel every day from Monday to Friday – starting at the same time and recording for the same length of time.
- **WEEKLY:** The VCR will record the same channel on the same day, at the same time, and for the same length of time every week.

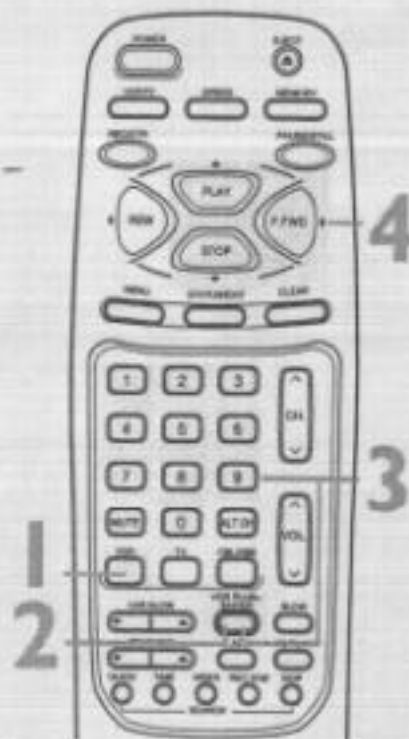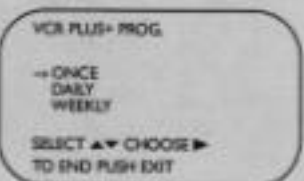


### Helpful Hints

- **CODE ERROR** may flash on-screen after step 3 if you enter an incorrect PlusCode programming number (for example, one that is too short). The previous screen will appear. Enter the correct PlusCode programming number.
- If **CLASH** flashes on-screen after step 3, the timer recording you just programmed and another timer recording overlap. The current timer recording will not occur.
- If you select **DAILY** at step 4, **ERROR** may flash on-screen if the program you want to record is broadcast on a Saturday or Sunday.
- You may use the VCR Plus+ Programming System to record programs on Cable TV channels up to channel 99.
- If the **VCR PLUS+ CROSS REF. MAP** reappears after step 3, the VCR PLUS+ channel number for the recording you entered was higher than 99. In this case, enter the correct CABLE/TV channel in the map. Then, press the **MENU** button and continue from step 4.

## Timer Recording with the VCR Plus+ Programming System (cont'd) 43

### 5

Press the **Number 1** button to record in **SP** speed or the **Number 2** button to record in **SLP** speed. Your selection will appear beside **REC SPEED** on-screen; **SP=1** **SLP=2** will continue to flash. For details about tape speed, see pages 37 and 60. You cannot use the **SPEED** button at this time.

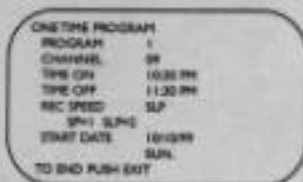


### 6

Press the **STATUS/EXIT** button. **PROGRAM WAS COMPLETED / PLEASE TURN OFF VCR FOR TIMER RECORDING** should appear on-screen briefly.

### 7

Press the **POWER** button to turn off the **VCR** power. The **Timer** light will appear. The **Timer** light will flash if there is not a tape in the **VCR**.

If the timer recording will take place several hours or days from now, you may use the **VCR** until time for the recording. Just turn off the **VCR** a few minutes before the recording starts. If you forget to turn off the **VCR**, **PLEASE TURN OFF VCR FOR TIMER RECORDING** flashes on your **TV** screen two minutes before a timer recording starts. Remove the message by pressing the **CLEAR** button.

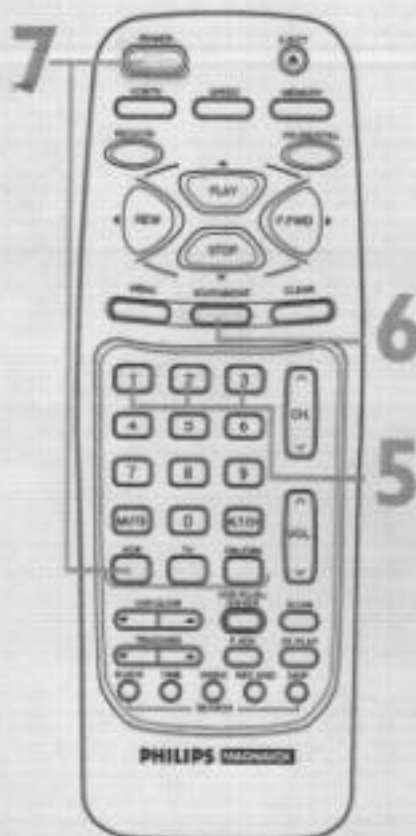


### Helpful Hints

- If the preset time for a timer recording comes up during an **OTR**, the **OTR** has priority. A message will remind you when the timer recording was scheduled to begin. You may let the **OTR** continue; the timer recording will not take place. Or, stop the **OTR** and turn off the **VCR** immediately. The timer recording will take place if you turn off the **VCR** before the timer recording's scheduled start time.
- To stop a started timer recording, press the **STOP/EJECT** button on the **VCR**.
- If the power fails for more than one minute, programmed timer recordings will be restored when the clock is reset. (The clock will reset itself automatically if you are using the **AUTO CLOCK** feature. Details are on pages 17 - 18. If you are not using the **AUTO CLOCK** feature, reset the clock manually. Details are on pages 15 - 16.) The timer recording will not occur only if the timer recording was scheduled to take place during the power failure.
- If you are using a **Cable Box/DBS**, timer recordings are programmed differently. See pages eight and 40 - 41 for details. See page 58 for more hints.

**Turn off the VCR  
for the recording.  
Insert a tape in the VCR.  
Leave the Cable Box/DBS on  
(if applicable).**

## 44 Rerecording (Tape Duplication)

1. Audio cables from AUDIO OUT Jacks of VCR 1 to AUDIO IN Jacks of VCR 2

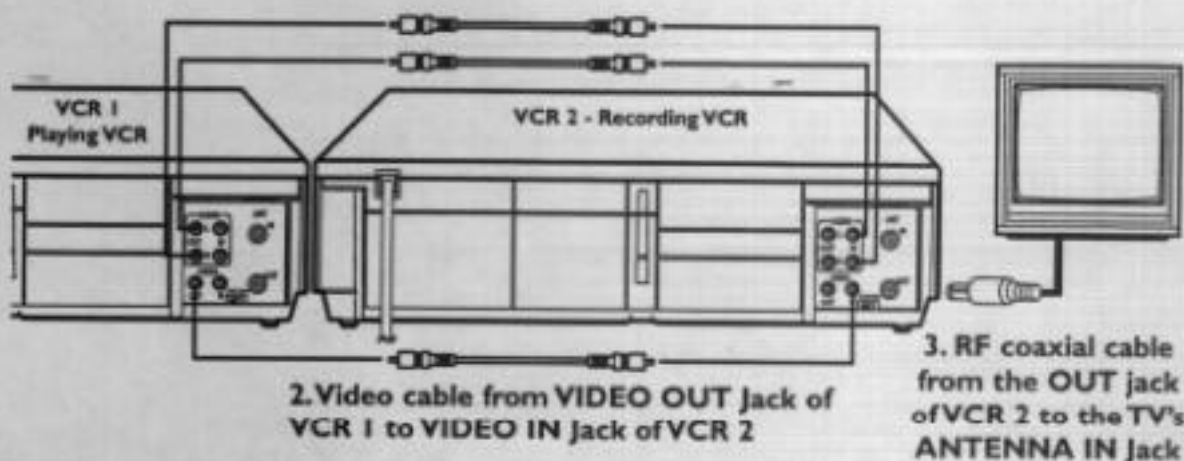

• Audio and Video cables are not supplied.

1

Make the connections shown above.

2

VCR 1 will play your tape. Put a prerecorded tape in VCR 1.

3

VCR 2 will record your tape. Insert a blank tape in VCR 2. The VCR must be in VCR position. (The VCR light will appear on the display panel. If it does not, press the VCR/TV button once.)

4

Turn on the TV and set it to channel 03 or 04, whichever channel the CH3/CH4 switch on VCR 2 is set to.

5

Point the remote control at VCR 2. Press Number buttons 0, 0, 1 or 0, 0, 2. (See Helpful Hints at right.)

6

Use the SPEED button to select SP or SLP at VCR 2.

7

Press the PLAY button on VCR 1 and the REC(ord)/OTR button on VCR 2 at the same time.

To stop recording, press the STOP/EJECT button on VCR 1, then press the STOP/EJECT button on VCR 2.

### Helpful Hints

- If you use the AUDIO and VIDEO IN Jacks on the back of VCR 2, press Number buttons 0, 0, 1. AV REAR will appear on-screen.
- If you use the AUDIO and VIDEO In Jacks on the front of VCR 2, press Number buttons 0, 0, 2. AV FRONT will appear on-screen.
- Unauthorized recording of copyrighted television programs, video tapes, or other materials may infringe on the rights of copyright owners and violate copyright laws.
- If a program has copy guard protection, it may not record clearly.
- These instructions show you how to copy tapes using two VCRs like yours. Different VCRs may operate differently.

## Repeat Play 45


Follow the steps below to make the VCR play a tape over and over.

# 1

Press the **VCR** button.


# 2

Press the **MENU** button.

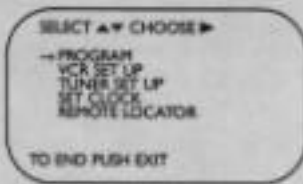

# 3

Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SET UP**, then press the **F.FWD/▶** button.

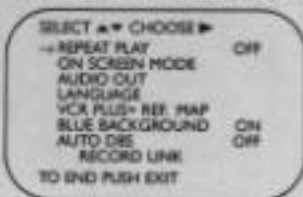

# 4


Press the **PLAY/▲** button or the **STOP/▼** button to select **REPEAT PLAY**.

# 5

Press the **F.FWD/▶** button so that **ON** appears beside **REPEAT PLAY**.

# 6

Press the **STATUS/EXIT** button. Now, when a tape has finished playing, the VCR will rewind it and start playback again.

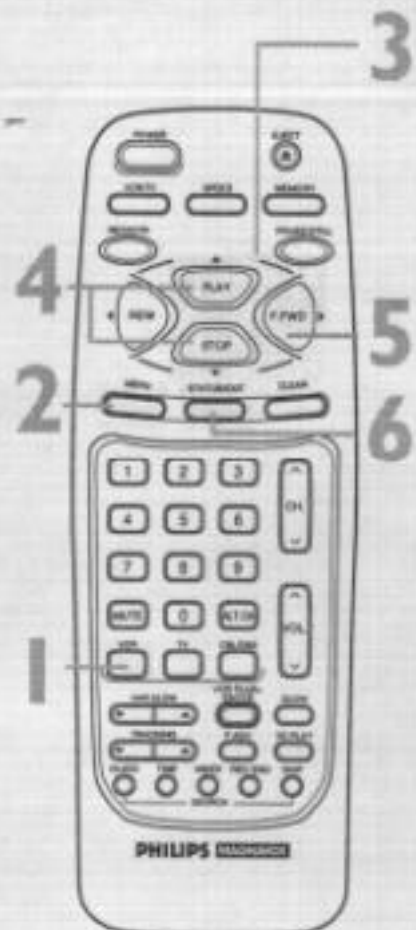

### Helpful Hints

- To cancel Repeat Play, follow steps 1 - 4 above. At step 5, press the **F.FWD/▶** button so that **OFF** appears beside **REPEAT PLAY**. Press the **STATUS/EXIT** button.
- The real-time counter memory does not function during Repeat Play.

## 46 Time Search


Follow the steps below to program the VCR to search forward or backward on a tape a specific length of time. There must be a tape in the VCR.

# 1

Press the **VCR** button.

# 2

Press the **TIME SEARCH** button.

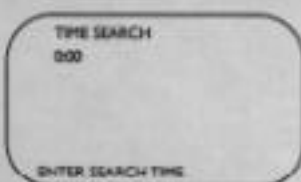


# 3

Within 10 seconds, use the **Number** buttons to enter the desired length of time you want to skip forward or backward. For example, for 1 hour, 25 minutes, press Number buttons 1, 2, 5. Or, for five minutes, press Number buttons 0, 0, 5.

# 4

Within 10 seconds, press the **F.FWD/▶** button or the **REW(ind)/◀** button. The VCR will skip over the specified length of time, then begin playback.

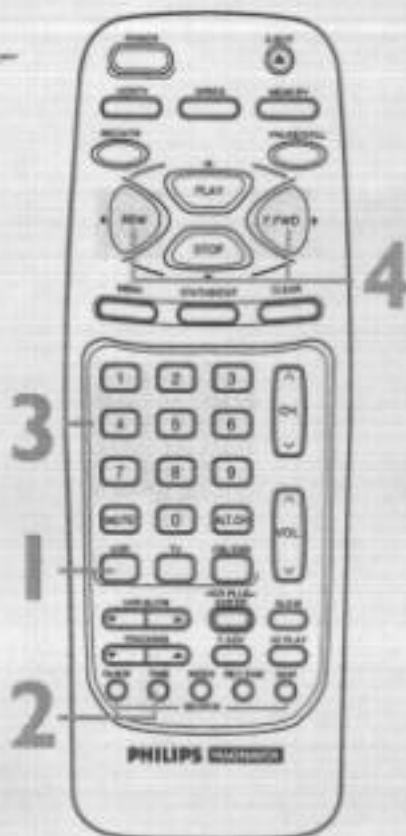

### Helpful Hints


- If you want to search for more than 59 minutes, you must enter the length of time in hours and minutes. For example, to search forward 70 minutes, press 1, 1, 0 at step 3.
- You can not do a Time Search while recording.
- To remove the Time Search display, press the **TIME SEARCH** button again.
- To cancel a Time Search that is in progress, press the **STOP/▼** button.
- If the end of the tape is reached during a Time Search, the VCR will cancel the search and rewind the tape. Details are on page 53.

## Index Search 47

This feature allows you to index the starting points of programs that you have recorded on a tape. Then, you can easily rewind or fast forward to that point.

### Example:

If you are watching program number 4 and you want to fast forward to program number 7, skip three programs.

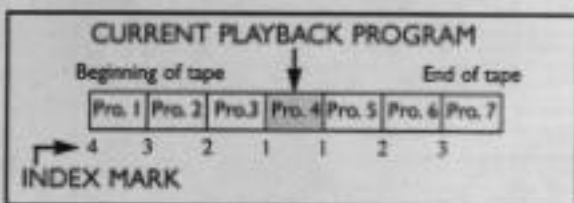


# 1

Press the **VCR** button.

# 2

Press the **INDEX SEARCH** button.

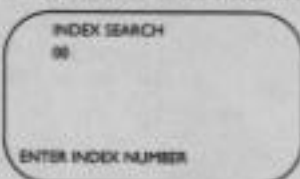

# 3

Within 10 seconds, use the **Number** buttons to enter the number of programs that you want to skip. For example, to skip three programs, press **Number** buttons 0, 3. If you do not make an entry within 10 seconds, the VCR will exit Index Search mode.

# 4

Within 10 seconds, press the **F.FWD/▶** button or the **REW(ind)/◀** button to skip forward or backward. The VCR will fast forward or rewind to the beginning of the desired program, then begin playback. (The program numbers count down on-screen as the searching progresses. To remove the on-screen counter, press the **INDEX SEARCH** button once.)



### Helpful Hints

- Every time an index mark is passed during rewinding or fast forwarding, the number of programs beneath **INDEX SEARCH** on-screen decreases by one.
- Up to 20 index marks may be searched.
- This function will not operate in recording mode.
- Press the **STOP/▼** button to stop the search.
- An index mark will be made automatically when the **REC(ord)/OTR** button is pressed, or at the beginning of a **Timer Recording** or **OTR**.
- The index mark is not made where the **PAUSE/STILL** button is pressed and released during recording.
- The time gap between index marks should be greater than 1 minute for **SP** recording, 2 minutes for **LP** recording, and 3 minutes for **SLP** recording.
- If the end of the tape is reached during an Index Search, the VCR will cancel the search and rewind the tape. Details are on page 53.




## 48 Record End Search/Skip Search

### Record End Search

This function enables you to search forward to an unrecorded portion of the tape (or to the point at which recording was stopped). Make sure the tape is fully rewound.

Press the **REC(ord) END SEARCH** button. The VCR begins fast forwarding to the beginning of the first blank portion of the tape. **SEARCHING FOR REC END** will appear on-screen during the search.

The VCR will automatically stop when the blank portion is reached. **REC END SEARCH COMPLETED** will appear on-screen briefly.

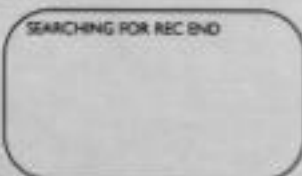

### Skip Search

This function enables you to skip forward 30 seconds at a time during tape playback.

During tape playback press the **SKIP SEARCH** button. The VCR will skip forward 30 seconds, then resume normal playback.



### Helpful Hints

- Press the **STOP/▼** button to cancel a Record End Search or a Skip Search.
- If the end of the tape is reached during a Record End Search, the VCR will cancel the search and eject the tape.
- If the end of the tape is reached during a Skip Search, the VCR will cancel the search and rewind the tape. Details are on page 53.

## Quick Search 49


The Quick Search feature locates the beginning of each recording on a tape, then plays the first portion of the recording at high speed for 30 seconds. After it plays the portion, the VCR fast forwards the tape to the next recording. This process is repeated until the end of the tape is reached, or until you stop the Quick Search.

**1** Press the **QUICK SEARCH** button. The VCR will fast forward the tape to the beginning of the next recording. The VCR will play the tape at high speed for 30 seconds, then go to the next recording.

To skip immediately to the beginning of the next recording on the tape, press the **QUICK SEARCH** button on the remote control.

**2**

To resume normal tape playback, press the **PLAY/▲** button.

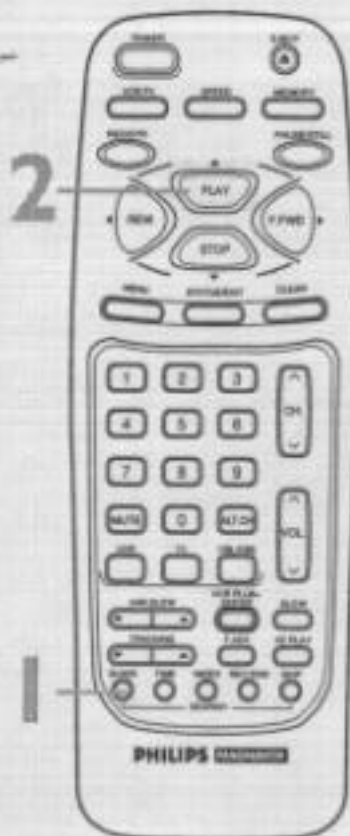

### Helpful Hints

- There must be a tape in the VCR.
- This function will not operate during a recording.
- To cancel a Quick Search that is in progress, press the **STOP/▼** button.
- If the end of the tape is reached during a Quick Search, the VCR will cancel the search and rewind the tape. Details are on page 53.

## 50 Real-Time Counter Memory


Follow the steps below to reset the real-time counter to zero at a tape location you want to refer to later.

### 1

Play, fast forward, or rewind a tape to the location that you would like to refer to later. Press the **STOP/▼** button to stop the tape.


### 2

Press the **STATUS/EXIT** button to see the status display.

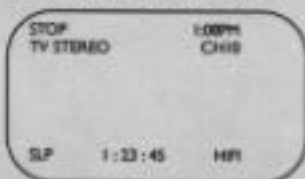


### 3

While the status display is on-screen, press the **CLEAR** button to reset the real-time counter to zero.

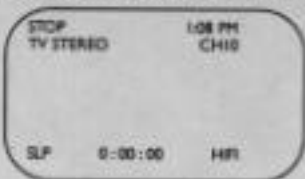

### 4

While the real-time counter is on-screen, press the **MEMORY** button so that **M** appears beside the counter.

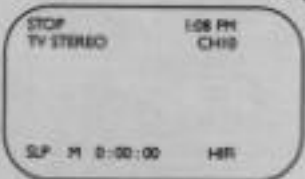

### 5

To go to a tape location where the real-time counter was reset to zero, press the **REW(ind)/◀** button or the **F.FWD/▶** button when playback is stopped.

When the tape reaches the point at which the counter was set to zero, the tape will stop.

Press the **PLAY/▲** button to watch the tape.



### Helpful Hints

- The **MEMORY** button does not function if **REPEAT PLAY** is set to **ON**. Details are on page 45.
- To erase a real-time counter memory, press the **MEMORY** button until the **M** disappears from the screen.
- You may only set the real-time counter to zero at one location at a time. If you set the real-time counter to zero at a second location, the previous real-time counter to zero setting will be erased.

## Special Effects Playback 51

### Forward and Reverse Searching (SP/LP/SLP)

**1** During tape playback, press and release the **F.FWD/▶** button or the **REW(ind)/◀** button. A fast forward or reverse picture search will begin.

**2**

To return to playback, press the **PLAY/▲** button.

### Super High Speed Searching (LP/SLP)

**1** During tape playback, press the **F.FWD/▶** button or the **REW(ind)/◀** button, then press again. The VCR will now search in super high speed.

**2**

To return to normal playback, press the **PLAY/▲** button.

### Playing a Tape at Double Speed

**1** During tape playback press the **X2 PLAY** button. The picture will play at twice the normal playback speed.

**2**

To return to normal playback, press the **X2 PLAY** button again or press the **PLAY/▲** button.

### Viewing a Still Picture


**1** During tape playback, press the **PAUSE/STILL** button. A still picture will appear on-screen.

**2**

To advance the still picture frame-by-frame, press the **F(rame).ADV(ance)** button.

**3**

To release the still picture and return to playback, press the **PLAY/▲** button or press the **PAUSE/STILL** button again.

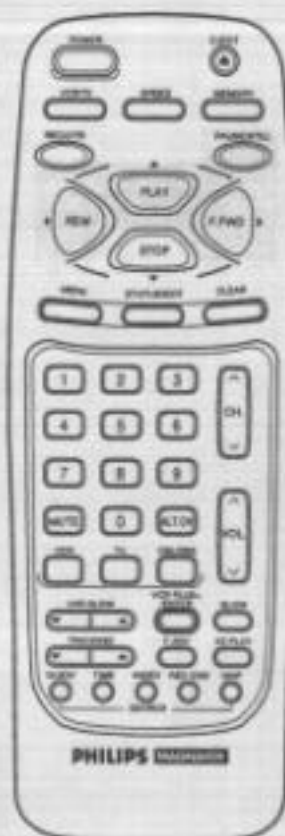

#### Helpful Hints

- Slow and Still modes will automatically switch to Stop mode after five minutes to protect the VCR and the tape from damage.
- SP/LP/SLP means this feature will work with tapes recorded in Standard Play, Long Play, or Super Long Play.
- LP/SLP means this feature will work with tapes recorded in Long Play or Super Long Play. For details about tape speed, see pages 37 and 60.

## 52 Special Effects Playback (cont'd)

### Viewing a Slow Motion Picture

**1** During tape playback, press the **SLOW** button. The tape will play in slow motion.

**NOTE:** You can control the speed of slow motion playback by pressing the **VAR.**(iable). **SLOW** button.

**2**

To release Slow mode and return to normal playback, press the **PLAY/▲** button or press the **SLOW** button again.



## Automatic Operation Features 53

The following playback features will always operate.

### Automatic Playback

When you put a tape in the VCR, the power will come on automatically. If the tape's record tab is missing, playback will begin. If a timer recording is set, the power will not come on automatically when you insert a tape with the record tab intact. If a timer recording is set and the VCR power is off, the VCR will eject the tape if the record tab is missing.

### Automatic Rewind, Eject, Off

When a tape is played, fast forwarded, or recorded to its end, the VCR will rewind the tape, stop, eject the tape, and turn itself off. If the real-time counter memory is set, the VCR will only rewind the tape to the point at which the counter is set to zero, then stop. The VCR will not eject the tape automatically or shut itself off.

### Tape Eject

A tape can be ejected with the VCR power on or off (but the VCR must be plugged in). If a timer recording is set, a tape can only be ejected with the power on. Make sure you insert a tape and turn off the VCR power for the timer recording.

### Automatic Tracking Adjustment

The VCR adjusts tracking automatically to give you the best possible picture quality. With some recordings, however, you may get a better picture using the manual tracking controls (see below).


### Manual Tracking

To manually adjust the tracking during playback and slow motion playback, press the CHANNEL ▲/▼ buttons on the VCR or the TRACKING ▲/▼ button on the remote control.

Tracking will return to Automatic Tracking Adjustment when you press the STOP/▼ button or insert a tape.

You cannot manually adjust the tracking of a Still picture. However, you may press the CHANNEL ▲/▼ buttons on the VCR to remove vertical jitter in a Still picture.

Before  
Tracking  
Adjustment

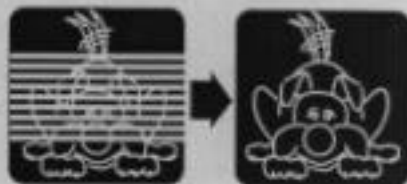

After  
Tracking  
Adjustment

## 54 Multi-Channel Television Sound System

Your VCR can play recordings broadcast in Hi-Fi (high fidelity) stereo, which produces a crisp, clear sound from two sources. Your VCR also can play tapes recorded in a second audio (usually, that means your program is recorded in a second language). Of course, your VCR will play tapes recorded in monaural (single-source) sound as well.


Your VCR also will record in Hi-Fi stereo or in second audio, so when you play back that tape on the VCR, it will be in stereo or second audio. If you play back the tape on a VCR that can't play back tapes in stereo or second audio, the VCR will automatically play the tape in monaural sound.

Read the directions on this page to familiarize yourself with your VCR's stereo and second audio setups. Then follow the directions on page 55 to record in stereo or second audio and the directions on pages 56-57 to play back tapes recorded in Hi-Fi stereo.

### Understanding On-Screen Displays


When you receive a signal from a channel you're watching, portions of the on-screen display shown below will appear when you press the STATUS/EXIT button on the remote control.

The indication **2ND AUD** or **TV STEREO** that appears on this side of the status display tells you if your VCR is programmed to receive a second audio or stereo broadcast (it cannot be programmed to receive both at the same time). Follow the steps on page 55 to program the VCR to receive a second audio or stereo broadcast.

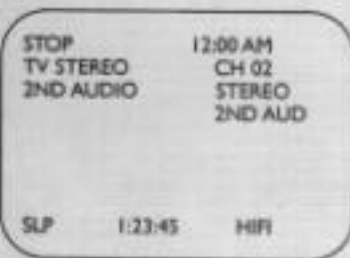

The indication **2ND AUD** or **STEREO** that appears on this side of the status display tells you if the program you're watching is available in second audio or stereo. Even though a program is available in second audio or stereo, you still must program the VCR to receive or record the program. Follow the directions on page 55. This indication is not available during tape playback.

To record and play back programs broadcast in stereo, even if you have a Mono Speaker TV, just use one of the connections shown, then follow the steps on pages 55-57.

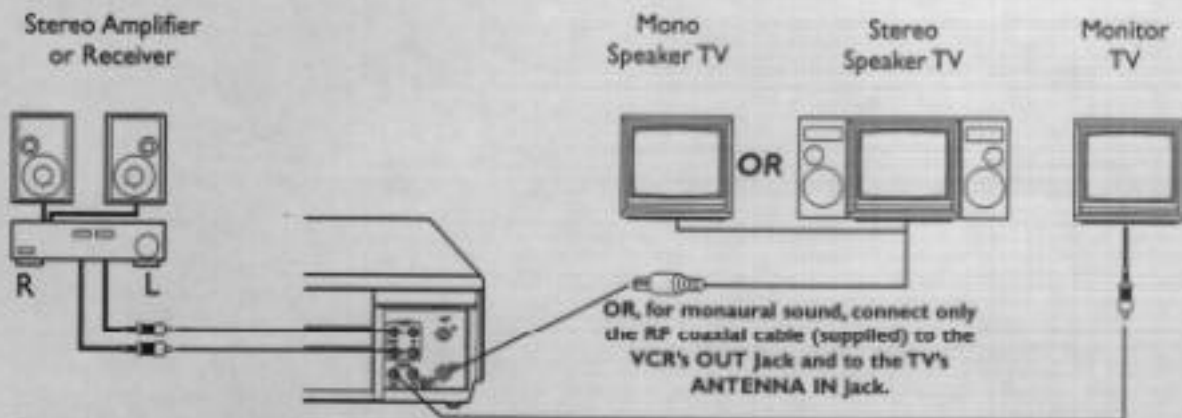


For stereo sound, connect the audio cables to the **AUDIO OUT** jacks on the VCR and to the **AUDIO IN** jacks on the Stereo Amplifier or Receiver. Then, connect the video cable to the **VIDEO OUT** jack of the VCR and to the **VIDEO IN** jack of a monitor TV.

## Multi-Channel Television Sound System (cont'd) 55

**1**  
Press the VCR button, then press the MENU button.

**2**  
Press the PLAY/▲ button or the STOP/▼ button to select TUNER SET UP, then press the F.FWD/▶ button.

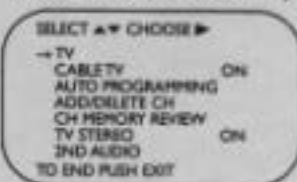


**3**  
Press the PLAY/▲ button or the STOP/▼ button to select TV STEREO or 2ND AUDIO. Then, press the F.FWD/▶ button. ON will appear to the right of your selection.

**4**  
Press the STATUS/EXIT button.

**5**  
To play a tape, press the PLAY/▲ button. Or, to record, select the channel to be recorded using the CH(annel) ▲/▼ button, then go to step 6.

**6**  
Press the REC(ord)/OTR button to start recording.

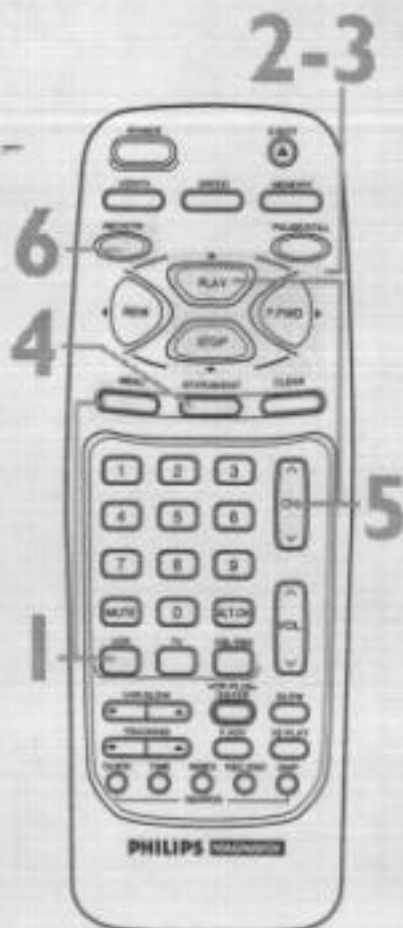

### Helpful Hints

- You can only receive and record in stereo or second audio programs that are broadcast in second audio or stereo. You can only play in stereo or second audio tapes that were recorded in stereo or second audio. Please see page 54 to determine if the program you want to watch/record is being broadcast in stereo or second audio.
- If you select second audio when second audio is not available, the VCR will record normal audio.




## 56 Hi-Fi Stereo Sound System


Multi-Channel Television Sound system broadcasts are automatically recorded in Hi-Fi stereo sound. To play in Hi-Fi stereo the tapes recorded in Hi-Fi stereo, however, you'll need to follow steps 1 - 9.

**1**  
Press the **VCR** button, then press the **MENU** button.


**2**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **VCR SET UP**, then press the **F.FWD/▶** button.

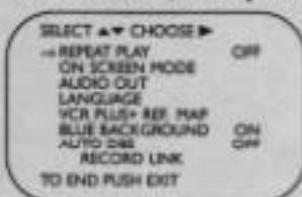


**3**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **AUDIO OUT**, then press the **F.FWD/▶** button.

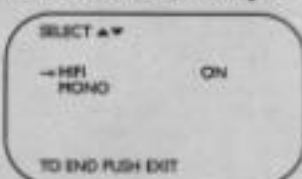

**4**  
Press the **PLAY/▲** button or the **STOP/▼** button to select **HIFI**. ON will appear to the right of HIFI on-screen.

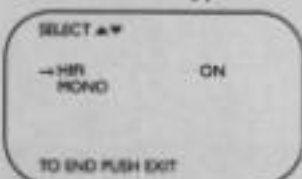

**5**  
Press the **STATUS/EXIT** button.

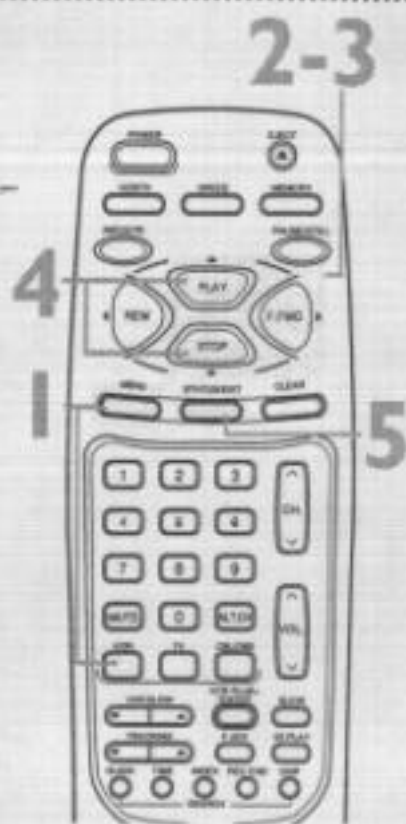

### Helpful Hints

- All programs are automatically recorded in both Hi-Fi stereo sound and in monaural sound.
- The audio level of a tape recorded in Hi-Fi stereo will differ from the audio level of a tape not recorded in Hi-Fi stereo.
- Normally, HIFI should be selected from the **AUDIO OUT** menu for playback with Hi-Fi sound. But, you can change the selection to **MONO** if you want monaural audio playback. To do this, follow steps 1 - 3 above. At step 4, press the **PLAY/▲** button or the **STOP/▼** button to select **MONO**. Press the **STATUS/EXIT** button. HIFI will disappear from the status display.
- If you play non-Hi-Fi tapes while the VCR is set to HIFI, HIFI will disappear from the status display and the tape will play in monaural sound. Please see additional notes on page 59.


## Hi-Fi Stereo Sound System (cont'd) 57

# 6

Press the **MENU** button.

# 7

Press the **PLAY/▲** button or the **STOP/▼** button to select **TUNER SET UP**, then press the **F.FWD/▶** button.

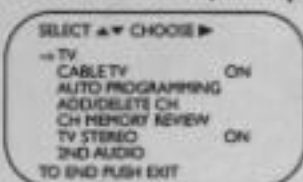


# 8

Press the **PLAY/▲** button or the **STOP/▼** button to select **TV STEREO**. Then, press the **F.FWD/▶** button. **ON** will appear to the right of **TV STEREO** on-screen.

# 9

Press the **STATUS/EXIT** button.

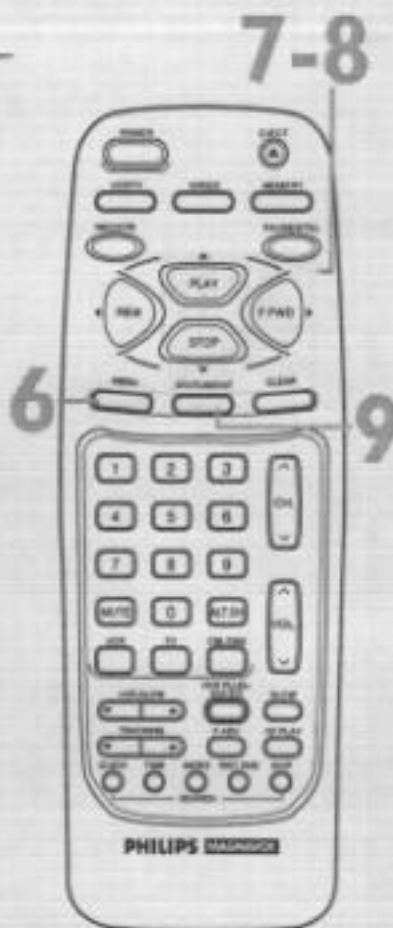

## 58 Helpful Hints

If you are having problems with your product, check this list of problems and possible solutions before requesting service. You may be able to solve the problem yourself.

If you need to call a customer service representative, please know the model number and serial number of your product before you call. This information is displayed on the back of the product. Also, please take a moment to identify the problem you are having, and be prepared to explain this to the representative. If you believe the representative will need to help you with operations, please stay near the product. Our representatives will be happy to assist you.

### No power

- Make sure the power plug is completely connected to an AC (alternating current) outlet.
- Make sure the power is turned on.

### Power Failure

- If the power fails for more than one minute, programmed timer recordings will be restored when the clock is reset. (The clock will reset itself automatically if you are using the AUTO CLOCK feature. Details are on pages 17 - 18. If you are not using the AUTO CLOCK feature, reset the clock manually. Details are on pages 15 - 16.) The timer recording will not occur only if the timer recording was scheduled to take place during the power failure.

### A TV program cannot be recorded.

- Check the connections between the VCR, TV, antenna/cable, and Cable Box/Direct Broadcast System (if applicable) (pages six - 10).
- Make sure the tape has a record tab (page five).
- Check the TV/VCR position (page 29).
- Check the CH3/CH4 switch (pages six - nine).

### The VCR will not perform a timer recording.

- Make sure the recording start and stop times are set correctly (pages 35 - 43).
- Make sure a tape is in the VCR and the tape has a record tab (page five). If, after programming a timer recording, you turn off the VCR power without putting a tape in the VCR, the Timer light will blink.
- If the record tab on a tape is missing, the VCR will eject the tape. The Timer light will blink.
- Make sure the VCR power is off.
- Make sure the clock is set (pages 15 - 18).
- The VCR may not perform or continue a timer recording if a power interruption of more than one minute occurs.
- If you have a Cable Box/Direct Broadcast System, timer recordings are programmed differently. (See page eight for details.)
- Finish programming a timer recording at least five minutes before the recording is set to begin.
- Noon is 12 p.m.; midnight is 12 a.m.

### There is no playback picture or the playback picture is noisy or contains streaks.

- Make sure the TV is on the same channel as the VCR's CH3/CH4 switch.
- Make sure the VCR is in VCR position. (The VCR light will appear on the display panel.)
- Make sure channel 03 or 04 is properly adjusted at the TV.
- Adjust the tracking (page 53).
- TVs placed too close to the VCR can cause interference during tape playback. Move the VCR away from the TV.

### The VCR cannot be controlled with the remote control.

- Press the VCR button, then try the other VCR feature buttons.
- Make sure the VCR light appears on the display panel. If it does not, press the VCR/TV button once.
- Aim the remote control directly at the VCR's remote sensor (page 29).
- Remove all obstacles between the remote control and the VCR.
- Inspect and/or replace the batteries in the remote control (page five).

### The VCR does not respond normally to the remote control. (For example, the VCR may change channels multiple times when you press the CH(annel) ▲ button once.)

- Install new batteries (preferably alkaline) in the remote control.

## Helpful Hints (cont'd) 59

### The Number buttons won't work for channels above 69.

- Select CABLE TV at the TUNER SET UP menu (page 12), then let the VCR set up the channels.
- Enter channel numbers as a two-digit number. If you want to select channels 100 and above, enter channel numbers as a three-digit number. (See page 26 for details.)

### TV programs cannot be watched normally.

- Put the VCR in TV position. (Press the VCR/TV button so that the VCR light disappears from the display panel. For details, see page 29.)
- Check the connections between the VCR, TV, antenna/cable, and Cable Box/Direct Broadcast System (if applicable). (See pages six - 10 for details.)

### Tape cannot be inserted.

- Insert the tape, window side up, with the record tab facing you.
- Make sure a tape isn't already in the VCR by pressing the STOP/EJECT button on the VCR.
- Gently push on the center of the tape when putting it in the VCR. Never force the tape into the VCR.
- If a timer recording is programmed and the VCR power is off, you can not insert a tape without a record tab.

### Tape cannot be removed.

- Make sure the power plug is completely connected to a power outlet.

### VCR ejects the tape when the REC(ord)/OTR button is pressed or when the VCR power is turned off to set a timer recording.

- Make sure the tape has a record tab (page five).

### Channels above 13 cannot be received.

- Select CABLE TV at the TUNER SET UP menu (page 12), then let the VCR set up the channels.

### Poor reception

- You may need to tune your TV again.

### The motor (cylinder) rotates even when the VCR is in Stop mode.

- To enable the quick play mechanism, the cylinder will rotate for about five minutes. This is normal. The quick play mechanism enables the tape mechanism to switch from Stop mode to Play mode in one second.

### Line Input mode

- If you accidentally enter Line Input mode (AV FRONT or AV REAR will appear on your TV screen briefly), press the CH(annel) ▲/▼ button or use the Number buttons to select another channel.

### Hi-Fi Stereo Sound

- During playback, Hi-Fi audio may temporarily revert to normal audio when you adjust tracking. This is normal.
- When connecting the VCR to a stereo TV, you will only get stereo sound if you use audio cables to connect the AUDIO OUT jacks on the VCR to the AUDIO IN jacks on your TV, and if the TV is in Line (Auxiliary) Input mode.
- When you connect the AUDIO OUT jacks on the VCR to the AUDIO IN jacks on your TV, the stereo light on the TV might not glow. But, as long as the status display indicates you are receiving a stereo signal, you are receiving a stereo signal. This is normal.
- Only tapes recorded in Hi-Fi audio will play back in Hi-Fi audio. Tapes recorded in normal audio will play back in monaural audio.

## 60 Glossary

**AUDIO IN/OUT Jacks:** jacks located on the front and back of the VCR which are used to record audio from another source (IN) or to send audio to another system (OUT).

**Automatic Channel Setup:** process in which the VCR memorizes all available channels. Then, when you press the CH(annel) ▲/▼ button, you only scan through channels you receive.

**Bands:** settings that allow you to tune channels.

- **Antenna** – VHF (very high frequency; channels 2 - 13) and UHF (ultra high frequency; channels 14 - 69).
- **Cable** – all standard channels can be received without a Cable Box/DBS.

**Cable Box/DBS Output Channel:** 03 or 04.

**Dubbing:** copying a tape using a second VCR.

**Frame:** a still picture.

**HQ:** high quality; a feature in the VCR circuitry which provides enhanced picture detail.

**Line Input:** The channel to which you set your VCR during dubbing. If you use the AUDIO and VIDEO In jacks on the front of the VCR, select channel 002 (AV FRONT). If you use the AUDIO and VIDEO IN jacks on the back of the VCR, select 001 (AV REAR).

If you accidentally enter Line Input mode, press the CH(annel) ▲/▼ button or use the Number buttons to select another channel.

**QTR:** One-Touch Recording; a timed recording that starts immediately and records for 30 minutes to eight hours.

**Remote Control:** the small electronic unit that came with your VCR; allows you to operate your VCR from a distance. You may be able to operate your TV, Cable Box, or Direct Broadcast System with the remote control.

**RF coaxial cable:** The cable supplied with your VCR. Use it to connect your VCR to your TV (or Cable Box or DBS). The supplied cable is a snap-on type. However, you may use a screw-on type if you prefer.

**Special Effects:** forward and reverse searching; a still picture; slow motion playback.

**Tape Speeds:** how fast the tape travels during a recording or playback.

- **SP** (standard play) – fastest tape speed (recording time for a T120 tape is approximately two hours); best picture quality.
- **LP** (long play) – average tape speed; playback only.
- **SLP** (super long play) – slowest tape speed (recording time for a T120 tape is approximately six hours).

**VCR:** video cassette recorder.

**VIDEO IN/OUT Jacks:** jacks located on the front and back of the VCR which are used to record video from another source (IN) or to send video to another system (OUT).

## Specifications 61

---

**Video Heads**

Four heads – Hi-Fi

**Video Signal**

EIA standards; NTSC color

**Antenna**

VHF/UHF – 75 ohm external antenna terminal

**VHF Output Signal**

Channel 03 or 04 (switchable)

75 ohms unbalanced

**Power Requirement**

120V AC; 60Hz

**Power Consumption**

16W

**Operating Temperature**

41°F (5°C) to 104°F (40°C)

**Relative Humidity**

10% to 80%

**Weight**

6.39 lbs. (2.9 kg.)

**Dimensions**

15-3/4" (W) x 3-1/16" (H) x 10" (D)

(400mm x 92mm x 230mm)

**Tuner Broadcast Channels**

VHF 2-13, UHF 14-69

**Cable TV Channels**

2 – 13

Midband: A – I

Superband: J – W

Hyperband: A-5 – A-1

Special Channel: 5A

Ultraband: 37 – 94, 100 – 125

*NOTE: Designs and specifications are subject to change without notice.*

## 62 Limited Warranty

### VIDEO CASSETTE RECORDER

90 Days Free Labor/One Year Parts Exchange. This product must be carried in for repair.

#### WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

#### WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For 90 days thereafter, all parts will be repaired or replaced, and labor is free. From 90 days to one year from the day of purchase, all parts will be repaired or replaced, but you pay for all labor charges. After one year from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges.

All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

#### WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- damage caused by the use of non-VHS tapes or tapes that have not been tested and labeled for use in two, four, six, and eight hour VHS recorders.
- a product that is used for commercial or institutional purposes (including but not limited to rental purposes).

#### WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there

may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

#### MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

#### BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

#### TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Take the product to a Philips factory service center (see enclosed list) or authorized service center for repair. When the product has been repaired, you must pick up the unit at the center. Centers may keep defective parts.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. Because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

#### TO GET WARRANTY SERVICE IN CANADA...

Please contact Philips at:

1-800-661-6162 (French Speaking)

1-800-363-7278 (English Speaking)

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental, or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

#### REMEMBER...

Please record below the model and serial numbers found on the product. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

This warranty gives you specific legal rights. You may have other rights which vary from state to state.



## Index 63

- ac power cord ..... 30
- accessories ..... 64
- alt.ch button ..... 26
- ant(enna) in jack ..... 6-10, 30
- audio in/out jacks ..... 10, 29, 30, 44
- auto db's recordlink ..... 39
- automatic
  - playback ..... 53
  - rewind, eject, off ..... 53
- batteries ..... 5
- blue background ..... 13
- cbi/db's button ..... 5, 22, 25
  - cassette compartment ..... 28
  - cassette-inside light ..... 28
  - ch3/ch4 switch ..... 6-9, 30
  - channel
    - adding ..... 13
    - deleting ..... 13
    - reviewing ..... 14
    - selection ..... 26
    - setup ..... 11 - 14
    - ▲/▼ buttons ..... 25, 29, 53
  - child lock ..... 19
  - clear button ..... 24, 50
  - clock/feature display ..... 28
  - clock setting ..... 15-19
  - connections ..... 6-10
  - contents, table of ..... 4
  - controls
    - remote ..... 24-26
    - vcr ..... 29
  - counter only mode ..... 27
  - daylight-savings time ..... 19
  - display panel ..... 28
  - duplication ..... 44
  - eject button ..... 24
  - erasure prevention ..... 5
  - f.fwd▶ button ..... 24, 29, 51
  - f(rame). adv(ance) button ..... 25, 51
  - front panel ..... 29
  - glossary ..... 60
  - helpful hints ..... 58-59
  - hi-fi stereo sound system ..... 56-57
  - hookups
    - with cable box/db's ..... 8-9
    - with stereo tv ..... 10
    - without cable box/db's ..... 6-7
  - index search button ..... 25, 47
  - language selection ..... 11, 20
  - line input mode ..... 12, 44, 60
  - long play ..... 37, 60
  - lp ..... 37, 60
  - memory button ..... 24, 50
  - menu button ..... 26, 29
  - mute button ..... 26
  - number buttons ..... 26
  - on-screen status displays ..... 27
  - one-touch recording ..... 34
  - out jack ..... 6-9, 30
  - pause button ..... 29
  - pause/still button ..... 24, 51
  - play/▲ button ..... 24, 29, 51
  - playing ..... 31
  - power
    - button ..... 24, 29
    - cord ..... 30
    - pwr.(power) light ..... 28
  - quick search button ..... 25, 49
  - real-time counter ..... 50
  - rear panel ..... 30
  - rec/otr button ..... 26, 29, 34
  - rec(ord)
    - end search button ..... 24, 48
    - light ..... 28
  - recording
    - basic ..... 32
    - one channel/ watching another ..... 33
    - timer ..... 35-38
    - with the vcr plus+ programming system ..... 40-43
  - remote control
    - buttons ..... 24-26
    - sensor ..... 29
    - using ..... 5
  - remote locator ..... 23
  - repeat play ..... 45
  - rerecording ..... 44
  - rew(ind)/◀ button ..... 26, 29, 51
  - rf coaxial cable ..... 6-9, 44, 60
  - safety precautions ..... 3
  - searching ..... 51
  - second audio broadcast
    - receiving ..... 54-55
    - recording ..... 54-55
  - sensor (remote) ..... 29
  - skip search button ..... 24, 48
  - slow
    - button ..... 24
    - motion ..... 52
  - slp ..... 37, 60
  - sp ..... 37, 60
  - speed button ..... 25
  - standard play ..... 37, 60
  - status display ..... 27
  - status/exit button ..... 25, 27, 29
  - stereo
    - broadcast
      - receiving ..... 54-55
      - recording ..... 54-55
    - hookups ..... 54
  - still picture ..... 51
  - stop/▼ button ..... 25
  - stop/eject button ..... 29
  - super high speed searching ..... 51
  - super long play ..... 37, 60
  - table of contents ..... 4
  - tape
    - duplication ..... 44
    - eject ..... 24, 53
    - speed ..... 37, 60
  - time
    - search button ..... 25, 46
    - (setting) ..... 15-19
  - timer
    - light ..... 28
    - recording
      - cancelling ..... 38
      - checking ..... 38
      - setting ..... 35-37
      - with vcr plus+ programming system ..... 42-43
  - tracking button ..... 26, 53
  - tv
    - button ..... 5, 21, 25
    - controls ..... 5, 21, 24-26
    - hookups ..... 6-10
    - position ..... 25, 29
  - var(iable). slow button ..... 26, 52
  - vcr
    - button ..... 5, 25
    - light ..... 28
    - plus+
      - programming system ..... 40-43
      - plus+/enter button ..... 21-22, 24, 42
      - position ..... 25, 29
    - vcr/tv button ..... 29
  - video in/out jacks ..... 10, 29, 30, 44, 54
  - vol(ume) ▲/▼ buttons ..... 24
  - warranty ..... 62
  - x2 play button ..... 24, 51



## SUPPLIED ACCESSORIES

The following items are supplied with your VCR; they are provided to help you use or set up your VCR.



## OPTIONAL ACCESSORIES

The following additional items are not provided with your VCR, but they are designed for use with your new VCR. To order these optional accessories, contact us at:

**Philips Parts & Accessories Marketing Department**  
401 East Old Andrew Johnson Highway  
P.O. Box 555  
Jefferson City, TN 37760  
1-800-851-8885.



This owner's manual is made of recyclable materials.  
Remember to recycle!



As an Energy Star® Partner, Philips Consumer Electronics Company has determined that this product meets the Energy Star® guidelines for energy efficiency. Energy Star® is a U.S. registered mark.