

# Table of Contents

CHAPTER 1 PRODUCT OVERVIEW .....	1
1.1 FUNCTIONS OVERVIEW .....	1
1.2 NOTES .....	1
1.3 PACKAGING LIST .....	2
1.4 TECHNICAL SPECIFICATIONS.....	3
CHAPTER 2 BUTTONS AND APPEARANCE .....	5
CHAPTER 3 EASYCONFIG.....	7
CHAPTER 4 BASIC OPERATIONS .....	10
4.1 BOOTING UP.....	10
4.2 SHUTDOWN .....	10
4.3 NETWORK.....	10
4.4 LOCKING KEY.....	11
4.5 RESET .....	11
4.6 CONNECTING TO PC AND FILE TRANSFER .....	11
4.7 VOLUME ADJUSTMENT .....	11
4.7.1 Adjusting the media volume .....	11
4.7.2 Adjusting the notification volume .....	12
4.8 CHARGING .....	12
4.9 TOUCH SCREEN OPERATIONS .....	13
4.10 SEARCH BUTTON .....	13
CHAPTER 5 COMMON FEATURES .....	14
5.1 LANDSCAPE/PORTRAIT DISPLAY SWITCHING .....	14

---

5.2 USING VIRTUAL KEYBOARD TO TYPE .....	15
5.2.1 Android keyboard.....	15
5.2.2 Editing text .....	15
5.3 NOTIFICATION PANEL .....	16
5.3.1 Opening notification panel .....	16
5.3.2 Closing notification panel .....	16
5.4 RECENTLY RUN APPLICATIONS .....	16
5.5 CHANGING WALLPAPER .....	16
5.6 POWER CONTROL .....	17
CHAPTER 6 MAIN INTERFACE.....	18
6.1 MAIN INTERFACE .....	18
6.2 APPLICATIONS INTERFACE .....	19
6.3 BROWSER.....	20
6.3.1 Opening browser .....	20
6.3.2 Going to a webpage .....	20
6.3.3 Setting a home page .....	20
6.3.4 Browsing a webpage.....	20
6.3.5 Managing bookmarks.....	22
6.4 VIDEO PLAYER.....	25
6.4.1 Video playing .....	25
6.4.2 Delete video .....	27
6.5 AUDIO PLAYER .....	27
6.5.1 Playlist .....	28
6.5.2 Playing audio .....	28
6.5.3 SOUND EFFECTS.....	30
CONVERTED FILES TO THE PRODUCT TO PLAY, .....	30
6.6 PICTURE BROWSER .....	30
6.6.1 Browsing pictures .....	31
CHAPTER 7 APPLICATIONS.....	34

7.1 MOVING A PROGRAM ICON OF THE INTERFACE.....	34
7.2 DELETING A PROGRAM ICON.....	34
7.3 RESTORING A PROGRAM ICON .....	34
7.4 ADDING A PROGRAM ICON.....	34
7.5 ADDING A WIDGET.....	35
7.6 CREATING A FOLDER .....	35
7.7 RENAMING A FOLDER.....	35
 CHAPTER 8 COMMON TOOLS .....	 36
8.1 E-MAIL .....	36
8.1.1 Opening e-mail.....	37
8.1.2 Creating and sending e-mails .....	37
7.1.3 Receiving and reading e-mail .....	38
8.1.4 Replying or forwarding e-mail.....	39
8.1.5 Managing e-mail .....	39
8.1.6 Create new account.....	39
8.1.7 Account settings .....	39
8.1.8 Delete e-mail account .....	40
8.2 RECORDER .....	40
8.3 ALARM.....	41
IN THE MAIN INTERFACE, TAP "ALARM CLOCK" TO ENABLE THE ALARM FUNCTION. ....	41
8.3.1 Set alarm .....	42
8.3.2 Add alarm .....	42
8.3.3 Delete alarm .....	42
8.3.4 Alarm settings.....	42
8.3.5 Changing alarm display .....	42
8.4 CALCULATOR .....	43
8.5 EXPLORER .....	43
8.6 INSTALLING APPLICATIONS .....	43
8.7 UNINSTALL APPLICATION.....	44

CHAPTER 9 SETTINGS .....	45
9.1 WIRELESS & NETWORK SETTINGS .....	45
9.2 SETTINGS.....	48
9.2.1 Wireless & networks .....	48
9.2.2 Sound .....	49
9.2.3 Display.....	49
9.2.4 Location & security .....	50
9.2.5 Applications .....	51
9.2.6 Accounts & sync .....	51
9.2.7 Privacy.....	51
9.2.8 Storage .....	52
9.2.9 Search.....	52
9.2.10 Language & keyboard.....	53
9.2.11 Voice input & output .....	53
9.2.12 Accessibility.....	53
9.2.13 Date & time.....	53
9.2.14 Touch screen calibration.....	54
9.2.15 About device.....	54
CHAPTER 10 USING MICRO SD (TF) CARD.....	55
CHAPTER 11 CONNECTING TO USB DRIVE .....	56
CHAPTER 12 ABOUT THE BATTERY AND POWER.....	57
CHAPTER 13 FIRMWARE UPDATING / RESETTING TO FACTORY .....	58
CHAPTER 14 FREQUENTLY ASKED QUESTIONS.....	59
CHAPTER 15 TROUBLESHOOTING.....	61

## Chapter 1 Product Overview

### 1.1 Functions overview

- 8 inch wide screen True Color TFT touch screen with a high resolution of 800\*600 pixels.
- Surf the Internet wirelessly via Wi-Fi to enjoy the Internet on the go.
- Support all mainstream e-mail services for more convenient e-mail sending and receiving.
- Switching between portrait mode and landscape mode is possible through gravity sensing. Four-direction rotation display is supported.
- Support Video Player, Audio Player, Photo Browser and Shelves.
- Equipped with a built-in microphone, enabling audio-recording.
- Eco settings enables the brightness to be freely adjusted.

### 1.2 Notes

- Do not use the unit in an overly hot, cold, wet, or dusty environment. Do not expose it to sunlight.
- Try not to use this unit in an environment with a strong magnetic field or static electricity.
- Avoid dropping this unit or strong impacts.
- The adapter of this product should not be dropped and splashed with liquid. Any object filled with liquid, such as a vase, should not be placed on the top of it.
- There are no user-serviceable parts inside the product. Do not dismantle this unit. Otherwise, the warranty may be voided. Contact servicing personnel if you need help.
- The battery life may vary depending on the use condition and production time.
- It is not allowed to replace the battery of the product yourself. Do not dismantle the

unit yourself. Explosion may occur if the battery is not properly replaced. Contact the professional servicing personnel.

- As the workmanship of motherboard manufacturers are different from each other, it is recommend to perform charging using the adapter provided, instead of using the USB port of the motherboard, to ensure charging stability.
- The long life of a lithium battery is due to its much smaller memory effects than that of the regular Nickel-Cadmium battery. But if the lithium battery is degrading, contact the local Service Center directly.
- If the battery is improperly replaced, an explosion may occur. Only use the same brand battery or equivalent for replacement.
- The company is not liable for the data loss or deletion on machine resulting from the misuse of software, improper operation of the battery, servicing, other accidents, or other indirect loss thereof.
- The actual product may be different from that described in the Instructions due to the software update. These Instructions are for informational purposes only.

### 1.3 Packaging list

AOC Breeze Tablet Unit	X1
USB cable	X1
Power adapter	X1
Quick Start Guide	X1
About the Touchscreen	X1
Warranty Statement	X1
Touch Pen	X2



Note: The actual accessories provided with the product may vary.

## 1.4 Technical specifications

### Basic specifications

Model no.	AOC Tablet MW0812
Installed OS	Android OS 2.3
Processor (CPU)	ARM Cortex-A8,Cpu Frequency Up To 816MHz
Memory	512MB
WLAN	Wi-Fi IEEE 802.11b/g
Bluetooth	Bluetooth 2.1 + EDR
Storage capacity	Built-in 4GB Flash Memory
Expansion cards	Micro SD (TF) card, up to 32 GB.
LCD	8 inch HD TFT LCD touch screen (resistive single touch) with a resolution of 800*600 pixels
Audio output	Headset: Stereo output; internal speakers: Mixed output.

### Power specifications

Voltage	Supply voltage: 5V  Charging voltage: 5V 
Current	Max. current for playback is 1A DC. Max. current for charging is 1A DC.
Battery used	Built-in lithium-ion polymer rechargeable battery, 3.7V, 4800mAh
Power adapter	AC input: 100-240V 50/60Hz DC input: 5V 2.5A
Charging time	It takes about 7 hours for the battery to be fully charged when the provided charger is used with power-down. The charging time may vary depending on the remaining battery level. Note: do not charge the battery for more than 12 hours when the charger is used.

Battery use time (Under the condition that the battery is fully charged in a normal temperature)	Audio: About 18 hours Video: About 6 hours Web browsing: About 7 hours
--	--

**External dimensions**

Dimension (L×W×H)	8.46 x 5.7 x 0.57 in (21.5 x 14.65 x 1.45 cm)
Weight	1.16 lbs (0.525kg) (with battery)
Port	Mini USB 2.0 high speed port, OTG, 3.5mm headset

 
**Environmental conditions**

Operating temperature	0°C ~ 40°C
Storage temperature	-20°C ~ 55°C
Max. humidity	90% RH (non-condensation)
Supported OS	Windows2000/XP/Windows 7/Vista, Macintosh OS X]

Note: Windows 2000+ SP1/SP2 is not supported by this product. The user should upgrade to SP3 or above. This product does not guarantee all video formats are playable. Even if some formats are listed in the Instructions, they may be not properly played. This is normal.



**Chapter 2 Buttons and Appearance**

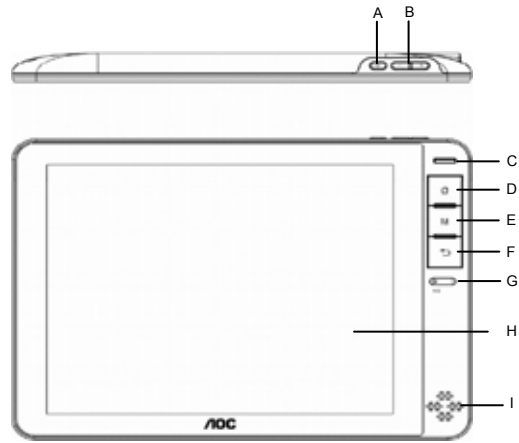

A. Power button	B. Volume "+" and "-" buttons
C. Operation indicator	
D. Home button: Press to return to the main interface; press and hold to bring out the 8 applications recently run.	
E. M button (Menu button): Open the corresponding menu.	F. Back button
G. Built-in MIC Recording	H. Touch screen ("Screen")
I. External speaker	



J. Headset jack	K. MINI USB port (connecting to PC)
L. OTG port (connecting to USB drive)	M. TF card slot
N. Power cable jack	O. Reset button


Note 1: During operation, sounds will be automatically output from the external speaker if there is audio output.

Note 2: In the Instructions, "Press" means tapping a button while "Press and Hold" means continuously pressing a button for 2 ~ 3 seconds.

Note 3: The Volume "+" and "-" icons, Back icon, and Menu icon function as the "volume adjustment button," "back button," and "menu button" on the top and front of the unit. You can make selections based on your preferences. They will not be described in the sections below.

### Chapter 3 EasyConfig

 When first using the tablet breeze, the EasyConfig window will pop up. It includes Language, Calibration and Wi-Fi settings.

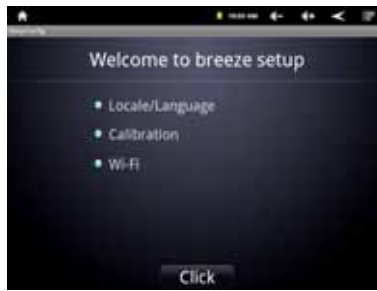

Tap "Click" to setup Language, then choose a language you want. If the settings take effect, the "Default Language" bar will show the choice.



Tap "Click" to setup calibration, then set the touch points according to the steps in the on-screen prompt.



When the calibration setting is successful, the wi-fi settings window will pop up.



Press the M button to configure the "Scan" or "Advanced" settings for Wi-Fi network.

Scan: Search for the available wireless networks in the vicinity.

**Advanced settings:**

Press the M button, and tap "Advanced" to set the network address within the IP locale. Select "Use static IP" to configure the network settings and enter the IP address, gateway, network mask, and DNS1 required for Wi-Fi network connection.



After configuration, press the M button, tap "Save" to exit to the the wi-fi settings interface with saving.

Note: When you use dynamic IP addresses, you do not have select "Use static IP addresses" to configure the network settings.

3. Tap the wireless network you want to connect to. If the connection status under the name of wireless network shows "Connected", the network connection is successfully. Then tap "End" to finished the easyconfig.

## Chapter 4 Basic Operations

### 4.1 Booting up

Press and hold the Power button for about 2 seconds. After the boot screen is shown (for about 1 minute), the unlock interface is shown. Tap and hold the unlock icon at the bottom left corner of the screen and drag it upward to the dot to unlock it. Once unlocked, the main Interface will be shown.

### 4.2 Shutdown

In any mode, Press and hold the Power button for about 2 seconds. The device shutdown options will appear:

Tap "Power off" to turn off the product.

Note 1: If the battery is low, the product will shutdown automatically.

Note 2: If the product is connected to the charger, disconnect the charger and perform the shutdown operation again.


Note 3: If the product crashes during operation, press and hold the Power button for 6 seconds to force shutdown.

Note 4: During operation, press the Power button for 1 second to enter Standby mode.

### 4.3 Network

To surf the Internet wirelessly, make sure the Wi-Fi wireless network signals are present and set the Wi-Fi network connection. There are two ways of going to the "Wireless & Networks" settings interface:

a. Press the M button in the main interface and tap "Settings->Wireless & Networks."

b. In the main interface, tap the  icon at the right to go to the applications interface, and tap "Settings->Wireless & Networks."

Note 1: Turn on Wi-Fi in an area where the Wi-Fi wireless network signals are present. After successful connection, you can surf the Internet through your browser.

Note 2: For detailed settings, refer to "8.1 Network Connection."

#### **4.4 Locking key**

During use, you can lock the keypad to lock the keys and touch screen to avoid accidental operation.

Lock: Press the Power button to lock.

Unlock: Press the Power button. After the screen lights up, tap and hold the unlock icon at the bottom left corner of the screen and drag it upward to the dot to unlock it.

Once unlocked, the main Interface will be shown.

#### **4.5 Reset**

If the product crashes during operation, you can tap the Reset button on the side to reset the system.

Note: Under normal operation, do not use the Reset button as the Shutdown button.

#### **4.6 Connecting to PC and file transfer**

When the product is shutdown, plug the smaller end of the provided USB cable to the MINI USB port on the side, and the larger end to the USB port of PC for the use of the removable disk and data transfer. Then the USB connected interface will pop up and tap "Turn on USB storage". When the word changed to "Turn off USB storage", the connection is successful. You may copy music and video files to the product directly without using third party programs. Finally, tap the "Safely Remove Hardware" icon at the bottom right corner of the PC screen to remove the device safely.

Note: After the product is connected to PC, you can still surf the Internet via Wi-Fi but you cannot play video, music, pictures, or recording voice involving the Flash drive and TF card.

#### **4.7 Volume adjustment**

Media volume: Adjust the volume for playing music and video.

Notification volume: Adjust the volume of notification ringtones.

##### **4.7.1 Adjusting the media volume**

There are two ways of going to the "Media Volume" adjustment interface:




- In any interface, press or press and hold the Volume +/- button on the top of the product to adjust the media volume.
- In the main interface, press the M button, tap "Settings -> Sound -> Volume", tap the media volume bar to adjust the volume after the Volume window appears.

#### 4.7.2 Adjusting the notification volume

In the main interface, press the M button, tap "Settings -> Sound -> Volume", tap the notification volume bar to adjust the volume after the Volume window appears.

#### 4.8 Charging

When the battery is low, the provided adapter can be used to charge it.

1. If the product is powered on during charging, the status bar will show the charging icon (  ). After the battery is fully charged, the bar will show the full battery icon (  ).
2. If the product is shutdown during charging, the large charging icon interface will be displayed. After the battery is fully charged, the full battery icon(  )will be shown; in the large charging icon interface, press the Power button according to the prompts to shutdown.

Note 1: Check the detailed charging percentage through "Settings->About Device->Status->Battery Level."

Note 2: To extend battery life, avoid charging the battery frequently when it is in high level. (example: more than 90%) It is not recommended to charge the product at this time; if charging is performed at this time, the percentage shown may not be 100%. This is normal.

Note : Please charge timely to ensure the device works well, when the battery is low.



#### **4.9 Touch screen operations**

Tip: The display used in this product is a resistive single touch screen. When using, you can operate it by using the buttons on its body or tapping the corresponding buttons on the display with a pen or finger to enable the corresponding functions.

##### **Tap**

Tap the screen buttons to release. When you want to use the on-screen keyboard to type, or press the on-screen buttons, touch them using your finger.

##### **Tap and hold**

Touch the screen button continuously until the option expands.

##### **Slide**

Place and slide your finger on the screen. Slide your finger up or down to scroll up or down; or if the list has a scroll bar, slide your finger up or down in the list to page down or up; when you are browsing pictures, slide your finger to the left or to the right to view the previous or next picture.

#### **4.10 Search button**

In the main interface, press the M button and tap the "Search" button to search for the relevant information using the browser.

## Chapter 5 Common Features

### 5.1 Landscape/Portrait display switching

1. In the "Settings" interface, tap "Settings -> Display -> Auto-rotate screen." When the "√" symbol becomes green, the Landscape/Portrait screen display switching is on; when the "√" symbol becomes grey, the Landscape/Portrait screen display switching is off.

2. Hold this product vertically with your hands and tilt it to the left or right. When it is tilted to a position 90° to the horizontal plane, the gravity sensor built in the product senses the action and the screen switches to Portrait mode from Landscape mode.

On the contrary, when it is tilted to a position 0° to the horizontal plane, the screen switches to Landscape mode from Portrait mode.



Tip: This product supports 4-direction rotation display.

Note 1: For gravity sensing (display orientation), the screen orientation will not change if this product is placed on the level and stationary surface, regardless of how you rotate the product.

Note 2: For some interfaces, such as the main interface, video player interface, audio player interface, and online video interface, gravity sensing will be disabled.

## 5.2 Using virtual keyboard to type

Tap any text input box to pop up the virtual keyboard as shown below. Use this keyboard to type any text or characters.

### 5.2.1 Android keyboard



A. Show box: Show the text typed. Tap and hold this box to display the Edit Text menu for you to cut, copy, and paste the text. Switching between input methods is also possible.
B. Tap this button to switch between uppercase and lowercase text.
C. Tap this button to switch between numeric keypad and symbol keyboard, For numeric keypad and symbol keyboard, tap the ATL button to display the special symbols (such as ~, ±, ×, etc.).
D. Tap this button to input space.
E. Tap to delete the edited text.

Tip: During the input process, you can move the cursor by tapping a position.

### 5.2.2 Editing text

The typed text can be edited.

When there is text in the input field, tap and hold the input field (or tap and hold the Show box in the keyboard) to open the Edit Text menu. Tap the options in the menu to edit the text.

Select word	Select one word
Select all	Select all text typed
Cut	Cut text typed
Copy	Copy text typed
Paste	Paste cut or copied text
Input method	Select the Input method
Add "*" to dictionary	Add the text you type to the dictionary.

### 5.3 Notification panel

The notification icon appears when a message is received, PC is connected, or music is played. You can open the notification panel to check for messages and played music.

#### 5.3.1 Opening notification panel

After a new notification icon appears in the status bar, tap and hold the status bar and slide your finger downward to open the notification panel.

Tip: In the interface, press the M button and tap "Notifications" to open the notification panel.

#### 5.3.2 Closing notification panel

Tap the control bar at the bottom of the notification panel and slide your finger up on the screen or press the Back button.

### 5.4 Recently run applications

Press and hold the Home button to show the 8 applications recently run. Tap the icon in the window to open the corresponding application.



 
### 5.5 Changing wallpaper

In the main interface, press the M button and tap "Wallpaper," and choose the desire

wallpaper from "Live wallpapers", "PhotoBrowser" or "wallpapers".

### 5.6 Power control

In the main interface, tap and hold the space to pop up the "Add to Home screen" menu, and tap "Widgets→Power Control" to go to the power control interface (as shown below): (此图需更换)



A. Wireless network on/off	Tap to turn on or off the wireless network.
B. Bluetooth	Tap to turn on or off the Bluetooth.
C. Sync button	Tap to set whether the wireless network can be used together with other programs.
D. Brightness adjustment button	Tap to adjust the screen brightness.

## Chapter 6 Main Interface

Make sure the Wi-Fi wireless network connection is established to use the following functions.

### 6.1 Main interface



After booting and unlocking, you can go to the main interface (as shown below).

A. Notification	Tap the space in the taskbar to show the date. Tap and hold this taskbar and scroll down to see notifications.
B. Quick search choice	Tap to choose a search choice.
C. Quick search box	Tap to pop up the input keyboard.
D. Voice Search	Tap to enter voice search.
E. Home button	Tap this icon to return to the main interface
F. Wi-Fi signal	After the Wi-Fi network connection is established.

indication	the signal indication icon appears. When the Wi-Fi network is disconnected, the icon disappears.
G. Battery info	Display the current remaining battery level
H. Time display	Display the system time
I/J. Volume adjustment	Tap to adjust the volume
K. Back	Tap to return to the previous level
L. Menu button	Tap this icon to open the corresponding menu
M. Main interface	Tap this icon to go to the main interface
N. Applications	Tap this icon to go to the "Applications" interface
O. Interface switching	Tap to switch between interfaces Tap and hold to display the thumbnails of all Interfaces

## 6.2 Applications interface

Tap the "Applications" icon at the right of the main interface to go to the applications interface, as shown below:



### **6.3 Browser**

Open the browser to enjoy a colorful experience. You can also access news, weather forecast, and sports or traffic information when needed.

#### **6.3.1 Opening browser**

In the main interface, tap "Browser" to open a webpage.

Tip: When you tap a webpage link in an e-mail or message, the browser will be opened automatically.

#### **6.3.2 Going to a webpage**

1. Type a URL using the keyboard.
2. Tap the "Search" button at the bottom right of the virtual keyboard to open a webpage.

#### **6.3.3 Setting a home page**

1. Press the M button and tap "More->Setting->Set home page."
2. Enter the URL of the webpage or tap "use current page" as home page and tap "OK." Tap the Back button to return to the previous page. Press the M button, and tap "Windows" to close the currently browsed page, and you can go to the newly set home page.

#### **6.3.4 Browsing a webpage**

A browser provides many functions, allowing you to browse a webpage as you do on a PC:

You can simultaneously open several pages and tap one of them to browse;

You can slide your finger around the screen to browse other areas of webpage;

You can also zoom in or out of a webpage for easier browsing;

Press the Back button to return to the previous page;

Press the Menu button to display menu options.

#### **Playing on webpage**

Slide your finger on the screen to enable zoom control.





**Open new browser window**

You can open several browser windows, allowing you to browse between several websites easily. Up to 8 browser windows can be opened.

To open a new window, press the M button, and tap "New Window" to open a new browser window and go to the preset home page.

Tip: If more than two browser windows have been opened, press the M button, and tap "Windows" to add more browser windows.

**Switching between browser windows**

1. In the browser interface, press the M button, and tap "Windows."



2. Tap a URL shown in the window list to switch to the selected webpage. Tap "X" to close the open window.

#### **Selecting link in webpage**

The selected link will be put in an orange box.

- Tap it to open a webpage.
- Tap and hold to open the Actions menu, bookmark links, save links, share links, and copy link URL.

#### **Finding text on a webpage**



1. When browsing a webpage, press the M button and tap "More->Find on Page"
2. Type the item to be found. After the content is typed, the shade of the text of the matches is highlighted in green. Tap "⏪" or "⏩" to skip forward or backward one match. Tap "⏹" to finish finding.

#### **6.3.5 Managing bookmarks**

Bookmarks can be stored while browsing a webpage. In the browser interface, press the M button and tap "Bookmarks" to go to the bookmark management interface where there are three tabs: Browser, Most Visited, and History.



#### Adding bookmark

1. Open the webpage you want to bookmark.
2. There are ways of bookmarking:
  - Press the M button, tap the "Bookmarks" button, and tap "Add" at the top of the bookmark interface.
  - In the Bookmark tab, press the M button and

tap "Bookmark last-Viewed Page."

- Press the M button, tap "More" and tap "Add Bookmark."

4. Edit the name of the bookmark if necessary and tap "OK" to add a bookmark.

#### Opening bookmark

1. In the browser interface, press the M button, and tap "Bookmarks."
2. In the bookmark interface, perform any of the following steps to open a bookmark:
  - Tap the bookmark you want to open.
  - Tap and hold the bookmark you want to open, and tap "Open" or "Open in new window."

#### Editing bookmark

1. In the browser interface, press the M button, and tap "Bookmark."
2. In the bookmark interface, tap and hold the bookmark you want to edit.
3. Tap "Edit Bookmark" in the options to show the Edit Bookmark window.
4. Enter your desired changes and tap "OK" to finish editing.

#### Using bookmark

In any tab, tap and hold a website option in the list to pop up the Actions option: Open, Open in New Window, Add Shortcut to Main Screen, Share Links, Copy Link URL, Delete bookmark, and set as Home Page.

#### 5.3.6 Other functions

In the browser interface, press the M button, and tap "More" to perform more

operations: Add Bookmark, Find on Page, Select Text, Page info, Share  
Webpage, Download, Settings, etc.

**Setting options:**

page content settings

Text size	Tiny, Huge, Small, Normal, and Large are selectable.
Default zoom	Far, Middle, and Close are selectable.
Open pages in overview	Show overview of newly opened pages
Text encoding	Select the encoding type of text
Block pop-up windows	Select whether the pop-up window should be blocked.
Load images	Display images on web pages
Auto-fit pages	Format web pages to fit the screen
Landscape-only display	Display pages only in the wider, landscape screen orientation
Enable JavaScript	Enable JavaScript language
Enable plug-ins	Allow plug-ins in a webpage
Open in background	Open new windows behind the current one
Set home page	Set a webpage URL

Privacy settings

Clear cache	Clear locally cached content and databases
Clear history	Clear the browser navigation history
Accept Cookies	Allow sites to save and read "Cookie" data
Clear all Cookie data	Clear all browser Cookies
Remember form data	Remember data I type in forms for later use
Clear form data	Clear all the saved form data
Enable location information feature	Allow the website to access your location Information

Cancel location access	Clear location access for websites
------------------------	------------------------------------

Security settings

Remember passwords	Save usernames and passwords for websites
Clear passwords	Clear all saved passwords
Show security warning	Show warning if there is a problem with a site's security

Advanced settings

Set search engine	Select a search engine
Website settings	View advanced settings for individual websites
Reset to default settings	Clear all browser data and reset all setting to default
User agent	Select a agent.

 
**6.4 Video player**

In the main interface, tap "Video Player" to go to the video file list.



**6.4.1 Video playing**

In the file list, slide your finger up and down to find the videos you want to play. Tap them to play.

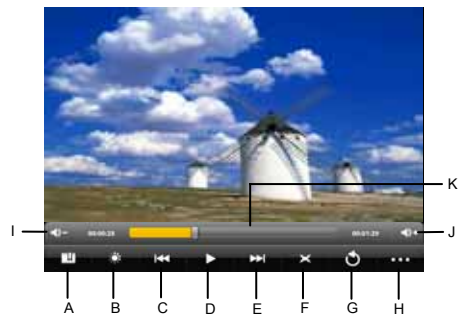

Tap the screen to show the Hide menu:

A. Add video bookmark		B. Adjust screen brightness
C. Tap: Previous video file Tap and hold: Rewind		E. Tap: Next video file Tap and hold: Fast forward
D. Play/pause		G. Return to the video list
F. Screen extension: Tap to select Full Screen, Normal, 16:9, 4:3		I/J. Decrease/increase volume
H. More	Delete bookmarks and play from the beginning of the title	Tap this option to delete the video bookmarks and play from the beginning of the title
	Clear bookmark	Delete the video bookmarks and continue playing
	Play mode	Select Repeat mode
	Help	Tips button function

	Return	Return to the Play interface
K. Play progress bar	Tap any position of the play progress bar to skip to this position; tap and hold it to move to any position to continue playing.	

Note 1: It takes a longer time to play a larger video file. Convert video files that exceed the max. resolution supported by the unit.

Note 2: For some supported video sources, a few video files that are partly damaged may not be played by the unit. Convert them on the PC and play the converted files by this unit.

Note 3: This product does not guarantee that all kinds of video files are supported. While some are only recognizable in the system and played, we do not promise to provide further support or services; advanced features, such as fast forward and rewind, may not be used for individual video files.

#### 6.4.2 Delete video

In the video file list, tap and hold the video you want to delete, and tap "Delete->Yes" to delete the video file.

#### 6.5 Audio player

 
In the main interface, tap "Audio Player" to go to the audio file list.



Artists	C. Sort by "Artist"
Albums	Sort by "Album"
Songs	Display the all music stored on built-in Flash memory and TF card.
Playlists	Display the play list
Now playing	Go to the currently played music file

#### 6.5.1 Playlist

In the music file list, tap "playlists" to go to the playlist.

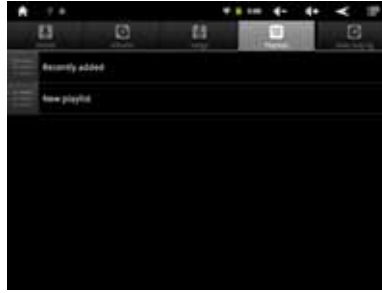

Tap and hold "Recently added" to play or edit the time of the "Recently added" list.


In the music file list, tap and hold a song or a folder, then tap "Add to playlist" to add the song to a new playlist or other playlist.

Tip: You cannot delete the "Recently added" list.

#### 6.5.2 Playing audio

 Tap the music you want to played and go to the music playing interface.



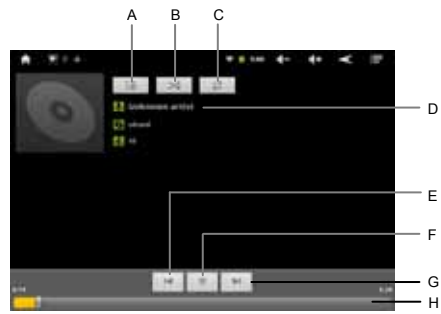

A. Play list	Tap to open the playlist.
B. Shuffle	Playing songs at random mode.
C. Play mode	Repeat playing all songs in the current directory once.
	Stop after the end song is played.
	Repeat playing the selected single song.
D. File info	When the network connection is established, tap it to check the link information about the currently played music file.
E. Rewind/previous	Tap: Switch to the previous song
	Tap and hold: Rewind
F. Play/pause	Play/pause music
G. Fast forward/next	Tap: Switch to the next song
	Tap and hold: Fast forward
H. Play progress bar	Tap any position of the play progress bar to skip to this position; tap and hold it to move to any position to continue playing.

### 6.5.3 Sound effects

In the music playing interface, press the M button and tap "Sound effects" to go to sound effects settings interface.

插入图片

Tap "User EQ" to go to User EQ Select interface. Set your favorite sound effects by sliding your finger left and right on the sound effect bar.

插入图片

Note: Few MP3/WMA audio files that are specifically encoded may not be played by the product. Convert them using the audio conversion tool and download the converted files to the product to play.

### 6.6 Picture browser

In the main interface, tap "Photo Browser" to go to the picture list.



Tip: The system will automatically search for all pictures on Flash memory and SD card and display them as folders.

### 6.6.1 Browsing pictures

In the directory, tap the pictures you want to browse to open the picture browsing interface.

Tap the screen to pop up or hide the menu:

A. Slideshow	Automatically browse pictures.
B. Menu	Tap to show the menu options.
C. Zoom in	Zoom in on the picture. When it is zoomed in, slide left/right/up/down on the screen to move the picture left/right/up/down.
D. Zoom out	Zoom the picture out to normal size if it has been zoomed in.



A

B

C

D

Press the M button to show the menu options



Share	Share the picture through Picasa, Bluetooth,Gmail or Email.
Delete	Delete the current picture.
Details	Show the name of the picture file, its resolution, etc.
Set as	Set the picture as desktop background.
Crop	Cut the picture.
Rotate right	Rotate the picture 90° clockwise. Tap this button to rotate the picture clockwise in the following order: 90°, 180°, 270°, Restore.
Rotate left	Rotate the picture 90°anti-clockwise. Tap this button to rotate the picture anti-clockwise in the following order: 90°, 180°, 270°, Restore.

Tip: When browsing pictures, you can slide your finger to the left or right rapidly to switch to the previous or next picture.

#### **6.6.2 Picture file operation**

In the picture list, tap and hold a picture or a folder to pop up the file operation list.



Select All	Select all the pictures. After select you can share, delete or rotate the selected pictures.
X Items	Show the number of the selected picture.
Deselect All	Cancel all the selected pictures.
Share	Share the picture through Picasa, Bluetooth, Gmail or Email.
Delete	Delete the current picture.
Rotate right	Rotate the selected picture 90° clockwise. Tap this button to rotate the picture clockwise in the following order: 90°, 180°, 270°, Restore.
Rotate left	Rotate the selected picture 90° anti-clockwise. Tap this button to rotate the picture anti-clockwise in the following order: 90°, 180°, 270°, Restore.

## Chapter 7 Applications

In the main interface, click "Applications" on the menu sidebar to go to the "Applications" interface in which the installed applications will be shown. Click the "Home" icon to return to the main interface.



### 7.1 Moving a program icon of the interface

To move a program icon to other interfaces, tap and hold the program icon and the screen will switch to another interface. At this time, place the icon to the desired position and release.

### 7.2 Deleting a program icon

In the applications interface, tap and hold the program icon you want to move. When the "Delete" icon at right of the screen appears, tap and hold the icon, and drag it to "Delete" to delete it.

### 7.3 Restoring a program icon

Tap and hold the space of the main interface, tap "Shortcuts-Applications", and tap a program to be deleted.

### 7.4 Adding a program icon

Tap and hold the space of the main interface, tap "Shortcuts-Applications," and tap a program icon you want to add to the interface; or press the M button on the product to

show the menu options and tap "Add" to add program icons.

#### **7.5 Adding a Widget**

Tap and hold the space of the main interface, and tap the icon you want to add to the desktop.

#### **7.6 Creating a folder**

Create a folder in the interface to store the application icons or controls.

Tap and hold the space of the main interface, and tap "Folders" to create a folder in the interface. Tap and hold a program icon on the screen and drag it to the folder.

Tip: To delete a folder, refer to the steps described in "Deleting a program icon."

#### **7.7 Renaming a folder**

Open a folder, and tap and hold the title bar to pop up the Renaming Dialog where you can enter a name, and tap OK.

## Chapter 8 Common Tools

### 8.1 E-mail

When you use the e-mail for the first time, you need to create an e-mail account first.

1. Enter the address and password for your e-mail account and tap "Next."
2. Select an account type. Tap "POP3" for a POP3 account.



3. Tap "POP3 Server" and enter "pop.+ account suffix." For example, if the e-mail account is 123456@163.com, enter "pop.163.com" and tap "Next."

Note: If you select "IMAP Account" in step 2, tap "IMAP Server" and enter "IMAP.163.com."

4. Tap "SMTP Server," enter "smtp.+ account suffix," for example "smtp.163.com", and tap "Next."





5. Enter the account name, and username to finish settings.

Note: Since the e-mail service providers may vary, configure the server settings based on the actual e-mail account. This product can support the accounts provided by the popular e-mail service providers, such as yahoo, sohu, etc.

#### **8.1.1 Opening e-mail**

In the "Tools" interface, tap "E-mail" to enter.

Tip 1: By default, this product can be used to browse the inbox after the e-mail application is performed. All e-mails you received will be put into the inbox.

Tip 2: Tap "Load more messages" to send or receive a new e-mail and synchronize your e-mails with your Internet e-mail accounts.

#### **8.1.2 Creating and sending e-mails**

1. Press the M button and tap the "Compose" button.

2. In "Receiver," enter the e-mail address of the receiver.



Tip: If you want to send a carbon copy or a blind carbon copy e-mail to other recipients, the M button and tap "Add Cc/Bcc."


3. Enter the e-mail subject and compose your e-mail.

Tip: If you want to add a picture attachment, press the M button, tap "Add attachment," select the picture you want to attach, and tap it to confirm or tap the "X" button to cancel attaching.

4. After composing your e-mail, tap "Send."

Tip: When you compose your e-mail, tap the "Save as draft" or "Back" button to save your e-mail to Draft.

### 7.1.3 Receiving and reading e-mail

When a new e-mail is received, the notification area in the status bar will show the new e-mail (  ) icon.

Perform one of the following to read your e-mail:

- Tap and hold the status bar at the top of the screen, slide your finger down to open the notification panel, and tap a new e-mail to read.
- Tap the unread e-mails in the Inbox to read.

#### 8.1.4 Replying or forwarding e-mail

1. Open an e-mail, and tap "Reply," "Reply All."
2. Or open an e-mail, press the M button, and tap "Forward," "Reply," "Reply All."
3. If you select "Reply," "Reply All," enter what you want to reply.  
If you select "Forward," enter the address of the recipients.
4. Tap "Send" to reply or forward the e-mail.

#### 8.1.5 Managing e-mail

Tap and hold an e-mail to show the menu:

Open	Open and read an e-mail
Delete	Delete an e-mail
Forward	Forward an e-mail
Reply All	Replay all with an e-mail
Reply	Reply the sender with an e-mail
Mark as read	The unread e-mails in the Inbox are displayed with a green line to the left.

#### 8.1.6 Create new account

In the e-mail interface, press the M button, and tap "Accounts" to display the set e-mail account. Press the M button and tap "Add Account" to add a new e-mail account.

Note: You can set several e-mail accounts. The default account will show whenever you perform e-mail applications.

#### 8.1.7 Account settings

In the e-mail interface, press the M button, and tap "Account settings."

Account name	Display and change an account name
Your name	Display and change the sender's name of the account.
Signature	

 
Inbox check frequency	Set the interval of receiving e-mails. There are six options available: Never, Every 5 minutes, Every 10 minutes, Every 15 minutes, Every 30 minutes, and Every hour.
Default account	Send e-mails from this account by default.
E-mail notifications	Notify in status bar when e-mail arrives
Select ringtone	Set the ringtone used when an e-mail is received
Incoming settings	Display and change the receiving server settings
outgoing settings	Display and change the sending server settings

#### 8.1.8 Delete e-mail account

In the e-mail interface, press the M button to display the e-mail menu. Tap "Accounts." Tap and hold the e-mail account you want to delete until the account options appear, tap "Remove account," and tap OK.

#### 8.2 Recorder

In the "Tools" interface, tap "Sound Rec" to go to the record interface.

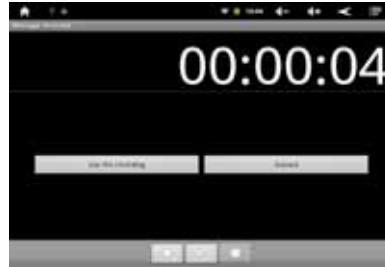

Tap "■" to start recording or "■" to stop recording.

After recording is finished, tap "▶" to play the previously recorded file. Tap "Use

this recording" to save the previously recorded file or tap "Discard" not to save the previously recorded file.

Note 1: The recorded file can be automatically saved in the "RECORD" folder so that you can find them in the AudioPlayer "playlists ->My recordings" to play.

Note: The naming rule of the recorded file: RECORD\_Year+Month+Date\_Serial Number.

### 8.3 Alarm

In the main interface, tap "Alarm Clock" to enable the alarm function.



Tap the icon of Clock to enable the alarm function.



### 8.3.1 Set alarm

1. Tap the preset alarm to set the selected alarm, or tap "add alarm" to add new alarm.
2. Tap "Time", and set the time for the alarm. Tap "+" or "-" to adjust the time, and tap "Setting" to complete.
3. Tap "Repeat," select the date you want the alarm to ring, and tap "OK."
4. Tap "Ringtones" and select alarm ringtones. After selection, the ringtone will be played temporarily.
5. Tap the "Label" , set the name of the alarm.
6. Tap the "Done" button to go back to the alarm interface.

Tip: Tap  to temporarily disable the alarm.

Note: When it is shut down, the alarm is not affected.

### 8.3.2 Add alarm

If you want to add an alarm, press the M button, and tap "Add alarm." The number of alarms you can add is unlimited.

### 8.3.3 Delete alarm

Tap and hold the alarm you want to delete, and tap "Delete Alarm -> OK" to delete it.

### 8.3.4 Alarm settings

Press the M button, and tap "Settings" to show the settings interface.

Alarm in silent mode	Play alarm even the unit is in silent mode.
Alarm volume	Set the volume of alarms.
Snooze duration	Set the ring interval for the alarm.
Snooze button effect	Set what these buttons do when pressed during an alarm.

### 8.3.5 Changing alarm display

In the alarm interface, tap the clock to go to the clock interface.

How to change: Quickly slide your finger to the left or right on the clock to show more clocks and tap your desired one to change.

Note: To change the format of the date and time of the alarm, see the following section

"Date and Time."

#### 8.4 Calculator

In the applications interface, tap the "Calculator" icon to go to the calculator interface.

You can perform the basic math operations by this calculator.

#### 8.5 Explorer

In the main interface, tap "Explorer" to go to the Explorer interface that includes the following options:


Home	Tap to return to the root directory.
Level Up	Tap to return to the upper level directory.
Multi	Tap to select multiple files
Editor	Allow you to Copy, delete, move, paste or rename a file.
Back	Back to the previous operation
Next	Back to the next operation

Note: This product complies with the fat32 file system. When you name a file, do not use special characters, or you may not rename it later.

#### 8.6 Installing applications

1. Copy the setup file to your PC. (Make sure the format of the setup file is xxx.apk format supported by this product.)
2. Connect the device to PC using USB cable.
3. Copy the setup file xxx.apk to the device.
4. Disconnect the device and PC.
5. Turn on the device and activate Explorer.
6. Locate the xxx.apk file and tap it to open.
7. Install the application according to the on-screen prompts.
8. After completion, you will see the installed application in the applications interface.

## 8.7 Uninstall application

1. Tap the "  " icon at the right of the main interface to open the applications interface.
2. Select "Settings" to go to the settings menu.
3. Select "Applications."
4. Select "Manage Application".
5. Tap the application you want to uninstall.
6. Tap "Uninstall".
7. Tap "OK" to start uninstalling.

Tip: You cannot delete the pre-installed factory default applications on this product.



## Chapter 9 Settings

In the main interface, tap the "Settings" icon or press the M button to show the settings button to go to the "Settings" interface.

### 9.1 Wireless & network settings

#### 9.1.1 Wi-Fi network connection

##### Connection

1. Tap "Wi-Fi" to enable Wi-Fi and this product scans for available wireless networks.
2. Tap "Wi-Fi Settings" and the Wi-Fi network zone shows the name and security settings (open or encrypted network) of the detected wireless networks.
3. Tap one to connect to it. When you select an open network, the product can connect to it automatically. If you select an encrypted one, you have to enter a password and tap "Connect".

Note 1: When you connect Wi-Fi for the first time and the prompt "Failed" appears, disconnect Wi-Fi and reconnect it.

Note 2: You do not have to re-enter the password when you re-connect to the previously connected wireless network that is encrypted, unless you reset the product to the factory settings.

Note 3: Auto search for Wi-Fi is performed, i.e., no additional steps are required to connect to the Wi-Fi network. For some closed wireless networks, the username or password may be required.

Note 4: The availability of Wi-Fi signals may depend on the amount, infrastructure, and objects through which a signals must pass.

4. Tap "Wi-Fi" to disconnect the network.

##### Scan

 
Press the M button to configure the "Scan" or "Advanced" settings for Wi-Fi network.

Scan: Search for the available wireless networks in the vicinity.



**Advanced settings**

1. Press the M button, and tap "Advanced" to set the network address within the IP locale.
  2. Select "Use static IP" to configure the network settings and enter the IP address, gateway, network mask, and DNS1 required for Wi-Fi network connection.
- After configuration, press the M button, tap "Save," and press the "Back" button to exit the interface.

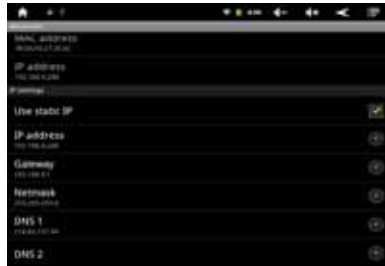


Note: When you use dynamic IP addresses, you do not have select "Use static IP addresses" to configure the network settings.

3. After "IP settings," go back to the Wi-Fi settings interface and tap the wireless network you want to connect to. After the network connection is successfully established, you can login to the network to surf the Internet.

#### Checking status of wireless network

You can check the status of the currently connected Wi-Fi through the following methods:

- Status bar

After the product is connected to the wireless network, the Wi-Fi indicator on the top of it lights up and the status bar shows the Wi-Fi icon  and signal strength (the number of the bars lighting up).

- Wi-Fi network

In the network connection interface, tap "Wi-Fi settings" and tap the currently connected wireless network to show the information, such as name, status, speed, signal strength, and security.



Tip: If you want to remove the network settings, tap "Forget" in this window; if you want to connect to this network, the settings above should be configured again.

#### Connecting to other Wi-Fi networks

1. In the network connection interface, tap "Wi-Fi settings." The detected Wi-Fi networks will be shown in the Wi-Fi network zone.

Tip: If you want to manually scan for available networks, press the M button and tap "Scan."

2. Tap another Wi-Fi network to connect to it.

Tip 1: If the network you want to connect to is not listed in the detected network list,

Tap "Add Wi-Fi network," enter the corresponding network settings, and tap "Save."

Tip 2: Not all wireless networks are connected to the Internet. Some wireless

networks may be connected to several computers and cannot be connected to the Internet.

### 9.1.2 Bluetooth connection

#### Turn on Bluetooth

1. Tap "Bluetooth" to enable Bluetooth.
2. Tap "Bluetooth settings" and the Bluetooth zone show the name of the available Bluetooth device.

截图1:

#### Device name

Tap to change the name of your device.

#### Discoverable

Tap to make your device discoverable so that the other device can search to your device. After 120 seconds, your device will recover to non-discoverable.

#### Scan for devices

Tap to search for the available Bluetooth device in the vicinity.

#### Pairing

Tap one of the available devices. The devices which you want to connect will be required to input pairing code. Input 0000 or 1234, and the breeze will pop up the "Bluetooth pairing request" window. Input the same pairing code and tap "Ok" to finish pairing.

#### Connection

If you want to use Bluetooth keyboard or headset, tap and hold the name of the device to connect.

## 9.2 Settings

### 9.2.1 Wireless & networks

Wi-Fi	Turn on or off the Wi-Fi network.
Wi-Fi settings	Enter Wi-Fi settings. Refer to "8.1 Network connection" for details.

<b>Bluetooth</b>	<b>Turn on or off the Bluetooth.</b>
<b>Bluetooth settings</b>	<b>Enter Bluetooth settings. Connect with Bluetooth headset, Bluetooth Keyboard and other Bluetooth device.</b>

### 9.2.2 Sound

Volume	Media	Set the media volume for music and video. Tap the volume bar to adjust the volume level.
	Alarm	Set the alarm volume by tapping the volume bar to adjust the volume level.
	Notification	Set the notification volume by tapping the volume bar to adjust the volume level.
Notification ringtone		Set your default notification ringtone.
Audible selection		Play sound when making screen selection
Screen lock sounds		Play sounds when locking and unlocking the screen.

### 9.2.3 Display

Brightness	Adjust the screen brightness. Tap the brightness bar to adjust the volume level and tap "OK" to save.
Auto-rotate screen	When unit is turned on/off or rotated, the Landscape/Portrait switching feature

	is enabled. This product supports 4-direction rotation display.
Animation	Display animation when a window is opened or closed.
Screen timeout	Select the delay time before the screen automatically closes. There are six options available: 15 seconds, 30 seconds, 1 minute, 2minutes, 10 minutes, and 30 minutes.

#### 9.2.4 Location & security

Use wireless networks	Location determined by Wi-Fi and/or mobile networks; you can check your location in an application (such as Google Map) if it is enabled.
Set up screen lock	Lock screen with a pattern, PIN, or password.
Visible passwords	After this feature is enabled, the password is shown when the keyboard is used to type it.
Use secure credentials	Allow applications to access secure certificates and other credentials.
Install from SD card	Install encrypted certificates from SD card
Select device administrators	Add or remove device administrators.
Set password	Set or change the credential storage password.
Clear storage	Clear credential storage of all contents an reset its password.

**9.2.5 Applications**

Unknown sources	After enabled, this allows installation of non-Market applications.
Manage applications	Manage and delete the installed applications: For installed software, clear data, cache, and default, and force stop.
Running services	View and control currently running services.
Storage use	View storage used by applications.
Battery use	View the applications using the battery.
Development	Set the development options of the application: Includes USB debugging, stay awake (the screen will not enter hibernation mode during charging), allow mock locations.

**9.2.6 Accounts & sync**

Background data	After enabled, applications can sync, send, and receive data at any time.
Auto-sync	Allow applications sync data automatically.
Add account	Add corporate or Google account.

**9.2.7 Privacy**

Back up my settings	Back up my settings of the device
Automatic restore	Restore backed up settings or other data when reinstalled an application.
Factory data reset	Erases all data on device

**9.2.8 Storage**

SD card	Total space	Show the total capacity of the SD card. When an SD card is inserted, the total actual capacity of it will be shown. When an SD card is not inserted, it shows unavailable.
	Available space	Show the free space on an SD card. When an SD card is inserted, its total actual free space will be shown. When a TF card is not inserted, it shows unavailable.
	Unmount SD card	Safely remove the SD card locally.
	Erase SD card	Erase all data on the SD card.
Internal Memory	Total space	Show the total capacity of the Internal Memory.
	Available space	Show the remaining free space of the built-in Flash memory.
	Erase Internal Memory	Erases all data on the Internal Memory.
System Memory	Available space	Show the available storage space of the system

**9.2.9 Search**

Google search settings	Set whether the suggestions provided by Google are shown as you enter keywords.
Searchable items	There are five options available: Application, browser, slow search for the provided suggestion, garbage suggestion, and multi-color notes.



Clear search shortcuts	Clear shortcuts to recently chosen search results
------------------------	---

**9.2.10 Language & keyboard**

Select language	Show the text in corresponding language based on the selection.
Use dictionary	Add & remove words form user dictionary
Android keyboard	Tap to set onscreen keyboard.

**9.2.11 Voice input & output**

Voice recognizer settings	Tap to set language, SafeSearch, block offensive words and show hints.
Text-to-speech settings	Tap to set the language-specific voice for the spoken text, set the speed at which the text is spoken, and ect.

**9.2.12 Accessibility**

Tap to select the information for your input.

**9.2.13 Date & time**

Automatic	After it is enabled, use network-provided time values.
Set date	Set year, month, day.
Select time zone	Select the time zone of each major cities in the world
Set time	Set hour, minute, second
Use 24-hour format	Show 24-hour or 12-hour format
Select date format	Select the format used for date display.

#### 9.2.14 Touch screen calibration

When the touch screen is not sensitive or the cursor drifts, you can use the calibration settings.



Set the touch points according to the steps in the on-screen prompt.

Tip: After the product is used for a period of time, it is recommended to calibrate the touch screen for operational accuracy and sensitivity.

#### 9.2.15 About device

This option allows you to check information about the run state, battery usage, legal information, model number, firmware version, kernel version and version number.

## Chapter 10 Using Micro SD (TF) Card

The external card supported by this product is a Micro SD card, through which the capacity of storage can be expanded. Meanwhile, Insert the silk screen chip out of the Micro SD card into the card slot until it is fully inserted into the product. When you remove it, press the Micro SD card downward to eject it.

**Note:**

- Do not bend the card. The chip on the card should be protected cautiously;
- Keep the chip clean and avoid dust and chemicals.
- Format the new Micro SD card first;
- Avoid insertion and removal of the Micro SD card during its use to avoid damage to the data on card;
- This product does not support the write-protect feature of the Micro SD card. Therefore, back up the files on card before deleting data to avoid file loss due to malfunction.

## Chapter 11 Connecting to USB Drive

Insert your USB drive into the OTG port at the right side of the product. Open Explorer and you can see the "USB" directory. This directory is your USB drive. Tap USB to check the files on USB drive. Note that when this unit is connected to the USB drive, it should shutdown; avoid insertion and removal when the files on USB drive are played to avoid damaging the data on USB drive.

## Chapter 12 About the Battery and Power

This product uses a built-in 4800mAh polymer lithium battery to charge the battery. When the product operates individually, power is fed from the lithium battery. When the provided charger is inserted, the charger is powered automatically via the charger.

When you charge this product for the first time, it is recommended to shutdown the product and continuously charge it for more than 8 hours for optimal battery use.

For the use of a new product, it should be fully charged and discharged for the first three times to activate it.

If charging is performed when the product is turned on, it takes a longer time to charge.

Charging time: It typically takes about 7 hours to charge. The actual time depends on the remaining battery level.

It is recommended to fully charge and discharge the product once every 3 months to maintain the lithium battery.

Do not plug the charger into the electric outlet when the product is not connected.

When it will not be used for an extended period of time, fully charge the battery. It should be charged and discharged every three months.

When the battery is too hot, the charging protection circuit will automatically close the charging circuit to protect the lithium battery.

When the battery is low, charge it first. When it is running out of power, charge the machine using the charger and connect it to PC. Charge it if:

- A. The battery charging icon indicates that battery is exhausted.
- B. The system automatically shuts down. It also shuts down quickly after reboot.
- C. After you press buttons, there is no response.

## Chapter 13 Firmware Updating / Resetting to Factory

1. Go to for the website ([www.aoc.com](http://www.aoc.com)) to download the current /latest firmware for your device,  
(current-<model-ID>.img).
2. Copy the downloaded firmware to the built-in flash in the product.
3. Safely disconnect the product and PC and the screen shows a prompt similar to one shown

below: (下图替换)



Tap "Install."

After a short while, the updating message is displayed..  
It may take a few minutes, please be patient.



4. After successful upgrade, the system will automatically reboot and the downloaded version

firmware takes effect.

Note : During the upgrade / resetting process, it is best to have the device plugged into electric power, using the supplied power adapter.

## Chapter 14 Frequently Asked Questions

- **Product cannot be turned on or boot abnormal**

Check if the battery is charged

Connect the power adapter and check it again.

Tap the Reset button on the side of the product and turn it on.

Shutdown, then press the "volume + " button and Back button at the same time till insert

charger. Enetr into Android system recovery utility interface and choose "Factory reset". It will

restore factory default compulsory and erase all data on device.

Note: In Android system recovery utility interface, move cursor through volume "+" and "-"

buttons and the M button is used for entering.

If it cannot be turned on after charged and reset and restore factory default compulsory, contact our seller.

- **No sounds from headset**

Check if the volume is set to 0

Check if the headset is properly connected

- **Loud noises**

Check if the plug of the headset is clean. Dirt may result in noise.

Check if the file is damaged. Play other music files to confirm this. If it is damaged, it may cause loud noise or sound skipping.

- **Screen shows garbled codes**

Check if the correct language is set. Set your language in (System)=>(Language Selection)

- **Cannot download files**

Make sure that the computer is properly connected to the product

Make sure that the storage space is not full

Make sure that the USB cable is not damaged

- **Connect to Wi-Fi but cannot surf the Internet**

Make sure that there is wireless network nearby.

If static IP addresses are needed, make to enter a valid IP address. If dynamic IP addresses are used,

static IP addresses should be disabled while the network is connected.

- **Touch the keyboard on the touch screen and the response is not the expected / desired result.**

Perform touch screen calibration

For better performance, use a pen or your fingernail

- **Cannot be connected to computer**

Make sure the product is turned on

Make sure the product is not in sleep mode

Make sure to use the proper USB cable



## Chapter 15 Troubleshooting

### 1. When I view JPEG pictures, some cannot be viewed. Why?

Some JPEG files may have a non-standard resolution, they may not be viewed in full screen, or zoomed in or out. If an error prompt appears, press the ESC button to exit or tap the Reset button on the side of the product to solve the problem.

### 2. The product cannot play my videos. Why?

Make sure the video format is supported by this product. Some video files are encoded in different formats and versions. We cannot guarantee that all formats are playable.

### 3. Why does image lag occurs when the video files are played?

Upgrade system software to the latest version.

In addition, this also depends on the video file, high bit-rate streaming video, and high resolution video:

① High bit-rate streaming video. For example, the motion scenes of some videos have a bit-rate of 5-6M and image lag may occur.

② High resolution video. If the max frames are reached, non-synchronization may occur.

③The file size cannot exceed 2 GB.

### 4. A USB device (USB drive) is inserted into the product at the same time as a PC is connected and the product indicates that the USB drive is removed and PC cannot detect the USB drive.

When the machine is connected to the USB drive, the system will unload the USB drive automatically to prevent files from being deleted accidentally on PC, when it is connected to PC via MINI USB port.

### 5. Product does not respond to operations.

Some various reasons, such as misuse, may cause the product to be unable to shutdown or render the buttons and touch screen unable to respond. You can tap the Reset button on the

side of the product (using a paper-clip), or press and hold the Power button for 6 seconds to force the

product to shutdown. After restarting, the problem is usually solved.

**6. The space available on PC is not consistent with that shown on the tablet.**

The space on a PC is calculated by 1024 bytes while this tablet's capacity is calculated by 1000 bytes. So the actual free space of the tablet will be slightly different from indicated capacity, also the operating system uses part of the available space.

**FCC STATEMENT**

1. This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**FCC ID: Y5VMW0812**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.