

Table of Contents

CHAPTER 1 PRODUCT OVERVIEW	1
1.1 Functions overview	1
1.2 Notes	1
1.3 Packaging list	2
1.4 Technical specifications	3
CHAPTER 2 BUTTONS AND APPEARANCE	5
CHAPTER 3 EASYCONFIG	7
CHAPTER 4 BASIC OPERATIONS	10
4.1 Booting up	10
4.2 Shutdown	10
4.3 Network	10
4.4 Locking key	11
4.5 Reset	11
4.6 Connecting to PC and file transfer	11
4.7 Volume adjustment	11
4.7.1 Adjusting the media volume	12
4.7.2 Adjusting the alarm volume	12
4.7.3 Adjusting the notification volume	12
4.8 Charging	12
4.9 Touch screen operations	13
4.10 HDMI output	13
4.11 Search icon	14
CHAPTER 5 COMMON FEATURES	14

5.1 Landscape/Portrait display switching	14
5.2 Using virtual keyboard to type	15
5.2.1 Android keyboard	15
5.2.2 Editing text	15
5.3 Notification panel	16
5.3.1 Opening notification panel	16
5.3.2 Closing notification panel	16
5.4 Recently run applications	16
5.5 Changing wallpaper	17
5.6 Power control	17
CHAPTER 6 MAIN INTERFACE.....	18
6.1 Main interface	18
6.2 Applications interface.....	19
6.3 Browser	20
6.3.1 Opening browser	20
6.3.2 Going to a webpage	20
6.3.3 Setting a home page	20
6.3.4 Browsing a webpage	20
6.3.5 Managing bookmarks	22
6.3.6 Other functions	23
6.4 Video player	25
6.4.1 Video playing	25
6.4.2 Delete video	27
6.5 Audio player	27
6.5.1 Playlist	28
6.5.2 Playing audio	28
6.5.3 Sound effects	30
6.6 Picture browser	31
6.6.1 Browsing pictures	31
6.6.2 Picture file operation.....	33

6.7 Camera	34
CHAPTER 7 APPLICATIONS.....	35
7.1 Moving a program icon of the interface.....	35
7.2 Deleting a program icon.....	35
7.3 Restoring a program icon	35
7.4 Adding a program icon.....	35
7.5 Adding a Widget.....	36
7.6 Creating a folder.....	36
7.7 Renaming a folder.....	36
CHAPTER 8 COMMON TOOLS	37
8.1 E-mail.....	37
8.1.1 Opening e-mail.....	38
8.1.2 Creating and sending e-mails	38
8.1.3 Receiving and reading e-mail.....	39
8.1.4 Replying or forwarding e-mail.....	39
8.1.5 Managing e-mail	40
8.1.6 Create new account.....	40
8.1.7 Account settings	40
8.1.8 Delete e-mail account	41
8.2 Recorder	41
8.3 Alarm	42
8.3.1 Set alarm	43
8.3.2 Add alarm	43
8.3.3 Delete alarm	43
8.3.4 Alarm settings.....	43
8.3.5 Changing alarm display.....	43
8.4 Calculator.....	44
8.5 Explorer.....	44

8.6 Installing applications	44
8.7 Uninstall application	44
CHAPTER 9 SETTINGS	46
9.1 Wireless & network settings	46
9.2 Settings	50
9.2.1 Wireless & networks	50
9.2.2 Sound	50
9.2.3 Display	51
9.2.4 Security	51
9.2.5 Applications	52
9.2.6 Accounts & sync	52
9.2.7 Privacy	52
9.2.8 Storage	52
9.2.9 Language & keyboard	53
9.2.10 Voice input & output	53
9.2.11 Accessibility	53
9.2.12 Date & time	54
9.2.13 Touch screen calibration	54
9.2.14 About device	54
CHAPTER 10 USING MICRO SD (TF) CARD	55
CHAPTER 11 CONNECTING TO USB DRIVE	56
CHAPTER 12 ABOUT THE BATTERY AND POWER	57
CHAPTER 13 FIRMWARE UPDATING / RESETTING TO FACTORY	58
CHAPTER 14 FREQUENTLY ASKED QUESTIONS	59
CHAPTER 15 TROUBLESHOOTING	61

Chapter 1 Product Overview

1.1 Functions overview

- 8 inch wide screen True Color TFT touch screen with a high resolution of 1280*768 pixels.
- Surf the Internet wirelessly via Wi-Fi to enjoy the Internet on the go.
- Support all mainstream e-mail services for more convenient e-mail sending and receiving.
- Switching between portrait mode and landscape mode is possible through gravity sensing. Four-direction rotation display is supported.
- Shooting images or videos via 2 mega pixel front camera or 5 mega pixel pixels rear camera.
- Support Video Player, Audio Player, Photo Browser, Camera and Shelves.
- Equipped with a built-in microphone, enabling audio-recording.
- Support 1080P HDMI output.
- Eco settings enables the brightness to be freely adjusted.

1.2 Notes

- Do not use the unit in an overly hot, cold, wet, or dusty environment. Do not expose it to sunlight.
- Try not to use this unit in an environment with a strong magnetic field or static electricity.
- Avoid dropping this unit or strong impacts.
- The adapter of this product should not be dropped and splashed with liquid. Any object filled with liquid, such as a vase, should not be placed on the top of it.
- There are no user-serviceable parts inside the product. Do not dismantle this unit. Otherwise, the warranty may be voided. Contact servicing personnel if you need help.

- The battery life may vary depending on the use condition and production time.
- It is not allowed to replace the battery of the product yourself. Do not dismantle the unit yourself. Explosion may occur if the battery is not properly replaced. Contact the professional servicing personnel.
- As the workmanship of motherboard manufacturers are different from each other, it is recommend to perform charging using the adapter provided, instead of using the USB port of the motherboard, to ensure charging stability.
- The long life of a lithium battery is due to its much smaller memory effects than that of the regular Nickel-Cadmium battery. But if the lithium battery is degrading, contact the local Service Center directly.
- If the battery is improperly replaced, an explosion may occur. Only use the same brand battery or equivalent for replacement.
- The company is not liable for the data loss or deletion on machine resulting from the misuse of software, improper operation of the battery, servicing, other accidents, or other indirect loss thereof.
- The actual product may be different from that described in the Instructions due to the software update. These Instructions are for informational purposes only.
- This being a mobile product, we recommend you back-up your data regularly.

1.3 Packaging list

AOC Breeze Tablet Unit	X1
USB cable	X1
Power adapter	X1
Quick Start Guide	X1
About the Touchscreen	X1



Note: The actual accessories provided with the product may vary.

1.4 Technical specifications

Basic specifications

Model no.	MW0821
Installed OS	Android OS 2.3
Processor (CPU)	ARM Cortex-A8,Cpu Frequency Up To 1G Hz
Memory	512MB
WLAN	WI-FI IEEE 802.11b/g
Bluetooth	Bluetooth 2.1 + EDR
HDMI	
Storage capacity	Built-in 4GB Flash Memory
Expansion cards	Micro SD (TF) card, up to 32 GB.
LCD	8 inch HD TFT LCD touch screen (resistive single touch) with a resolution of 1280*768 pixels
Audio output	Headset: Stereo output; internal speakers: Mixed output.

Power specifications

Voltage	Supply voltage: 5V  Charging voltage: 5V 
Current	Max. current for playback is 1A DC. Max. current for charging is 1A DC.
Battery used	Built-in lithium-ion polymer rechargeable battery, 3.7V, 4800mAh
Power adapter	AC input: 100-240V 50/60Hz DC input: 5V 2.5A
Charging time	It takes about 7 hours for the battery to be fully charged when the provided charger is used with power-down. The

	charging time may vary depending on the remaining battery level. Note: Do not charge the battery for more than 12 hours when the charger is used.
--	--

Battery use time (Under the condition that the battery is fully charged in a normal temperature)	Audio: About 18 hours Video: About 6 hours Web browsing: About 7 hours
---	--

External dimensions

 
Dimension (L×W×H)	8.46 x 5.7 x 0.57 in (21.5 x 14.65 x 1.45 cm)
Weight	1.16 lbs (0.525kg) (with battery)
Port	Mini USB 2.0 high speed port, OTG, 3.5mm headset

Environmental conditions

Operating temperature	0°C ~ 40°C
Storage temperature	-20°C ~ 55°C
Max. humidity	90% RH (non-condensation)
Supported OS	Windows2000/XP/Windows 7/Vista, Macintosh OS X]

Note: Windows 2000+SP1/SP2 is not supported by this product. The user should upgrade to SP3 or above. This product does not guarantee all video formats are playable. Even if some formats are listed in the Instructions, they may be not properly played. This is normal.

Chapter 2 Buttons and Appearance

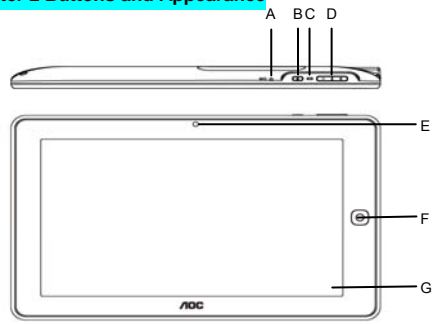

A. Built-in MIC Recording	B. Power button
C. Operation indicator	
D. Volume "+" and "-" buttons	
E. Front camera	F. Home button
G. Touch screen ("Screen")	



H. Headset jack	I. OTG port (connecting to USB drive)
J. MINI USB port (connecting to PC)	K. Reset button
L. TF card slot	M. HDMI jack
N. Power cable jack	O. External speaker
P. Rear camera	

Note 1: During operation, sounds will be automatically output from the external speaker if there is audio output.


Note 2: In the Instructions, "Press" means pressing a button while "Press and Hold" means continuously pressing a button for 2 ~ 3 seconds.

Note 3: The Volume "+" and "-" icons and Menu icon function as the "volume adjustment button" and "menu button" on the top and front of the unit.


You can make selections based on your preferences. They will not be described in the sections below.

Chapter 3 EasyConfig

 
When first using the tablet breeze, the EasyConfig window will pop up. It includes Language, Date/Time and Wi-Fi settings.

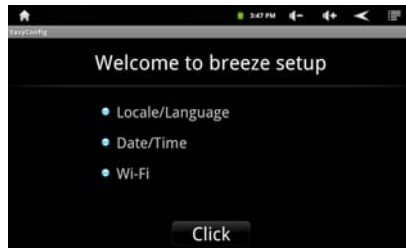

 
Tap "Click" to setup language, then choose a language you want. If the settings take effect, the "Default Language" bar will show the choice.

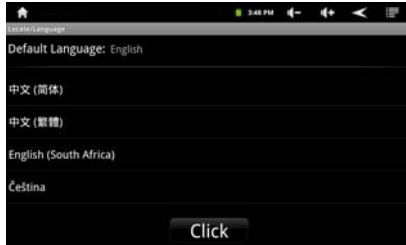

 Tap "Click" to go to "Date & time settings" interface to setup date, time zone and time.

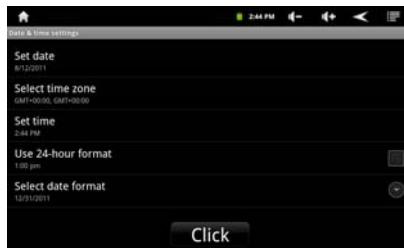

 Tap "Click" to go to the Wi-Fi settings interface.

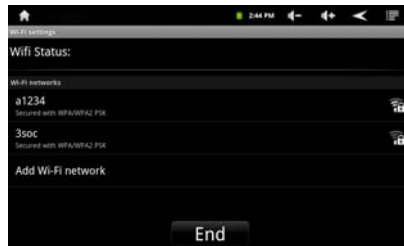

Tap the menu icon to configure the "Scan" or "Advanced" settings for Wi-Fi network.

Scan: Search for the available wireless networks in the vicinity.

Advanced settings:

1. Tap "Advanced" to set the network address within the IP locale.
2. Select "Use static IP" to configure the network settings and enter the IP address, gateway, network mask, and DNS1 required for Wi-Fi network connection.



After configuration, **tap the menu icon**, tap "Save" to exit to the Wi-Fi settings interface with saving.

Note: When you use dynamic IP addresses, you do not have select "Use static IP addresses" to configure the network settings.

Tap the wireless network you want to connect to. If the connection status under the name of wireless network shows "Connected", the network connection is successfully. Then tap "End" to finish the easyconfig.

Chapter 4 Basic Operations

4.1 Booting up

Press and hold the Power button for about 2 seconds. After the boot screen is shown (for about 1 minute), the unlock interface is shown. Tap and hold the unlock icon at the bottom left corner of the screen and drag it upward to the dot to unlock it. Once unlocked, the main Interface will be shown.

4.2 Shutdown

In any mode, Press and hold the Power button for about 2 seconds. The device shutdown options will appear:

- a. Tap "Power off" to turn off the product.
- b. Tap "Silent mode" to turn on or turn off all sound except media & alarms.

Note 1: If the battery is low, the product will shutdown automatically.

Note 2: If the product is connected to the charger, disconnect the charger and perform the shutdown operation again.


Note 3: If the product crashes during operation, press and hold the Power button for 6 seconds to force shutdown.

Note 4: During operation, press the Power button for 1 second to enter Standby mode.

4.3 Network

To surf the Internet wirelessly, make sure the Wi-Fi wireless network signals are present and set the Wi-Fi network connection. There are two ways of going to the

"Wireless & Networks" settings interface:

- a. Tap the menu icon in the main interface and tap "Settings->Wireless & Networks".
- b. In the main interface, tap the  icon at the right to go to the applications interface, and tap "Settings->Wireless & Networks".

Note 1: Turn on Wi-Fi in an area where the Wi-Fi wireless network signals are present.

After successful connection, you can surf the Internet through your browser.

Note 2: For detailed settings, refer to "8.1 Network Connection".

4.4 Locking key

During use, you can lock the keypad to lock the keys and touch screen to avoid accidental operation.

Lock: Press the Power button to lock.

Unlock: Press the Power button. After the screen lights up, tap and hold the unlock icon at the bottom left corner of the screen and drag it upward to the dot to unlock it.

Once unlocked, the main Interface will be shown.

4.5 Reset

If the product crashes during operation, you can tap the Reset button on the side to reset the system.

Note: Under normal operation, do not use the Reset button as the Shutdown button.

4.6 Connecting to PC and file transfer

When the product is on, plug the smaller end of the provided USB cable to the MINI USB port on the side, and the larger end to the USB port of PC for the use of the removable disk and data transfer. Then the USB connected interface will pop up, tap "Turn on USB storage". When the word changed to "Turn off USB storage", the connection is successful. You may copy music and video files to the product directly without using third party programs. Finally, tap the "Safely Remove Hardware" icon at the bottom right corner of the PC screen to remove the device safely.

Note: After the product is connected to PC, you can still surf the Internet via Wi-Fi but you cannot play video, music, pictures, or recording voice involving the Flash drive and TF card.

4.7 Volume adjustment

Media volume: Adjust the volume for playing music and video.

Alarm: Adjust the volume of alarm.

Notification volume: Adjust the volume of notification ringtones.

4.7.1 Adjusting the media volume

There are two ways of going to the "Media Volume" adjustment interface:

- In any interface, press or press and hold the Volume +/- button on the top of the product to adjust the media volume.
- In the main interface, tap the menu icon, tap "Settings -> Sound -> Volume", tap the media volume bar to adjust the volume after the Volume window appears.

4.7.2 Adjusting the alarm volume

There are two ways of going to the "Alarm Volume" adjustment interface:




- In the main interface, tap the menu icon, tap "Settings -> Sound -> Volume", tap the alarm volume bar to adjust the volume after the Volume window appears.
- In the alarm application, tap the menu icon, tap "settings -> Alarm volume", tap the alarm volume bar to adjust the volume.

4.7.3 Adjusting the notification volume

In the main interface, tap the menu icon, tap "Settings -> Sound -> Volume", tap the notification volume bar to adjust the volume after the Volume window appears.

4.8 Charging

When the battery is low, the provided adapter can be used to charge it.

1. If the product is powered on during charging, the status bar will show the charging icon (). After the battery is fully charged, the bar will show the full battery icon ().
2. If the product is shutdown during charging, the large charging icon interface will be displayed. After the battery is fully charged, the full battery icon () will be shown; in the large charging icon interface, press the Power button according to the prompts to turn on.

Note 1: Check the detailed charging percentage through "Settings->About Device->Status->Battery Level".

Note 2: To extend battery life, avoid charging the battery frequently when it is in high level. (example: more than 90%) It is not recommended to charge the product at this

time; if charging is performed at this time, the percentage shown may not be 100%.

This is normal.

Note: Please charge timely to ensure the device works well, when the battery is low.

4.9 Touch screen operations

Tip: The display used in this product is a capacitive multi touch screen. When using, you can operate it by using the buttons on its body or tapping the corresponding icons on the display with a pen or finger to enable the corresponding functions.

Tap

Tap the screen icons to release. When you want to use the on-screen keyboard to type, or press the on-screen icons, touch them using your finger.

Tap and hold

Touch the screen icons continuously until the option expands.

Slide

Place and slide your finger on the screen. Slide your finger up or down to scroll up or down; or if the list has a scroll bar, slide your finger up or down in the list to page down or up; when you are browsing pictures, slide your finger to the left or to the right to view the previous or next picture.

MultiTouch

When are surfing the Internet or browsing pictures.

Zoom in: Touch the screen with two fingers, and slide two fingers together.

Zoom out: Touch the screen with two fingers, and slide two fingers together apart.

4.10 HDMI output

When the product is on, plug the smaller end of the HDMI cable to the HDMI port on the side, and the larger end to the HDMI port of TV. Then the HDMI output option will pop up, select the resolution and tap "□" to go to HDMI mode.

Note: When you are in HDMI mode, you just can control the system through USB mouse, USB keyboard, Bluetooth mouse and Bluetooth keyboard.

4.11 Search icon

In the main interface, tap the menu icon and then tap the "Search" icon to search for the relevant information using the browser.

Chapter 5 Common Features

5.1 Landscape/Portrait display switching

1. In the "Settings" interface, tap "Display ->Auto-rotate screen." When the "v" symbol appeared, the Landscape/Portrait screen display switching is on; when the "v" symbol disappeared, the Landscape/Portrait screen display switching is off.
2. Hold this product vertically with your hands and tilt it to the left or right. When it is tilted to a position 90° to the horizontal plane, the gravity sensor built in the product senses the action and the screen switches to Portrait mode from Landscape mode. On the contrary, when it is tilted to a position 0° to the horizontal plane, the screen switches to Landscape mode from Portrait mode.



Tip: This product supports 4-direction rotation display.

Note 1: For gravity sensing (display orientation), the screen orientation will not change if this product is placed on the level and stationary surface, regardless of how you rotate the product.

Note 2: For some interfaces, such as the main interface, video player interface, and online

video interface (full screen mode), gravity sensing will be disabled.

5.2 Using virtual keyboard to type

Tap any text input box to pop up the virtual keyboard as shown below. Use this keyboard to type any text or characters.

5.2.1 Android keyboard



A. Show box: Show the text typed. Tap and hold this box to display the Edit Text menu for you to cut, copy, and paste the text. Switching between input methods is also possible.
B. Tap this key to switch between uppercase and lowercase text.
C. Tap this key to switch between numeric keypad and symbol keyboard; For numeric keypad and symbol keyboard, tap the ATL key to display the special symbols (such as ~, ±, +, × etc.).
D. Tap this key to input space.
E. Tap to delete the edited text.

Tip: During the input process, you can move the cursor by tapping a position.

5.2.2 Editing text

The typed text can be edited.

When there is text in the input field, tap and hold the input field (or tap and hold the show box in the keyboard) to open the Edit Text menu. Tap the options in the menu to

edit the text.

Select word	Select one word
Select all	Select all text typed
Cut	Cut text typed
Copy	Copy text typed
Paste	Paste cut or copied text
Input method	Select the Input method
Add "" to dictionary	Add the text you type to the dictionary.

5.3 Notification panel

The notification icon appears when a message is received, PC is connected, or music is played. You can open the notification panel to check for messages and played music.

5.3.1 Opening notification panel

After a new notification icon appears in the status bar, tap and hold the status bar and slide your finger downward to open the notification panel.

Tip: In the interface, tap the menu icon and tap "Notifications" to open the notification panel.

5.3.2 Closing notification panel

Tap the control bar at the bottom of the notification panel and slide your finger up on the screen or tap the back icon.

5.4 Recently run applications

Press and hold the Home button to show the 8 applications recently run. Tap the icon in the window to open the corresponding application.



5.5 Changing wallpaper

In the main interface, tap the menu icon and tap "Wallpaper," and choose the desired wallpaper from "Live wallpapers", "PhotoBrowser" or "wallpapers".

5.6 Power control

In the main interface, tap and hold the space to pop up the "Add to Home screen" menu, and tap "Widgets → Power Control" to go to the power control interface (as shown below):



A. Wireless network on/off	Tap to turn on or off the wireless network.
B. Bluetooth	Tap to turn on or off the Bluetooth.
C. GPS	
D. Sync icon	Tap to set whether the wireless network can be used together with other programs.
E. Brightness adjustment icon	Tap to adjust the screen brightness.

Chapter 6 Main Interface

Make sure the Wi-Fi wireless network connection is established to use the following functions.

6.1 Main interface




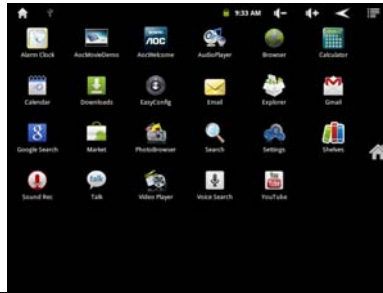 
After booting and unlocking, you can go to the main interface (as shown below).

A. Notification	Tap the space in the taskbar to show the date. Tap and hold this taskbar and scroll down to see notifications.
B. Quick search choice	Tap to choose a search choice.
C. Quick search box	Tap to pop up the input keyboard.
D. Voice Search	Tap to enter voice search.
E. Home icon	Tap this icon to return to the main interface

F. Bluetooth status	
F. Wi-Fi signal indication	After the Wi-Fi network connection is established, the signal indication icon appears. When the Wi-Fi network is disconnected, the icon disappears.
G. Battery info	Display the current remaining battery level
H. Time display	Display the system time
I/J. Volume adjustment	Tap to adjust the volume
K. Back	Tap to return to the previous level
L. Menu icon	Tap this icon to open the corresponding menu
M. Main interface	Tap this icon to go to the main interface
N. Applications	Tap this icon to go to the "Applications" interface
O. Interface switching	Tap to switch between interfaces Tap and hold to display the thumbnails of all Interfaces

6.2 Applications interface

Tap the  icon at the right of the main interface to go to the applications interface, as shown below:



6.3 Browser

Open the browser to enjoy a colorful experience. You can also access news, weather forecast, and sports or traffic information when needed.

6.3.1 Opening browser

In the main interface, tap "Browser" to open a webpage.

Tip: When you tap a webpage link in an e-mail or message, the browser will be opened automatically.

6.3.2 Going to a webpage

1. Type a URL using the keyboard.
2. Tap the "Search" icon at the bottom right of the virtual keyboard to open a webpage.

6.3.3 Setting a home page

1. Tap the menu icon and tap "More->Setting->Set home page".
2. Enter the URL of the webpage or tap "use current page" as home page and tap "OK".

Tap the back icon to return to the previous page. Tap the menu icon, and tap "Windows" to close the currently browsed page, and you can go to the newly set home page.

6.3.4 Browsing a webpage

A browser provides many functions, allowing you to browse a webpage as you do on a PC:

You can simultaneously open several pages and tap one of them to browse;

You can slide your finger around the screen to browse other areas of webpage;


You can also zoom in or out of a webpage for easier browsing;

Tap the back icon to return to the previous page;

Tap the menu icon to display menu options.

Playing on webpage

 Slide your finger on the screen to enable zoom control.





Open new browser window

 
You can open several browser windows, allowing you to browse between several websites easily. Up to 8 browser windows can be opened.

To open a new window, tap the menu icon, and tap "New Window" to open a new browser window and go to the preset home page.

Tip: If more than two browser windows have been opened, tap the menu icon, and tap "Windows -> New window" to add more browser windows.

Switching between browser windows

1. In the browser interface, tap the menu icon, and tap "Windows".

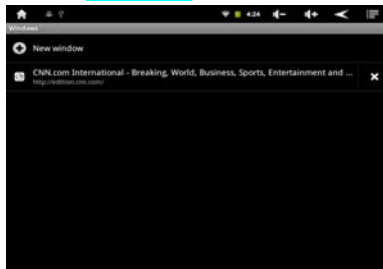


2. Tap a URL shown in the window list to switch to the selected webpage. Tap "X" to close the open window.

Selecting link in webpage

The selected link will be put in an orange box.

- Tap it to open a webpage.
- Tap and hold to open the Actions menu, Open, Open in new window, Bookmark links, Save link, Share link, and Copy link URL.

 Finding text on a webpage

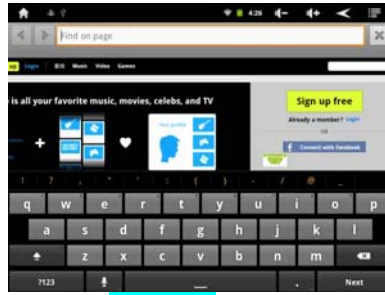

1. When browsing a webpage, tap the menu icon and tap "More->Find on Page"
2. Type the item to be found. After the content is typed, the shade of the text of the matches is highlighted in green. Tap " " or " " to skip forward or backward one match. Tap " " to finish finding.

6.3.5 Managing bookmarks

Bookmarks can be stored while browsing a webpage. In the browser interface, tap the menu icon and tap "Bookmarks" to go to the bookmark management interface where there are three tabs: Browser, Most Visited, and History.



Adding bookmark

1. Open the webpage you want to bookmark.

2. There are three ways of bookmarking:

- Tap the menu icon, tap the "Bookmarks" icon, and tap

"Add" at the top of the bookmark interface.

- In the Bookmark tab, tap the menu icon and tap "Bookmark last-Viewed Page".

- Tap the menu icon, tap "More" and tap "Add Bookmark".

3. Edit the name of the bookmark if necessary and tap "OK" to add a bookmark.

Opening bookmark

1. In the browser interface, tap the menu icon, and tap "Bookmarks".

2. In the bookmark interface, perform any of the following steps to open a bookmark:

- Tap the bookmark you want to open.
- Tap and hold the bookmark you want to open, and tap "Open" or "Open in new window".

Editing bookmark

1. In the browser interface, tap the menu icon, and tap "Bookmarks".

2. In the bookmark interface, tap and hold the bookmark you want to edit.

3. Tap "Edit Bookmark" in the options to show the Edit Bookmark window.

4. Enter your desired changes and tap "OK" to finish editing.

Using bookmark

In any tab, tap and hold a website option in the list to pop up the Actions option: Open,

Open in New Window, Add Shortcut to Home, Share Link, Copy Link URL,

Delete bookmark, and set as homepage.

6.3.6 Other functions

In the browser interface, tap the menu icon, and tap "More" to perform more operations:

Add Bookmark, Find on Page, Select Text, Page info, Share Webpage, Download, Settings, etc.

Setting options:

page content settings

Text size	Tiny , Huge , Small , Normal , Large and Huge are selectable.
Default zoom	Far, Middle, and Close are selectable.
Open pages in overview	Show overview of newly opened pages
Text encoding	Select the encoding type of text
Block pop-up windows	Select whether the pop-up window should be blocked.
Load images	Display images on web pages
Auto-fit pages	Format web pages to fit the screen
Landscape-only display	Display pages only in the wider, landscape screen orientation
Enable JavaScript	Enable JavaScript language
Enable plug-ins	Allow plug-ins in a webpage
Open in background	Open new windows behind the current one
Set home page	Set a webpage URL as home page

Privacy settings

Clear cache	Clear locally cached content and databases
Clear history	Clear the browser navigation history
Accept Cookies	Allow sites to save and read "Cookie" data
Clear all Cookie data	Clear all browser Cookies
Remember form data	Remember data I type in forms for later use
Clear form data	Clear all the saved form data
Enable location	Allow the website to access your location information
Clear location access	Clear location access for websites

Security settings


Remember passwords	Save usernames and passwords for websites
Clear passwords	Clear all saved passwords
Show security warning	Show warning if there is a problem with a site's security

Advanced settings

Set search engine	Select a search engine
Website settings	View advanced settings for individual websites
Reset to default settings	Clear all browser data and reset all setting to default
User agent	Select a agent.


6.4 Video player

 In the main interface, tap "Video Player" to go to the video file list.

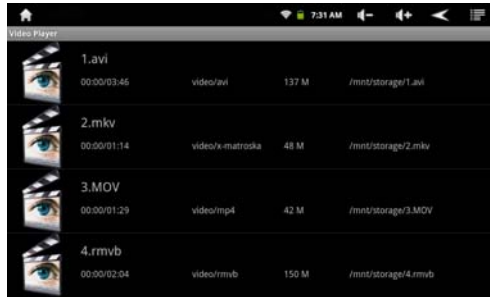

6.4.1 Video playing

 In the file list, slide your finger up and down to find the videos you want to play. Tap them to play.

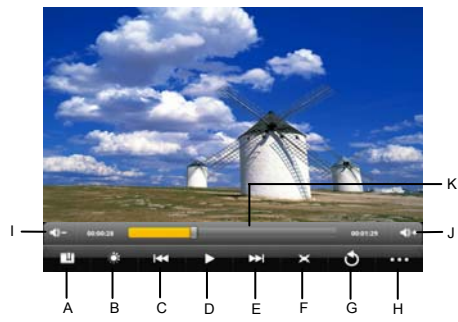

Tap the screen to show the Hide menu:

A. Add video bookmark		B. Adjust screen brightness	
C. Tap: Previous video file Tap and hold: Rewind		E. Tap: Next video file Tap and hold: Fast forward	
D. Play/pause		G. Return to the video list	
F. Screen extension: Tap to select Full Screen, Normal, 16:9, 4:3		I/J. Decrease/increase volume	
H. More	Delete bookmarks and play from the beginning of the title	Tap this option to delete the video bookmarks and play from the beginning of the title	
	Delete bookmark	Delete the video bookmarks and continue playing	
	Play mode	Select Repeat mode	
	Help	Tips icon function	
Return	Return to the Play interface		

K. Play progress bar	Tap any position of the play progress bar to skip to this position; tap and hold it to move to any position to continue playing.
----------------------	--

Note 1: It takes a longer time to play a larger video file. Convert video files that exceed the max. resolution supported by the unit.

Note 2: For some supported video sources, a few video files that are partly damaged may not be played by the unit. Convert them on the PC and play the converted files by this unit.


Note 3: This product does not guarantee that all kinds of video files are supported. While some are only recognizable in the system and played, we do not promise to provide further support or services; advanced features, such as fast forward and rewind, may not be used for individual video files.

6.4.2 Delete video

In the video file list, tap and hold the video you want to delete, and tap "Delete->Yes" to delete the video file.

6.5 Audio player

 
In the main interface, tap "Audio Player" to go to the audio file list.

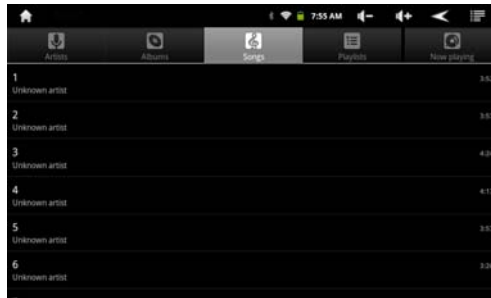

Artists	Sort by "Artist"
Albums	Sort by "Album"
Songs	Display the all music stored on built-in Flash memory, SD card and USB device
Playlists	Display the play list
Now playing	Go to the currently played music file

6.5.1 Playlist

 In the music file list, tap "playlists" to go to the playlist.

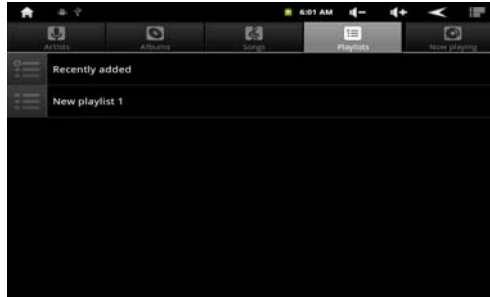


Tap and hold "Recently added" to play or edit the time of the "Recently added" list.

In the music file list, tap and hold a song or a folder, then tap "Add to playlist" to add the song to a new playlist or other playlist.

Tip: You cannot delete the "Recently added" list.

6.5.2 Playing audio

 Tap the music you want to played and go to the music playing interface.

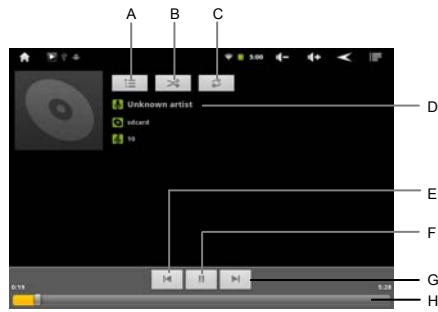

A. Play list	Tap to open the playlist.
B. Shuffle	Playing songs at random mode.
C. Play mode	A. Stop after the end song is played.
	B. Repeat playing all songs in the current directory.
	C. Repeat playing the selected single song.
D. File info	When the network connection is established, tap it to check the link information about the currently played music file.
E. Rewind/previous	Tap: Switch to the previous song Tap and hold: Rewind
F. Play/pause	Play/pause music
G. Fast forward/next	Tap: Switch to the next song Tap and hold: Fast forward
H. Play progress bar	Tap any position of the play progress bar to skip to this position; tap and hold it to move to any position to continue playing.

6.5.3 Sound effects

In the music playing interface, tap the menu icon and tap "Sound effects" to go to sound effects settings interface.



Tap "User EQ" to go to User EQ Select interface. Set your favorite sound effects by sliding your finger left and right on the sound effect bar.



Note: Few MP3/WMA audio files that are specifically encoded may not be played by the product. Convert them using the audio conversion tool and download the converted files to the product to play.

6.6 Picture browser

In the main interface, tap "Photo Browser" to go to the picture list.



Tip: The system will automatically search for all pictures on Flash memory, SD card and USB device and display them as folders.

6.6.1 Browsing pictures


In the directory, tap the pictures you want to browse to open the picture browsing interface.

Tap the screen to pop up or hide the menu:

A. Slideshow	Automatically browse pictures.
B. Menu	Tap to show the menu options.
C. Zoom in	Zoom in on the picture. When it is zoomed in, slide left/right/up/down on the screen to move the picture left/right/up/down.
D. Zoom out	Zoom the picture out to normal size if it has been zoomed in.



Tap the menu icon to show the menu options

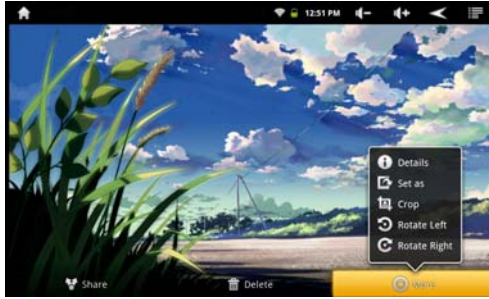 

Share	Share the picture through Picasa, Bluetooth or email
Delete	Delete the current picture.
Details	Show the name of the picture file, its resolution, etc.
Set as	Set the picture as desktop background.
Crop	Cut the picture.
Rotate right	Rotate the picture 90° clockwise. Tap this icon to rotate the picture clockwise in the following order: 90°, 180°, 270°, Restore.
Rotate left	Rotate the picture 90° anti-clockwise. Tap this icon to rotate the picture anti-clockwise in the following order: 90°, 180°, 270°, Restore.

Tip: When browsing pictures, you can slide your finger to the left or right rapidly to switch to the previous or next picture.

6.6.2 Picture file operation

In the picture list, tap and hold a picture or a folder to pop up the file operation list.



Select All	Select all the pictures. After select you can share, delete or rotate the selected pictures.
X Items	Show the number of the selected picture.
Deselect All	Cancel all the selected pictures.
Share	Share the picture through Picasa, Bluetooth, Gmail or Email.
Delete	Delete the selected picture.
Rotate right	Rotate the selected picture 90° clockwise. Tap this icon to rotate the picture clockwise in the following order: 90°, 180°, 270°, Restore.
Rotate left	Rotate the selected picture 90° anti-clockwise. Tap this icon to rotate the picture anti-clockwise in the following order: 90°, 180°, 270°, Restore.

6.7 Camera

In the applications interface, tap "Camera" to go to the camera interface.

Slide the bar between "📷" and "📹" icons to switch the camera and video record mode.

 
Tap and hold "📷" icon to auto focus and then release it to take photo while using rear camera.

Tap "📷" icon to take photo, start or end recording video.

Tap "📷" icon, then tap "Front" and "Back" to switch between front camera and rear camera.

Chapter 7 Applications

In the main interface, click "☰" on the menu sidebar to go to the "Applications" interface in which the installed applications will be shown. Click the "🏠" icon to return to the main interface.

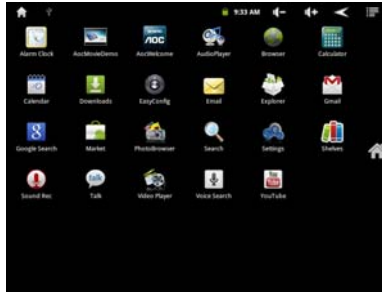

7.1 Moving a program icon of the interface

To move a program icon to other interfaces, tap and hold the program icon and the screen will switch to another interface. At this time, place the icon to the desired position and release.

7.2 Deleting a program icon

In the applications interface, tap and hold the program icon you want to move. When the "🗑️" at right of the screen appears, tap and hold the icon, and drag it to "🗑️" to delete it.

7.3 Restoring a program icon

Tap and hold the space of the main interface, tap "Shortcuts-Applications", and tap a program to be deleted.

7.4 Adding a program icon

Tap and hold the space of the main interface, tap "Shortcuts-Applications," and tap a

program icon you want to add to the interface; or **tap the menu icon** on the product to show the menu options and tap "Add" to add program icons.

7.5 Adding a Widget

Tap and hold the space of the main interface, tap "Widgets" and tap the icon you want to add to the desktop.

7.6 Creating a folder

Create a folder in the interface to store the application icons or controls.

Tap and hold the space of the main interface, and tap "Folders" to create a folder in the interface. Tap and hold a program icon on the screen and drag it to the folder.

Tip: To delete a folder, refer to the steps described in "Deleting a program icon".

7.7 Renaming a folder

 
Open a folder, and tap and hold the title bar to pop up the Renaming Dialog where you can enter a name, and tap OK.

Chapter 8 Common Tools

8.1 E-mail

When you use the e-mail for the first time, you need to create an e-mail account first.

1. Enter the address and password for your e-mail account and tap "Next".
2. Select an account type. Tap "POP3" for a POP3 account.

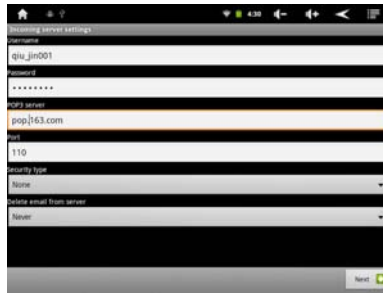

3. Tap "POP3 Server" and enter "pop.+ account suffix". For example, if the e-mail account is 123456@163.com, enter "pop.163.com" and tap "Next".

Note: If you select IMAP Account in step 2, tap "IMAP Server" and enter "IMAP.163.com".

4. Tap "SMTP Server," enter "smtp.+ account suffix," for example "smtp.163.com", and tap "Next".



5. Enter the account name, and username to finish settings.

Note: Since the e-mail service providers may vary, configure the server settings based on the actual e-mail account. This product can support the accounts provided by the popular e-mail service providers, such as yahoo, sohu, etc.

8.1.1 Opening e-mail

In the "Tools" interface, tap "E-mail" to enter.


Tip 1: By default, this product can be used to browse the inbox after the e-mail application is performed. All e-mails you received will be put into the inbox.

Tip 2: Tap "Load more messages" to send or receive a new e-mail and synchronize your e-mails with your Internet e-mail accounts.

8.1.2 Creating and sending e-mails

1. Tap the menu icon and tap the "Compose" icon.

 2. In "Receiver", enter the e-mail address of the receiver.

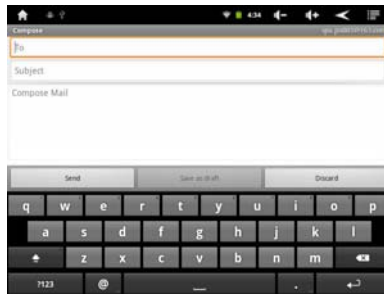

Tip: If you want to send a carbon copy or a blind carbon copy e-mail to other recipients, tap the menu icon and tap "Add Cc/Bcc".


3. Enter the e-mail subject and compose your e-mail.

Tip: If you want to add a picture attachment, tap the menu icon, tap "Add attachment," select the picture you want to attach, and tap it to confirm or tap the "X" icon to cancel attaching.

4. After composing your e-mail, tap "Send".

Tip: When you compose your e-mail, tap the "Save as draft" or back icon to save your e-mail to Draft.

8.1.3 Receiving and reading e-mail

When a new e-mail is received, the notification area in the status bar will show the new e-mail () icon.

Perform one of the following to read your e-mail:

- Tap and hold the status bar at the top of the screen, slide your finger down to open the notification panel, and tap a new e-mail to read.
- Tap the unread e-mails in the Inbox to read.

8.1.4 Replying or forwarding e-mail

1. Open an e-mail, and tap "Reply," "Reply All".
2. Or open an e-mail, tap the menu icon, and tap "Forward," "Reply," "Reply All".
3. If you select "Reply," "Reply All," enter what you want to reply.
If you select "Forward," enter the address of the recipients.
4. Tap "Send" to reply or forward the e-mail.

8.1.5 Managing e-mail

Tap and hold an e-mail to show the menu:

Open	Open and read an e-mail
Delete	Delete an e-mail
Forward	Forward an e-mail
Reply All	Replay all with an e-mail
Reply	Reply the sender with an e-mail
Mark as read	The unread e-mails in the Inbox are displayed with a green line to the left.

8.1.6 Create new account

In the e-mail interface, tap the menu icon, and tap "Accounts" to display the set e-mail account. Tap the menu icon and tap "Add Account" to add a new e-mail account.

Note: You can set several e-mail accounts. The default account will show whenever you perform e-mail applications.

8.1.7 Account settings

In the e-mail interface, tap the menu icon, and tap "Account settings".

Account name	Display and change an account name
Your name	Display and change the sender's name of the account.
Signature	
Inbox check	Set the interval of receiving e-mails. There are six


frequency	options available: Never, Every 5 minutes, Every 10 minutes, Every 15 minutes, Every 30 minutes, and Every hour.
Default account	Send e-mails from this account by default.
E-mail notifications	Notify in status bar when e-mail arrives
Select ringtone	Set the ringtone used when an e-mail is received
Incoming settings	Display and change the receiving server settings
outgoing settings	Display and change the sending server settings

8.1.8 Delete e-mail account

In the e-mail interface, tap the menu icon to display the e-mail menu. Tap "Accounts". Tap and hold the e-mail account you want to delete until the account options appear, tap "Remove account," and tap OK.

8.2 Recorder

 In the "Tools" interface, tap "Sound Rec" to go to the record interface.

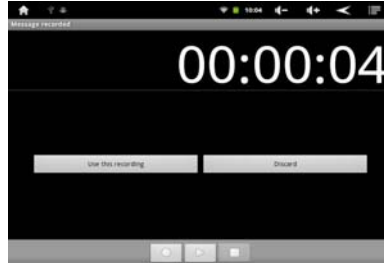

Tap "Start" to start recording or "Stop" to stop recording. After recording is finished, tap "Play" to play the previously recorded file. Tap "Use this recording" to save the previously recorded file or tap "Discard" not to save the

previously recorded file.

Note 1: The recorded file can be automatically saved in the "RECORD" folder so that you can find them in the AudioPlayer " playlists ->My recordings" to play.

Note: The naming rule of the recorded file: recording_Year+Month+Date_Serial Number.

8.3 Alarm

In the main interface, tap "Alarm Clock" to the clock interface.



Tap the icon of Clock to enable the alarm function.



8.3.1 Set alarm

1. Tap the preset alarm to set the selected alarm, or tap "add alarm" to add new alarm.
2. Tap "Time", and set the time for the alarm. Tap "+" or "-" to adjust the time, and tap "Set" to complete.
3. Tap "Repeat," select the date you want the alarm to ring, and tap "OK".
4. Tap "Ringtones" and select alarm ringtones. After selection, the ringtone will be played temporarily.
5. Tap the "Label" , set the name of the alarm.
6. Tap the "Done" icon to go back to the alarm interface.

Tip: Tap to temporarily disable the alarm.

Note: When it is shut down, the alarm is not affected.

8.3.2 Add alarm

If you want to add an alarm, tap the menu icon, and tap "Add alarm". The number of alarms you can add is unlimited.

8.3.3 Delete alarm

Tap and hold the alarm you want to delete, and tap "Delete Alarm -> OK" to delete it.

8.3.4 Alarm settings

Tap the menu icon, and tap "Settings" to show the settings interface.

Alarm in silent mode	Play alarm even the unit is in silent mode.
Alarm volume	Set the volume of alarms.
Snooze duration	Set the ring interval for the alarm.
Volume Buttons	Set what the volume buttons do when pressed during an alarm.

8.3.5 Changing alarm display

In the alarm interface, tap the clock to go to the clock interface.

How to change: Quickly slide your finger to the left or right on the clock to show more clocks and tap your desired one to change.

Note: To change the format of the date and time of the alarm, see the following section

"Date and Time".

8.4 Calculator

In the applications interface, tap the "Calculator" icon to go to the calculator interface.

You can perform the basic math operations by this calculator.

8.5 Explorer

In the main interface, tap "Explorer" to go to the Explorer interface that includes the following options:

Home	Tap to return to the root directory.
Level Up	Tap to return to the upper level directory.
Multi	Tap to select multiple files
Editor	Allow you to Copy, delete, move, paste or rename a file.
Back	Back to the previous operation
Next	Back to the next operation

Note: This product complies with the fat32 file system. When you name a file, do not use special characters, or you may not rename it later.

8.6 Installing applications

1. Copy the setup file to your PC. (Make sure the format of the setup file is xxx.apk format supported by this product.)
2. Connect the device to PC using USB cable.
3. Copy the setup file xxx.apk to the device.
4. Disconnect the device and PC.
5. Turn on the device and activate Explorer.
6. Locate the xxx.apk file and tap it to open.
7. Install the application according to the on-screen prompts.
8. After completion, you will see the installed application in the applications interface.

8.7 Uninstall application

1. In the main interface, tap the menu icon to show the menu.

2. Select "Settings" to go to the settings menu.
 3. Select "Applications".
 4. Select "Manage Application".
 5. Tap the application you want to uninstall.
 6. Tap "Uninstall".
 7. Tap "OK" to start uninstalling.
- Tip: You cannot delete the pre-installed factory default applications on this product.

Chapter 9 Settings

In the main interface, tap the "Settings" icon or **tap the menu icon** to show the settings **icon** to go to the "Settings" interface.

9.1 Wireless & network settings

9.1.1 Wi-Fi network connection

Connection

1. Tap "Wi-Fi" to enable Wi-Fi and this product scans for available wireless networks.
2. Tap "Wi-Fi Settings" and the Wi-Fi network zone shows the name and security settings (open or encrypted network) of the detected wireless networks.
3. Tap one to connect to it. When you select an open network, the product can connect to it automatically. If you select an encrypted one, you have to enter a password and tap "Connect".

Note 1: When you connect Wi-Fi for the first time and the prompt "Failed" appears, disconnect Wi-Fi and reconnect it.

Note 2: You do not have to re-enter the password when you re-connect to the previously connected wireless network that is encrypted, unless you reset the product to the factory settings.

Note 3: Auto search for Wi-Fi is performed, i.e., no additional steps are required to connect to the Wi-Fi network. For some closed wireless networks, the username or password may be required.


Note 4: The availability of Wi-Fi signals may depend on the amount, infrastructure, and objects through which a signals must pass.

4. Tap "Wi-Fi" to disconnect the network.

Scan

Tap the menu icon to configure the "Scan" or "Advanced" settings for Wi-Fi network.

 Scan: Search for the available wireless networks in the vicinity.

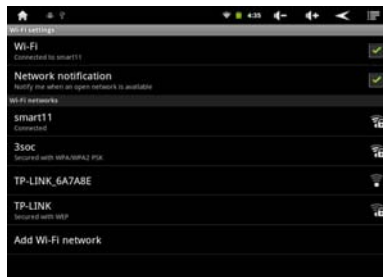

Advanced settings

1. Tap the menu icon, and tap "Advanced" to set the network address within the IP locale.
2. Select "Use static IP" to configure the network settings and enter the IP address, gateway, network mask, and DNS1 required for Wi-Fi network connection. After configuration, tap the menu icon, tap "Save," and tap the back icon to exit the interface.




Note: When you use dynamic IP addresses, you do not have select "Use static IP addresses" to configure the network settings.

3. After "IP settings", go back to the Wi-Fi settings interface and tap the wireless network you want to connect to. After the network connection is successfully established, you can login to the network to surf the Internet.

Checking status of wireless network
You can check the status of the currently connected Wi-Fi through the following methods:



- Status bar

After the product is connected to the wireless network, the Wi-Fi indicator on the top of it lights up and the status bar shows the Wi-Fi icon  and signal strength (the number of the bars lighting up).

- Wi-Fi network

In the network connection interface, tap "Wi-Fi settings" and tap the currently connected wireless network to show the information, such as name, status, speed, signal strength, and security.

Tip: If you want to remove the network settings, tap "Forget" in this window; if you want to connect to this network, the settings above should be configured again.

Connecting to other Wi-Fi networks

1. In the network connection interface, tap "Wi-Fi settings". The detected Wi-Fi networks will be shown in the Wi-Fi network zone.

Tip: If you want to manually scan for available networks, tap the menu icon and tap "Scan".

2. Tap another Wi-Fi network to connect to it.

Tip 1: If the network you want to connect to is not listed in the detected network list, Tap "Add Wi-Fi network," enter the corresponding network settings, and tap "Save".

Tip 2: Not all wireless networks are connected to the Internet. Some wireless networks may be connected to several computers and cannot be connected to the Internet.

9.1.2 Bluetooth connection

Turn on Bluetooth

1. Tap "Bluetooth" to enable Bluetooth.
2. Tap "Bluetooth settings" and the Bluetooth zone show the name of the available Bluetooth device.



Device name

Tap to change the name of your device.

Discoverable

Tap to make your device discoverable so that the other device can search to your device.

After 120 seconds, your device will recover to non-discoverable.

Scan for devices

Tap to search for the available Bluetooth device in the vicinity.

Pairing

Tap one of the available devices. The devices which you want to connect will be required to

input pairing code. Input 0000 or 1234, and the breeze will pop up the "Bluetooth pairing request" window. Input the same pairing code and tap "OK" to finish pairing.

Connection

If you want to use Bluetooth keyboard or headset, tap and hold the name of the device to connect.

9.2 Settings

9.2.1 Wireless & networks

Wi-Fi	Turn on or off the Wi-Fi network.
Wi-Fi settings	Enter Wi-Fi settings. Refer to "8.1 Network connection" for details.
Bluetooth	Turn on or off the Bluetooth.
Bluetooth settings	Enter Bluetooth settings. Connect with Bluetooth headset, Bluetooth Keyboard and other Bluetooth device.

9.2.2 Sound

Silent mode	Silence all sounds except media & alarms.	
Volume	Media	Set the media volume for music and video. Tap the volume bar to adjust the volume level.
	Alarm	Set the alarm volume by tapping the volume bar to adjust the volume level.
	Notification	Set the notification volume by tapping the volume bar to adjust the volume level.
Notification ringtone	Set your default notification ringtone.	
Audible selection	Play sound when making screen selection	
Screen lock sounds	Play sounds when locking and unlocking the screen.	

9.2.3 Display

Brightness	Adjust the screen brightness. Tap the brightness bar to adjust the volume level and tap "OK" to save.
Auto-rotate screen	When unit is turned on/off or rotated, the Landscape/Portrait switching feature is enabled. This product supports 4-direction rotation display.
Animation	Display animation when a window is opened or closed.
Screen timeout	Select the delay time before the screen automatically closes. There are six options available: 15 seconds, 30 seconds, 1 minute, 2minutes, 10 minutes, and 30 minutes.

9.2.4 Security

Use wireless networks	Location determined by Wi-Fi.
Set up screen lock	Lock screen with a pattern, PIN, or password.
Visible passwords	After this feature is enabled, the password is shown when the keyboard is used to type it.
Select device administrators	Add or remove device administrators.
Use secure credentials	Allow applications to access secure certificates and other credentials.
Install from SD card	Install encrypted certificates from SD card
Set password	Set or change the credential storage password.
Clear storage	Clear credential storage of all contents an reset its password.

9.2.5 Applications

Unknown sources	After enabled, this allows installation of non-Market applications.
Manage applications	Manage and delete the installed applications: For Installed(or uninstall) software, move applications to device or SD card, clear data, cache, and default, and force stop.
Running services	View and control currently running services.
Storage use	View storage used by applications.
Development	Set the development options of the application: Includes USB debugging, stay awake (the screen will not enter hibernation mode during charging), allow mock locations.

9.2.6 Accounts & sync

Background data	After enabled, applications can sync, send, and receive data at any time.
Auto-sync	Allow applications sync data automatically.
Add account	Add corporate or Google account.

9.2.7 Privacy

Back up my settings	Back up my settings of the device
Automatic restore	Restore backed up settings or other data when reinstalled an application.
Factory data reset	Erases all data on device

9.2.8 Storage

SD card	Total space	Show the total capacity of the SD card. When an SD card is inserted, the total actual capacity of it will be shown. When an SD card is not inserted, it shows unavailable.
---------	-------------	---

	Available space	Show the free space on an SD card. When an SD card is inserted, its total actual free space will be shown. When a TF card is not inserted, it shows unavailable.
	Unmount SD card	Safely remove the SD card locally.
	Erase SD card	Erase all data on the SD card.
Internal Memory	Total space	Show the total capacity of the Internal Memory.
	Available space	Show the remaining free space of the built-in Flash memory.
	Erase Internal Memory	Erases all data on the Internal Memory.
System Memory	Available space	Show the available storage space of the system

9.2.9 Language & keyboard

Select language	Show the text in corresponding language based on the selection.
Use dictionary	Add & remove words form user dictionary
Android keyboard	Tap to set onscreen keyboard.

9.2.10 Voice input & output

Voice recognizer settings	Tap to set language. SafeSearch, block offensive words and show hints.
Text-to-speech settings	Tap to set the language-specific voice for the spoken text, set the speed at which the text is spoken, and ect.

9.2.11 Accessibility

Tap to set accessibility so that the device can access these services.

9.2.12 Date & time

Set date	Set year, month, day.
Select time zone	Select the time zone of each major cities in the world
Set time	Set hour, minute, second
Use 24-hour format	Show 24-hour or 12-hour format
Select date format	Select the format used for date display.

9.2.13 Touch screen calibration

When the touch screen is not sensitive or the cursor drifts, you can use the calibration settings.

Set the touch points according to the steps in the on-screen prompt.

Tip: After the product is used for a period of time, it is recommended to calibrate the touch screen for operational accuracy and sensitivity.



9.2.14 About device

This option allows you to check information about the battery status, legal information, model number, Android version, kernel version and build number.

Chapter 10 Using Micro SD (TF) Card

The external card supported by this product is a Micro SD card, through which the capacity of storage can be expanded. Meanwhile, insert the silk screen chip out of the Micro SD card into the card slot until it is fully inserted into the product. When you remove it, press the Micro SD card downward to eject it.

Note:

- Insert cards face-up into the card slot.
- Do not bend the card. The chip on the card should be protected cautiously;
- Keep the chip clean and avoid dust and chemicals.
- Format the new Micro SD card first;
- Avoid insertion and removal of the Micro SD card during its use to avoid damage to the data on card;
- This product does not support the write-protect feature of the Micro SD card.
Therefore, back up the files on card before deleting data to avoid file loss due to malfunction.

Chapter 11 Connecting to USB Drive

Insert your USB drive into the OTG port at the right side of the product. Open Explorer and you can see the "USB" directory. This directory is your USB drive. Tap USB to check the files on USB drive. Note that when this unit is connected to the USB drive, it should shutdown; avoid insertion and removal when the files on USB drive are played to avoid damaging the data on USB drive.

Chapter 12 About the Battery and Power

This product uses a built-in 4800mAh polymer lithium battery to charge the battery. When the product operates individually, power is fed from the lithium battery. When the provided charger is inserted, the charger is powered automatically via the charger.

When you charge this product for the first time, it is recommended to shutdown the product and continuously charge it for more than 8 hours for optimal battery use.

For the use of a new product, it should be fully charged and discharged for the first three times to activate it.

If charging is performed when the product is turned on, it takes a longer time to charge.

Charging time: It typically takes about 7 hours to charge. The actual time depends on the remaining battery level.

It is recommended to fully charge and discharge the product once every 3 months to maintain the lithium battery.

Do not plug the charger into the electric outlet when the product is not connected.

When it will not be used for an extended period of time, fully charge the battery. It should be charged and discharged every three months.

 
When the battery is too hot, the charging protection circuit will automatically close the charging circuit to protect the lithium battery.

When the battery is low, charge it first. When it is running out of power, charge the machine using the charger and connect it to PC. Charge it if:

- A. The battery charging icon indicates that battery is exhausted.
- B. The system automatically shuts down. It also shuts down quickly after reboot.
- C. After you press buttons, there is no response.

Chapter 13 Firmware Updating / Resetting to Factory

1. Go to for the website (www.aoc.com) to download the current /latest firmware for your device,
(current-<model-ID>.img).
2. Copy the downloaded firmware to the built-in flash in the product.
3. Safely disconnect the product and PC and the screen shows a prompt similar to one shown below:



Tap "Install".

After a short while, the updating message is displayed..
It may take a few minutes, please be patient.



4. After successful upgrade, the system will automatically reboot and the downloaded version firmware takes effect.

Note : During the upgrade / resetting process, it is best to have the device plugged into electric power, using the supplied power adapter.

Chapter 14 Frequently Asked Questions

- **Product cannot be turned on or boot abnormal**

Check if the battery is charged

Connect the power adapter and check it again.

Press the Reset button on the side of the product and turn it on.

Shutdown, then press the "volume + "button and **Home button** at the same time till insert charger. Enter into Android system recovery utility interface and choose "Factory reset". It will restore factory default compulsory and erase all data on device.

Note: In Android system recovery utility interface, move cursor through volume "+" and "-" buttons and the M button is used for entering.

If it cannot be turned on after charged and reset and restore factory default compulsory, contact our seller.

- **No sounds from headset**

Check if the volume is set to 0

Check if the headset is properly connected

- **Loud noises**

Check if the plug of the headset is clean. Dirt may result in noise.

Check if the file is damaged. Play other music files to confirm this. If it is damaged, it may cause loud noise or sound skipping.

- **Screen shows garbled codes**

Check if the correct language is set. Set your language in (System)=(Language Selection)

- **Cannot download files**

Make sure that the computer is properly connected to the product

Make sure that the storage space is not full

Make sure that the USB cable is not damaged

- **Connect to Wi-Fi but cannot surf the Internet**

Make sure that there is wireless network nearby.

If static IP addresses are needed, make to enter a valid IP address. If dynamic IP addresses are used, static IP addresses should be disabled while the network is connected.
- **Touch the keyboard on the touch screen and the response is not the expected / desired result.**

Perform touch screen calibration

For better performance, use a pen or your fingernail
- **Cannot be connected to computer**

Make sure the product is turned on

Make sure the product is not in sleep mode

Make sure to use the proper USB cable
- **Cannot view files in AudioPlayer, PhotoBrowser, Video Player, Shelves and Explorer. Or cannot record sound.**

Make sure the files is downloads to your device.

Make sure your device is not connecting to PC.

Wait a few minutes for refresh the media Library.
- **Cannot find Wi-Fi wireless network.**

Make sure there is no problem with the Wi-Fi signal.

In main interface, tap "Settings - >Wireless & network settings - >Wi-Fi settings, tap the **tap the menu icon**, tap "Advanced - >Regulatory domain" to adjust the domain and search again.

Chapter 15 Troubleshooting

1. When I view JPEG pictures, some cannot be viewed. Why?

Some JPEG files may have a non-standard resolution, they may not be viewed in full screen, or zoomed in or out. If an error prompt appears, tap the back icon to exit or tap the Reset button on the side of the product to solve the problem.

2. The product cannot play my videos. Why?

Make sure the video format is supported by this product. Some video files are encoded in different formats and versions. We cannot guarantee that all formats are playable.

3. Why does image lag occurs when the video files are played?

Upgrade system software to the latest version.

In addition, this also depends on the video file, high bit-rate streaming video, and high resolution video:

- ① High bit-rate streaming video. For example, the motion scenes of some videos have a bit-rate of 5-6M and image lag may occur.
- ② High resolution video. If the max frames are reached, non-synchronization may occur.
- ③ The upper limit size of a single file is 2 GB.

4. Enter into "Application settings ->Manage applications", and tap one applications to manage. There is an option "Move to SD card". Actually it moves the application to Flash. Why?

Applications can be installed into System Memory or Flash. The system treated Flash as virtual SD card, so "Move to SD card" means moving application to Flash and "Move to device" means moving to System Memory.

5. Product does not respond to operations.

Some various reasons, such as misuse, may cause the product to be unable to shutdown or render the buttons and touch screen unable to respond. You can tap the Reset button on the side of the product (using a paper-clip), or press and hold the Power button for 6 seconds to force the product to shutdown. After restarting, the problem is

usually solved.

6. The space available on PC is not consistent with that shown on the tablet.

The space on a PC is calculated by 1024 bytes while this tablet's capacity is calculated by 1000 bytes. So the actual free space of the tablet will be slightly different from indicated capacity, also the operating system uses part of the available space.

7. Product can not boot up.

- ① Plug the AC adapter.
- ② Press the reset button, and then boot up.
- ③ Press and hold the Power button for 6 seconds, and then boot up.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.