

# Table of Contents

CHAPTER 1 PRODUCT OVERVIEW .....	1
1.1 Functions overview .....	1
1.2 Notes .....	1
1.3 Packaging list .....	2
1.4 Technical specifications .....	2
CHAPTER 2 BUTTONS AND APPEARANCE .....	4
CHAPTER 3 EASYCONFIG .....	5
CHAPTER 4 BASIC OPERATIONS .....	8
4.1 Booting up .....	8
4.2 Shutdown .....	8
4.4 Standby Mode.....	8
4.5 Reset.....	8
4.6 Connecting to PC and file transfer .....	8
4.7 Volume adjustment .....	9
4.7.1 Adjusting the media volume.....	9
4.7.2 Adjusting the alarm volume.....	9
4.7.3 Adjusting the notification volume.....	9
4.8 Charging.....	9
4.9 Touch screen operations .....	10
4.10 HDMI output.....	10
4.11 Search icon.....	10
CHAPTER 5 COMMON FEATURES .....	11
5.1 Landscape/Portrait display switching.....	11
5.2 Using virtual keyboard to type.....	11
5.2.1 Android keyboard .....	11
5.2.2 Editing text .....	12
5.3 Notification bar .....	12
5.3.1 Opening notification bar.....	12
5.4 Recently run apps .....	13
Touch the app in the window and slide your finger towards right to close the corresponding app.....	13
5.5 Changing wallpaper .....	13
5.6 Power control .....	13

<b>CHAPTER 6 MAIN INTERFACE.....</b>	<b>14</b>
6.1 Main interface .....	14
6.2 Apps interface .....	15
6.3 Browser .....	15
6.3.1 Opening browser .....	15
6.3.2 Going to a webpage.....	16
6.3.3 Setting a home page.....	16
6.3.4 Browsing a webpage.....	16
6.3.5 Managing bookmarks.....	17
6.3.6 Other functions .....	18
6.4 Video player.....	18
6.4.1 Video playing .....	18
6.4.2 Delete video.....	19
6.5 Audio player.....	19
6.5.1 Playlist .....	20
Tip: You cannot delete the "Recently added" list .....	20
6.5.2 Playing audio .....	20
6.5.3 Sound effects .....	21
6.6 Picture browser .....	21
6.6.1 Browsing pictures .....	22
6.7 Camera .....	24
<b>CHAPTER 7 APPS .....</b>	<b>25</b>
7.1 Moving a program icon of the interface.....	25
7.2 Deleting a program icon .....	25
7.3 Adding a Widget .....	25
7.4 Creating a folder.....	25
7.5 Renaming a folder.....	25
<b>CHAPTER 8 COMMON TOOLS .....</b>	<b>26</b>
8.1 E-mail .....	26
8.1.1 Opening e-mail .....	26
8.1.2 Creating and sending e-mails .....	27
8.1.3 Receiving and reading e-mail.....	27
8.1.4 Managing e-mail.....	27
8.1.5 Managing e-mail.....	27
8.1.6 Email Settings .....	28
8.2 Recorder.....	28
8.3 Alarm .....	29
8.3.1 Set alarm.....	29
8.3.3 Delete alarm .....	30

8.4 Calculator .....	30
8.5 Explorer .....	30
8.6 Installing apps .....	30
8.7 Uninstall app .....	30
<b>CHAPTER 9 SETTINGS .....</b>	<b>32</b>
9.1 WIRELESS & NETWORKS Settings .....	32
9.2 DEVICE Settings .....	34
9.2.1 Sound .....	34
9.2.2 Display .....	34
9.2.3 Storage .....	34
Touch the menu icon at the top right corner of screen, touch "USB computer connection".....	35
9.2.4 Battery .....	35
It shows the status of battery and the elapsed time .....	35
9.2.5 Apps .....	35
9.3 PERSONAL Settings .....	35
9.3.1 Accounts & Sync .....	35
SYNC: Slide the slider at the top right of screen to the right to turn on sync. ....	35
ADD ACCOUNT: Touch "ADD ACCOUNT" to add corporate, Email or Google account..	35
9.3.2 Location services .....	35
9.3.4 Security .....	35
9.3.5 Language & input .....	36
9.3.6 Backup & reset .....	36
9.4 SYSTEM Settings .....	36
9.4.1 Data & Time .....	36
9.4.2 Accessibility .....	36
9.4.3 About device .....	36
<b>CHAPTER 10 USING MICRO SD (TF) CARD .....</b>	<b>38</b>
<b>CHAPTER 11 CONNECTING TO USB DRIVE .....</b>	<b>39</b>
<b>CHAPTER 12 ABOUT THE BATTERY AND POWER .....</b>	<b>40</b>
<b>CHAPTER 13 FIRMWARE UPDATING / RESETTING TO FACTORY .....</b>	<b>41</b>
<b>CHAPTER 14 FREQUENTLY ASKED QUESTIONS .....</b>	<b>42</b>
<b>CHAPTER 15 TROUBLESHOOTING .....</b>	<b>44</b>

## CHAPTER 1 PRODUCT OVERVIEW

### 1.1 Functions overview

- 9 inch wide screen True Color TFT touch screen with a high resolution of 1280\*800 pixels.
- Surf the Internet wirelessly via Wi-Fi to enjoy the Internet on the go.
- Support all mainstream e-mail services for more convenient e-mail sending and receiving.
- Switching between portrait mode and landscape mode is possible through gravity sensing.  
Four-direction rotation display is supported.
- Shooting images or videos via 2 mega pixel front camera or 5 mega pixel pixels rear camera.
- Support Video Player, Audio Player, Photo Browser, Camera and Shelves.
- Equipped with a built-in microphone, enabling audio-recording.
- Support 1080P HDMI output.
- Eco settings enables the brightness to be freely adjusted.

### 1.2 Notes

- Do not use the unit in an overly hot, cold, wet, or dusty environment. Do not expose it to sunlight.
- Try not to use this unit in an environment with a strong magnetic field or static electricity.
- Avoid dropping this unit or strong impacts.
- The adapter of this product should not be dropped and splashed with liquid. Any object filled with liquid, such as a vase, should not be placed on the top of it.
- There are no user-serviceable parts inside the product. Do not dismantle this unit. Otherwise, the warranty may be voided. Contact servicing personnel if you need help.
- The battery life may vary depending on the use condition and production time.
- It is not allowed to replace the battery of the product yourself. Do not dismantle the unit yourself. Explosion may occur if the battery is not properly replaced. Contact the professional servicing personnel.
- As the workmanship of motherboard manufacturers are different from each other, it is recommend to perform charging using the adapter provided, instead of using the USB port of the motherboard, to ensure charging stability.
- The long life of a lithium battery is due to its much smaller memory effects than that of the regular Nickel-Cadmium battery. But if the lithium battery is degrading, contact the local Service Center directly.
- If the battery is improperly replaced, an explosion may occur. Only use the same brand battery or equivalent for replacement.
- The company is not liable for the data loss or deletion on machine resulting from the misuse of software, improper operation of the battery, servicing, other accidents, or other indirect loss thereof.

- The actual product may be different from that described in the Instructions due to the software update. These Instructions are for informational purposes only.
- This being a mobile product, we recommend you back-up your data regularly.

### 1.3 Packaging list

AOC Breeze Tablet Unit	X1
USB cable	X1
Power adapter	X1
Quick Start Guide	X1
Warranty Statement	X1



Note: The actual accessories provided with the product may vary.

### 1.4 Technical specifications

#### Basic specifications

Model no.	AOC Tablet MW0922
Installed OS	Android OS 4.0 (Ice Cream Sandwich)
Processor (CPU)	ARM Cortex-A8,CPU Frequency Up To <b>1.2G</b> Hz
Memory	1GB. DDR3
WLAN	WI-FI IEEE 802.11b/g/n
HDMI	Up to 1080P via Mini C type connector
Camera	Front 2MP / Back 5MP
Storage capacity	Built-in 8GB\16GB Flash Memory
Expansion cards	Micro SD (TF) card, up to 32 GB.
LCD	9 inch HD TFT LCD capacitive touch screen with a resolution of 1280*800 pixels
Audio output	Headset: Stereo output; internal speakers: Mixed output.

#### Power specifications

Voltage	Supply voltage: 5V  Charging voltage: 5V 
Current	Max. current for playback is <b>1A</b> DC. Max. current for charging is <b>1.2A</b> DC.
Battery used	Built-in lithium-ion polymer rechargeable battery, 3.7V, 7000mAh, 3.7V
Power adapter	AC input: 100-240V 50/60Hz DC input: 5V 2.5A
Charging time	It takes about 7 hours for the battery to be fully charged when the provided charger is used with power-down. The charging time may vary depending on the remaining battery level. Note: Do not charge the battery for more than 12 hours when the charger is used.

Battery use time (Under the condition that the battery is fully charged in a normal temperature)	Audio: About 25 hours Video: About 6 hours Web browsing: About 7 hours
--	--

**External dimensions**

 
Dimension (L×W×H)	9.5 x 6.4 x 0.52 in (24.1 x 16.2 x 1.32 cm)
Weight	1.37 lbs (0.623kgs) (with battery)
Port	Mini USB 2.0 high speed port, OTG, 3.5mm headset

**Environmental conditions**

Operating temperature	0°C ~ 40°C
Storage temperature	-20°C ~ 55°C
Max. humidity	90% RH (non-condensation)
Supported OS	Windows2000/XP/Windows 7/Vista, Macintosh OS X]

Note: Windows 2000+SP1/SP2 is not supported by this product. The user should upgrade to SP3 or above. This product does not guarantee all video formats are playable. Even if some formats are listed in the instructions, they may be not properly played. This is normal.

## Chapter 2 Buttons and Appearance

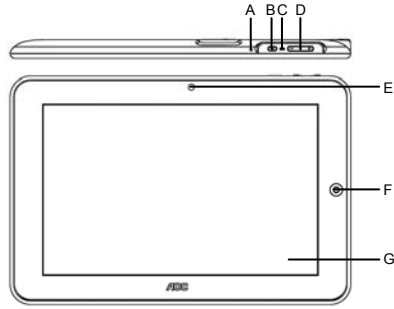

A. Reset button \Built-in MIC Recording	B. Power button
C. Operation indicator	D. Volume "+" and "-" buttons
E. Front camera	F. Home button
G. Touch screen ("Screen")	



H. Headset jack	I. TF card slot
J. OTG port (connecting to USB drive)	K. MINI USB port (connecting to PC)
L. HDMI jack	M. Power cable jack
N. Rear camera	O. Flashlight
P. External speaker	

Note 1: During operation, sounds will be automatically output from the external speaker if there is audio output.

Note 2: In the Instructions, "Press" means pressing a button while "Press and Hold" means continuously pressing a button for 2 ~ 3 seconds.=

### Chapter 3 EasyConfig

 
When first using the tablet breeze, the EasyConfig window will pop up. It includes Language, Date/Time and Wi-Fi settings.



Touch "Click" to setup language, then choose a language you want. If the settings take effect, the "Default Language" bar will show the choice.




Touch "Click" to go to "Date & time settings" interface to setup date, time zone and time.

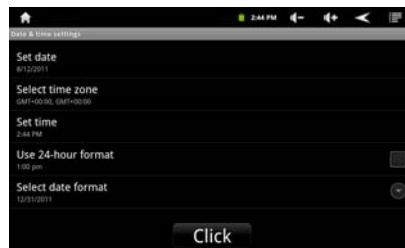

 Touch "Click" to go to the Wi-Fi settings interface.



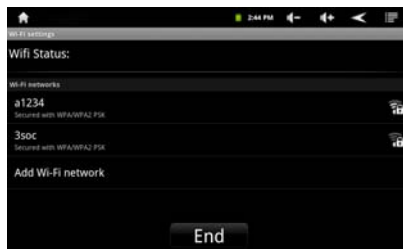

Touch the menu icon to configure the "Scan" or "Advanced" settings for Wi-Fi network.

**Scan:** Search for the available wireless networks in the vicinity.

**Advanced settings:**

1. Touch "Advanced" to set the network address within the IP locale.
2. Select "Use static IP" to configure the network settings and enter the IP address, gateway, network mask, and DNS1 required for Wi-Fi network connection.



After configuration, touch the menu icon, touch "Save" to exit to the Wi-Fi settings interface with saving.

Note: When you use dynamic IP addresses, you do not have select "Use static IP addresses" to configure the network settings.

Touch the wireless network you want to connect to. If the connection status under the name of wireless network shows "Connected", the network connection is successfully. Then touch "End" to finish the easyconfig.

## Chapter 4 Basic Operations

### 4.1 Booting up

Press and hold the Power button for about 2 seconds. After the boot screen is shown (for about 1 minute), the unlock interface is shown. Touch and hold the unlock icon at the middle left of the screen and drag it rightward to the dot to unlock it. Once unlocked, the main Interface will be shown.

Note: Touch and hold the unlock icon at the middle left of the screen and drag it leftward to the dot to enter into the camera interface.

### 4.2 Shutdown

In any mode, Press and hold the Power button for about 2 seconds. The device shutdown window will appear: Touch "OK" to turn off the product.

Note 1: If the battery is low, the product will shutdown automatically.

Note 2: If the product crashes during operation, press and hold the Power button for 6 seconds to force shutdown.

### 4.3 Network

To surf the Internet wirelessly, make sure the Wi-Fi wireless network signals are present and set the Wi-Fi network connection. There are two ways of going to the "Wireless & Networks" settings interface:

a. Touch the notification icon at the bottom left corner of the main interface, touch the popup window and touch "Wi-Fi".

b. In the "Apps" interface, touch settings icon to go to the settings interface, and then touch "Wi -Fi".

Note 1: Turn on Wi-Fi in an area where the Wi-Fi wireless network signals are present.

After successful connection, you can surf the Internet through your browser.

Note 2: For detailed settings, refer to "8.1 Network Connection".

### 4.4 Standby Mode

Standby: During use, you can press the power button to enter into standby mode to save battery power and lock the key and screen.

Wake up: When the device is in standby mode, press the Power button , after the screen lights up, Touch and hold the unlock icon at the bottom left corner of the screen and drag it upward to the dot to unlock the key and screen.

### 4.5 Reset

If the product crashes during operation, you can touch the Reset button to reset the system.

Note: Under normal operation, do not use the Reset button as the Shutdown button.

### 4.6 Connecting to PC and file transfer

Connecting to PC:

1. When the product is on, plug the smaller end of the provided USB cable to the MINI USB port on the side of it, and the larger end of it to the USB port on PC.
2. After the connection is successfully established, touch the notification bar, touch "Connected as a media device" or "Connect as a camera" to go to USB computer connection setting interface.
3. If the "Media device (MTP)" option is selected, device connected as a media device and you can transfer any files on Windows, or using Android File Transfer on Mac. If the "Camera (PTP)" option is selected, device connected as a camera" and you can transfer photos only.

Disconnection:

Touch the "Safely Remove Hardware" icon at the bottom right corner of the Windows PC screen to remove the device safely on PC. On a Macintosh, just "eject drives" from desktop.

Note: File transfer requires: Windows XP system need Windows Media Player 11 or greater than 11 supported while Mac system need to install MTP software packages. (You can download the packages from the webpage: <http://www.android.com/filetransfer>.)

#### 4.7 Volume adjustment

Media volume: Adjust the volume for playing music and video.

Alarm: Adjust the volume of alarm.

Notification volume: Adjust the volume of notification ringtones.

##### 4.7.1 Adjusting the media volume

There are two ways of going to the "Media Volume" adjustment interface:

- In any interface, press or press and hold the Volume +/- button on the top of the product to adjust the media volume.
- In the apps interface, touch "Settings -> Sound -> Volume", touch the media volume bar to adjust the volume after the Volume window appears.

##### 4.7.2 Adjusting the alarm volume



In the apps interface, touch "Settings -> Sound -> Volume", touch the alarm volume bar to adjust the volume after the Volume window appears.


##### 4.7.3 Adjusting the notification volume

In the apps interface, touch "Settings -> Sound -> Volume", touch the notification volume bar to adjust the volume after the Volume window appears.

#### 4.8 Charging

When the battery is low, the provided adapter can be used to charge it.

1. If the product is powered on during charging, the status bar will show the charging icon (  ). After the battery is fully charged, the bar will show the full battery icon (  ).
2. If the product is shutdown during charging, the large charging icon interface will be displayed.

After the battery is fully charged, the full battery icon (  ) will be shown; in the large charging icon interface, press the Power button according to the prompts to turn on.

Note 1: Check the detailed charging percentage through "Settings -> About Device -> Status -> Battery Level".

Note 2: To extend battery life, avoid charging the battery frequently when it is in high level. (Example: more than 90%) It is not recommended to charge the product at this time; if charging is performed at this time, the percentage shown may not be 100%. This is normal.

Note: Please charge timely to ensure the device works well, when the battery is low.

#### **4.9 Touch screen operations**

Tip: The display used in this product is a capacitive multi touch screen. When using, you can operate it by using the buttons on its body or touching the corresponding icons on the display with finger to enable the corresponding functions.

##### **Touch**

Touch the screen icons to release. When you want to use the on-screen keyboard to type, or press the on-screen icons, touch them using your finger.

##### **Touch and hold**

Touch the screen icons continuously until the option expands.

##### **Slide**

Place and slide your finger on the screen. Slide your finger up or down to scroll up or down; or if the list has a scroll bar, slide your finger up or down in the list to page down or up; when you are browsing pictures, slide your finger to the left or to the right to view the previous or next picture.

##### **MultiTouch**

When surf the Internet or browsing pictures.

Zoom in: Touch the screen with two fingers, and slide two fingers together.

Zoom out: Touch the screen with two fingers, and slide two fingers together apart.

#### **4.10 HDMI output**

When the product is on, plug the smaller end of the HDMI cable to the HDMI port on the side, and the larger end to the HDMI port of TV. The device will enter into HDMI mode automatically.

Note: When you are in HDMI mode, you just can control the system through USB mouse, USB keyboard, Bluetooth mouse and Bluetooth keyboard.

#### **4.11 Search icon**

In the main interface, touch the "Search" icon to search for the relevant information using the browser.

## Chapter 5 Common Features

### 5.1 Landscape/Portrait display switching

1. In the "Settings" interface, touch "Display ->Auto-rotate screen." When the "v" symbol appeared, the Landscape/Portrait screen display switching is on; when the "v" symbol disappeared, the Landscape/Portrait screen display switching is off.
2. Hold this product vertically with your hands and tilt it to the left or right. When it is tilted to a position 90° to the horizontal plane, the gravity sensor built in the product senses the action and the screen switches to Portrait mode from Landscape mode.  
On the contrary, when it is tilted to a position 0° to the horizontal plane, the screen switches to Landscape mode from Portrait mode.



Tip: This product supports 4-direction rotation display.

Note 1: For gravity sensing (display orientation), the screen orientation will not change if this product is placed on the level and stationary surface, regardless of how you rotate the product.

Note 2: For some interfaces, such as the main interface, video player interface, and online video interface (full screen mode), gravity sensing will be disabled.

### 5.2 Using virtual keyboard to type

Touch any text input box to pop up the virtual keyboard as shown below. Use this keyboard to type any text or characters.

#### 5.2.1 Android keyboard



A. Show box: Show the text typed. Touch and hold this box to display the Edit Text menu for you to cut, copy, and paste the text.
B. Tab: Touch this key to switch to next input table. Touch Shift key and then touch this key to switch to previous position.
C. Touch this key to switch between numeric keypad and symbol keyboard; For numeric keypad and symbol keyboard, touch the ATL key to display the special symbols (such as ~, ±, ÷, ×, etc.).
D. Shift: Touch this key to switch between uppercase and lowercase text.
E. Touch this key to switch between input method and input languages.
F. Touch this key to input space.
G. Touch to delete the edited text.
H. Touch to ensure input and go to next step.

Tip: During the input process, you can move the cursor by touching a position.

### 5.2.2 Editing text

The typed text can be edited.

When there is text in the input field, touch and hold the input field (or touch and hold the show box in the keyboard) to open the Edit Text menu. Touch the options in the menu to edit the text.

Select all	Select all text typed
Cut	Cut text typed
Copy	Copy text typed
Paste	Paste cut or copied text
Share	Share the selected text via Bluetooth, Gmail or Email.

### 5.3 Notification bar

The notification icon appears when a message is received, PC is connected, or music is played. You can open the notification bar to check for messages and played music.

#### 5.3.1 Opening notification bar

After a new notification icon appears in the notification bar, touch the notification bar to open the

notification bar.

### 5.3.2 Closing notification panel

Touch any space except for notification bar to close it.

### 5.4 Recently run apps

Touch the recent apps icon in the main interface to go to show the background apps. Touch the icon in the window to open the corresponding app.



Touch the app in the window and slide your finger towards right to close the corresponding app.

### 5.5 Changing wallpaper

In the main interface, touch and hold a blank space, touch "Wallpaper" and choose the desired wallpaper from "Live Wallpapers", "Gallery" or "Wallpapers".

### 5.6 Power control

In the apps interface, Slide your finger toward left to go to the Widgets interface, then continue sliding to the end widgets interface. Touch and hold the widgets icon to move it to main interface, as the picture show below:

 


A. Wireless network on/off	Touch to turn on or off the wireless network.
B. Sync icon	Touch to set whether the wireless network can be used together with other programs.
C. Brightness adjustment icon	Touch to adjust the screen brightness.

## Chapter 6 Main Interface

Make sure the Wi-Fi wireless network connection is established to use the following functions.

### 6.1 Main interface

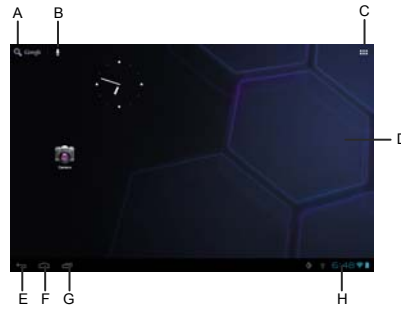


After booting and unlocking, you can go to the main interface (as shown below).

A. Quick search box	Touch the space in the taskbar to show the date. Touch and hold this taskbar and scroll down to see notifications.
B. Voice Search	Touch to choose a search choice.
C. Apps icon	Touch to pop up the input keyboard.
D. Main interface	Touch to enter voice search.
E. Back icon	Touch this icon to return to the main interface
F. Home icon	After the Wi-Fi network connection is established, the signal indication icon appears. When the Wi-Fi network is disconnected, the icon disappears.
G. Go to recent apps	Display the current remaining battery level
H. Notification bar	Display the system time
I/J. Volume adjustment	Touch to adjust the volume
K. Back	Touch to return to the previous level
L. Menu icon	Touch this icon to open the corresponding menu
M. Main interface	Touch this icon to go to the main interface
N. Apps	Touch this icon to go to the "Apps" interface
O. Interface Switching	Touch to switch between interfaces Touch and hold to display the thumbnails of all Interfaces



## 6.2 Apps interface

 Touch the Apps & Widgets icon at the right of the main interface to go to the Apps interface, as shown below:

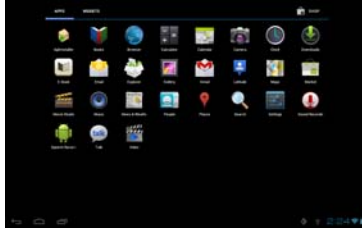

## 6.3 Browser

Open the browser to enjoy a colorful experience. You can also access news, weather forecast, and sports or traffic information when needed.

### 6.3.1 Opening browser

In the "Apps" interface, touch "Browser" to open a webpage.



A. Back icon	Touch to go to previous webpage.
B. Next icon	Touch to go to next webpage.
C. Refresh icon	Touch to refresh the current webpage.
D. Close icon	Touch to close the current tab.
E. Add icon	Touch to open a new tab.
F. Delete/Add bookmark icon	Touch "x" to delete the text in the table. /Touch "☆" to add the current webpage to bookmark.
G. Voice search icon	Touch to use voice input to search Internet.
H. Menu icon	Touch to show menu options.
I. Bookmark icon	Touch to go to bookmark interface.

Tip: When you touch a webpage link in an e-mail or message, the browser will be opened automatically.

#### **6.3.2 Going to a webpage**

1. Type a URL using the keyboard.
2. Touch the "" icon at the right of the virtual keyboard to open a webpage.

#### **6.3.3 Setting a home page**

1. Touch the menu icon and touch "Setting->Set home page".
2. Touch "use current page", "Blank page", "Default page", "Most visited sites" or enter the URL of the webpage as home page.

Touch the back icon to return to the previous page. Touch the "+" icon, to open a new tab and you can go to the newly set home page.

#### **6.3.4 Browsing a webpage**

A browser provides many functions, allowing you to browse a webpage as you do on a PC:

You can simultaneously open several pages and touch one of them to browse;

You can slide your finger around the screen to browse other areas of webpage;

You can also zoom in or out of a webpage by sliding two fingers together or apart for easier browsing;

#### **Open new browser tab**

You can open several browser tabs, allowing you to browse between several websites easily. Up to 16 browser tabs can be opened.

To open a new tab, touch the menu icon, and touch "New tab" to open a new browser tab and go to the preset home page.

#### **Switching between browser tabs**

Touch the tab title to view the corresponding tab.

#### **Selecting link in webpage**

The selected link will be put in a blue box.

- Touch it to open a webpage.
- Touch and hold to open the Actions menu, Open, Save link, Copy link URL and Select text.

 
#### **Selecting text in webpage**

Touch and hold the text in webpage, the selected slider and menu option will display, slide the left and right slider to select the text for easier copying or sharing.

#### **Saving webpage**

You can save webpage for offline reading. In browser interface, touch menu icon and touch "Save for off line reading".

## Finding text on a webpage

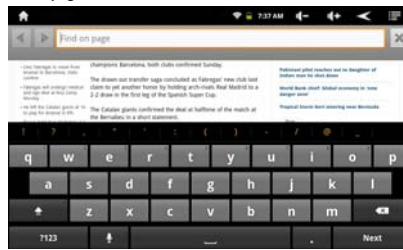

1. When browsing a webpage, touch the menu icon and touch "Find on Page"
2. Type the item to be found. After the content is typed, the shade of the text of the matches is highlighted in blue. Touch " ← " or " → " to skip forward or backward one match. Touch "Done" to finish finding.

### 6.3.5 Managing bookmarks

Bookmarks can be stored while browsing a webpage. In the browser interface, touch "Bookmarks" icon to go to the bookmarks management interface where there are three tabs: BOOKMARKS, HISTORY and SAVED PAGES..

**BOOKMARKS:** Bookmarks management interface.

**HISTORY:** History webpage interface.

**SAVED PAGES:** Show the list of saving webpage.

#### Adding bookmark

Touch "☆" to add the current webpage to bookmark.

#### Opening bookmark

In the "Bookmark" interface, perform any of the following steps to open a bookmark:

- Touch the bookmark you want to open.
- Touch and hold the bookmark you want to open, and touch "Open" or "Open in new window".

#### Editing bookmark

1. In the bookmark interface, touch and hold the bookmark you want to edit.
2. Touch "Edit Bookmark" in the options to show the Edit Bookmark window.
4. Enter your desired changes and touch "OK" to finish editing.

#### Using bookmark

Touch and hold a bookmark in the bookmark list to pop up the Actions option: Open, Open in New Window, Edit bookmark, Add Shortcut to Home, Share Link, Copy Link URL, Delete bookmark, and set as homepage.

 
**6.3.6 Other functions**

In the browser interface, touch the "Menu" icon to perform more operations:

Refresh, New tab, New incognito tab, Share page, Find on Page, Request desktop site, Page info and Settings.


**6.4 Video player**

In the "Apps" interface, touch "Video" to go to the video file list.

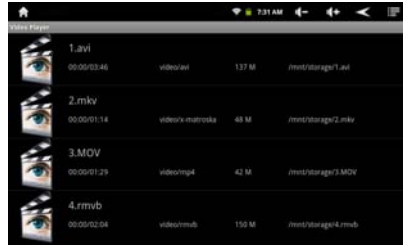

**6.4.1 Video playing**

 In the file list, slide your finger up and down to find the videos you want to play. Touch one to play.

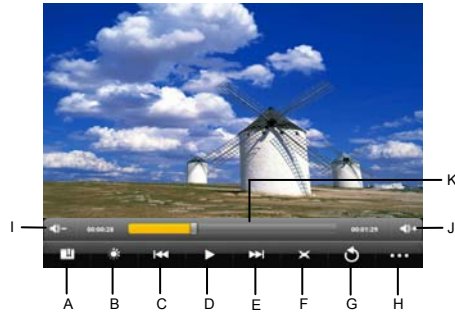

Touch the screen to show the Hide menu:

A. Add video bookmark	B. Adjust screen brightness
C. Touch: Previous video file Touch and hold: Rewind	E. Touch: Next video file Touch and hold: Fast forward
D. Play/pause	G. Return to the video list
F. Screen extension: Touch to select	I/J. Decrease/increase volume

Full Screen, Normal,16:9, 4:3		
H. More	Delete Bookmark And Play from the beginning	Touch this option to delete the video bookmarks and play from the beginning of the title
	Delete bookmark	Delete the video bookmarks and continue playing
	Play mode	Select Repeat mode
	Help	Tips icon function
	Return	Return to the Play interface
K. Play progress bar	Touch any position of the play progress bar to skip to this position; Touch and hold it to move to any position to continue playing.	

Note 1: It takes a longer time to play a larger video file. Convert video files that exceed the max. resolution supported by the unit.

Note 2: For some supported video sources, a few video files that are partly damaged may not be played by the unit. Convert them on the PC and play the converted files by this unit.


Note 3: This product does not guarantee that all kinds of video files are supported. While some are only recognizable in the system and played, we do not promise to provide further support or services; advanced features, such as fast forward and rewind, may not be used for individual video files.

#### 6.4.2 Delete video

 In the video file list, touch and hold the video you want to delete, and touch "Delete->Yes" to delete the video file.

#### 6.5 Audio player

In the "Apps" interface, touch "Music" to go to the audio file list.

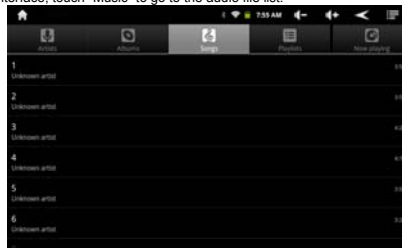


Artists	Sort by "Artist"
Albums	Sort by "Album"
Songs	Display the all music stored on built-in Flash memory, SD card and USB device

Playlists	Display the play list
Now playing	Go to the currently played music file

### 6.5.1 Playlist

 In the music file list, touch "playlists" to go to the playlist.

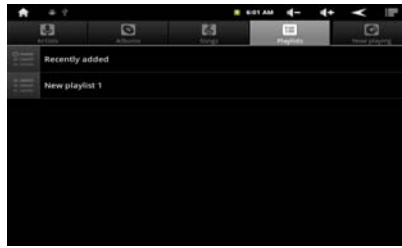


Touch and hold "Recently added" to play or edit the time of the "Recently added" list.

In the music file list, touch and hold a song or a folder, then touch "Add to playlist" to add the song to a new playlist or other playlist.

Tip: You cannot delete the "Recently added" list.

### 6.5.2 Playing audio

 Touch the music you want to played and go to the music playing interface.

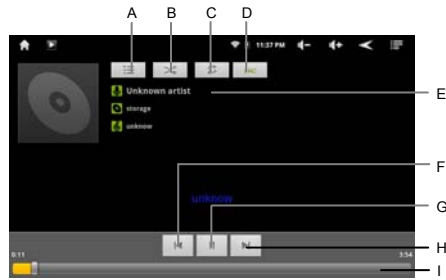

A. Play list	Touch to open the playlist.
B. Shuffle	Playing songs at random mode.
C. Play mode	A. Stop after the end song is played.
	B. Repeat playing all songs in the current directory.

	C. Repeat playing the selected single song.
D. LRC	Touch to show or hidden lyric.
E. File info	When the network connection is established, touch it to check the link information about the currently played music file.
F. Rewind/previous	Touch: Switch to the previous song. Touch and hold: Rewind.
G. Play/pause	Play/pause music.
H. Fast forward/next	Touch: Switch to the next song. Touch and hold: Fast forward.
I. Play progress bar	Touch any position of the play progress bar to skip to this position; Touch and hold it to move to any position to continue playing.

Note: Please place \*.lrc files in "LRC" folder under the path: "Internal Storage:lrc\."

### 6.5.3 Sound effects

In the music playing interface, touch the menu icon and touch "Sound effects" to go to sound effects settings interface.

Slide the slider at the top right corner to turn on sound effects.

Set your favorite sound effects by choosing a type of sound effects or sliding your finger left and right on the sound effect bar.



Note: Few MP3/WMA audio files that are specifically encoded may not be played by the product. Convert them using the audio conversion tool and download the converted files to the product to play.

### 6.6 Picture browser

In the "Apps" interface, touch "Gallery" to go to the picture list.



Tip: The system will automatically search for all pictures on Flash memory, SD card and USB device and display them as folders.

### 6.6.1 Browsing pictures

In the directory, touch the pictures you want to browse to open the picture browsing interface.

Touch the screen to pop up or hide the menu:

A. Share icon	Share the current picture through Picasa, Bluetooth, email or Gmail.
B. Trash can	Delete the current picture.
C. Menu	Touch to show the menu options.




A

B

C

D

Touch the menu icon to show the menu options

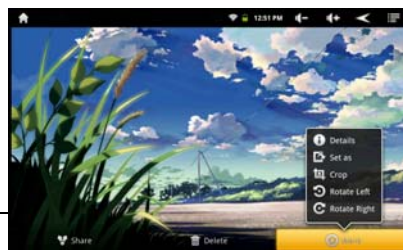 



Slideshow	Automatically browse pictures.
Edit	Touch to edit the current picture, so that you can do more interesting operation.
Rotate left	Rotate the picture 90°anti-clockwise. Touch this icon to rotate the picture anti-clockwise in the following order: 90°, 180°, 270° and restore.
Rotate right	Rotate the picture 90° clockwise. Touch this icon to rotate the picture clockwise in the following order: 90°, 180°, 270° and restore.
Crop	Cut the picture.
Set picture as	Set the picture as desktop background.
Details	Show the name of the picture file, its resolution, etc.

Tip1: When browsing pictures, you can slide your finger to the left or right rapidly to switch to the previous or next picture.

Tip2: When browsing pictures, you can zoom in or zoom out the picture by sliding two fingers together or apart.

#### 6.6.2 Picture file operation

In the picture list, touch and hold a picture or a folder to pop up the Multi-choice operation list.



Done	Finish the operation.
X items selected	Show the number of the selected picture. Touch a picture to be selected or unselected
Share	Share the pictures through Picasa, Bluetooth, Gmail or Email.
Delete	Delete the selected pictures.
Rotate right	Rotate the selected pictures 90° clockwise. Touch this icon to rotate the pictures clockwise in the following order:90°, 180°, 270°, Restore.



Rotate left	Rotate the selected pictures 90°anti-clockwise. Touch this icon to rotate the pictures anti-clockwise in the following order: 90°, 180°, 270°, Restore.
-------------	---


### 6.7 Camera

Touch the camera icon to go to the camera interface.

Touch  icon for camera mode, touch  icon for video record mode, touch  for panorama mode.

Slide along the arc icon to zoom in or out.

Touch  icon to take photo or start recording video. Touch  to end recording video.

Touch  icon to switch between front camera and rear camera.

#### Take photos

Image Size	File Size
5M	(2592 X 1944)
3M	(2048 X 1536)
2M	(1600 X 1200)
1M	(1024 X 768)
QVGA	(320 X 240)

#### Recording Videos

Mode	File Size
720P	1280 X 720
480P	720 X 480

Note: You can view and edit the photographs and recording videos on you computer in path: AOC  
TABLET: \\Internal Storage\DCIM\Camera\

## Chapter 7 Apps

In the main interface, click "Apps" icon to go to the "Apps" interface in which the installed apps will be shown.



### 7.1 Moving a program icon of the interface

To move a program icon to other interfaces, touch and hold the program icon and the screen will switch to another interface. At this time, place the icon to the desired position and release.

### 7.2 Deleting a program icon

In the main interface, touch and hold the program icon you want to move. When the "X Remove" at top of the screen appears, drag it to "X Remove" to delete it.

### 7.3 Adding a Widget

In the "Widgets" interface, touch and hold a widget you want to add and the screen will switch to another interface. At this time, place the widgets to the desired position and release.

### 7.4 Creating a folder

Create a folder in the interface to store the app icons or controls. To make a new folder on your Home screen, stack one app icon on top of another.

Touch and hold a program icon on the screen and drag it to the folder.

Tip: To delete a folder, refer to the steps described in "Deleting a program icon".

### 7.5 Renaming a folder

Touch the folder and the name of the folder will display. Touch the name to rename the folder.

## Chapter 8 Common Tools

### 8.1 E-mail

When you use the e-mail for the first time, you need to create an e-mail account first.

 
1. Enter the address and password for your e-mail account and Touch "Next".
2. Select an account type. Touch "POP3" for a POP3 account.



3. Touch "POP3 Server" and "Port", enter "pop.+ account suffix" and port number. For example, if the e-mail account is [123456@163.com](mailto:123456@163.com) and the port number is 110, enter "pop.163.com" and "110". Then touch "Next".

Note: If you select IMAP Account in step 2, touch "IMAP Server" and enter "IMAP.163.com".

4. Touch "SMTP Server" and "Port", enter "smtp.+ account suffix" and port number, for example "smtp.163.com", Then touch "Next".

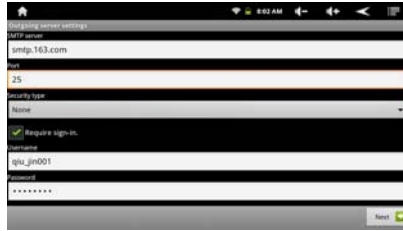

5. Set the account options and touch "Next" to finish settings.

Note: Since the e-mail service providers may vary, configure the server settings based on the actual e-mail account. This product can support the accounts provided by the popular e-mail service providers, such as yahoo, sohu, etc.

#### 8.1.1 Opening e-mail


In the "apps" interface, touch "E-mail" to enter.

Tip 1: By default, this product can be used to browse the inbox after the e-mail app is performed. All e-mails you received will be put into the inbox.

Tip 2: Touch "Load more messages" to send or receive a new e-mail and synchronize your e-mails with your Internet e-mail accounts.

### 8.1.2 Creating and sending e-mails

 1. Touch the "Compose" icon at the top right of the E-mail interface.
2. In "To", enter the e-mail address of the receiver.

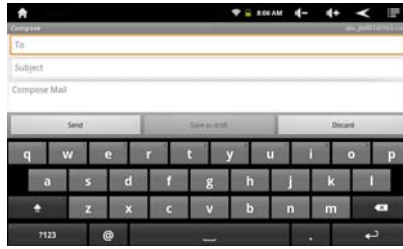

Tip: If you want to send a carbon copy or a blind carbon copy e-mail to other recipients, touch "+CC/BCC".

3. Enter the e-mail subject and compose your e-mail.

Tip: If you want to add a picture attachment, touch the "+" icon, select the picture you want to attach, and touch it to confirm or touch the "X" icon to cancel attaching.

4. After composing your e-mail, touch "Send".

Tip: When you compose your e-mail, touch the "Save as draft" or back icon to save your e-mail to Draft.

### 8.1.3 Receiving and reading e-mail

When a new e-mail is received, the notification bar will show the new e-mail (✉) icon.

Perform one of the following to read your e-mail:

- Touch the notification bar, and touch the new e-mail to read.
- Touch the unread e-mails in the Inbox to read.

### 8.1.4 Managing e-mail

Open an e-mail, touch "Reply" icon to reply and touch "Reply all" icon to reply all.

### 8.1.5 Managing e-mail

Touch and hold an e-mail to show the menu:

Open	Open and read an e-mail
Delete	Delete an e-mail

Forward	Forward an e-mail
Reply All	Replay all with an e-mail
Reply	Reply the sender with an e-mail
Mark as read/unread	The unread e-mails in the Inbox are displayed with a green line to the left.

### 8.1.6 Email Settings

 
In the e-mail interface, touch the menu icon, and touch "Settings" to go to the e-mail settings interface. Touch "Add Account" to add a new e-mail account.

Note: You can set several e-mail accounts. The default account will show whenever you perform e-mail apps.

Account name	Display and change an account name
Your name	Display and change the sender's name of the account.
Signature	Display your signature at the bottom of your email.
Quick responses	Edit text that you frequently insert when composing email.
Default account	Send e-mails from this account by default.
Inbox check frequency	Set the interval of receiving e-mails. There are six options available: Never, Every 5 minutes, Every 10 minutes, Every 15 minutes, Every 30 minutes, and Every hour.
E-mail notifications	Notify in Notification bar when e-mail arrives
Choose ringtone	Set the ringtone used when an e-mail is received
Incoming settings	Display and change the receiving server settings
Outgoing settings	Display and change the sending server settings
Remove account	Remove user account.

### 8.2 Recorder

In the "Apps" interface, touch "Sound Rec" to go to the record interface.

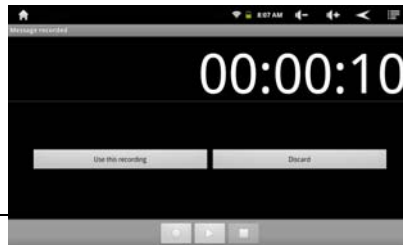

Touch " " to start recording or " " to stop recording. After recording is finished, touch " " to play the previously recorded file. Touch "Use this recording" to save the previously recorded file or touch "Discard" not to save the previously recorded file.

Note 1: The recorded file can be automatically saved in flash so that you can find them in the AudioPlayer " playlists ->My recordings" to play.


Note: The naming rule of the recorded file: recording\_Year+Month+Date\_Serial Number.

### 8.3 Alarm

 In the "Apps" interface, touch "Clock" to the clock interface.



Touch "Set alarm" to enable the alarm function.

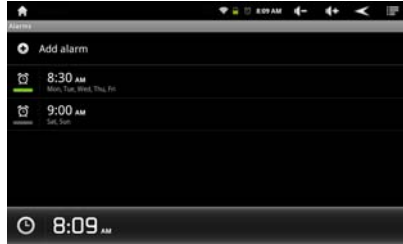

#### 8.3.1 Set alarm

1. Touch the preset alarm to set the selected alarm, or touch "add alarm" to add new alarm.
2. Touch "Time", and set the time for the alarm. Slide your finger up and down to adjust the time, and touch "Set" to complete.
3. Touch "Repeat," select the date you want the alarm to ring, and touch "OK".
4. Touch "Ringtones" and select alarm ringtones. After selection, the ringtone will be played

temporarily.

5. Touch the "Label", set the name of the alarm.

6. Touch the "Done" icon to go back to the alarm interface.

Tip: Touch " " to turn on or turn off the alarm.

Note: When it is shut down, the alarm is not affected.

### 8.3.3 Delete alarm

Touch and hold the alarm you want to delete and touch "Delete alarm -> OK" to delete it.

## 8.4 Calculator

In the apps interface, touch the "Calculator" icon to go to the calculator interface.

You can perform the basic math operations by this calculator.

## 8.5 Explorer

In the "Apps" interface, touch "Explorer" to go to the Explorer interface that includes the following options:

Home	Touch to return to the root directory.
Level Up	Touch to return to the upper level directory.
Multi	Touch to select multiple files.
Editor	Allow you to Copy, delete, move, paste or rename a file.
NewFolder	Create a new folder.
Back	Back to the previous operation.
Next	Back to the next operation.

Note: This product complies with the fat32 file system. When you name a file, do not use special characters, or you may not rename it later.

## 8.6 Installing apps

1. Copy the setup file to your PC. (Make sure the format of the setup file is xxx.apk format supported by this product.)
2. Connect the device to PC using USB cable.
3. Copy the setup file xxx.apk to the device.
4. Disconnect the device and PC.
5. Turn on the device and activate Explorer.
6. Locate the xxx.apk file and touch it to open.
7. Install the app according to the on-screen prompts.
8. After completion, you will see the installed app in the apps interface.

## 8.7 Uninstall app

1. In the apps interface, touch and hold the app you want to uninstall.



2. Move the app to trash can and touch "OK" to uninstall it.

Tip: You cannot delete the pre-installed factory default app on this product.

## Chapter 9 Settings

In apps interface, touch the "Settings" icon to go to the "Settings" interface.

### 9.1 WIRELESS & NETWORKS Settings

#### 9.1.1 Wi-Fi network connection

##### Connection

1. Touch "Wi-Fi" to enter into Wi-Fi settings interface.
2. Slide the slider to right to enable Wi-Fi and this product scans for available wireless networks.



3. Touch the desired wireless network name to connect to it. You will be prompted, if a password is required.
  4. If static IP address needs to be entered, touch "show advanced options" for more options. Then click on "show advanced options" to show "IP settings". Touch the pop-up menu and select "static". Then enter the IP address, gateway, network mask, and DNS information required for such Wi-Fi network connections.
  5. If you use dynamic IP address keep the default "DHCP" in the "IP settings" option.
- Note: The word "Connected" displayed under the network name indicates a successful connection. Afterwards you can surf the Internet, connect to email services, etc.

Note 1: When you connect Wi-Fi for the first time and the prompt "Failed" appears, disconnect Wi-Fi and reconnect it. When you input an incorrect password and the prompt "Authentication problem" appears, touch the network and forget it, then connect it with correct password.

Note 2: You do not have to re-enter the password when you re-connect to the previously connected wireless network that is encrypted, unless you reset the product to the factory settings.

Note 3: Auto search for Wi-Fi is performed, i.e., no additional steps are required to connect to the Wi-Fi network. For some closed wireless networks, the username or password may be required.

Note 4: The availability of Wi-Fi signals may depend on the amount, infrastructure, and objects through which a signal must pass.

### Scan

Touch the "SCAN" icon at the top right corner of screen to search for the available wireless networks in the vicinity.

### Advanced settings


Network notification	Selected to notify you when an open network is available.
Keep Wi-Fi on during sleep	Choose under which condition (Always, Only when plugged in or Never) to keep Wi-Fi on when tablet was in standby mode.
MAC address	Show the tablet's Wi-Fi MAC address
IP address	Show the tablet's IP address

### Checking status of wireless network

You can check the status of the currently connected Wi-Fi

through the following methods:

- Status bar

After the product is connected to the wireless network, the status bar shows the Wi-Fi icon 

and signal strength (the number of the bars lighting up).

- Wi-Fi network


In the network connection interface, touch "Wi-Fi settings" and touch the currently connected wireless network to show the information, such as name, status, speed, signal strength, and security.

Tip 1: If you want to remove the network settings, touch "Forget" in this window; if you want to connect to this network, the settings above should be configured again.

### Connecting to other Wi-Fi networks

In the "Wi-Fi" settings interface, touch "ADD NETWORK," enter the corresponding network settings, and touch "Save".

 Tip 2: Not all wireless networks are connected to the Internet. Some wireless networks may be connected to several computers and cannot be connected to the Internet.

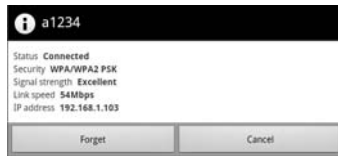

## 9.2 DEVICE Settings

### 9.2.1 Sound

Volumes	Music, video, games & other media	Set the media volume for music and video. Touch the volume bar to adjust the volume level.
	Notifications	Set the notification volume by touching the volume bar to adjust the volume level.
	Alarms	Set the alarm volume by touching the volume bar to adjust the volume level.
Default notification		Set your default notification ringtone.
Touch sounds		Play sound when touch screen.
Screen lock sounds		Play sounds when locking and unlocking the screen.

### 9.2.2 Display

Brightness	Adjust the screen brightness. Touch the brightness bar to adjust the volume level and touch "OK" to save.
Wallpaper	Choose wall paper from Gallery, Live Wallpapers or Wallpapers.
Auto-rotate screen	When unit is turned on/off or rotated, the Landscape/Portrait switching feature is enabled. This product supports 4-direction rotation display.
Sleep	Select the delay time before the screen automatically closes. There are six options available: 15 seconds, 30 seconds, 1 minute, 2minutes, 5minutes,10 minutes, 30 minutes.
Font size	Set the font size of tablet. There are four options available: Small, Normal, Large and Huge.

### 9.2.3 Storage

INTERNAL STORAGE	Total space	Show the total capacity of the Internal Memory.
	Apps	Show the used space of the apps.
	Available	Show the remaining free space of the built-in Flash memory.

After SD card and USB drive plugged in, the following options will appear.

SD card	Total space	Show the total capacity of the SD card.
	Available	Show the free space on the SD card.
	Unmount storage	Safely remove the SD card locally.
	Erase storage	Erase all data on the SD card.
(USB Drive)	Total space	Show the total capacity of the USB drive.

	Available	Show the free space on the USB drive.
	Unmount storage	Safely remove the SD card locally.
	Erase storage	Erase all data on the USB drive.

Touch the menu icon at the top right corner of screen, touch "USB computer connection.

CONNECT AS	Media device (MTP)	It lets you transfer files on Windows, or using Android File Transfer on MAC.
	Camera(PTP)	It lets you transfer photos using camera software.

#### 9.2.4 Battery

It shows the status of battery and the elapsed time.

#### 9.2.5 Apps

Manage and delete the installed apps: For uninstall apps, clear data, clear cache, clear default and force stop.

### 9.3 PERSONAL Settings

#### 9.3.1 Accounts & Sync

**SYNC:** Slide the slider at the top right of screen to the right to turn on sync.

**ADD ACCOUNT:** Touch "ADD ACCOUNT" to add corporate, Email or Google account.

#### 9.3.2 Location services

Google's location service	Selected to allow Google's location service to collect anonymous location data by Wi-Fi or mobile networks.
Location & Google search	Selected to allow Google to use location for improved search results and other services.

#### 9.3.4 Security

Screen lock	Lock screen with Slide, Face Unlock, Pattern, PIN, or Password.
Owner info	Show the information user want you display on lock screen.
Encrypt tablet	Require a numeric PIN or password to decrypt your tablet each time you power it on.
Make passwords visible	After this feature is enabled, the password is shown when the keyboard is used to type it.
Device administrators	View or deactivate device administrators.
Unknown sources	Selected to allow installation of non-Market apps.
Trusted credentials	Display trusted CA certificates
Install form SD card	Install certificates from SD card

Clear credentials	Remove all certificates.
-------------------	--------------------------

### 9.3.5 Language & input

Language	Show the text in corresponding language based on the selection.
Spelling correction	Selected to enable spelling correction.
Personal dictionary	Add & remove words form user dictionary
Default	Set the default input method.
Android keyboard	Touch settings icon to set Android keyboard.
Google speech-to-txt	Selected to enable Google speech-to-text.
Voice Search	Touch to set language. SafeSearch, Block offensive words and show hints.
Text-to-speech output	Touch to set the preferred engine, set the speed at which the text is spoken, and ect.
Pointer speed	Set the pointer speed of mouse and trackpad.

### 9.3.6 Backup & reset

Backup my data	Selected to back up app data, Wi-Fi passwords and other Google settings.
Factory data reset	Erases all data on tablet.

## 9.4 SYSTEM Settings

### 9.4.1 Data & Time

Automatic	Get correction time and revise system time from network.
Set date	Set year, month and day.
Set time	Set hour and minute.
Select time zone	Select the time zone of each major cities in the world
Use 24-hour format	Show 24-hour or 12-hour format
Select date format	Select the format used for date display.

### 9.4.2 Accessibility

Talk Back	Slide the slider to the right to enable the talk back. When talkback is on, tablet provides spoken feedback to help blind and low-vision users.
Large text	Selected to show large text.
Auto-rotate screen	When unit is turned on/off or rotated, the Landscape /Portrait switching feature is enabled.
Speak passwords	
Explore by touch	Selected to hear or see descriptions of what's under your finger. This feature is for low-vision users.
Touch & hold delay	Set up the

### 9.4.3 About device

This option allows you to check information about the battery status, Legal information, Model number, Android version, Kernel version and Build number.

## Chapter 10 Using Micro SD (TF) Card

The external card supported by this product is a Micro SD card, through which the capacity of storage can be expanded. Meanwhile, insert the silk screen chip out of the Micro SD card into the card slot until it is fully inserted into the product. When you remove it, press the Micro SD card downward to eject it.

**Note:**

- Insert cards face-down into the card slot.
- Do not bend the card. The chip on the card should be protected cautiously;
- Keep the chip clean and avoid dust and chemicals.
- Format the new Micro SD card first;
- Avoid insertion and removal of the Micro SD card during its use to avoid damage to the data on card;
- This product does not support the write-protect feature of the Micro SD card.  
Therefore, back up the files on card before deleting data to avoid file loss due to malfunction.



## Chapter 11 Connecting to USB Drive

Insert your USB drive into the OTG port at the right side of the product. Open Explorer and you can see the "USB" directory. This directory is your USB drive. Touch USB to check the files on USB drive. Note that when this unit is connected to the USB drive, it should shutdown; avoid insertion and removal when the files on USB drive are played to avoid damaging the data on USB drive.

## Chapter 12 About the Battery and Power

This product uses a built-in 7000mAh polymer lithium battery to charge the battery. When the product operates individually, power is fed from the lithium battery. When the provided charger is inserted, the charger is powered automatically via the charger.

When you charge this product for the first time, it is recommended to shutdown the product and continuously charges it for more than 8 hours for optimal battery use.

For the use of a new product, it should be fully charged and discharged for the first three times to activate it.

If charging is performed when the product is turned on, it takes a longer time to charge.

Charging time: It typically takes about 7 hours to charge. The actual time depends on the remaining battery level.

It is recommended to fully charge and discharge the product once every 3 months to maintain the lithium battery.

Do not plug the charger into the electric outlet when the product is not connected.

When it will not be used for an extended period of time, fully charge the battery. It should be charged and discharged every three months.

 
When the battery is too hot, the charging protection circuit will automatically close the charging circuit to protect the lithium battery.

When the battery is low, charge it first. When it is running out of power, charge the machine using the charger and connect it to PC. Charge it if:

- A. The battery charging icon indicates that battery is exhausted.
- B. The system automatically shuts down. It also shuts down quickly after reboot.
- C. After you press buttons, there is no response.

## Chapter 13 Firmware Updating / Resetting to Factory

1. Go to for the website ([www.aoc.com](http://www.aoc.com)) to download the current /latest firmware for your device, (current-<model-ID>.img).
2. Copy the downloaded firmware to the built-in flash or SD card.
3. Safely disconnect the product and PC and the screen shows a prompt similar to one shown below:



Touch "Install".

After a short while, the updating message is displayed..

It may take a few minutes, please be patient.



4. After successful upgrade, the system will automatically reboot and the downloaded version firmware takes effect.

Note: During the upgrade / resetting process, it is best to have the device plugged into electric power, using the supplied power adapter.

## Chapter 14 Frequently Asked Questions

- **Product cannot be turned on or boot-ups abnormally**

- ① Plug the AC adapter.
- ② Press the reset button on the side of the product, and then boot up.
- ③ Press and hold the Power button for 6 to 10 seconds, and then boot up.
- ④ Shutdown (ensure the USB cable is unplugged) , then,
  - a) Press and hold the "Home" button while connecting the charger,
  - b) Continue to press on the "Home" button until an Android robot is displayed, then,
  - c) Press the power button for 3 seconds, then press the volume up "+" button to enter into Android system recovery utility interface,
  - d) Select "wipe data/factory reset" or "recovery system from backup" (navigate menu by pressing volume up/down ("+" / "-") buttons), then,
  - e) Press the power button to perform selection.
  - f) Navigate (with the volume up/down ("+" / "-") buttons) to the menu item: "Yes – delete all user data.
  - g) Press the power button to perform selection.
  - h) When presented with "reboot system now", press the power button to perform selection.

The tablet will be restored to factory defaults and all data on device will be erased.

- **No sounds from headset**

Check if the volume is set to 0

Check if the headset is properly connected

- **Loud noises**

Check if the plug of the headset is clean. Dirt may result in noise.

Check if the file is damaged. Play other music files to confirm this. If it is damaged, it may cause loud noise or sound skipping.

- **Screen shows garbled codes**

Check if the correct language is set. Set your language in (System)=>(Language Selection)

- **Cannot download files**

Make sure that the computer is properly connected to the product

Make sure that the storage space is not full

Make sure that the USB cable is not damaged

- **Connect to Wi-Fi but cannot surf the Internet**

Make sure that there is wireless network nearby.

If static IP addresses are needed, make to enter a valid IP address. If dynamic IP addresses are

used, static IP addresses should be disabled while the network is connected.

- **Touch the keyboard on the touch screen and the response is not the expected / desired result.**

Perform touch screen calibration

For better performance, use a pen or your fingernail

- **Cannot be connected to computer**

Make sure the product is turned on

Make sure the product is not in sleep mode

Make sure to use the proper USB cable

- **Cannot view files in AudioPlayer, PhotoBrowser, Video Player, Shelves and Explorer. Or cannot record sound.**

Make sure the files is downloads to your device.

Make sure your device is not connecting to PC.

Wait a few minutes for refresh the media Library.

## Chapter 15 Troubleshooting

### 1. When I view JPEG pictures, some of them cannot be viewed. Why?

Some JPEG files may have a non-standard resolution, they may not be viewed in full screen, or zoomed in or out. If an error prompt appears, touch the back icon to exit or touch the Reset button on the side of the product to solve the problem.

### 2. The product cannot play my videos. Why?

Make sure the video format is supported by this product. Some video files are encoded in different formats and versions. We cannot guarantee that all formats are playable.

### 3. Why does image lag occurs when the video files are played?

Upgrade system software to the latest version.

In addition, this also depends on the video file, high bit-rate streaming video and high resolution video:

① High bit-rate streaming video. For example, the motion scenes of some videos have a bit-rate of 5~6M and image lag may occur.

② High resolution video. If the max frames are reached, non-synchronization may occur.

### 4. Enter into "App settings ->Manage apps", and touch one apps to manage. There is an option "Move to SD card". Actually it moves the app to Flash. Why?

Apps can be installed into System Memory or Flash. The system treated Flash as virtual SD card, so "Move to SD card" means moving app to Flash and "Move to device" means moving to System Memory.

### 5. Product does not respond to operations.

Some various reasons, such as misuse, may cause the product to be unable to shutdown or render the buttons and touch screen unable to respond. You can touch the Reset button on the side of the product (using a paper-clip), or press and hold the Power button for 6 seconds to force the product to shutdown. After restarting, the problem is usually solved.

### 6. The space available on PC is not consistent with that shown on the tablet.

The space on a PC is calculated by 1024 bytes while this tablet's capacity is calculated by 1000 bytes. So the actual free space of the tablet will be slightly different from indicated capacity, also the operating system uses part of the available space.

### 7. Media library cannot be updated even if I reset the device.

In "Apps" interface, touch "Settings -> Apps -> Manage apps", choose the "All" tab, touch "Media storage -> Clear data". And then reset your device.

#### FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.