

User's Guide

AY-MNT-15-TTK

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Note : This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Key Operation Guide for 15" color monitor

1.Key Layout

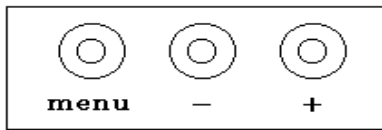

2.Item and Operation

Please refer to the guide of OSD for the Key operation.
OSD is displayed transparent.

2-1. Contrast/ Brightness control

Push "menu" key. Status of contrast is displayed by OSD.



Use "+" or "-" key for adjustment of contrast.

Push "menu" key again. OSD display is exchanged to status of brightness.



Use "+" or "-" key for adjustment of brightness.

Push "menu" key. OSD display disappear.

2-2.Degauss

Push + or - key then displayed guide of degauss operation.

DEGAUSS
YES:MENU NO:+/-

Push "menu" key. Degaussing is executed, OSD display disappear.

Push "+" or "-" key. Degaussing is canceled, OSD display disappear.

2-3.Advanced Menu

Push "menu" key continuously about 10 seconds.

OSD display is exchanged to the Advanced Menu.

MAIN MENU
EXIT
COLOR
SIZE/CENTER
GEOMETRY
UTILITY
ENTER:MENU SELECT:+/-

Executable item's display is black. Other item's display is transparent.

Use "+" or "-" key for item selection.

Push "menu" key. OSD display is changed to sub-menu you selected.

However, when "Exit" is selected, "Advanced-Menu" is ended, and OSD display disappear.

2-3-A.Color setting

This menu have 6 items.

Executable or adjustable item's display is black.


Use "menu" key for item selection.

COLOR

COLOR NO ◀ 1 2 ▶

R ◀  ▶ 80

G ◀  ▶ 80

B ◀  ▶ 80

CANCEL

EXIT

SELECT:MENU ADJUST:+/-

Color No "1" and "2" is selection of color preset.

Use "+" or "-" key for selection of color preset.

"R" is gain of R-video.

"G" and "B" are same as "R".

Use "+" or "-" key for adjustment of selected item.

"Exit" is return to Advanced mode.

Use "+" or "-" key for adjustment or execute of selected item.


2-3-B.Size/Center

This menu have 6 items.


Executable or adjustable item's display is black.

 
Use "menu" key for item selection.

SIZE/CENTER

 **H-SIZE**

 **H-POSITION**

 **V-SIZE**

 **V-POSITION**

 **CANCEL**

EXIT

 ◀  ▶  40

SELECT:MENU ADJUST:+/-

"H-SIZE" is use for adjustment of horizontal width.

"H-POSITION" is use for adjustment of horizontal position.

"V-SIZE" is use for adjustment of vertical height.

"V-POSITION" is use for adjustment of vertical position.

"CANCEL" is use for cancel of adjustment result.

"EXIT" is use for return to Advanced mode.

Use "+" or "-" key for adjustment or execute of selected item.

2-3-C.Geometry

This menu have 7 items.

Executable or adjustable item's display is black.

Use “menu” key for item selection.

```
GEOMETRY
PINCUSION
TRAPEZOID
PIN-BALANCE
PARALLEL
ROTATION
CANCEL
EXIT

◀────────────────────────────────────────▶ 40
SELECT:MENU  ADJUST:+/-
```

“PINCUSION” is use for adjustment of “PIN” distortion.

“TRAPEZPIDE” is use for adjustment of trapezoidal distortion.

“PIN-BALANCE” is use for adjustment of “BOW” distortion.

“PARALLEL” is use for adjustment of “PARALLEL” distortion.

“TILT” is use for adjustment of image rotation.

“CANCEL” is use for cancel of adjustment result.

“EXIT” is return to Advanced mode.

Use “+” or “-“ key for adjustment or execute of selected item.

2-3-D.Utility

This menu have 6 items.

Use “menu” key for item selection.

```
UTILITY
LANGUAGE
OSD-POSITION
KEY
CANCEL
DATA RECALL
EXIT

◀ 1 2 3 4 ▶ ENGLISH
SELECT:MENU  SET:+/-
```

“LANGUAGE” is use for selection of language of display.

(English, French, German, Japanese)

“OSD-POSITION” is use for selection of OSD display position.

(Top-Left,-Center,-Right. Middle, Bottom same as TOP)

"KEY" is use for lock or unlock of "KEY" operation.

“CANCEL” is use for cancel of setting result.

"DATA RECALL" is use for return to initial setting of monitor.

“EXIT” is return to Advanced mode.

Use “+” or “-“ key for execute of selected item.