



FSG2

Instruction Manual - English

 
# 1. Get started


---

## 1.1 Battery

### 1.1.1 Install the battery

- Remove the battery cover.
- Align the gold contacts of the battery with the corresponding connectors in the battery compartment.
- Push down the battery until it clicks into place.
- Close the battery cover.

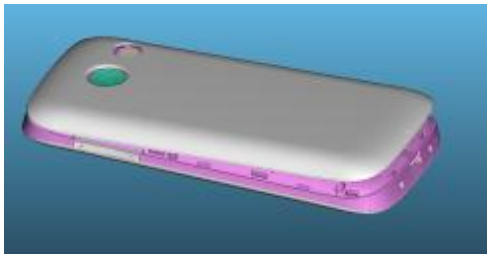

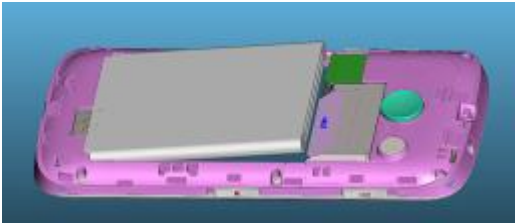


### **1.1.2 Remove the battery**

- Remove the battery cover.
- Pull the battery up and remove it.

## 1.2 Insert the SIM card

The mobile phone supports two SIM cards at the same time.  
How to insert SIM cards:

- Make sure that the phone is switched off.
- Remove the battery cover and take out the battery.
- Slide the SIM card into **SIM1** or **SIM2**. Make sure that the metal contact of the card is facing down and the beveled corner is in the direction as shown in the picture.
- Put the battery back and close the battery cover.

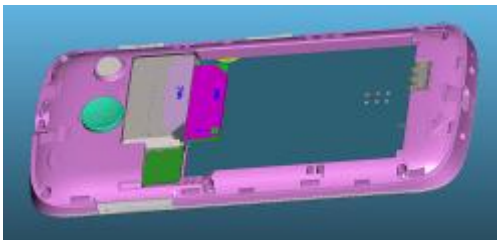

### 1.2.1 Remove the SIM card

- Press down lightly and pull it in the reverse direction.

#### **SIM card**

Every mobile phone supports a SIM card (Subscriber Identity Module). This can store your personal information such as names and phone numbers.

## 1.3 Insert a Memory (micro SD) Card


If you want to download music or pictures using Bluetooth, record Audio or Video, or store many photos, you will need to insert a micro SD memory card to store these files.

- Make sure that the phone is switched off and remove the battery cover.
- Place the Memory card indented side down and insert it into the card slot.

## 1.4 Charge the battery

### Method 1:

- Connect the supplied power adaptor to a wall outlet.
- Connect the power cord to phone as shown in the picture. The battery-charging indicator starts scrolling and the red status light turns on. The charging indicator stops scrolling when the battery is fully charged.
- Disconnect the charger.

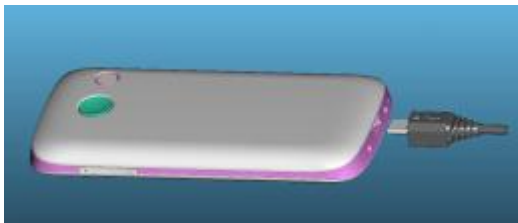

## Method 2 :

- You can also charge phone by connecting it to a computer using the supplied USB data cable.

## Method 3 :

- You can connect the AC adapter to charge seat at one end, the other end connected to an external power source, and then your phone is placed on the charging base, start charging.



***Note: charge the battery at least 12 hours at the first time.***

## 1.5 Power on/off

Press and hold End key to switch the phone on or off.




***Note: Make sure the SIM card and the battery have been inserted properly before startup.***

## 2. Your phone

---



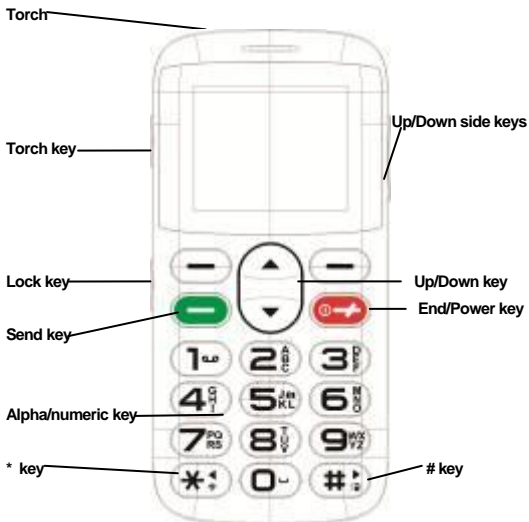


### 2.1 Keys



<b>Up/Down side keys</b>	<p>During a call: Press up/down side key to increase or decrease the earpiece or speaker volume.</p> <p>In standby mode: Press up/down side key to increase or decrease ringer volume.</p>
<b>UP/Down Key NAVIGATOR</b>	In standby mode: Press the Up key to go to FM radio mode. Press Down key to go to Camera.
<b>Send Key</b>	In standby mode: Press this key goes to call history.
<b>End/Power key</b>	<p>End an active call or reject calls.</p> <p>Press and hold to switch the phone on or off.</p>
<b>Alpha/numeric key</b>	<p>Use these keys to enter numbers and characters.</p> <p>Camera: Press "5" to take shoot camera.</p>
<b>SOS key (Phone back)</b>	Press this key to turn on SOS Tone.
<b># key</b>	Press and Hold this key to switch between meeting mode and general mode.



## 2.2 Screen Icons

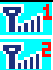	SMS		Vibration on
	Keypad lock		Bluetooth on
	Battery power level		Alarm on
	Signal strength		

## 3. Basic Functions

### 3.1 Make a call

#### 3.1.1 Dial a Number

In standby mode, enter the phone number and press **Send key** twice to make a call. *(When you install two SIM cards, press Send key again to choose SIM1 or SIM2 voice call.)*

### 3.2 Answer and end a call

The phone will ring or vibrate when there is an incoming call.

- Press **Send key** to answer the call.
- Press **End key** to reject the call.
- Press **End key** to end the call.

### 3.3 Text Input

- Press the **# key** to change the input modes.
- Delete Character: Press the **right soft key** to clear a character. Hold the **right soft key** to delete all characters.
- Move cursor to left or right: Among the text, press the **Up/Down keys** to move the cursor to left or right.

### 3.4 Adding contact to the Phonebook

You can save numbers to your contact phonebook. Access these numbers quickly and easily.

- Go to **Menu--- Phonebook---Add new contact.**
- Edit the information and save it.

### 3.5 Sending and receiving messages

You can use your mobile phone to send and receive message.

- Send a message
- Go to **Menu---Messaging---Write message---Text message.**
- Write your message.
- When you finish writing an SMS, select send or save the message.
- Receive a message

When you receive a new message, press **left soft key** to Inbox to read the message.

### 3.6 SOS Function

Press the SOS key for 3 seconds to dial an emergency number under all circumstances, even if the phone is locked. You can go to **Menu→ Settings→ Phone settings→ SOS** to set those functions :

- **SETTING:** To activate and deactivate SOS Function.
- **SOS Number:** 1 emergency number can be set at most. If you have been set SOS number, press left soft key to select Edit or Delete. You can change Phone number.
- **SOS SMS:** You can set a Message and can be edited.

## 3.7 Call logs

Go to **Menu---Call center---Call history**.

**Missed calls**, **Dialed calls**, and **Received calls** are saved in Call logs. If the records are full, the earliest saved records will be deleted. You can view Call times.

## 3.8 Setting your phone

You can adjust various settings of your phone. Go to **Menu---Settings**.

- **PHONE SETTING:** Set Time and date, language, Pref. input method, Display, SOS, Dedicated keys, auto update, Flight mode, Misc. settings etc.
- **SECURITY SETTINGS:** PIN code, PIN2 code, the phone is locked, modify the phone password settings. Mobile Security to set the default password is 1234.
- **NETWORK SETTINGS:** You can see Network selections and GPRS transfer pref.
- **RESTORY SETTINGS:** To restore the factory settings, the default password is **1234**.

## 3.9 How to take a photo

Go to **Menu---Multimedia---Camera**.

- To take a photo: aim the camera at the object and then press the 5 key to take the shot.
- Configure camera: press the **left soft key** to configure your camera.
- Another way for quick menu to go to Camera is Press Navigator DOWN KEY then go to Camera directly.

## 3.10 How to Listen to FM radio

Go to **Menu---Multimedia---FM radio**.

Press **“up key”** will go to FM Radio directly.

With the radio, you can search for radio channels; listen to them, and save them on your device.

Press **up/down key** to manually scan the FM Radio frequency.

Press **number key 2** to **ON** and **OFF** the FM Radio.

Press **OPTION** for AUTOSEARCH and Channel list.

Press **1** **<<** Lower Channel Frequency

Press **3** **>>** Higher Channel Frequency

Press **\*** **<** **and** **>** **#** is for Volume adjustment

## 3.11 Profiles

Go to **Menu---Profiles**.

The mobile phone provides multiple user profiles, including General, Silent, Meeting and Outdoor.

## 3.12 Extras

Go to **Menu---Extras**.

You can set Bluetooth, Calculator, Calendar, Alarm and STK etc through this access.

## FCC

### FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over on one gram of tissue.

Device types: FSG2 (FCCID: 2ADLM-FSG2 ) has also been tested against this SAR limit.

The highest SAR value reported under this standard during product certification for use at the

Head is 1.204 W/kg and when properly worn on the body is 1.403 W/kg. This device was tested for

typical body-worn operations. To comply with RF exposure requirements, a minimum separation

distance of 1.0 cm must be maintained between the user's body and the handset, including

the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should

not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.



- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.