

**Just
Wireless®**



**BLUETOOTH® FM TRANSMITTER
USER'S MANUAL**

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.


Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FEATURES

- 1 Play music from your mobile device to your car stereo via Bluetooth
- 2 Flash drive and Micro SD card port
- 3 Supports 3.5mm jack port
- 4 Automatically switches to hands-free mode from music playing when receiving calls
- 5 Charges your device via USB port.
- 6 LCD screen display


FEATURES

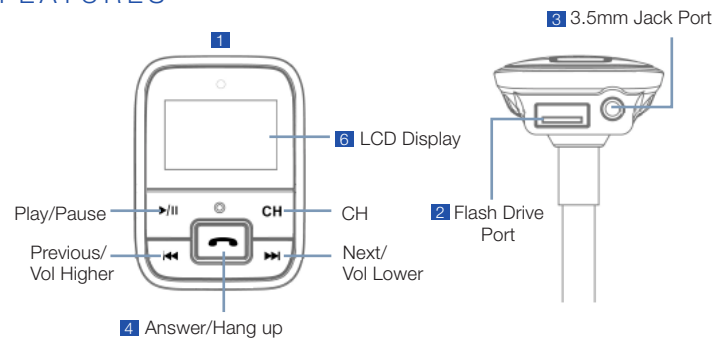

FEATURES

2 Micro SD Card slot

5 USB Charging Port

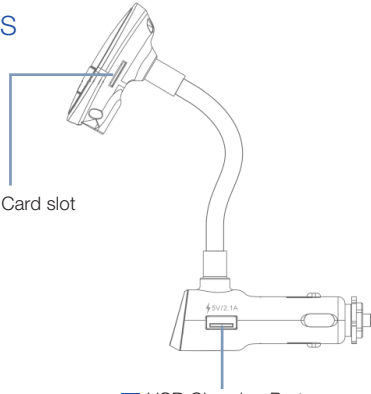

USING BLUETOOTH FUNCTION



- 1 When using Bluetooth for the first time, you need to pair your mobile phone with your FM Transmitter. In order to do this you must turn on your mobile phone's Bluetooth function, then search for a new device. When your mobile phone detects your FM Transmitter (named as "JW20055"), please pair and connect by using the original password "0000"
- 2 If in music playing mode, when there is an incoming call, your FM Transmitter will automatically switch to hands-free mode.

Note: The Bluetooth icon which is displayed on the LCD screen of your FM Transmitter will stop flashing after the Bluetooth is connected with your mobile phone.

USING LINE IN FUNCTION

- 1 Plug the FM transmitter into your vehicle's cigarette lighter
- 2 Tune your radio to an unused FM station, then match the same frequency on your FM Transmitter unit.
- 3 Connect your device to your FM Transmitter using the supplied 3.5 mm jack. The FM Transmitter will play music through your car stereo.

BLUETOOTH CALLING

- 1 Press the red "Answer/Hang Up" () button to answer an incoming call.
- 2 Press the red "Answer/Hang Up" () button to hang up a phone call.
- 3 When making a call, only the phone numbers stored on your mobile phone can be dialed, but once the call is connected you can use the hands-free function.

CONVERSION FROM BLUETOOTH TO USB FLASH DRIVE/MICRO SD CARD

When the FM transmitter is playing music from your device via Bluetooth, hold down the "pause" button on the top left of the FM transmitter face. The screen will display the letters "BT". After 5-10 seconds of holding down the "pause" button (time can differ depending on the operating system) the letters "BT" will become "H". Once you see "H" press the "CH" button on the top right of the FM transmitter face. This will prompt the device to play music from a \flash drive or micro SD card.

QUICK GUIDE

FUNCTION

ANSWER/HANG UP

Press "answer/hang up" button:
answer the call
Press "answer/hang up" button:
hang up the call

PLAY/PAUSE MUSIC

Press "▶/||" button:
play the music
Press "▶/||" button again:
pause playing

ADJUST THE VOLUME

Press and hold "▶▶" button:
increase volume
Press and hold "◀◀" button:
decrease volume

ON REMOTE CONTROLLER

Press "▶" button

Press "▶/||" button

Press "+" to increase the volume
Press "-" to decrease the volume

QUICK GUIDE

FUNCTION	ON FM TRANSMITTER	ON REMOTE CONTROLLER
SET FREQUENCY	Press "CH" button first, then press ►►: increase the frequency Press ◀◀: decrease the frequency	Press "CH+" button: increase 0.1MHz Press "CH-" button: decrease 0.1MHz Or press the numbers of the frequency that you desire, and press "CH+" to confirm.
CHOOSE MUSIC	Press ►► Button: Play the next song Press ◀◀ Button: Play the previous song	Press ►► button: play the next song; Press ◀◀ button: play the previous song; Or press the number of the song then press ►/ to confirm
CHOOSE EQ	Support by remote controller only	Press "EQ" button to choose your favorite EQ
SWITCH FOLDER	Press "►/ " button first, then press and hold "CH" button to get menu list, then choose wanted folder under card folder menu	Press "folder" button to switch folder

Just
Wireless[®]

SKU 20055 REV012014