


**Just**  
**Wireless®**





Model : C09

**FM TRANSMITTER  
USER'S MANUAL**

## OPERATION MANUAL

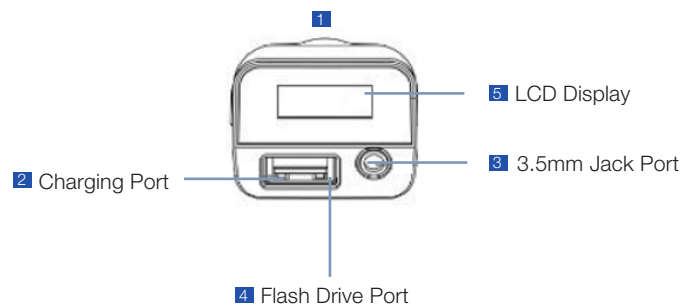

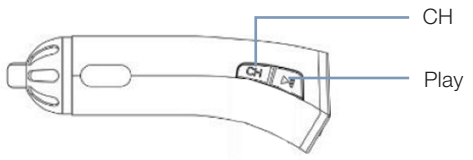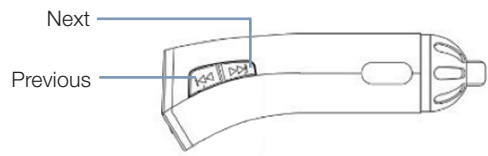

## FEATURES

- 1 FM transmitter.
- 2 Charges your device via USB port
- 3 Supports 3.5mm jack port
- 4 Flash drive port
- 5 LCD display screen

## SPECIFICATIONS

- 1 Input voltage:12-24V, output power: 5V DC/2.1A
- 2 Supports MP3 and WMA format files

## FM TRANSMITTER FUNCTION

- 1 Plug the FM transmitter into your vehicle's cigarette lighter
- 2 Connect your device to your FM transmitter using the supplied 3.5 mm jack.
- 3 Tune your radio to an unused FM station, then match the same frequency on your FM transmitter unit. To change frequency press the "CH" button on the side of your FM transmitter, then press the "▶▶" button to increase frequency, or "◀◀" to decrease frequency. The FM transmitter will play music through your car stereo.

Note: You can play music while charging your mobile phone.

## CAR CHARGER FUNCTION

**1** Connect your device into the USB power port of your FM transmitter via your charging cable.

**2** **For Ipad Users:**

Insert the charging cable to the USB port before you connect the charger into cigarette lighter, then insert your FM transmitter to the cigarette lighter.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**5**

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## QUICK GUIDE

### FUNCTION

#### PLAY/STOP

Press "PLAY" button : play the music  
Press "PLAY" button a second time: stop the music

#### ADJUST THE VOLUME

Hold down "▶▶" button: increase the Volume  
Hold down "◀◀" button: decrease the Volume

#### CHANGE FREQUENCY

Press "CH" first, then press "▶▶" button: increase the frequency  
Press "CH" first, then press "◀◀" button: decrease the frequency

#### CHOOSE MUSIC

Press "▶▶" button: play the next song;  
Press "◀◀" button: play the previous song;

#### CHANGE PLAY MODE

Hold down "play/pause" button to switch the play modes:  
All, Folder, Random and One

**Just**  
**Wireless®**

SKU 20054 REV012014