

User Manual

For Outdoor Bluetooth Speaker

For correctly operating, please read this manual carefully before using. Any content revise of the manual won't declare again, and we are no responsible for consequence caused by fault or oversight of this manual



FEATURES:

2.1 ch Outdoor Bluetooth speaker with 4 inch subwoofer
output very clear sound and heavy bass, dynamic sound effect;
With A2DP bluetooth, wireless stream music from any bluetooth-enabled
device such as your mobile phone, notebook, iPhone or iPad;
Secure simple pairing for user-friendly operating;
10 meters operating rang;
With FM radio
With Line-in function suitable for PC, MID, TV and other radio device;
With TF card support;
Built-in lithium rechargeable battery 1000mAh;
With handle, easy to take out ;


ACCESSORIES:

Charging cable, Audio cable, User manual

SPECIFICATION:

Bluetooth version	2.1 Support A2DP and AVRCP profile
Bluetooth range	up to 10 meters
Speakers:	Horn Size:2 inch Subwoofer Size:4 inch Horn output: 2W*2,4Ω Subwoofer output:7W,4Ω
Connections:	TF card(reader) Aux-in 3.5mm jack connection
Power supply:	Built-in rechargeable lithium battery 1000mAh (1.5hours playtime with max volume)
Recharge power:	DC 5V(USB-to-micro USB charging cable included)
Product size:	Ø145*256mm

INSTRUNCTION FOR APPEARANCE AND KEY:

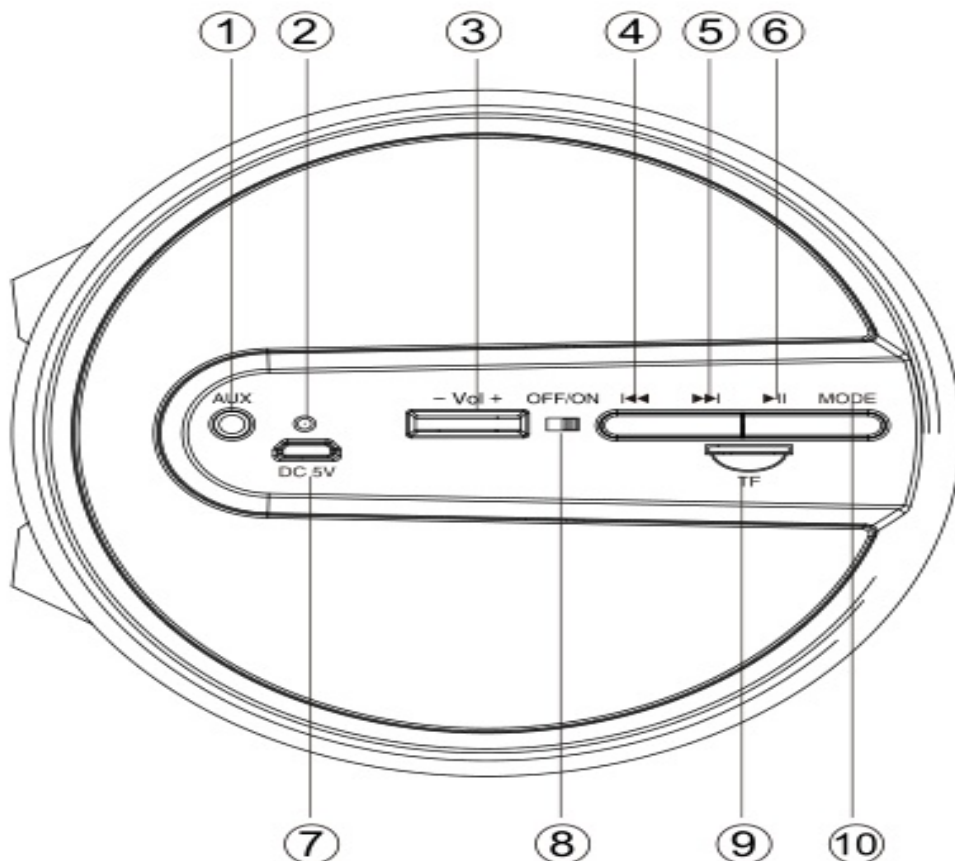

- | | |
|--------------------|-------------------------------------|
| 1. Aux-in jack | 6. Play/pause |
| 2. LED indicator | 7. Charging jack(For Charging Only) |
| 3. Volume Gear +/- | 8. ON/OFF button |
| 4. Previous | 9. TF slot |
| 5. Next | 10. Mode |
- (Switch between Bluetooth, TF, FM, AUX-IN)

Bluetooth connection:

1. Turn the power button to "ON", The LED light turn blue and twinkle quickly and beep twice
2. Activate *Bluetooth* of mobile phone and search for device name "BT speaker" then connect it. The blue LED light twinkle slowly and and beep third times once connected successful.
3. Play the music from your mobile phone and enjoy.
4. Press LAST or NEXT button on the devices or on Mobile phones to select songs you like.
5. Press Play/pause button on the devices or on Mobile phones to play/stop the music
6. Use the "Volume Gear "to adjust volume up and down. Or adjust the mobile phones' volume.

Playing music from TF card:

1. Turn the Power button to "ON".
2. Insert TF card into slot, the music stored will be played automatically and blue LED light always keep lighting.
3. Under playing mode, short press Forward or Backward button to select songs you like, long press to fast forward or backward the song.
4. Press PLAY/PAUSE to play or pause.
5. Please turn the Power button to "OFF" while without use.

Remark: Under Bluetooth or FM mode, If a TF will be inserted, it will automatically starts playing it. To return to the previous mode, use the MODE button.

How to Use FM Radio:

1. Under FM radio state, the audio cable provided treat as antennal. Please Insert the audio cable to get the best FM signal before using.
2. Turn the power button to "ON", press the "MODE" button to switch to FM radio state.
3. Under playing mode, short press "Play/pause" button to auto search the FM Channel and store it automatically.
4. Press LAST or NEXT button to change the stored FM channel.

AUX-IN:

For other compatible music devices or your MP3/MP4 players, use the supplied audio line cable to connect from the device's "Line Out" to the "Aux In" of this devices. Then press the "MODE" button to switch to AUX-IN state. Enjoy When using an external device, all functions will be controlled by the external devise except the "Play/pause" button.

Battery Charging:

1. Power off the unit, put the provided charge cable into the charge slot of unit, connect the other end to PC or other charger with 5V output (Not included),the red charging indicator keep lighting.
2. Charge time should be 3-5 hours. When charging full, the indicator light will switch off.
3. In order to prolong the life of battery, please do not charge more than 8 hours.

Note:

1. The unit will operate without the wire connection using the lithium battery. The amount of battery life depends on how hard the unit is working. Heavy, loud, bass music will use more energy to produce than spoken word.
2. The built-in rechargeable battery is not replaceable. Do not remove or replace it, do not throw in the trash or in the fire.
3. When cleaning the product, use a soft dry cloth. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

FCC Note:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment. The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operated in conjunction with any other antenna or transmitter

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.