



# INSTRUCTIONS

**SAFETY WARNING:** Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

**SAVE THESE INSTRUCTIONS** – This manual contains important safety and operating instructions.

## WARNING

---

ELECTRIC PRODUCT. Keep away from children. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## WARNING

---

Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.

## WARNING

---

The light is very bright. Do not shine directly into eyes.

## IMPORTANT SAFETY INSTRUCTIONS

**READ ALL INSTRUCTIONS BEFORE USING (THIS FURNISHING)**

**WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS :**

---

**READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

1. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
2. Do not let lamps rest on the supply cord or on any wire.
3. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
4. Do not cover the product with cloth, paper or any material not part of the product when in use.
5. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
6. This seasonal use product is not intended for permanent installation or use.
7. Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
8. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
9. This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
10. Do not use this product for other than its intended use.
11. Read and follow all instructions that are on the product or provided with the product.

**WARNING:** To reduce the risk of fire and electric shock:

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

# ASSEMBLY INSTRUCTIONS

1. Gently remove contents from packaging and lay out in a clear area.
2. Assembling the projector and case:
  - a. Slide the buckles on both sides of the weather-resistant case, to open the cover. Place the projector in the weather-resistant case and connect the USB fan. (See illustration 1)

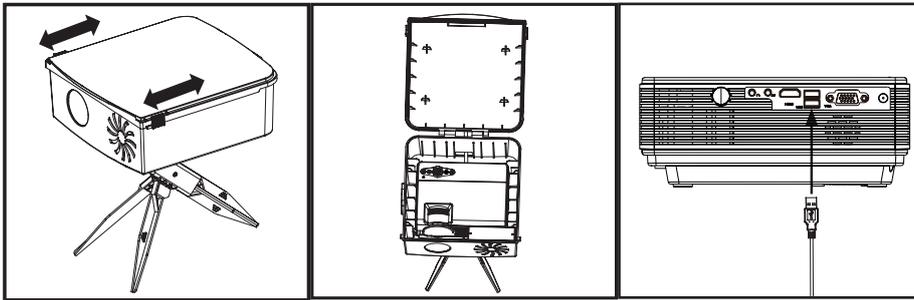


illustration1

- b. Connect the adapter cable through the back of the weather-resistant case into the projector. (See illustration2)
- c. Plug adapter into standard wall socket. (See illustration 3)

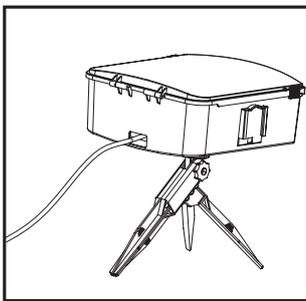


illustration 2

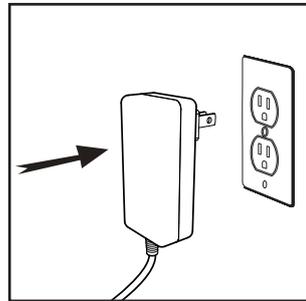


illustration 3

3. Focus
  - a. Turn the focus knob on top of the projector to adjust the focus. (See illustration 4)
  - b. Turn the keystone knob on top of the projector to achieve uniform projection. (See illustration 4)
  - c. Close the cover of the weather-resistant case and secure it by sliding the buckles back into place.

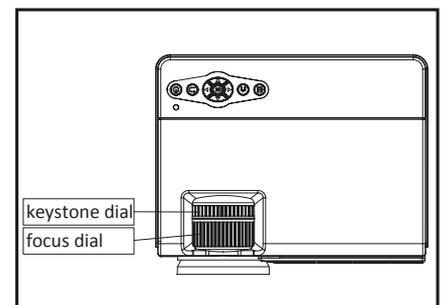


illustration 4

4. Set up:
  - a. Slide the outdoor stake into the track located on the bottom or side of the weather-resistant case. (See illustration 5 for horizontal or vertical projection.)
  - b. Locate the outdoor stake, projector, and weather-resistant case. (Also included is a tripod for indoor use when playing your own content. See illustration 6)

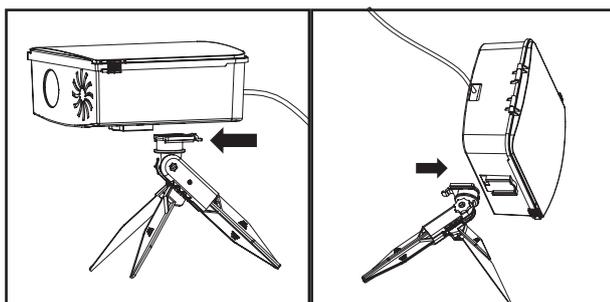


illustration 5


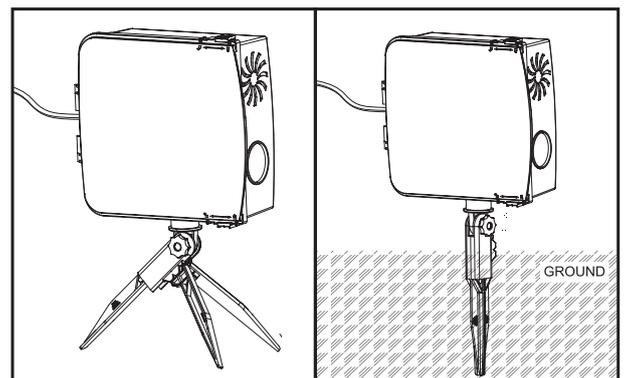


illustration 6

# EXTERNAL SIGNAL SOURCE


**Audio output:**

The audio signal comes from the output port of the projector. Connect the audio output cable to an external amplifier for higher volume levels.

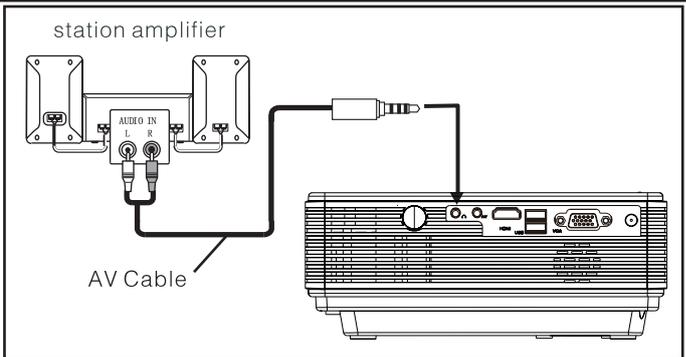


**Video input socket:**

LD players, DVD players, video cameras and players can connect to this port.

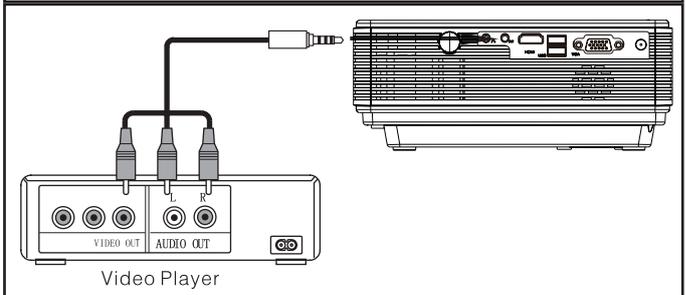

**HDMI hd signal input:**

HDMI cables can connect to this port.

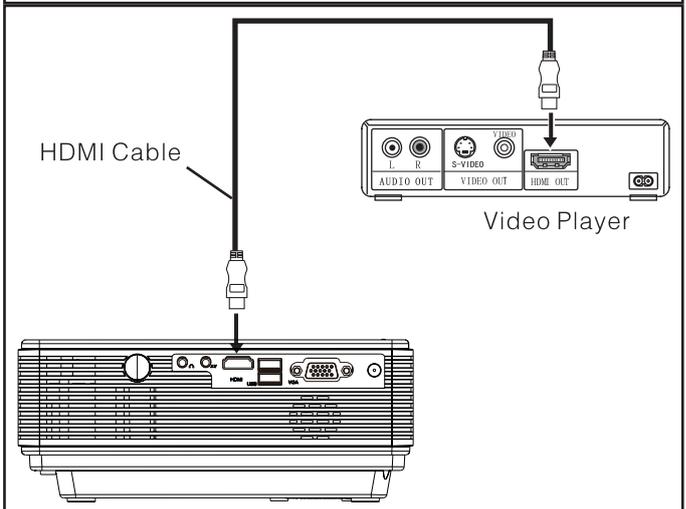


**VGA input socket:**

A computer or other VGA signal output can connect to this port.

**USB port:**

These two ports can be connected to a USB or fan.

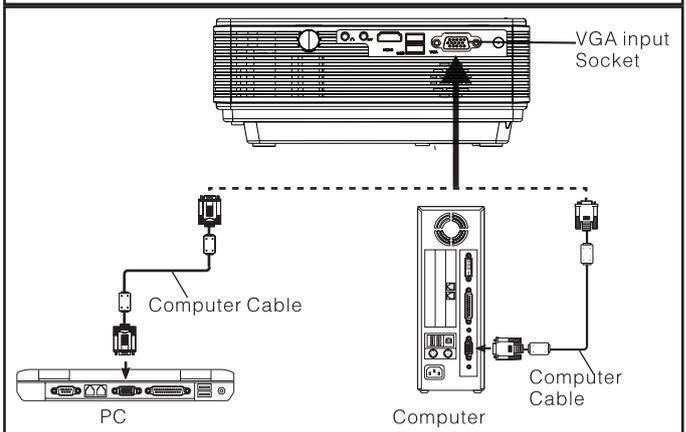


# CONTENTS

Adapter	1pc
Remote	1pc
Projector	1pc
Weather-resistant case	1pc
Stake	1pc

# KEYPAD LEGEND

FOR MAIN UNIT AND REMOTE

1.  HOME
2.  POWER
3.  BACK
4.  SIGNAL SOURCE
5.  OK

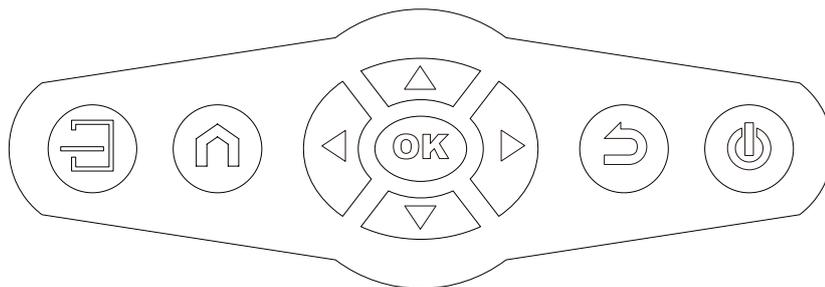


Use OK and DIRECTIONAL ARROWS to select and scroll through setting options.

## REMOTE INSTRUCTIONS:

1.  HOME
2.  POWER
3.  BACK
4.  PLAY/PAUSE
5.  SIGNAL SOURCE
6.  MUTE
7.  INCREASE THE VOLUME
8.  DECREASE THE VOLUME

Use OK and DIRECTIONAL ARROWS to select and scroll through setting options.

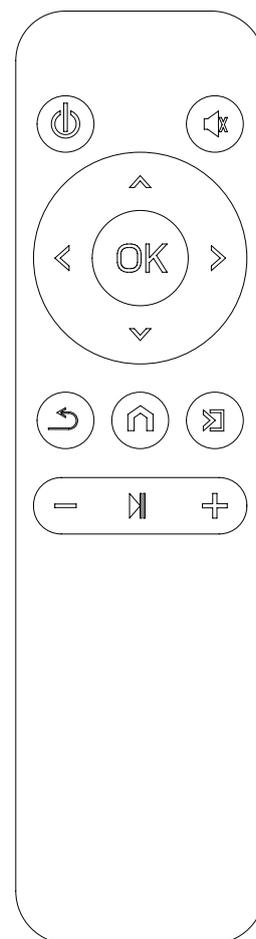

## NOTES:

1. When using the remote to turn ON your set, there may be up to a 2 seconds delay before the light pattern starts working.
2. If for any reason the signal from the remote (transmitter) to the control box (receiver) hangs up, please turn off and then restart the power to the set.
3. The effective operating distance of the remote is 20' (6m).

## BATTERY CAUTION:

- Keep this product's battery out of the reach of small children or pets. If ingested, contact a physician immediately.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all battery of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Remove battery from equipment which is not to be used for an extended period of time.
- Remove used battery promptly.
- When the remote control begins to lose its sensitivity, check the batteries and replace if necessary.
- Open the battery compartment and replace battery.  
Ensure the battery is installed correctly with regard to polarity (+ and -).

## BATTERY USAGE:

---

Required 2 AAA batteries (included).

1. Keep these instructions for future reference because they contain important information. 2. May explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled. 3. Products that contain batteries should not be disposed of in fire. The batteries inside may explode or leak. 4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 5. Do not mix old and new batteries. Replace all batteries of a set at the same time. 6. Use only batteries of the same or equivalent type as recommended by the manufacturer. 7. Be sure to insert batteries with correct polarities and always follow manufacturers' instructions. 8. Remove exhausted batteries from product promptly. 9. Do not short-circuit supply terminals. 10. Remove batteries before storage or extended periods of non-usage. 11. Clean the contacts on the batteries and the device prior to battery installation. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are not recommended for use in this product. If rechargeable batteries are being used, however, please follow these guidelines. (1). Rechargeable batteries should be removed from the product before being charged. (2). Rechargeable batteries should only be charged under adult supervision.



## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be practiced including the following:

- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
2. Read and follow all instructions that are on the product or provided with the product.
3. Do not use an extension cord.
4. Reference the National Electrical Code, ANSI NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. Do not install or use within 10 feet of a pool.
7. Do not use in a bathroom.
8. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
9. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
10. If the connector of this driver does not properly fit into the connector of the lighting string, do not modify the product and discard product if the connector is damaged.
11. **WARNING:** Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

**SAVE THESE INSTRUCTIONS** - This manual contains important safety and operating instructions for power units.

## CAUTION

---

1. For temporary (90 days max.) installation and use only.
2. To reduce the likelihood of excessive heat and possible damage, use only decorative lamp accessories packaged with this product or marked for use with this product.
3. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify wiring or product.
4. This is an electric product-not a toy. To avoid risk of fire, burns, personal injury and electric shock it should not be played or placed where small children can reach it.
5. Do not connect to another lighting string, decorative outfit or seasonal product.
6. Always unplug this product before installing or replacing fuses.

# WARNING

---

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.

## FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

# THESE INSTRUCTIONS ARE FOR ITEMS

---

1002019 Wireless Remote Controller

448093 Living Projection Projector



Visit [WWW.GEMMY.COM](http://WWW.GEMMY.COM) for more information.

©2019 GEMMY INDUSTRIES CORP.  
117 WRANGLER DRIVE, SUITE 100  
COPPELL, TX 75019 U.S.A.  
1 (800) 274-6717  
MADE IN CHINA  
PRINTED IN CHINA