 


Lightshow Box with Speaker

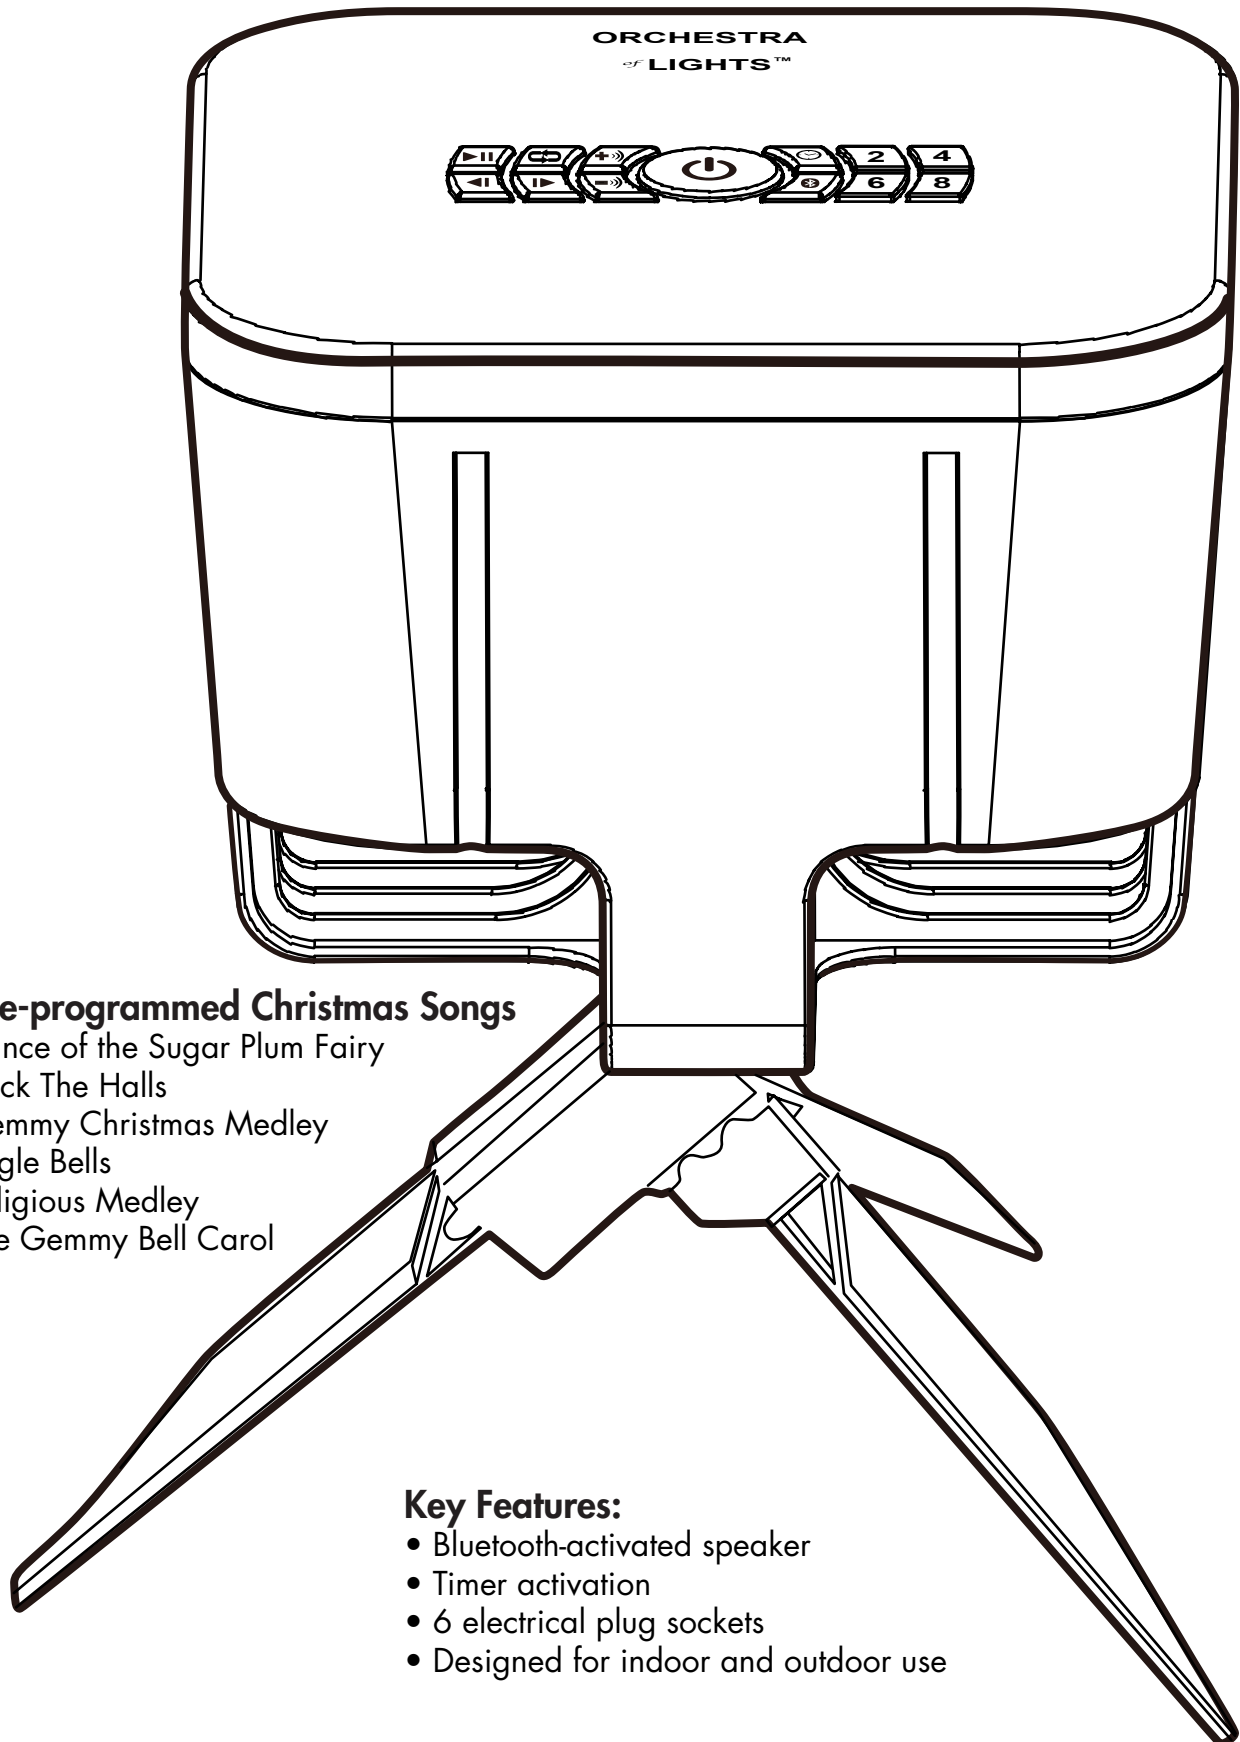

 
6 Pre-programmed Christmas Songs

- Dance of the Sugar Plum Fairy
- Deck The Halls
- Gemmy Christmas Medley
- Jingle Bells
- Religious Medley
- The Gemmy Bell Carol

Key Features:

- Bluetooth-activated speaker
- Timer activation
- 6 electrical plug sockets
- Designed for indoor and outdoor use

Top View

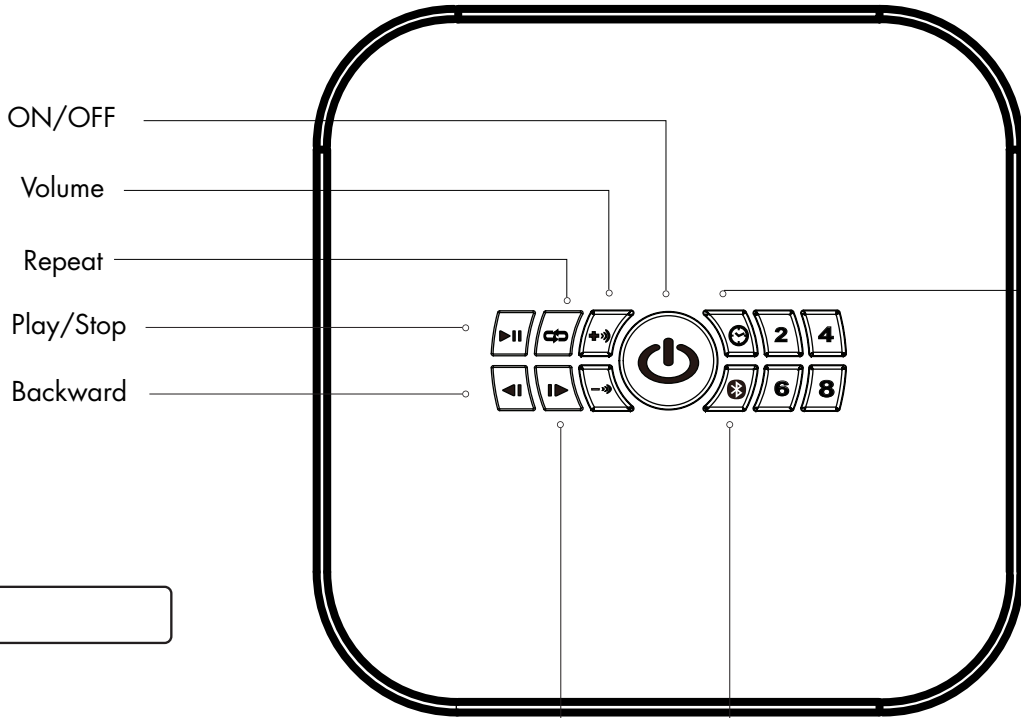


Timer Activation


Press this icon to activate the Timer. The Timer cycle will repeat daily using the selected setting. For example, if you set the timer for 4 hours at 6:00pm, it will turn off at 10:00pm and repeat the cycle each day. To toggle to the timer options, press the Timer icon repeatedly:

- **2 hours:** Turns off automatically after 2 hours from the time of activation. The cycle repeats daily
 - **4 hours:** Turns off automatically after 4 hours from the time of activation. The cycle repeats daily
 - **6 hours:** Turns off automatically after 6 hours from the time of activation. The cycle repeats daily
 - **8 hours:** Turns off automatically after 8 hours from the time of activation. The cycle repeats daily
- The selected option will be backlit.

 Bluetooth speaker function. You can use the speaker and play music from your mobile devices. Touch to activate. Two chirp sounds confirm activation.

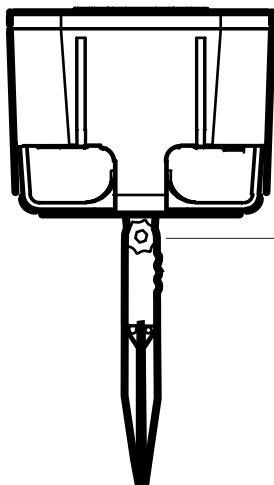

Side View

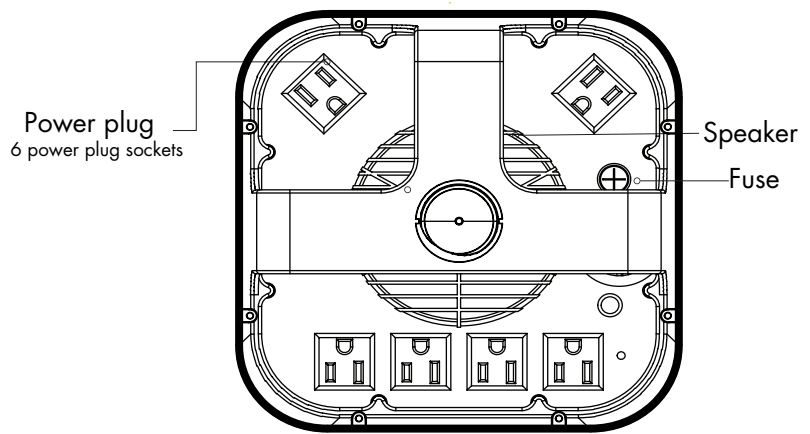 

Bottom View

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use accessories specified by the manufacturer.



S3125A

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. Use caution when moving the cart/apparatus combination to avoid injury from it tipping over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as damage to the power supply cord or plug, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

This apparatus is portable.

CAUTION:

Use of controls or adjustments or performance of procedures other than those specified may result in hazardous radiation exposure.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Congratulations! You are now the proud owner of a Musical Light Show control box. Please read the directions carefully before use.

WARNING: Do not attempt to assemble or operate your Musical Light Show control box during extreme weather conditions including unusually strong winds, heavy rain or accumulating snow. Operating the product during these extreme conditions will affect the performance of the product.

SAFETY WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

NOTE: This item is not a toy and should be used for decorative purposes only.

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

When using electrical products, basic precautions should always be practiced including the following:

1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
2. Read and follow all instructions that are on the product or provided with the product.
3. For a cord-connected or direct plug-in power unit, do not use an extension cord.
4. Reference the national electrical code, ANSI/NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.
7. For a cord-connected or direct plug-in unit, do not use in a bathroom.
8. Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
9. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
10. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.

1. Main plug shall be connected to a MAINS socket outlet with a protective earthing connection.
2. **WARNING** :To prevent injury, this apparatus must be securely attached to the floor in accordance with the installation instructions.
3. MAINS plug shall remain readily operable.
4. **CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
5. The mechanical positioning is accomplished by means of tools normally available or by means of special tools provided by the organization responsible for providing the apparatus as part of the installation kit.
6. The electrical connections are made by using existing TERMINALS and connections in the apparatus or the building wiring.

IMPORTANT SAFETY INSTRUCTIONS FOR OUTDOORS MUSICAL LIGHT SHOW CONTROL BOX

WARNING

PACKAGE CONTENTS

Control box	1 piece
Control box stake	1 pieces
Extra fuse,8A,125V	1 piece

PREPARATION

Before beginning assembly, remove all parts from carton. Compare parts list and diagram above. If any part is missing or damaged, do not attempt to assemble or use the product.

•Estimated assembly time: 10 - 15 minutes.

ASSEMBLY INSTRUCTIONS

1. Remove all contents from box and set out on a clear, flat surface. Set up near the area where you want to install the Musical Light Show control box.
2. Screw control box stake into the track located on the bottom of the control box and lock securely into place. Stake the control box into the ground.
Note: For outdoor use, screw in the outdoor straight stake.
3. Plug control box into a standard power outlet.
4. Using the outlets on the bottom of the control box, plug in your light strings and lighted decor. **Note:** Each outlet is rated for a maximum of 1.25 Amps. We recommend that you never exceed this maximum amount.
5. Smart devices equipped with Bluetooth connectivity can use the Control Box as a sound output speaker. Follow these steps to connect your Bluetooth device to the Control Box:
 - A. Make sure your mobile device's Bluetooth is turned on.
 - B. Tap the Bluetooth logo on the Control Box.
 - C. Look for the Lightshow Box device to pair with your device.
 - D. You can now use the Control box as a speaker.
6. Set the timer switch to the desired length of time (See VISUAL GUIDE).

Do not discard box as it should be used for storage. Return all parts of the Musical Light Show control box to the original packaging, if possible. Store in a cool, dry location.

STORAGE

FAQs (Frequently Asked Questions)

1. **Can I leave my Musical Light Show control box running overnight?**
Yes, you can run your Musical Light Show control box during the day and at night. We recommend that you turn off your Musical Light Show control box when leaving the immediate area and when retiring for the evening.
2. **How many items can I plug into my Musical Light Show control box?**
The Musical Light Show control box has six outlets for you to create your own Light Show. Each outlet is rated for a maximum of 1.25 Amps. We recommend that you not exceed this maximum amount.
3. **What is the best way to store my Musical Light Show control box?**
Store dry in a bag, box or other storage container and keep in a cool, dry location. If possible, we recommend you use the original packaging.
4. **Will inclement weather affect the performance of my Musical Light Show control box?**
Due to the nature of the control box outlets, operation of your Musical Light Show control box during extreme weather conditions, such as snow, rain or windstorms is not recommended.

WARNING

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If

this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help important announcement

Important Note:

RF RADIATION EXPOSURE STATEMENT

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

These instructions refer to the following item number: 112904

QD ID:91274



Visit WWW.GEMMY.COM for more information.

©2018 GEMMY INDUSTRIES CORP.
117 WRANGLER DRIVE, SUITE 100
COPPELL, TX 75019 U.S.A.
1 (877) 250-9032
MADE IN CHINA
PRINTED IN CHINA