

INSTRUCTIONS

IMPORTANT: PLEASE READ ALL THE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.


Failure to follow all instructions listed below may result in electric shock, fire and/or serious personal injury.

WARNING: Not recommended for children under 12 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

IMPORTANT SAFETY INSTRUCTIONS WHEN USING ELECTRICAL PRODUCTS, BASIC PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

 **CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT OPEN THE COVER. NO USER SERVICABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.

 **WARNING:** This product is recommended for indoor and outdoor use. Please read this manual carefully prior to using the unit.

WARNING:

1. This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This seasonal use product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
5. Unplug the product when leaving the house, or when retiring for the night, or if left unattended.
6. Do not use this product for other than its intended use.
7. Do not hang ornaments or other objects from cord, wire, or light string
8. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug. It is acceptable to omit this item if the product does not employ a polarized plug.
9. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or Nails
10. Do not let lamps rest on the supply cord or on any wire.
11. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
12. Do not cover the product with cloth, paper or any material not part of the product when in use.
13. This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
14. Read and follow all instructions that are on the product or provided with the product.
15. For indoor and outdoors use .use A/C power for the unit.

CAUTION: To reduce the risk of fire and electric shock:

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS USER SERVICING INSTRUCTIONS

1. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connection, or exposed copper wire.
2. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight.

USER SERVICING INSTRUCTIONS

WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

ASSEMBLY INSTRUCTIONS

1. Gently remove contents from packaging and lay out in a clear area.
2. Connect the stake to the projector by pushing the swivel ball through the ring, then screw it onto the projector. Swivel to reach the angle desired. (Illustration 1)
3. Grasp the handle of the stake and insert into the ground. (Illustration 2)

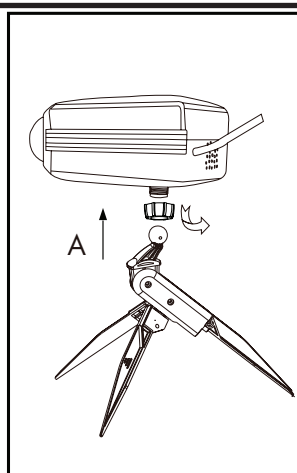 


Illustration 1

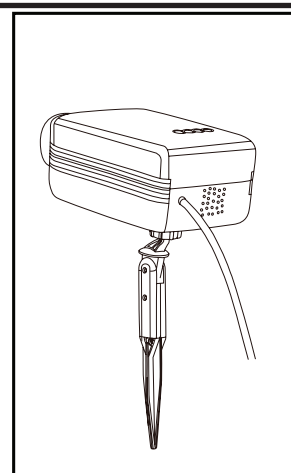 


Illustration 2

4. Plug power cord into standard wall socket. (illustration 3)
5. Unplug when not in use.


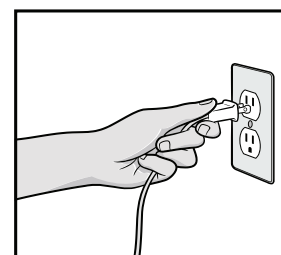 


Illustration 3

COUNTDOWN SET-UP INSTRUCTIONS

To set your countdown, follow the steps below:

 1. Press the reset button. The screen will look like this:

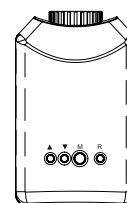

- R: reset
- M: mode
- ▼: down
- ▲: up

2. Press the mode button, the letter "M" will appear. Press up or down to select the month.



3. Press the mode button again to show the date. Press up or down to select the date.



4. Press the mode button again to show the year. Press up or down to select the year.



5. Press the mode button again to show the hour. Press up or down to select the hour.



6. Press the mode button again to show minutes. Press up or down to select the minutes.



7. Press the mode button again to show the seconds.



8. Press the mode button again. Display will show the time until Christmas based on the time just entered.

 
USER SERVICING INSTRUCTIONS

Fuse Replacement

WARNING: Risk of Fire: Replace only with same size and type of fuse.

WARNING: Risk of Fire: Do not replace the attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.


1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on the cord.
2. Open fuse cover. Slide open the fuse access cover on top of the attachment plug towards blades. (See illustration)
3. Remove fuses carefully.
4. Replace fuse only with 5 Amp Max, 125 Volt fuse (provided with product).
5. Close the fuse cover. Slide closed the fuse access cover on top of the attachment plug.

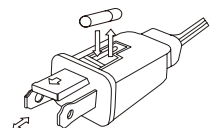


BATTERY CAUTION:

- Keep this product's battery out of the reach of small children or pets. If ingested, contact a physician immediately.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the battery is installed correctly with regard to polarity (+ and -).
- Remove battery from equipment which is not to be used for an extended period of time.
- Remove used battery promptly.

 INSIDE OF COMPARTMENT

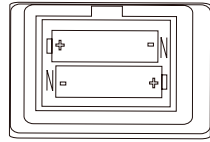

OUTSIDE OF COMPARTMENT

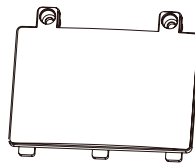 

BATTERY USAGE:

See illustration. 1. Keep these instructions for future reference because they contain important information. 2. May explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled. 3. Products that contain batteries should not be disposed of in fire. The batteries inside may explode or leak. 4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. 5. Do not mix old and new batteries. Replace all batteries of a set at the same time. 6. Use only batteries of the same or equivalent type as recommended by the manufacturer. 7. Be sure to insert batteries with correct polarities and always follow manufacturers' instructions. 8. Remove exhausted batteries from product promptly. 9. Do not short-circuit supply terminals. 10. Remove batteries before storage or extended periods of non-usage. 11. Clean the contacts on the batteries and the device prior to battery installation. Nonrechargeable batteries are not to be recharged. Rechargeable batteries are not recommended for use in this product. If rechargeable batteries are being used, however, please follow these guidelines. (1). Rechargeable batteries should be removed from the product before being charged. (2). Rechargeable batteries should only be charged under adult supervision.

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

THIS INSTRUCTION SHEET APPLIES TO ITEM NUMBER

11955

QD ID: 96230



Visit WWW.GEMMY.COM for more information.

©2017 GEMMY INDUSTRIES CORP.

117 WRANGLER DRIVE, SUITE 100

COPPELL, TX 75019 U.S.A.

1 (877) 250-9032

MADE IN CHINA / PRINTED IN CHINA