

 
# INSTRUCTIONS

**SAFETY WARNING:** Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

**SAVE THESE INSTRUCTIONS** — This manual contains important safety and operating instructions for power units.

## WARNING

ELECTRIC PRODUCT. Keep away from children. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

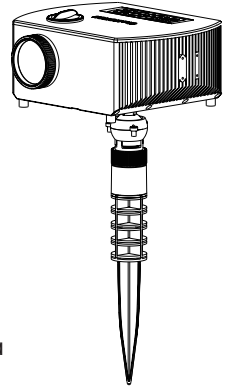

## WARNING

Strobe lights have been known to trigger seizures in people with photosensitive epilepsy.

## WARNING

The light is very bright. Do not shine directly into eyes.

## IMPORTANT SAFETY INSTRUCTIONS

**READ ALL INSTRUCTIONS BEFORE USING (THIS FURNISHING)**

**WARNING: TO REDUCE THE RISK OF BURNS, FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS :**

## READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

1. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
2. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. This seasonal use product is not intended for permanent installation or use.
4. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
5. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
6. Do not let lamps rest on the supply cord or on any wire.
7. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
8. Do not use this product for other than its intended purpose.
9. Do not hang ornaments or other objects from cord, wire, or light string.
10. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
11. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
12. Do not place the product against carpeting, furniture, or any other fabric when in use.
13. Read and follow all instructions that are on the product or provided with the product.

## SAVE THESE INSTRUCTIONS

## USE AND CARE INSTRUCTIONS

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections, or exposed copper wire.

4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
5. When not in use, store neatly in a cool, dry location protected from sunlight.

**WARNING:** To reduce the risk of fire and electric shock:

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and.
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

## CONTENTS

Cinemotion™	1 pc
Remote Control	1 pc
Batteries	2 pcs
Swivel Mount	1 pc
Indoor Tripod	1 pc
Outdoor Stake	1 pc
Adapter	1 pc

## ASSEMBLY INSTRUCTIONS

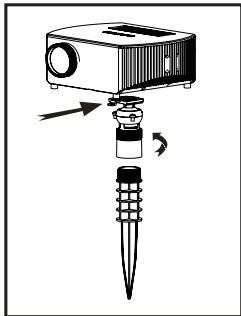 


illustration 1

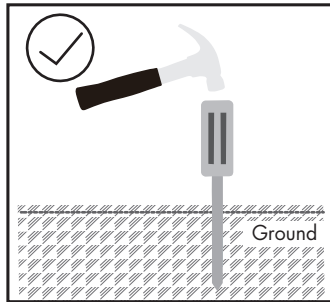 


illustration 2

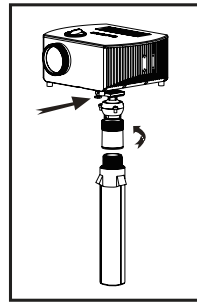 


illustration 3

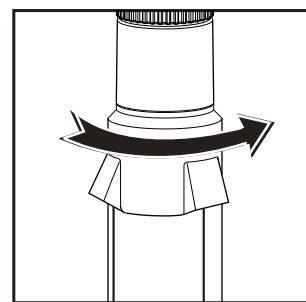 


illustration 4

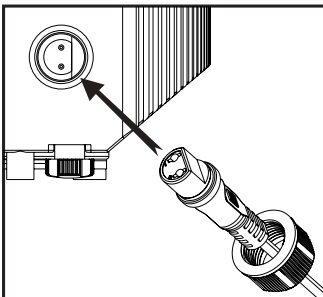 


illustration 5

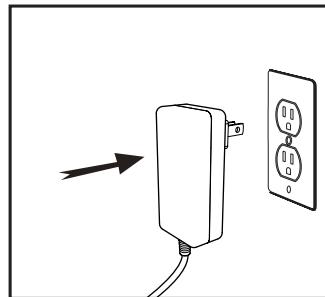 


illustration 6

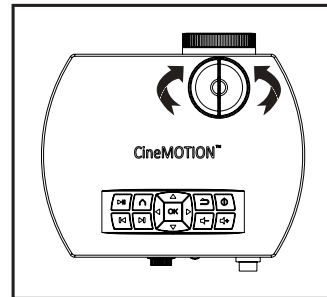 










illustration 7


1. Gently remove contents from packaging and lay out in a clear area.
2. For use with outdoor stake:
  - a. Screw the outdoor stake to the swivel mount. (see illustration 1)  
Then slide the stake into the track located underneath your Cinemotion™.(see illustration 1)
  - b. Use a large screwdriver to create a pilot hole into ground. (see illustration 2)
  - c. Gently insert stake into ground.
  - d. Connect adapter cord to back of the Cinemotion™ and tighten cap. (see illustration 5)
  - e. Plug adapter into standard wall socket. (see illustration 6)
3. For use with indoor tripod:
  - a. Screw the indoor tripod to the swivel mount. (see illustration 3)
  - b. Rotate trip legs counter-clockwise to unlock. Then slide the tripod into the track located underneath the Cinemotion™.(see illustration 4)
  - c. Connect adapter cord to back of the Cinemotion™ and tighten cap. (see illustration 5)
  - e. Plug adapter into standard wall socket. (see illustration 6)
4. Turn dial on top of Cinemotion™ to adjust the focus. (illustration 7)
5. Adjust the keystone knob on back of Cinemotion™ to adjust horizontal and vertical display to achieve uniform projection (and avoid trapezoid shaped projection).

# KEYPAD LEGEND

  ---

FOR MAIN UNIT AND REMOTE



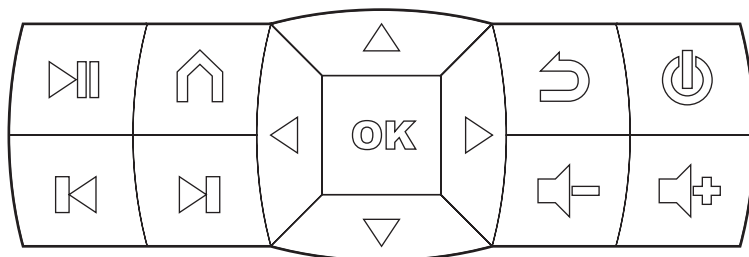





1.  HOME
2.  POWER
3.  BACK
4.  PLAY/PAUSE
5.  BACKWARD
6.  FORWARD
7.  INCREASE VOLUME
8.  DECREASE VOLUME




-  Use the arrow keys to scroll up, down, right and left between options.
-  Use the OK button to make selections or view the Settings screen.

## REMOVE INSTRUCTIONS:

 ---

1.  HOME
2.  POWER
3.  BACK
4.  PLAY/PAUSE
5.  BACKWARD
6.  FORWARD
7.  INCREASE VOLUME
8.  DECREASE VOLUME

-  Use the arrow keys to scroll up, down, right and left between options.
-  Use the OK button to make selections or view the Settings screen.

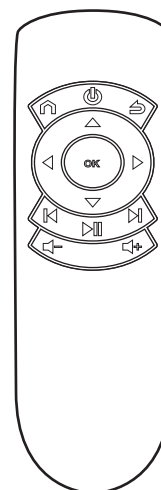

## NOTES:

1. When using the remote to turn ON your set, there may be up to a 2 seconds delay before the video starts working.
2. To change video it is recommended to wait 2 seconds each time after pressing the Function button until you reach the desired pattern.
3. If for any reason the signal from the remote (transmitter) to the control box (receiver) hangs up, please turn off and then restart the power to the set.
4. If a power interruption, the system's memory keeps the last video displayed.
5. The effective operating distance of the remote is 20' (6m) or less.

## BATTERY CAUTION:

---

- Keep this product's batteries out of the reach of small children or pets. If ingested, contact a physician immediately.
- Always purchase the correct size and grade of batteries most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove used batteries promptly.
- When the remote control begins to lose its sensitivity, check the batteries and replace if necessary.
- Open the battery cover and replace batteries.  
Ensure the battery is installed correctly with regard to polarity (+ and -).

## BATTERY USAGE:

---

Required 2 AAA batteries (included).

1. Keep these instructions for future reference because they contain important information.
2. May explode or leak and cause burn injury if recharged, disposed of in fire, mixed with a different battery type, inserted backwards or disassembled.
3. Products that contain batteries should not be disposed of in fire. The batteries inside may explode or leak.
4. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries. Replace all

batteries of a set at the same time. 6. Use only batteries of the same or equivalent type as recommended by the manufacturer. 7. Be sure to insert batteries with correct polarities and always follow manufacturers' instructions. 8. Remove exhausted batteries from product promptly. 9. Do not short-circuit supply terminals. 10. Remove batteries before storage or extended periods of non-usage. 11. Clean the contacts on the batteries and the device prior to battery installation. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are not recommended for use in this product. If rechargeable batteries are being used, however, please follow these guidelines. (1). Rechargeable batteries should be removed from the product before being charged. (2). Rechargeable batteries should only be charged under adult supervision.

## IMPORTANT SAFETY INSTRUCTIONS FOR ADAPTER

When using electrical products, basic precautions should always be practiced including the following:

### 1. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

2. Read and follow all instructions that are on the product or provided with the product.
3. Do not use an extension cord.
4. Reference the National Electrical Code, ANSI NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
5. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
6. Do not install or use within 10 feet of a pool.
7. Do not use in a bathroom.

8. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

9. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

10. If the connector of this driver does not properly fit into the connector of the lighting string, do not modify the product and discard product if the connector is damaged.

11. **WARNING:** Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

**SAVE THESE INSTRUCTIONS** - This manual contains important safety and operating instructions for power units.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## THESE INSTRUCTIONS ARE FOR ITEM

---

### Lightshow CineMotion (113879 , 72937)

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## **Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

## **Wireless Remote Controller (3002018)**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**Visit [WWW.GEMMY.COM](http://WWW.GEMMY.COM) for more information.**

©2018 GEMMY INDUSTRIES CORP.  
117 WRANGLER DRIVE, SUITE 100  
COPPELL, TX 75019 U.S.A.  
1 (877) 250-9032  
MADE IN CHINA  
PRINTED IN CHINA