

INSTRUCTIONS

Congratulations! You are the proud owner of a Gemmy LED Light Rod Christmas Tree. Please read over the directions carefully before using your LED Light Rod Christmas Tree.

CAUTION

- ⚠ **CAUTION:** DO NOT place children, animals or other objects inside or on your LED Light Rod Christmas Tree.
- ⚠ **CAUTION:** Do not attempt to assemble or operate your LED Light Rod Christmas Tree during unusually strong winds. If it becomes too windy for safe operation, please disassemble your LED Light Rod Christmas Tree and bring indoors until conditions improve.
- ⚠ **CAUTION:** Operation of your LED Light Rod Christmas Tree during extreme weather conditions is not recommended.

WARNING

SAFETY WARNING: Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

This item is not a toy and should be used for decorative purposes only.

IMPORTANT SAFETY INSTRUCTIONS FOR OUTDOOR TRANSFORMER

When using electrical products, basic precautions should always be practiced including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Read and follow all instructions that are on the product or provided with the product.
2. For a cord-connected or direct plug-in power unit, do not use an extension cord.
3. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
4. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
5. For a cord-connected or direct plug-in power unit, do not install or use within 10 feet of a pool.
6. For a cord-connected or direct plug-in unit, do not use in a bathroom.
7. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.
8. **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.
9. Adults Note: Periodically examine this product for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.

WARNING

1. This is not a toy, keep away from children.
2. If the supply cord or wires are damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

SAVE THESE INSTRUCTIONS

CONTENTS

This manual contains important, safety and operating instructions for power units.

LED Light Rod Tree (collapsed)	1 piece
Stakes	5 pieces
UL Listed Outdoor Adapter	1 piece

Input: 120V ~ 60Hz
Output: 4.5V=3.33A

Assembly Time: Approximate 10 minutes.

ASSEMBLY INSTRUCTIONS

1. Remove contents from packaging. Lay out in a clear and flat area.
2. Attach each of the poles to the upper section poles by aligning the pins, insert and turn clock-wise to tighten. The legs will not make proper contact unless they are inserted correctly. (see photo 1).
3. Once all poles are securely attached, gently hold Tree up-right and off the ground. With one hand in-between all the poles, simply expand your hand and the poles will extend outward (see Photo#2) Set down.
4. Secure each rod using the Stakes. (See photo #3)
5. Place the power cord into the cord holders, located on the post. This will secure the cord in place prior to connecting to the AC Adapter. (See photo #4)
6. Attach the adapter to the cord as shown. (See photo #5) Then plug the UL Listed Adapter into a standard wall outlet or a UL-approved outdoor extension cord.



photo 1



photo 2



photo 3



photo 4



photo 5

DISASSEMBLY

1. Remove stakes from ground.
2. Lift up on tree rod and place back in its original box.

TROUBLE SHOOTING CHECKLIST

If your LED Light Rod Christmas Tree is not lighting up, the problem may be:

1. The power source is disabled.
2. The Power Cord may be unplugged.
3. The Poles are not assembled securely.

FREQUENTLY ASKED QUESTIONS (FAQS)

1. **Can I leave my LED Light Rod Christmas Tree running overnight?**

We recommend that you turn off while unattended. Under normal conditions, extended use beyond 8 hours will not damage your LED Light Rod Christmas Tree.

2. **How can I clean my LED Light Rod Christmas Tree?**

Wipe clean with a damp cloth and allow to dry before storing away. Use mild detergent if necessary.

3. **How much electricity does a LED Light Rod Christmas Tree consume?**

Please reference the label attached to the Adapter.

4. **What is the best way to store my LED Light Rod Christmas Tree?**

Store dry in a bag, box or other storage container and keep in a cool, dry location.

5. What if it is raining or snowing? Will this affect my LED Light Rod Christmas Tree?

Operation of your LED Light Rod Christmas Tree during light weather conditions, such as a gentle rain or snowfall is fine. However, operation of during extreme weather conditions, such as heavy snow, rain or wind-storms is not recommended.

THESE INSTRUCTIONS ARE FOR THESE ITEMS: 39914

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and 2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.



Visit WWW.GEMMY.COM for more information.

©2016 GEMMY INDUSTRIES CORP.

COPPELL, TX 75019 U.S.A.

(972) 961-7000

MADE IN CHINA / PRINTED IN CHINA