

# GIGABYTE™

# S1081

## USER'S MANUAL

## 使用手冊

- English
  - 繁體中文
- V1.0




\* Images Used for Reference Only

## Congratulations on your purchase of the GIGABYTE Slate PC


This manual will help you to get started with setting up your Slate PC. The final product configuration depends on the model at the point of your purchase. GIGABYTE reserves the right to amend without prior notice.. For more detailed information, please visit our website at <http://www.gigabyte.com>

### 1 Check Supplied Items


AC Adapter

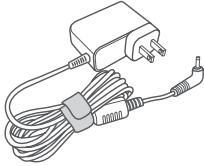


Manual

 

Case(Optional)

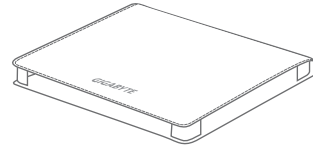


Driver CD

 

Global Warranty Card




 Stylus (Optional)



\* The illustrations in this document may appear differently from your model.


### 2 Using GIGABYTE Slate PC for the First Time

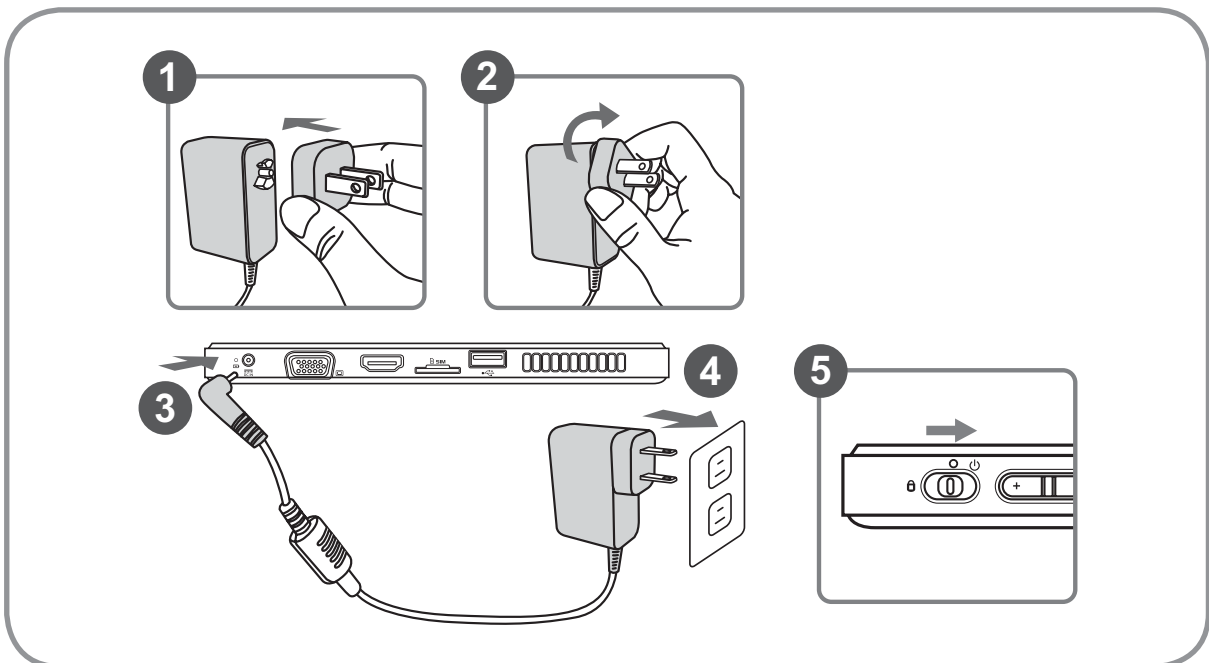

- 1 Ensure that the larger hole on the power plug adapter is on the bottom and attach to the power adapter.
- 2 Connect the power plug adapter with AC adapter and turn clock-wise until it locks into place.
- 3 Connect the AC adapter to the DC-in jack of the Slate PC.
- 4 Connect the power cord to the power outlet.
- 5 Press the Power Button to turn on the GIGABYTE Slate PC.

# 3 GIGABYTE Slate PC Tour


## Panoramic View

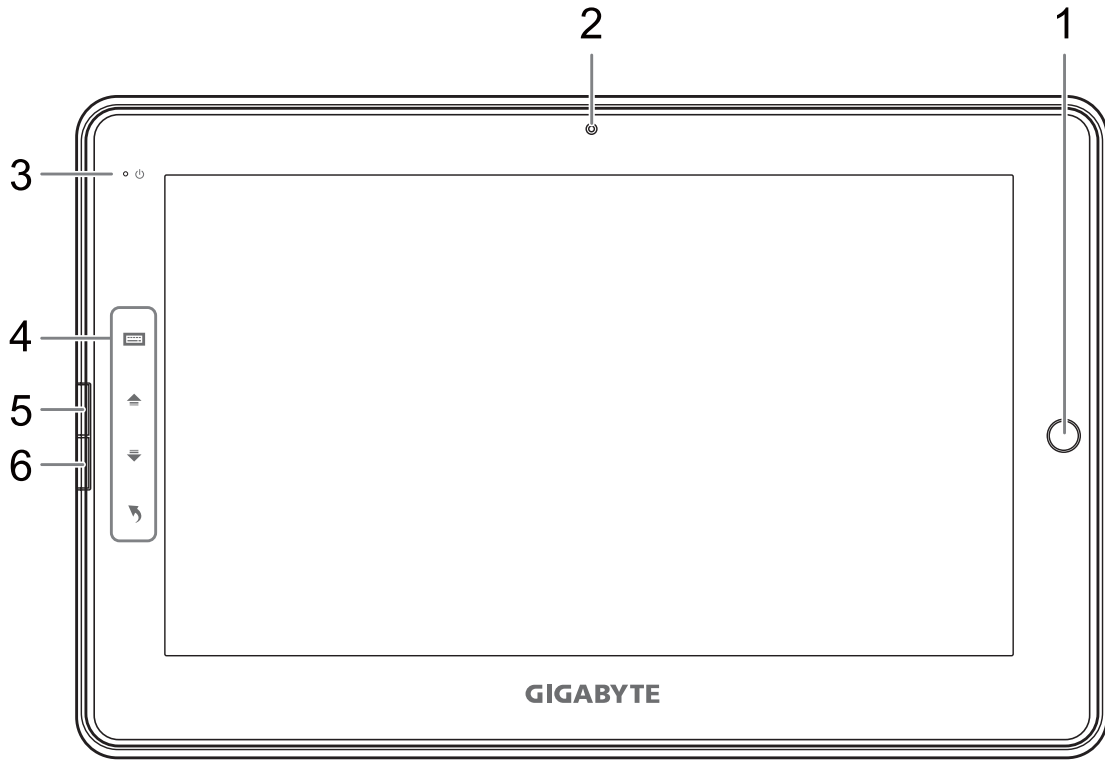


- 1 Directing Hot Key ①
- 2 Webcam
- 3 Power Status Indicator
- 4 Touch Hot Key ②
- 5 Left Button of Mouse
- 6 Right Button of Mouse

- ① to control mouse direction; press the directing hot key to simulate as left key of mouse
- ② Virtual keyboard
  - Scroll up
  - Scroll down
  - Back to previous page

**Tip:** “Left click + Right click of mouse + Directing Hot Key” to operate as the function of “Ctrl+Alt+Del”.

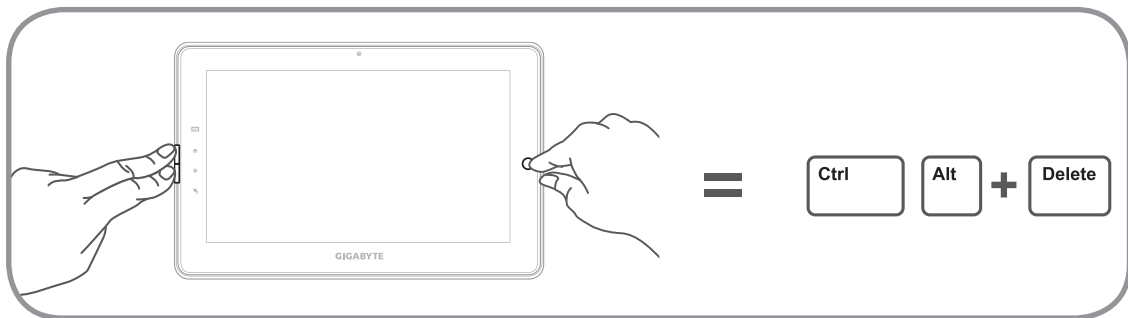


## Top View

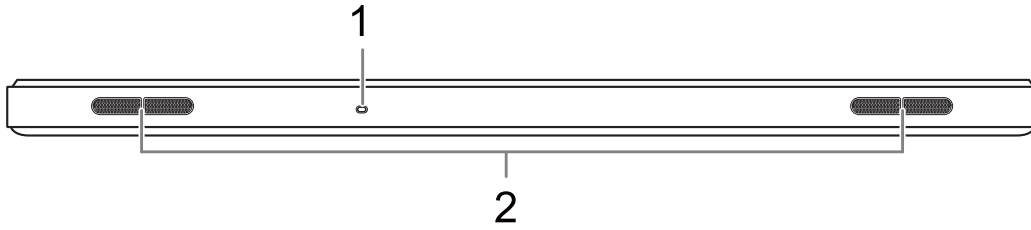


- 1 Microphone
- 2 Speakers

## Left View

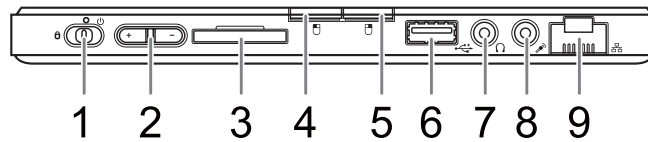


- 1 Power Button
  - 2 Volume Control Key ③
  - 3 SD Card Reader
  - 4 Left Button of Mouse
  - 5 Right Button of Mouse
  - 6 USB Port
  - 7 Headphone Jack
  - 8 Microphone Jack
  - 9 Ethernet Port
- ③ Press "+" or "-" to control volume.
- Press and release the Power button to turn on the operation system. Press "+" to enter into GIGABYTE BIOS Setup Utility. USB Keyboard is recommended to use for setting up BIOS functions under GIGABYTE BIOS Setup Utility.
  - Press and release the Power button to turn on the operation system. Press "-" to enter into GIGABYTE System Recovery. Use Directing Hot Key to operate GIGABYTE Smart Recovery.

**Tip:** Press the "-" volume button when the computer is off and the display will indicate the battery capacity status.

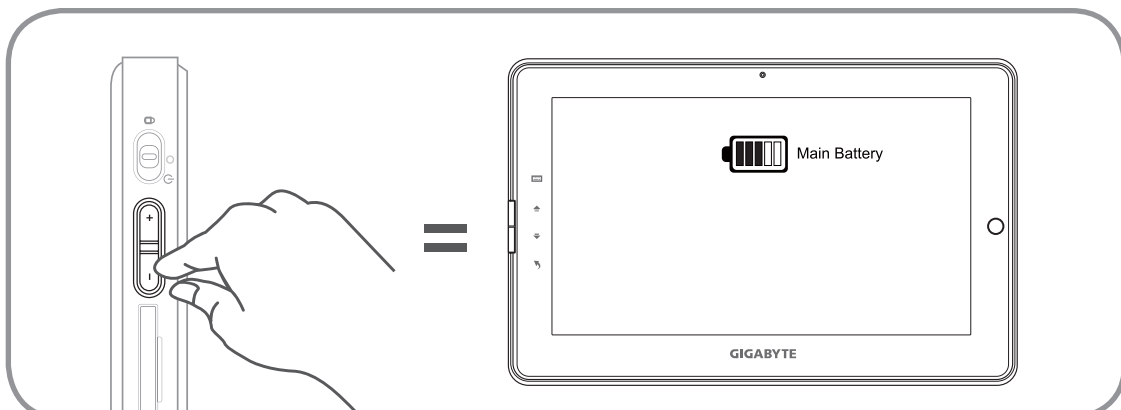

## Right View

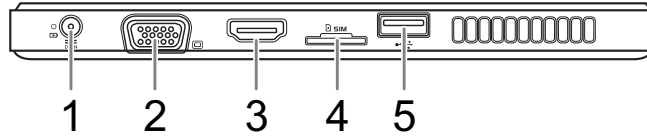

1 DC-in Jack

2 D-sub (VGA) Port

3 HDMI Port


4 SIM Card Slot ④

5 USB Port

④ This specification is for users' reference only.

The final configuration depends on the Slate PC users' point of purchase.

## Base View

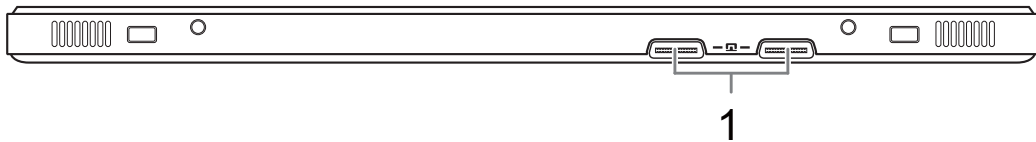

1 Docking and extended battery connection ports

## **4** GIGABYTE Software Application

### ■ GIGABYTE Smart Manager

You can activate GIGABYTE Smart Manager by double clicking on the shortcut icon on the desktop if the machine you purchased has the operation system built-in. GIGABYTE Smart Manager is an icon-based control interface, enabling users to intuitively access common system setup as well as GIGABYTE exclusive utilities. Please be noted that the GIGABYTE Smart Manager interface, icons, utilities and software versions may vary based on the purchased models. Please operate GIGABYTE Smart Manager according to the default built-in version.

### ■ GIGABYTE Smart Recovery

- If the machine you purchase already has operating system built-in, you can restore the system back to factory default by using GIGABYTE Smart Recovery. Please be noted that the GIGABYTE Smart Recovery interface, icons, utilities and software versions may vary based on the purchased models. Please operate GIGABYTE Smart Recovery according to the default built-in version.
- Please be noted that personal data will be lost after recovery, do remember to backup any data before operating this function.

### ■ Activate GIGABYTE Smart Recovery and BIOS Setup Utility

- Press and release the Power Button to turn on the operation system. Press “-” to enter into GIGABYTE System Recovery. Use Directing Hot Key to operate GIGABYTE Smart Recovery.
- Press and release the Power Button to turn on the operation system. Press “+” to enter into GIGABYTE BIOS Setup Utility. It is recommended to use USB keyboard for setting up BIOS functions under BIOS setup Utility.

## 5 Specifications

Item	Specification
CPU	Intel® Atom™ Processor
OS	Genuine Windows® 7 Compliant
Display	10.1" 1024x600 LED backlight
System Memory	DDRIII SO-DIMM*1 (Max 4GB)
Chipset	Mobile Intel® NM10 Express Chipsets
Storage Device	<ul style="list-style-type: none"> <li>● 2.5" 7mm SATA HDD 5400rpm</li> <li>● Solid State Drive(SSD)</li> </ul>
Audio	1.5 Watt Speakers*2, Internal Mic-in
I/O Port	USB 3.0*1, USB 2.0*1, D-Sub, HDMI, RJ45, Mic-in, Earphone-out, SD card reader, DC-in Jack, Docking Station / Extended Battery Port and SIM card slot *
Communications	10/100/1000 Mbps Ethernet Base-T
	802.11b/g/n Wireless
	Bluetooth V4.0
	3.5G antenna build-in, 3.5G module is optional
Webcam	1.3 Mega Pixel
Battery	Li-polymer, 4000mAh, 29.6Wh(Main) Li-ion, 2700mAh, 20.25Wh (Extended Optional)

\* Above specification is for users' reference only.  
The final configuration depends on the Slate PC users' point of purchase.

## 6 Appendix

### ■ Warranty & Service :

Warranty and service and related information please refer to the warranty card or GIGABYTE service website as the below link:

<http://www.gigabyte.com/support-downloads/technical-support.aspx>

### ■ FAQ :

FAQ (Frequent Asked Questions) please refer to the below link:

<http://www.gigabyte.com/support-downloads/faq.aspx>

**Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Caution:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**RF Radiation Exposure and Hazard Statement:**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This device has been tested and meets the FCC RF exposure guidelines. The maximum SAR value reported is 0.136 w/kg.

**Non-modification Statement:**

Use only the integral antenna supplied by the manufacturer when operating this device. Unauthorized antennas, modifications, or attachments could damage the TI Navigator access point and violate FCC regulations. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**Deployment Statement:**

This product is certified for indoor deployment only. Do not install or use this product outdoors.



[www.gigabyte.com](http://www.gigabyte.com)