

billboard®

8" RECHARGEABLE
PARTY SPEAKER



Model # PSP-2

Instruction Manual
Instrucciones en español incluidas

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING YOUR PARTY SPEAKER. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Your Speaker has an internal rechargeable battery. Improper usage may result in the Speaker becoming hot, ignite or burst and cause injury if exposed to conditions of abuse. Be sure to follow the safety warnings listed below:

1. Do not assemble, throw away or damage the Party Speaker.
2. Store the Party Speaker in a dry place, keeping it away from damp corrosive materials and environments such as salt air.
3. Keep the Speaker away from direct sunlight, fire, and high voltage equipment. Do not store the Speaker inside a car during hot weather. Remember a closed car acts as a greenhouse allowing the inside temperature to possibly reach over 200F.
4. The Party Speaker is not a toy. Please keep it out of the reach of young children.

Please do not discard this rechargeable device as trash.

Consult your local waste collection agency for proper disposal or recycling methods. You may also contact *Call2Recycle* at 877-273-2925 or online at *call2Recycle.org* for a battery recycling drop off location near you.



BATTERY CAUTION: Do not disassemble, short circuit, or expose to fire or high temperature. Properly connect specified devices. Recycle battery according to local, state and national regulations.



It may damage your hearing if you listen with high volume for a long time. It is recommended you use the lowest volume possible for listening to music.



TWS FUNCTION

- (1) TWS connection: TWS Connection is only for two speakers.
- (2) Turn on the Speakers, press the MODE button to switch to BT connection mode.
- (3) Please long press each unit's TWS Button for about 3 seconds, then two speakers connected as a pair.
- (4) Connect the phone: Open the phone BT connection settings, Search and Connect the main device BT connection Name 'BB-BT-SP'.
- (5) Select music from phone and enjoy TWS playing in pairs with two Speakers.
- (6) Exit TWS: Long press (almost 3 seconds) the TWS button on the device.

Connecting to BLUETOOTH


Bluetooth Mode: Open the Bluetooth of phone. Find the Bluetooth name of the unit called "BB-BT-SP" to connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching mode.

DISPLAY SYSTEM SETTINGS

1. **Input Mode:** The LED display screen will display the information of input mode for USB/MICRO SD/BT/AUX/FM. When a USB flash drive / MICRO SD is inserted into the USB/MICRO SD input, the unit will automatically switch to USB/MICRO SD mode and begin playing Mp3 audio files from the USB flash drive / MICRO SD.
2. **Track Number:** The track number currently playing from the USB/MICRO SD will display.
3. **FM Mode:** All FM channels display here. Short press "play/pause" button for auto scan all channels.

REAR PANEL

1. Microphone input
2. Microphone Volume Knob: Adjust from Min to Max
3. Echo of Microphone Adjustment : Adjust from Min to Max
4. USB Slot
5. MICRO SD
6. Mode Button :Toggle between AUX, USB, TF, FM, BT.
(Long Press the Mode Button to turn ON/ OFF the light)
7. Previous Track Button: Select previous track by short press; Recording play by long press
8. Play/Pause Button by short press; TWS Function by long press
9. Next Track Button: Select next track by short press; Recording by long press.
7. AUX input
8. Adjust the master volume/ Power Switch
9. Power Supply: 5V 1A

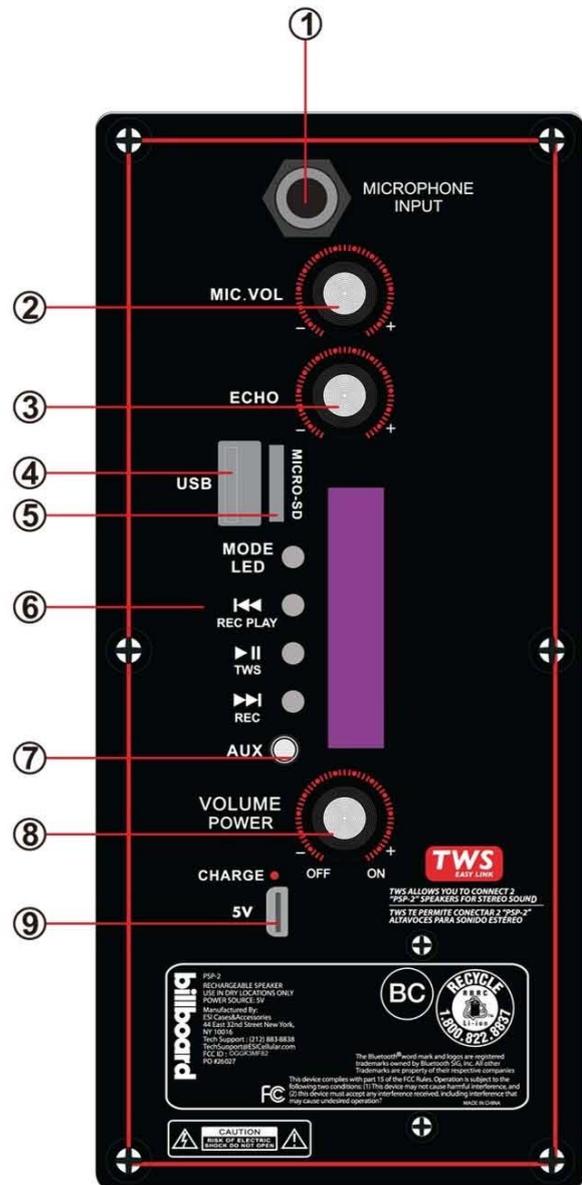

About your Powered Speaker

1. Your Billboard powered speaker has a built-in amplifier and line mixer to control the devices that are connected to it. Therefore you do not need a separate amplifier or mixer in order to use it. The amplifier is properly balanced for the output of the speakers.
2. Your Billboard powered speaker also includes a lithium ion or lead-acid battery. This will allow you to use your speaker without any AC power for long periods of time. The battery life will vary based on how loud you play your speaker and what type of devices are played through it as well. It can range from 2 hours to as much as 60 hours for some models. Please make sure to read the separate section regarding lithium ion and lead-acid batteries to better understand them.
3. Your Billboard powered speaker can play many devices through its many inputs. Check the inputs carefully on your model to better understand what is compatible with your speaker.

Powering up your speaker

- 1.Plug the micro USB plug into your speaker’s micro USB charging port
2. Plug the USB side of your cable into your computer or laptop’s USB charging port, or into a standard USB charger (not included)
3. Make certain that your computer or laptop is powered on, or the USB charger is plugged in to begin charging.
4. The Charging indicator LED light should illuminate RED when charging and then turn off when the battery is fully charged. FOR MAXIMUM BATTERY LIFE, IT IS IMPORTANT TO FULLY CHARGE YOUR BATTERY PRIOR TO USE.
5. Move the power switch to the ON position. The LED display should activate.
- 6.Adjust the volume control to the MIN position before connecting a device.
- 7.You’re now ready to connect your device!

Connecting your wired microphone

- 1.Connect your wired microphone using a ¼” cable into the Mic Input.
- 2.Make sure your microphone is in the ON position and talk normally.
- 3.Adjust the Mic Volume to your desired volume level.
- 4.Adjust the master volume as needed.

Connecting your non-bluetooth device

- 1.Press the mode button until you see “AUX”in the LED screen.
- 2.You can connect most non-bluetooth devices using a 1/8” mini stereo cable. Plug this into the 1 /8” mini aux input.
- 3.Play the music from your device, and adjust the volume on your device to your desired level.
- 4.Adjust the master volume of your speaker to your desired level.

Connecting your USB Device

- 1.Plug your USB stick or USB device into the USB interface
- 2.The mode should switch automatically to “USB Mode”
- 3>Your speaker should automatically play the first MP3 song on your USB device.
- 4.Adjust the volume as needed.
- 5.Press the Next , Previous , Play/Pause buttons as needed.

Connecting your TF Card

- 1.Insert your TF Card into the TF card interface.
- 2.The mode should switch automatically to “TF Mode”
- 3.Your speaker should automatically play the first MP3 song on your TF card.
- 4.Adjust the volume as needed.
- 5.Press the Next , Previous, Play/Pause buttons as needed.

Recording onto your USB Device

- 1.Insert your USB Stick into the USB interface.
- 2.Long Press the RECORD button on your panel and start to record.
- 3.Play your music devices by long press the RECORD PLAY and use the microphone as needed and your vocals will be recorded from the wired and wireless microphones.
- 4.To stop recording by long press the RECORD PLAY button again.
- 5.Your recording is saved onto your USB device.

Playing music from the built-in FM Radio

- 1.Press the MODE button until FM Radio appears on the LED screen.
- 2.Press and hold the Play/Pause button on your speaker, to have the speaker scan all available FM radio stations in your area.
- 3.Adjust the volume as needed.

About Rechargeable Batteries

Rechargeable lead-acid and lithium ion batteries are similar to what is used in your car today. If you use your battery correctly and treat it well, then it can last for years. Here are some tips to get the longest life out of your rechargeable battery

- 1.Charge the battery FULLY before your first use. This is VERY IMPORTANT for maximum battery life!
- 2.It is also recommended to charge the battery FULLY after each use.
- 3.It is OK to leave your speaker plugged in (charging) when not in use. The battery will not over-charge.
- 4.Do not store your battery in hot temperatures or moist areas.
- 5.If you are storing your battery for long periods of time, the charge may not store completely. It is recommended to re-charge again fully before your next use.
- 6.It is recommended to charge your battery every few months. If your battery is not charged for more than 6 months, it may need to be replaced.
- 7.Keep your speaker away from fire and extreme heat, as the acid in the rechargeable batteries is extremely flammable.
- 8.If your battery does not charge, or does not keep the charge for long periods then it may need replacing. Please contact the service number for information on replacing your battery.

LIMITED WARRANTY

ESI Cases & Accessories, Inc., warrants to the first consumer purchaser that this product, when shipped in its original container to the original purchaser will be free from defective workmanship and materials for one year and agrees that it will, at its option, either repair the defect and replace the defective product or part thereof at no charge to the purchaser for parts or labor for the time periods described.

This warranty does not apply to any appearance items of the product nor to the additional excluded item(s) set forth below nor at any product the exterior of which has been damaged or defaced which design or construction. The limited warranty described herein is in addition to an applicable law.

ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD FROM THE DATE OF ORIGINAL PURCHASE SET FORTH BELOW.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein or to extend the duration of any warranties beyond the time period described herein on the behalf of ESI Cases & Accessories, Inc.

The warranties described herein shall be the sole and exclusive warranties granted by ESI Cases & Accessories, Inc. and shall be the sole and exclusive remedy available to the purchaser corrections of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of ESI Cases & Accessories, Inc. to the purchaser with respect to the product and shall constitute full satisfaction of all claims, whether based on contract negligence, strict liabilities and responsibilities of ESI Cases & Accessories, Inc. be liable or in any way responsible, for any incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Manufactured By:
ESI Cases & Accessories
44 East 32nd Street
New York, NY 10016
Tech Support: (212) 883-8838
TechSupport@ESICellular.com

Return Instructions

If your speaker malfunctions during the warranty period of one calendar year (90 days for battery), contact our customer service department at (212) 883-8838 to obtain troubleshooting information. If troubleshooting assistance fails to remedy the problem, you will receive a return authorization # and instructions for sending your unit to our Service Center. Your return authorization number must be clearly visible and placed on the outside of box when the unit is returned.

Enclose a copy of your original proof of purchase showing the original purchase date,

along with detailed information describing the exact nature of your problem. Be sure to include your complete name, address, email address, daytime and evening contact numbers. In addition, please send a check or money order made payable to "ESI Cases & Accessories" for return freight amount (given to you by our service agents). All of the above must be included with your return, or your package will not be eligible for service under our warranty.

The customer is responsible for packing the speaker in it's original carton or equivalent, and for insuring, and shipping the unit to our service center. Please make sure to pack all accessories included with your speaker so that we can properly identify any issues. All freight cost to return the unit to ESI Cases & Accessories, are the responsibility of the customer. If your speaker is under warranty, then ESI Cases & Accessories. will at its sole discretion, exchange or repair the speaker without charge for parts and labor. The customer is responsible for return freight and should include a check or money order payable to "ESI Cases & Accessories." with your return for the return freight amount. Any shipments received without a Return Authorization number will be refused. For more details please contact our customer service department.

Send product:

ESI Cases & Accessories

44 East 32nd Street

New York, NY 10016

Tech Support: (212) 883-8838

TechSupport@ESICellular.com

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Federal Communications Commission (FCC) Statement This Equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV/technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment. Tested to comply with FCC standard. FOR HOME OR OFFICE USE.

Warning: This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Bluetooth is a registered trademark of Bluetooth SIG
All other trademarks are property of their respective companies.