

QFX

www.qfxusa.com



SBX-921210
100V-240V

User Manual for SBX-921210

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to humans. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta en este altavoz. NO HAY PIEZAS QUE EL USUARIO EN EL INTERIOR. Para cualquier reparación a un técnico calificado

 
El símbolo del rayo con punta de flecha dentro de un triángulo equilátero pretende alertar al usuario de la presencia de voltaje peligroso en el interior del producto que puede ser de magnitud suficiente para constituir un riesgo de descarga eléctrica para las personas. Los usuarios deben exhibir seguridad adicional cuando este símbolo aparece en este manual de instrucciones y siga todas las precauciones , ya que se presentan.

 
SBX-921210 REAR PANEL

1. Power Switch: ON/OFF.
2. Power Supply: AC100-240V 50/60HZ
3. Light Switch: Control Moonlight to On/Off

SBX-921210 TRASERO PANEL

1. Potencia Interruptor : ON / OFF.
2. Power de alimentación: AC100-240V 50 / 60HZ
3. Interruptor de luz: Control de luz de la luna en On / Off

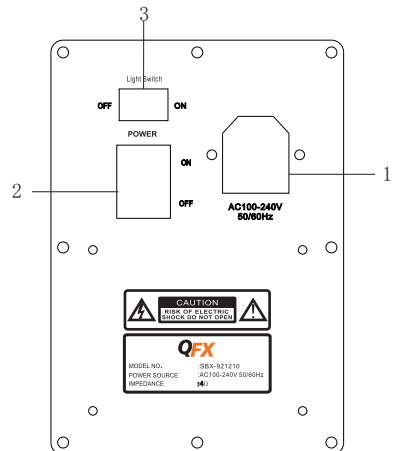 


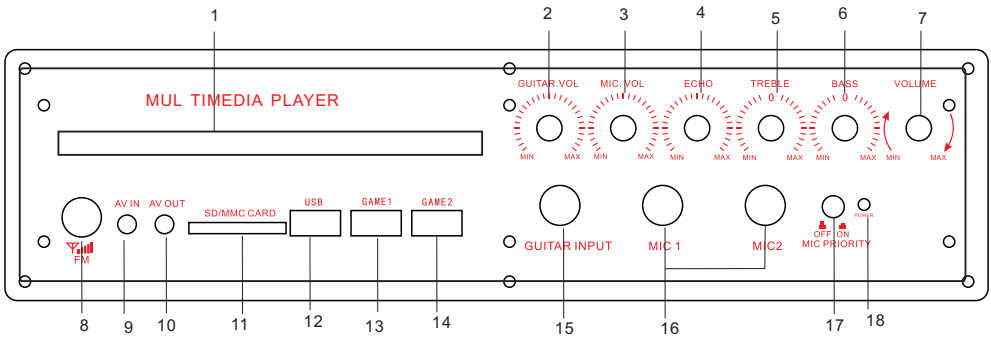
SBX-921210 DVD Player Panel

1. DVD disc slot
2. Guitar Volume Control: Adjust from Min to Max
3. Microphone Volume Knob: Adjust from Min to Max
4. Echo knob: Adjust from Min to Max
5. Treble adjustment: Adjust from Min to Max
6. Bass adjustment: Adjust from Min to Max
7. Master Level Control: Adjust the master volume.
8. FM Input
9. Audio/ Video input
10. Audio / Vidio output
11. SD/MMC Card Slot
12. USB slot
13. Game port 1
14. Game port 2
15. Guitar input
16. Mic input 1 / Mic input 2
17. The Mic Priority Switch: ON/ OFF
18. Power indicator
19. IR: Remote control sensor

SBX-921210 DVD Jugadores Panel

1. DVD discos Ranura
2. Guitar Control de volumen: Ajuste del mínimo al máximo
3. Micrófono Perilla de Volumen: Ajuste del mínimo al máximo
4. Echo perilla : Ajuste del mínimo al máximo
5. Treble Ajuste: Ajuste del mínimo al máximo
6. Bass Ajuste : Ajuste del mínimo al máximo
7. Control Maestro Nivel: Ajuste el volumen principal.
8. FM Entrada
9. Audio / vídeo de entrada
10. Audio / Vidio Salida
11. SD/ MMC para tarjeta Ranura
12. USB Ranura
13. Juegos de puerto 1
14. Juegos de puerto 2
15. Guitarra De entrada
16. Entrada de micrófono 1 / Entrada de micrófono 2
17. El interruptor de prioridad de micrófono: ON/ OFF
18. Potencia Indicador
19. IR: control remoto de sensor

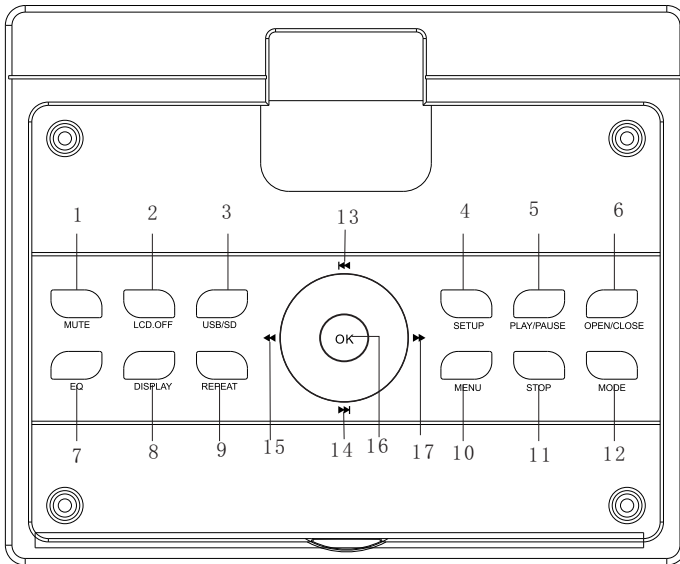**SBX-921210 Top DVD Panel**

1. MUTE
2. LCD OFF
3. USB/SD SLOT
4. SET UP
5. PLAY/PAUSE
6. OPEN/CLOSE DVD SLOT
7. EQ
8. DISPLAY
9. REPEAT
10. MENU
11. STOP
12. MODE
13. PREVIOUS CHANNEL
14. NEXT CHANNEL
15. FAST REWIND
16. FAST FORWARD
17. OK

SBX-921210 Superior de DVD Panel

1. MUTE
2. LCD OFF
3. USB SLOT / SD
4. SET UP
5. PLAY / PAUSA
6. Abra / CLOSE DVD SLOT
7. EQ
8. DISPLAY
9. REPETIR
10. MENÚ
11. PARADA
12. MODO
13. ANTERIOR DE CANAL
14. SIGUIENTE CANAL
15. FAST REWIND
16. AVANCE RÁPIDO
17. OK

SBX-921210 BLUETOOTH

 
Bluetooth Mode: Open the bluetooth of moilephone. Find the bluetooth name of the unit called "QFX" to connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching mode.

SBX-921210 BLUETOOTH

Modo de Bluetooth: Abra el bluetooth de moilephone. Find el nombre del bluetooth de la unidad llamada "QFX" para conectarse. Después de una persona compatible, puede reproducir la música de los altavoces. Usted no tendrá que volver a conectar el Bluetooth cuando el modo de conmutación.

SBX-921210 REMOTE CONTROL

- 1.STANDBY: Make the unit to be standby mode.
- 2.OPEN/CLOSE DVD SLOT
- 3.VOL-
- 4.VOL+
- 5.STOP
- 6.Liquid crystal display OFF
- 7.AUTO Search : FM mode
- 8.SYS R/L : Sound Channel switching
- 9.Display
- 10.Slow
- 11.Set Up
- 12.Repeat
- 13.SUB TITLE
- 14.language
- 15.Play/Pause
- 16.USB/ SD
- 17.EQ
- 18.Mode
- 19.Up direction of selecting
- 20.Left direction of selecting
- 21.OK
- 22.Right direction of selecting
- 23.Down direction of selecting
- 24.MENU
- 25.Tittle
- 26.Fast rewind
- 27.Fast Forward
- 28.Previous Channel
- 29.Next Channel
- 30.MUTE
- 31.Programme
- 32.KEY Number for selecting the certain track

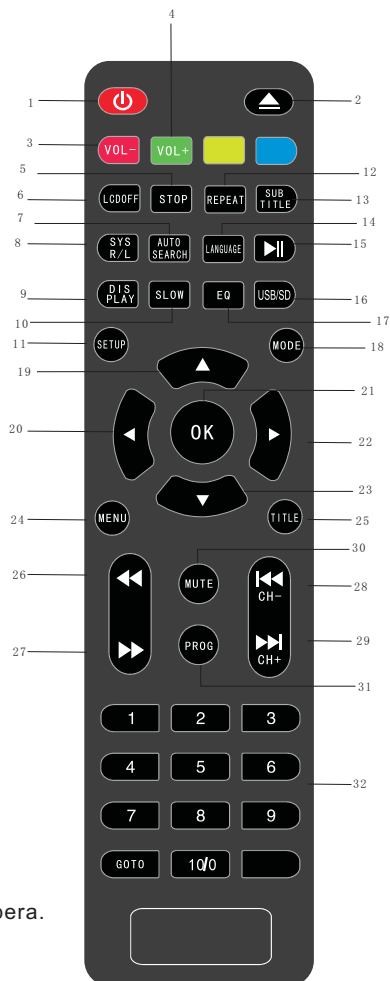

SBX-921210 CONTROL REMOTO

- 1.STANDBY: Asegúrese que la unidad sea el modo de espera.
- 2.Abra / SLOT DVD CERRAR
3. VOL-
4. VOL +
5. PARADA
6. Pantalla de cristal líquido OFF
- 7.AUTO Buscar: Modo FM
8. SYS R / L: conmutación de canal de sonido
9. Pantalla
10. lento
11. Configure
12. Repita
13. SUB TITLE
14. Lenguaje
15. Reproducir / Pausa
16. USB / SD
17. EQ
18. Modo
- 19.Up dirección de seleccionar
- 20.Left dirección de seleccionar
21. Aceptar
- 22.Right dirección de seleccionar
- 23.Down dirección de seleccionar
24. MENÚ

25. Tittle
26. Retroceso rápido
27. Avance rápido
28. Anterior Channel
29. Siguiente Canal
30. MUTE
31. Programa
32. tecla numérica para seleccionar la pista cierta

FCC Caution.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.