
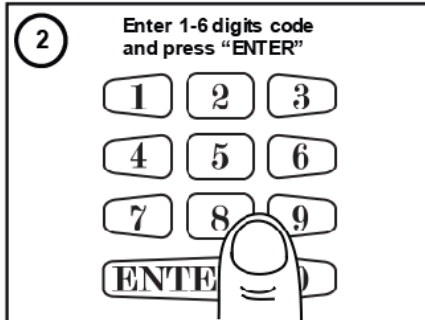


Setting Keyless Entry

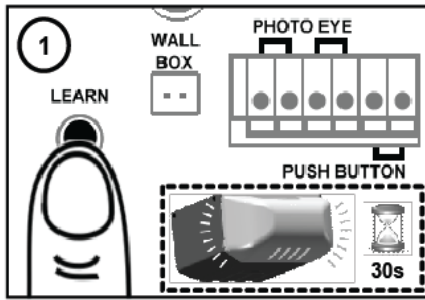

Mounting the Keyless Entry:

On door jamb face outside your garage, locate Keyless Entry within sight of door at minimum height of 5 feet (1.5m), ensure it is away from reach of children and moving parts of door and hardware. Check the reception of Keyless Entry placement before mounting. Change location for better reception if necessary.

Replacing Keyless Entry Battery:

When the battery of Keyless Entry is low, dimmed illumination is observed. To replace battery, remove the battery cover by loosening the screws underneath, replace the battery with a 9V battery.

To Add Personal Code:

1. Press "LEARN" button on the rear control panel, the courtesy light will glow with click*. The unit is ready to accept a transmitter in the coming 30 seconds.
2. Enter 1 - 6 digit(s) personal code on Keyless Entry within 30 seconds and press "ENTER" button.
3. Courtesy light flashes twice indicating personal code is stored in memory.

Up to 20 personal codes (including 1-button transmitters) can be added to the unit by repeating the above procedures.

If more than 20 personal codes are stored, the previously stored one from the very beginning will be replaced, i.e. the 21st transmitter replaces the 1st stored one.

* If the courtesy light is already on it will flash once and stay steadily for 30 seconds.

Operation:

To access the door, enter a pre-stored personal code and press "ENTER" to transmit code, and within 20s, "ENTER" button can be used to stop or reverse the door.

If code is entered wrongly, correction can be made by pressing "ENTER" to reset and re-enter code.

During nighttime, "ENTER" may be pressed in advance to turn on backlit.

Removing ALL Personal Code(s):

To remove ALL personal code(s) and /or transmitters from memory, press and hold the "LEARN" button above 5s. The courtesy light will then flash 7 times, indicating ALL codes/transmitters have been removed from memory.

This device complies FCC Rules for HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment