

User Manual

Read me first

- ◆ Please read this manual before operating your tablet, and keep it for future reference.
- ◆ The descriptions in this manual are based on the default settings.
- ◆ Images and screenshots used in this manual may differ from the actual product.
- ◆ Available features and additional services may vary by device, software or service provider.
- ◆ Our company is not liable for performance issues caused by third-party applications.

Galaxy Microsystems Ltd

Copy right (2013)

CONTENTS

Assembling.....	- 3 -
Unpack.....	- 3 -
Charge the battery	- 3 -
Install the memory card.....	- 3 -
Getting started.....	- 3 -
Turn your device on and off	- 3 -
Switch to flight mode.....	- 4 -
Device layout	- 4 -
Home screen.....	- 4 -
Add items to the home screen	- 5 -
Task bar	- 6 -
Notification panel	- 6 -
Auto rotation.....	- 7 -
Lock & unlock the screen.....	- 7 -
Enter text	- 7 -
Customize your device.....	- 8 -
Manage applications	- 8 -
Security	- 8 -
Reset tablet.....	- 9 -
Web	- 10 -
Email.....	- 10 -
Gmail	- 11 -
Browser.....	- 11 -
Play Store	- 12 -
Entertainment	- 13 -
4K Player	- 13 -
Gallery	- 13 -
Music	- 15 -
Camera	- 16 -
Tools.....	- 17 -
Calendar	- 17 -
Alarm	- 18 -
File Manager	- 18 -
Sound Recorder.....	- 18 -
Calculator.....	- 18 -
Connectivity	- 19 -
USB Connection	- 19 -
Wi-Fi	- 19 -
Safety Precautions.....	- 20 -
Care & Maintenance.....	- 21 -

Assembling

Unpack

Check your product box for the following items.

- Tablet
- User manual
- Adapter

You can purchase additional accessories from your local retailer.

Charge the battery

Before using the device for the first time, you must charge the battery.

- 1 . You can charge the device with a travel adapter or by connecting the device to a PC with a USB cable.
- 2 . Battery full icon is shown when finished if your device is off.

Warning : Use only original batteries and chargers. Unapproved chargers or cables can cause batteries to explode or damage your device.

Install the memory card

To store additional multimedia files, you need insert a memory card.

1. Insert a memory card with the gold contacts facing downwards.
2. Push the memory card into the slot until it clicks.

Notice: Our company uses approved industry standards for memory cards, but some brands may not be fully compatible with your device.

Getting started

Turn your device on and off

To turn on your device, press and hold the power key.

 
To turn off your device, press and hold the power key, and then tap **OK**.

Switch to flight mode

To use only your device's non-network services, switch to flight mode. Please follow the instructions below to turn on flight mode:

Tap **Settings**→**WIRELESS & NETWORKS**→**More**→**Airplane mode** from application list to create a checkmark.


Device layout

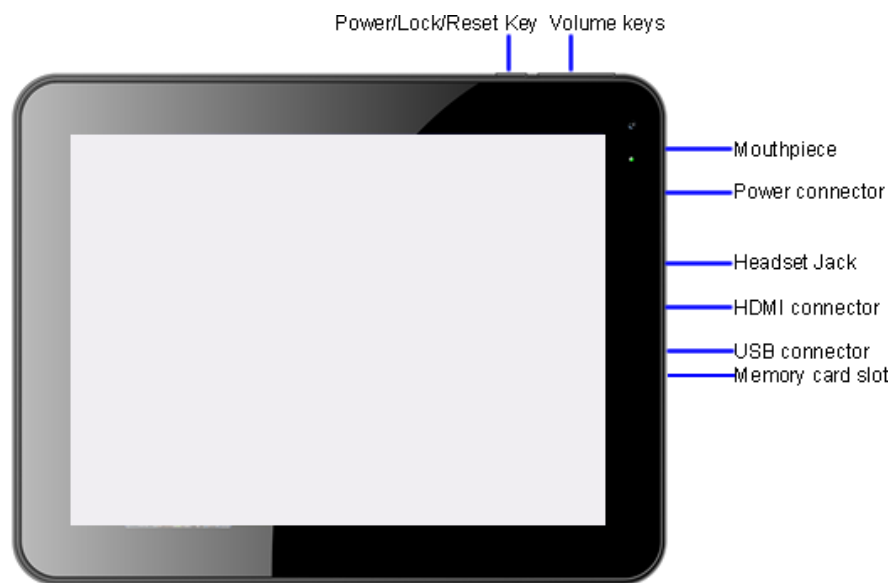

Volume keys	Adjust the device volume.
Power/Lock/Reset	Press and hold for 2 seconds to turn on or turn off the device. Press to lock the device. Press and hold for 6 seconds to reset the device.

Home screen

 
The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

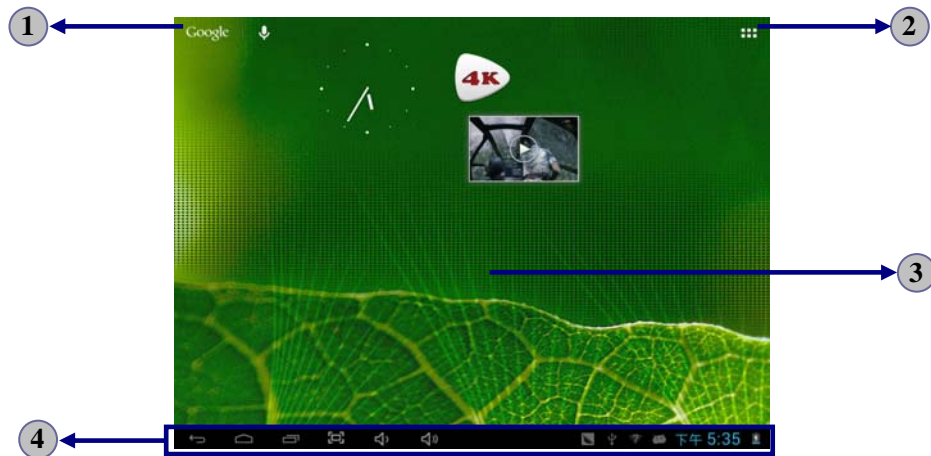

1	Open the search bar
2	Scroll left or right to the other panels
3	Access the application list and widget screen
4	Task bar

Add items to the home screen

Tap the icon at the upper right to access the application list shown below from home screen.

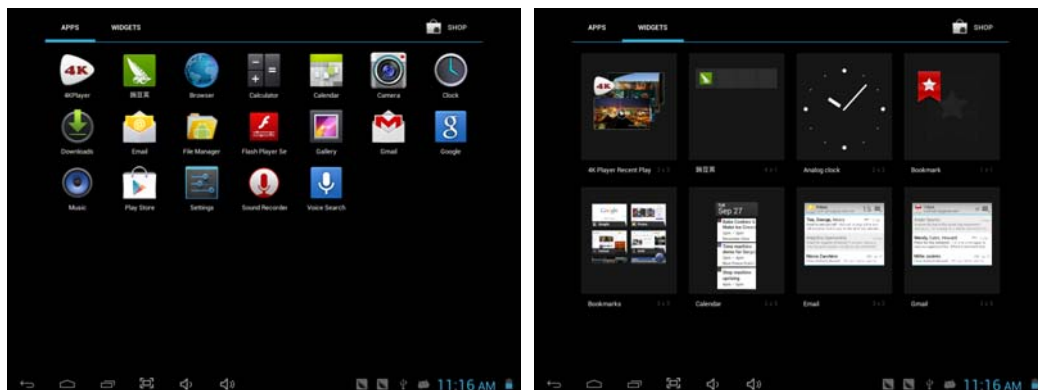 


Scroll left or right to view more items.

To add items to the home screen, tap and hold an item, then drag the item to a new location.

To remove items from the home screen, tap and hold an item, then drag the item to the **Remove** area at the top of the home screen.

Task bar

 The task bar is shown at the bottom of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons.

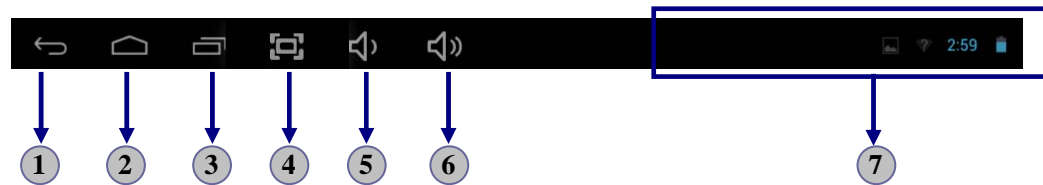

1	Return to previous screen.
2	Return to home screen.
3	View the applications you have accessed recently.
4	Capture the screen.
5	Adjust the device volume to low level.
6	Adjust the device volume to high level.
7	Display notification icons. Tap the notifications area to open the notification panel.


Indicator icons

Icon	Definition	Icon	Definition
	Open Wi-Fi available		Flight mode activated
	Wi-Fi connected		Music being played
	Uploading data		Downloading data
	Connected to PC		Battery power level

Notification panel

Tap the notifications area to open the notification panel shown below. You can access a list of notifications.

 Tap to activate or deactivate wireless connection features and other settings.

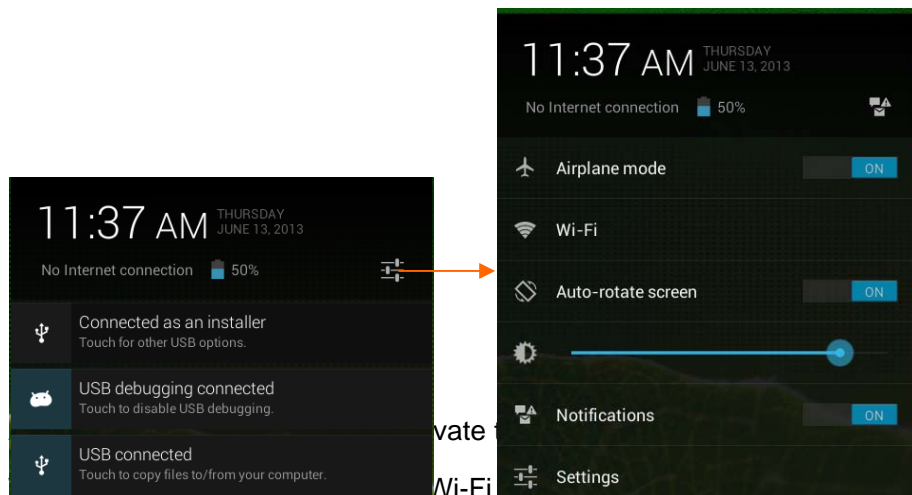

Auto-rotate screen : Activate or deactivate the auto rotation feature.

Brightness : Adjust the basic brightness level of the display to lighter or darker.

Notifications : Activate or deactivate the notification feature.

Settings : Access **Settings** application.

Auto rotation

If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select **Auto-rotate screen**, then scroll it to **Off**.


Lock & unlock the screen


To unlock the screen, tap and hold the lock icon, then drag it to the unlock area where the unlock icon is.

To lock the screen manually, press **Power** key.

Enter text

You can enter text by selecting characters on the virtual keyboard.

Tap the text input field to display the virtual keyboard. To hide the keyboard, tap  at the task bar.

To change the text input method, tap  at the task bar.

From a text field, you can use the copy and paste feature for fast inputting.

Customize your device

To customize your device according to your preferences, tap **Settings** from application list or notification panel.

Manage applications

To manage the applications installed on your device, tap **Settings**→**Apps**.

1. To uninstall an application, select **DOWNLOADED**, then select an item and tap **Uninstall**, tap **OK** to confirm.
2. To stop or change the settings of an application, select **RUNNING** or **ALL**, then select an item and tap the option you need.

Security

You can protect your device and data by setting screen lock or encrypting your tablet.

◆ Set a screen lock

To set a screen lock, tap **Settings**→**Security**→ **Screen lock** from application list.

- **None** : Deactivate the screen lock.
- **Slide** : Slide to unlock the screen.
- **PIN** : Enter a numeric PIN to unlock. When prompted, enter the PIN to unlock the screen.
- **Pattern** : Draw a pattern to unlock. Follow the instructions to draw your lock pattern. When prompted, draw the pattern to unlock the screen.
- **Password** : Enter a passcode to unlock. When prompted, enter the passcode to unlock the screen.
- **Face Unlock** : Look at your tablet to unlock it. Follow the on-screen instructions to set it up. Tap **Continue** to choose your backup lock in case Face Unlock can't see you.

When prompted, to unlock your tablet, just look at it. When Face Unlock can't see you, enter the PIN code or draw the pattern saved before.

◆ Screen time-out

Select **Settings**→**Display**→**Sleep** from application list, you can set the time before the

screen times out and goes into lock mode. (you have not entered any characters or made other selections).

Reset tablet

You can reset system and desktop settings to their original values by the following steps:

1. Select **Settings** ➔ **Backup & reset** from application list.
2. Tap **Factory data reset**.
3. If you want to erase all data on your tablet, such as music, pictures, and other data, tap **Erase SD card** checkbox to create a checkmark.
4. Tap **Reset tablet**.

The device resets to the factory default settings automatically.

Warning!: Factory data reset will erase all data from your device and SD card, including your google account, system and application data and settings, and downloaded applications.

Web

Email

To receive and send mail, you must have a remote mailbox service. This service may be offered by a service provider. Your device is compliant with applicable internet standards for POP3/IMAP/Exchange.

Before you can send or receive mail on your device, you need to set up an email account and define the email settings correctly. You can define more than 1 mailbox.

◆ Set up your email


1. Tap **Email** from application list.
2. You can use mailbox guide to set up your mailbox, tap **Next** until it's done.
3. If you need to add another email account, tap the option button at the upper right→**Settings**→**ADD ACCOUNT**, then set up the email account with the mailbox guide.

When you are finished setting up the email account, the email messages are downloaded to your device. If you have created more than two accounts, you can switch between email accounts. Select an account name at the top left of the screen and select the one you want to retrieve messages from.

◆ Delete your email account

1. Open the application list and select **Email**.
2. Tap the option button at the upper right, then select **Settings** and the email account you want to delete.
3. Tap **Remove account**.
4. Tap **OK** to confirm.

◆ Create and send email

1. Open **Email** application.
2. Tap .
3. In **To** field, enter the recipient's email addresses manually and separate them with a comma. Add more recipients by tapping **Cc/Bcc**.
4. To insert attachments, tap the option button at the upper right and select **Attach file**.
5. Enter the subject and the text.

6. Tap **SEND** to send the email.

Gmail

You can retrieve new email messages from the Google Mail webmail service to your inbox. Before you can send or receive mail on your device, you need to set up a Gmail account.

◆ Create a Gmail account

If you don't have a Google Account, tap **New**, then follow the on-screen instructions to create a new one.


◆ Set up a Gmail account

If you want to add an existing account, tap **Existing**, enter your email address and password, and then select **Next**, when you are finished setting up the email account, the email messages are downloaded to your device.

◆ View email messages

1. When you open the email account, the amount of unread email messages is displayed at the title bar and the unread email messages are displayed in bold.
2. To view an email message, tap it.
3. To mark an important email message, tap the star icon below the date. To cancel the mark, tap the star icon again.

◆ Create and send an email

1. Tap .
2. In **To** field, enter the recipient's email addresses manually and separate them with a comma. Add more recipients by tapping **Cc/Bcc**.
3. To insert attachments, tap the option button at the upper right and select **Attach file**.
4. Enter the subject and the text.
5. Tap **SEND** to send the email.

Browser

Tap **Browser** from application list to access to the web.

◆ Browser webpages



1. Select **Browser** to launch a specified homepage.
2. To access a specific webpage, select the URL input field, enter the web address

of the webpage, and select **Go**.

3. To zoom in, place two fingers on the screen and spread them apart. To zoom out, move your fingers closer together. You can also double-tap the screen.

◆ **Add windows**


You can have multiple windows open at one time.

1. To add a new window, tap  at the title bar.
2. To open up a window, tap the title of the window.
3. To close the window, tap  at the title bar.


◆ **Set homepage**

1. Tap the option button at the upper right.
2. Select **Settings**→**General**→**Set homepage**.
3. Enter the web address of the desired webpage.

◆ **Add bookmarks**

While navigating a website, tap  to add current URL to your bookmark list and easily access it later.

◆ **View bookmarks and history**

Tap  to open the bookmark list and the recent history. Tap a bookmark or any entry to display the webpage.

◆ **Customize browser**

To make adjustments in your browser settings, tap the option button at the upper right, and then select **Settings**.

Play Store

Play Store allows you to easily download an abundance of applications directly to your device. Before using the Play Store, you must have a Google Account.

1. From the application list, tap **Play Store**.
2. Sign in to your Google Account.
3. Search for and download applications as desired.
4. Follow the on-screen instructions.

Note

- All applications offered by Play Store are developed by third party. To get the

information about the developers, you can read the descriptions of each application.

- Our company is not liable for performance issues caused by third-party applications.

Entertainment

4K Player

Select **4K Player** from application list.


You can view or play 4k video files with this application, which supports animation preview and multiple floating windows.

◆ Supported file formats

It supports 4K standard video format.

Note: Some files may not play properly depending on how they are encoded.

◆ Play a video


1. If you need to display multiple floating video windows, please tap  select **App mode config** → Select **Cool mode**. If you need to display only one floating window, please select **Optimization mode**.
2. If you need to optimize power consumption, please select **Energy-saving mode**.
3. Control playback with the virtual keys. To switch to full-screen mode, place two fingers on the screen and spread them apart. To switch to floating window mode, move your fingers closer together. You can also double-tap the screen.
4. To watch a video saved on your device on TV, connect your device and TV with HDMI cable.

◆ View the recent played videos

To view the recent played videos, tap  at the upper left and then select **Recent**

Played. Tap  again to close the list.

◆ View the recorded videos

To view the recorded videos, tap  at the upper left and then select **Recorded**

Videos. Tap  again to close the list.

Gallery

To view or organize your images and video clips, or edit and send your files to other devices, or set photos as wallpapers, select **Gallery** from application list.


Note: It takes a few more minutes to enter this application if you store more files.

◆ Supported file formats


Type	Format
Image	JPEG、 GIF、 BMP、 PNG
Video	AVI、 RM、 RMVB、 MOV、 FLV、 3GP、 MP4





Note: Some files may not play properly depending on how they are encoded.

◆ View a photo

1. Select a folder.
2. Select a photo to view. To view more photos, scroll left or right.
3. To zoom in, place two fingers on the screen and spread them apart. To zoom out, move fingers closer together. You can also double-tap the screen.
4. To start a slideshow, tap the option button and then select **Slideshow**.
5. To view the details of a file, tap the option button, then select **Details**.
6. To share a photo with others via Email, Gmail or Messaging, tap  at the title bar.
7. To set a photo as wallpaper, tap the option button at the upper right→select **Set picture as**→**Wallpaper**→drag the slides of the crop box to create the crop area, then tap **Crop**.
8. To set a photo as a caller ID, tap the option button at the upper right→select **Set picture as**→**Contact photo**→**Contacts**→Create a new contact or select an existing contact→drag the slides of the crop box to create the crop area, then tap **Crop**.

◆ Edit a photo

1. To crop the image, tap the option button at the upper right, then select **Crop**.
 - To move the crop box, tap and hold the crop box and drag it to the desired location.
 - To add or subtract from the selection border of the crop box, drag the crop box to the desired size.
 - When you are finished, tap **Save**.
2. To edit photos and apply various effects, tap the option button at the upper right, then select **Edit**.
 - To adjust contrast, tap .

- To apply a filter effect, tap .
- To apply a color effect, tap .
- To apply a photo frame effect, tap .
- To crop, straighten, rotate or flip the image, tap .

◆ **Play a video**

1. Select a folder.
2. Select a video to play.
3. Control playback with the virtual keys.
4. To watch a video saved on your device on TV, connect your device and TV with HDMI cable.

Music




With Music, you can play music files. The music player supports the following file formats: MP3, AAC, APE, WMA, OGG, WAV, M4A and so on.

Note: Some files may not play properly depending on how they are encoded.

◆ **Add music files to your device**

Start by transferring files to your device or memory card.

◆ **Play music**

1. Select a music file.
2. Control playback with the virtual keys.
 -  The current list of songs are randomly shuffled for playback.
 -  Replays the current list when the list ends.
 -  Repeats the current playing song.

◆ **Create a playlist**

1. Tap and hold a music file.
2. Select **Add to playlist**.
3. Select **New**.
4. Enter a name.
5. Tap **Save**.

◆ **Delete a playlist**

1. Tap **Playlists**.

 
2. Tap and hold the playlist you want to delete.
3. Select **Delete**.

Camera

With the camera function, you can capture photos and take videos.

◆ Capture a photo

1. Open the application list and select **Camera**.
2. Before taking a picture, you need to make some adjustments.

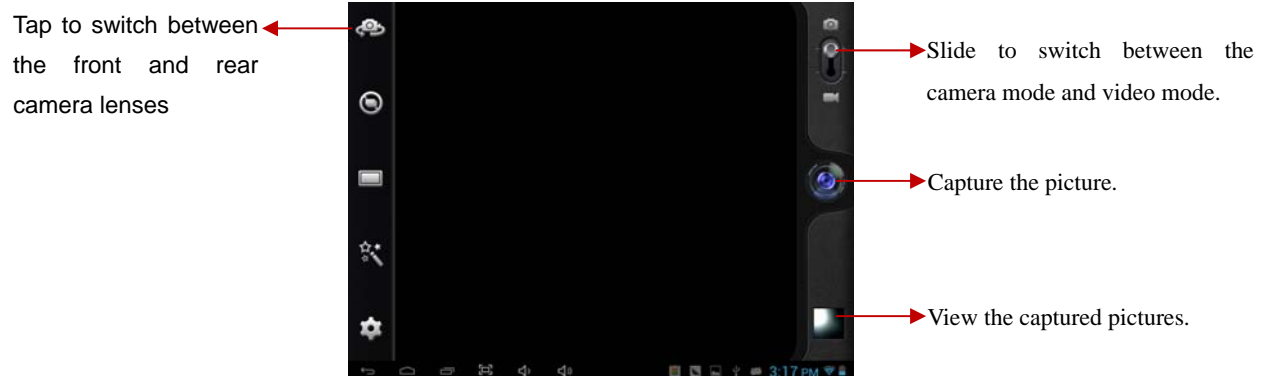


Place two fingers on the screen and spread them apart or move fingers closer together to zoom in or zoom out.

Icon	Definition
	Set continuous snap mode.
	Change to panorama mode to take a landscape photo.
	Apply a filter effect.
	Change camera settings.

3. Aim the lens at the subject and tap to take a photo. The photo is saved automatically to the folder DCIM.
4. Select the image viewer icon at the lower right to view the pictures.

◆ Record a video

 1. Open the application list and select **Camera**. Slide to video mode.
2. Before recording a video, you need to make some adjustments.

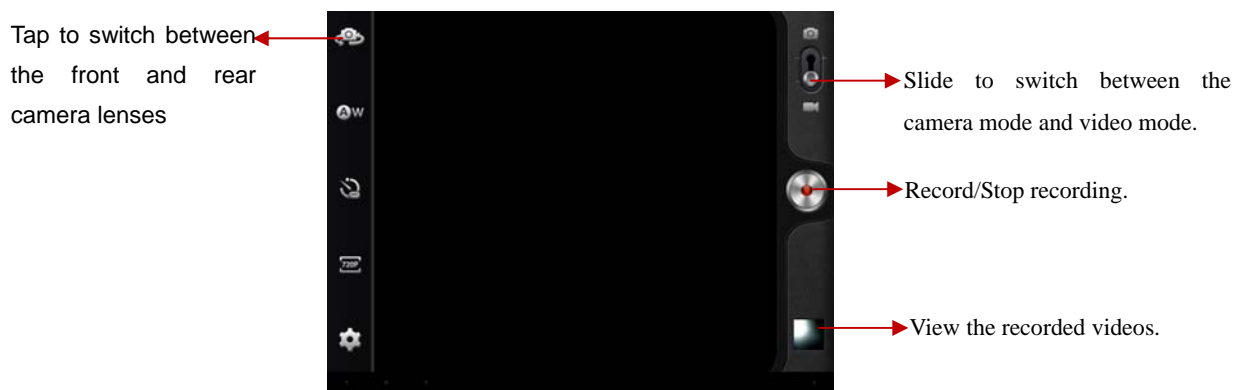

Place two fingers on the screen and spread them apart or move fingers closer together to zoom in or zoom out.

Icon	Definition
	Adjust white balance.
	Set time lapse interval.
	Set video quality.
	Change camera settings.

3. Tap to start recording. The length of the video recording is restricted by the available space on your storage.
4. Tap to stop recording. The video is saved automatically to the folder DCIM.
5. After recording videos, select the image viewer icon at the upper right to view the recorded videos.

Tools

Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the calendar, tap **Calendar** from application list.

1. To create an event, tap .
 - Fill in the fields, and set category, date, time & an alarm.
 - After you finish, select **DONE**.
2. You can view calendar in different views, Day, Week, Month and All.
3. To delete an entry, tap the event to open it, and then select → **OK**.

Alarm

From application list, tap **Clock**, and then select **Set alarm**.

1. Tap **Add alarm**.
2. Select the tick box next to **Turn alarm on** to activate alarm.
3. Set alarm details, when you are finished, select **OK**.
4. When the alarm sounds, to stop the alarm, tap **Dismiss**. To repeat the alarm after a specified length of time, tap **Snooze**.
5. To cancel an alarm, remove the tick in the check box by tapping on it.
6. To delete an alarm, tap and hold the alarm to delete, and then select **Delete alarm** → **OK**.

File Manager




Many features of the device, such as images, videos, documents, received attachments and downloaded files or applications, use memory to store data. With **File manager**, you can store and browse files and folders in your device, or edit, move, copy files; you can send files to compatible devices as well.

Note:

1. Some files formats are not supported depending on the software of the device.
2. Some files may not play properly depending on how they are encoded.

Sound Recorder

With **Recorder**, you can record a voice memo. From application list, tap **Recorder**.

1. To record a voice memo, tap .
2. To pause the recording, tap .
3. To listen to a voice recording that you just recorded, tap .

Calculator

With this feature, you can use the device as a calculator. The calculator provides the basic arithmetic functions. Tap the virtual numeric and calculation keys to perform a calculation.

Connectivity

USB Connection

You can connect your device to a PC and use it as a removable disk, which allows you access the file directory.

1. If you want to transfer files from or to a memory card, insert a memory card into the device.
2. With a USB cable, connect your device to a PC.
3. Open the notification panel, select **USB connected**.
4. Tap **Turn on USB storage**.
5. Open the folder to view files.
6. Copy files from the PC to the memory card.

Wi-Fi

With Wi-Fi, you can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

◆ Activate the Wi-Fi feature

1. From application list, tap **Settings**.
2. In the field of WIRELESS & NETWORKS, turn on the **Wi-Fi** feature.

◆ Find and connect to Wi-Fi

1. Once the Wi-Fi feature is activated, the device automatically search for available Wi-Fi connection.
2. Select a network.
3. Enter a password for the network (if necessary).
4. Select **Connect**.

Safety Precautions

Read these simple guidelines before using your device. Not following them may be dangerous or illegal.

◆ **Aircraft**

Switch off in aircraft and follow any restrictions. Wireless devices can cause interference in aircraft.

◆ **Vehicles**

Never use your device while driving. Place it in a safe place.

Position your device within easy reach. Be able to access your device without removing your eyes from the road.

◆ **Electronic devices**

In some circumstances your device may cause interference with other devices.

◆ **Potentially explosive environments**

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

◆ **Pacemakers and other medical devices**

Pacemaker manufacturers recommend that a minimum separation of 8 inches be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker.

Operation of any radio transmitting equipment, including wireless phones may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so.

◆ **Operating environment**

When connecting to other device, read its user guide for detailed safety instructions. Do not connect incompatible products.

Do not place your device in the air bag deployment area.

Use the device only in its normal operating positions as explained in the product documentation.

Always switch off your device when its use is prohibited or when it may cause interference and danger.

◆ **RF Exposure Information (SAR)**

This device is designed and manufactured not to be exceeded the emission limits for exposure to radio frequency RF energy set by the Federal Communications Commission of the United States.

The exposure standard for wireless devices employing a unit of measurement is known as the Specific Absorption Rate (SAR), and the SAR limit set by FCC is 1.6 W/kg.

This device is complied with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1992, and has been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This device has been tested, and meets the FCC RF exposure guidelines when tested with the device directly contacted to the body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

◆ **Areas with posted regulations**

Switch off your device when any regulations posted in these areas instruct you to do so.

Care & Maintenance

- ◆ Use only manufacturer-approved accessories. Use general accessories may shorten the life of your device or cause device to malfunction.
- ◆ Keep your device dry. Humidity and all types of liquids may damage device parts or electronic circuits.
- ◆ Do not use or store the device in dusty, dirty areas.
- ◆ Do not store the device in hot or cold areas.
- ◆ Do not store your device near magnetic fields.
- ◆ Do not store your device with such metal objects as coins, keys and necklace.
- ◆ Do not drop your device or cause impacts to your device.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device and its antenna must not be located or operating in conjunction with any other antenna and transmitter.

NOTE: This equipment has been tested and found to comply with the limits for a Class B

digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.