
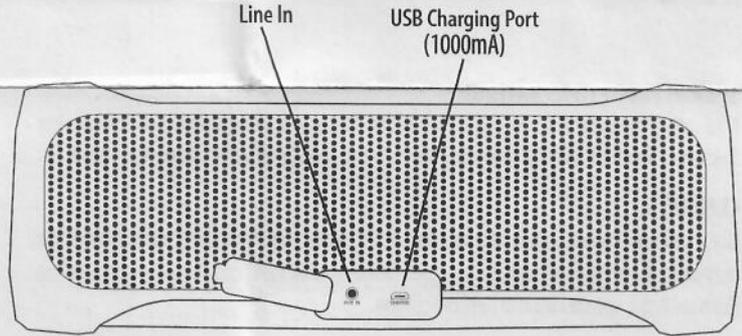


SPEAKER CONTROLS & FEATURES

FCC ID: 2AO5X-WM1905

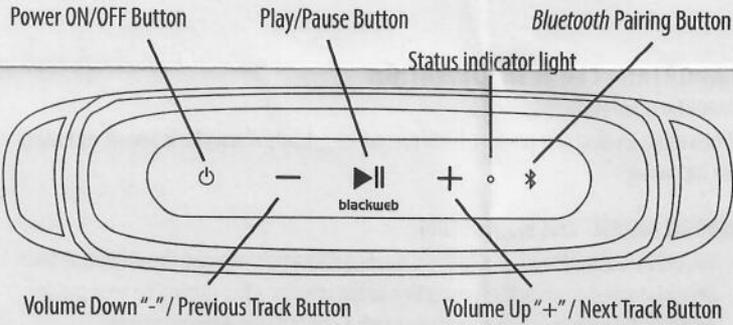

POWER:

Press and hold the POWER button for 2 seconds to turn device ON/OFF.

VOLUME UP “+”:

Short press (< 0.5s) the button to turn up volume. Press and hold the button (2s) to go to the next track.

VOLUME DOWN “-”:

Short press (< 0.5s) the button to turn down volume. Press and hold (2s) the button to go to the previous track.

INDICATOR LIGHT STATUS:

Power ON – When the speaker is turned on, a solid blue light will appear momentarily.

Bluetooth pairing indicator – When the speaker is turned on, a flashing blue and red light indicates speaker is ready to pair. Once paired, the light will turn solid blue, then turn off.

Power OFF – When the speaker is turned off, the indicator light will momentarily turn solid blue, then turn off.

Battery charging – While speaker is charging, the indicator light will turn solid red. Once speaker is fully charged, it will turn off.

SPEAKER PAIRING:

To pair the speaker, follow these simple steps:

1. Make sure the smartphone, tablet, or computer you’re using with the speaker has **Bluetooth**.
2. Turn on the speaker (press and hold the POWER button for 2 seconds) and look for the little blinking light.
3. Look for Blackweb RGD A012 in your device’s **Bluetooth** list, or click YES.

The device and **Bluetooth** will find each other every time, so long as the speaker is set to **Bluetooth** and your device’s **Bluetooth** is on. If you’re connecting to a computer, you may have some extra steps on that end. You’ll have to get that information from the computer company.

Auto off: If the speaker is on but is not connected to **Bluetooth**, it will shut down after 2 minutes. Once paired, if the speaker is paused for 15 minutes or more, it will automatically shut down.

DISCONNECTING DEVICE:

Long press the **BLUETOOTH** button for up to 2 seconds to disconnect the speaker from the device and enter into Pairing mode.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

CALL HANDLING:

INCOMING CALL:

Answering and hanging up a call – When speaker is paired to your phone, short press the **PLAY/PAUSE** button to answer the call. To hang up, short press the **PLAY/PAUSE** button.

Move call from speaker to device – If you are on the call and wish to move the call from the speaker to your device, long press the **PLAY/PAUSE** button.

Reject an incoming call – To reject an incoming call, long press the **PLAY/PAUSE** button for 3 seconds.

See below table for clarification.

Situation	Short Press PLAY/PAUSE Button	Long Press PLAY/PAUSE Button
First incoming call	Pick up call	Reject call
On call	End call	Move call from speaker to device

PAIR 2 FOR PARTY MODE:

1. Turn on both speakers. Press and hold the “+” and “-” buttons on each speaker until the lights blink red and blue. This may take up to 2 seconds. You will hear a voice prompt indicating the speakers have entered into Search mode.
2. It will take up to 15 seconds for the speakers to find each other. Once paired, the light will turn solid blue, and a tone with voice prompt will indicate “Speakers paired.” It will be followed by “Left Channel” and “Right Channel” voice prompts.
3. To unpair 2 speakers, press and hold the “+” and “-” buttons for up to 2 seconds.

AUX-IN MODE:

1. Plug one end of the cord into the speaker and the other into the headphone jack on your device.
2. Turn on the speaker
3. Hit **PLAY** on your device.
4. You’ll have to play and pause the music from your device, not the speaker.

(Note: If you are in Party mode and you use the auxiliary cable, the music will only play from the device it is hooked up to.)

USB CABLE:

25 cm. Micro USB cable.



FCC ID: 2AO5X-WM1905

SPLASH PROOF (IPX5 RATING):

IPX5 rating means this speaker is splash proof. Water jets being sprayed on the speaker from any direction will not cause any harm to the speaker or affect its performance.

CLEANING:

Use a soft, dry towel to clean the speaker. Using water, harsh cleaners, or anything else may cause harm to the mechanics inside. Remember to keep the charging and aux flap flush with the speaker for the best protection.

FCC DISCLAIMER:

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or TV reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC SAR Evaluation:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IMPORTANT LEGAL INFORMATION**IMPORTANT SAFEGUARDS:**

When using an electrical product, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

- **WARNING:** Listen responsibly. To avoid hearing damage, make sure the volume on your device is turned down before connecting to the speaker. After turning on your speaker, gradually turn up the volume until you reach a comfortable listening volume.
- Use this product only for its intended use as described in this manual. Do not use attachments not recommended by Blackweb.
- Blackweb is not liable for any damage caused to smartphones, iPod/iPad/MP3 players, or any other device.
- Do not place or store this product where it can fall or be dropped into a tub or sink.
- Do not place or drop into water or any other liquid.
- Not for use by children. **THIS IS NOT A TOY.**
- Never operate this product if it has a damaged cord, plug, cable, or housing.
- Keep away from heated surfaces.
- Only set on dry surfaces. Do not place on surfaces wet from water or cleaning solvents.

Attention California Residents:

WARNING: This product contains chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm.

A MESSAGE FROM THE ENVIRONMENT**WARNING:**

This product has an internal, non-replaceable lithium battery. Please dispose of in accordance with your local, state, province, and country guidelines.

This product contains small parts that may present a choking hazard for young children.

CAUTION: All servicing of this product must be performed by authorized Audio Service Personnel only.