

Dial the desired telephone number at your mobile phone. The display of the SoundFly BT shows "bto". The microphone should have been connected.

During the call, the display shows "CAo" then the display shows "Ino" when a call connect a receiver. To end the call press briefly	 Adjust the frequency with ►A button. Press the MENU/F.REPEAT button once again. <i>[Source select]</i> Press repeately PHONE/SD-USB button. <i>Sd</i> SD card <i>USB</i> host connector <i>Sb</i> MP3 from mobile phone
 Getting Started -With Portable audio devices such as MP3 player, CD player, portable DVD player, or mobile phone through any FM radio speaker. 1. Automatically power is on once you put Sound-Fly BT into the car cigarette liter socket. *You can also power on & off pressing the power button for about 2 seconds. If no audio signal is detected for 1 hour, power is automatically off. 2. Turn on the radio and find a frequency that is not being used for broadcasting. Match the frequency of Sound-Fly BT with included stereo cable. 3. Connect portable audio device(MP3P, CDP, PMP, PDA, navigation or mobile phone etc.) to Sound-Fly BT with included stereo cable. 4. Turn on the audio device and press the play(▶II) button. 5. Set the volume to a reasonable level to get the best signal quality. *Set the volume of audio device to medium level and control the delicate volume using radio volume to get the quality sound. 	 Getting Started -With Memory devices Sound-Fly BT lets you listen to sound files like MP3, WMA in memory devices such as USB storage, SD card through any FM radio speaker. 1. Automatically power is on once you put Sound-Fly BT into the car cigarette liter socket. * You can also power on & off pressing the power button for about 2 seconds. If no audio signal is detected for 1 hour, power is automatically off. 2. Turn on the radio and find a frequency that is not being used for broadcasting. Match the frequency of Sound-fly BD to your radio using ▶/ 44 button. 3. Plug USB storage or SD card into Sound-Fly BT, * USB port is placed at the bottom & SD slot is placed on the right side of Sound-Fly BT. Music files(MP3 & WMA file) stored in the memory devices are automatically played. Sound-Fly BT Supports only MP3 and WMA file, the other types of files and the files locked by DRM are not played. (format type: FAT32) * Using USB storage Recognize up to 32GByte, 1999files. Support directory loading up to 5-level depth, Max 20 directories. * Using another type of memory devoces (CF memory stick) You need to connect special proper USB converter. * Using portable hard disk, you need to divide the disk into under 32Gbyte and format it with FAT32. Sound-fly recognizes only the first drive under 32Gbyte so you need to store the files in the first drive. <notice 'cigarette="" any="" by="" cable.="" caused="" connect="" connecting="" disk,="" do="" extra="" for="" hard="" jack="" li="" liter="" must="" not="" of="" portable="" power="" power.<="" problem="" responsibility="" take="" the="" to="" usb'="" using="" we="" with="" you=""> 4. Set the volume with the volume setting function of Sound-Fly Auto. </notice>
<page-header><page-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></page-header></page-header>	<page-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header><section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></section-header></page-header>
Operation-3 [Storing frequencies] ● Press briefly MEM SD-USB button. The display shows [-]. ● Select a memory (1-7) with ►/<	Tips for convenient use of Sound-Fly BT [Directory shift] -Search Defined Folder & Play - Sound-fly BT has the feature that plays the music files only in defined folder. and moves to the other directories. - It lets you put the files in order and use conveniently. 1. Make the folder, named MP3 or Soundfly.

