

powerCut Art. 2404

D Gebrauchsanweisung
Turbotrimmer

D

GB Operating Instructions
Turbotrimmer

GB

F Mode d'emploi
Turbofil

F

NL Gebruiksaanwijzing
Turbotrimmer

NL

S Bruksanvisning
Turbotrimmer

S

I Istruzioni per l'uso
Turbotrimmer

I

E Manual de instrucciones
Turbotrimmer

E

P Instruções de utilização
Turbotrimmer

P

DK Brugsanvisning
Turbotrimmer

DK

GARDENA Turbotrimmer powerCut

Welcome to the Garden of GARDENA...



Please read these operating instructions carefully and observe the notes given. Use these operating instructions to familiarise yourself with the Turbotrimmer, its proper use and the notes on safety.



For safety reasons, children under the age of 16 or people who are not familiar with these operating instructions should not use this Turbotrimmer.

GB

→ Please keep these operating instructions in a safe place.

Contents

1. Where to Use Your GARDENA Turbotrimmer	9
2. For Your Safety	9
3. Operation	10
4. Maintenance	12
5. Trouble-Shooting	13
6. Storage	13
7. Accessories	14
8. Technical Data	14
9. Service	14

1. Where to Use Your GARDENA Turbotrimmer

Proper use

The GARDENA Turbotrimmer is designed for trimming and cutting areas of grass and lawns in private house and hobby gardens. The Turbotrimmer must not be used in public facilities, parks, sports grounds, next to roads or in agriculture or forestry.

Please note



For safety reasons, the GARDENA Turbotrimmer must not be used for hedge trimming or for shredding for composting.

2. For Your Safety

→ Please read the notes on safety on the Turbotrimmer.



Caution!
→ Always read the operating instructions before using your Turbotrimmer.



Danger!
Risk of electric shock!
→ Keep your Turbotrimmer away from water and rain!



Danger! Risk of injury to other people!

→ Keep other people out of the area where you are working.



Danger! Tool does not stop immediately when turned off!
→ Keep your hands and feet out of the area where you are working until the cutting filament is stationary!



Danger!
Risk of injury to eyes!
→ Always wear eye protection!

Check your Turbotrimmer before each use

- Always visually inspect your Turbotrimmer before each use.
- Check that the ventilation slots are not obstructed in any way.
- Do not use your Turbotrimmer if the safety devices (push button, safety cover) and/or the filament cassette are damaged or worn.
- Never bypass the safety devices.
- Inspect the area to be cut before you begin work. Remove any foreign objects (such as stones). Look out for foreign objects (such as stones) while you are working.
- If you should come across an obstacle while cutting, turn off the Turbotrimmer. Remove the object and check the Turbotrimmer for any damage. If necessary have your Turbotrimmer repaired.

Use / responsibility

The Turbotrimmer can cause serious injuries.

- Use the Turbotrimmer only for the purpose specified in these operating instructions.

You are responsible for the safety in the area where you are working.

- Ensure that there are no other people (especially children) or animals within or near the area where you are working.
- Never use the Turbotrimmer if the safety devices are damaged or defective.

Unplug the mains plug after use and check your Turbotrimmer, especially the filament cassette, regularly for damage. Have your Turbotrimmer repaired and/or replace the filament cassette if necessary.

- Always wear an eye shield or safety goggles!
- Wear sturdy shoes and long trousers to protect your legs. Keep your fingers and feet away from the cutting filament – above all when starting work.
- Always ensure that you have a secure foothold whilst working.

- Keep the extension cable away from the area you are cutting.
- Take extra care when walking backwards. You may stumble!
- Only work in the daylight or when visibility is good.

Interrupting work

Never leave the Turbotrimmer unattended where you are working.

- If you stop work, unplug the mains plug and store your Turbotrimmer in a safe place.
- If you stop work in order to move to another part of the garden, always switch off the Turbotrimmer, wait until the tool stops and then unplug the mains plug.

Familiarise yourself with the surroundings

- Familiarise yourself with the surroundings and look out for possible dangers which you may not hear due to machine noise.
- Never use the Turbotrimmer when it is raining or in damp, wet areas.
- Do not operate your Turbotrimmer directly next to swimming pools or garden ponds.

Electrical safety

Check the power cord regularly for damage and signs of wear and tear.

Do not use your Turbotrimmer if the power cord is damaged.

- If the mains cord or extension cable is damaged while you are working, unplug the mains plug immediately.
- Do not touch the cable until the mains plug is switched off.

The socket of the extension cable you are using must be waterproof.

- Only use permitted extension cables.
- Ask your electrician.

For all portable units that are operated outdoors we recommend using a fault circuit breaker.

In Switzerland the use of a residual-current device is obligatory.

3. Operation


Risk of injury!




Risk of injury if the Turbotrimmer does not switch off when you release the start button.

- Never bypass the safety devices (by binding the start button to the handle, for example).

Connecting the Turbotrimmer:

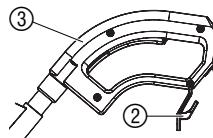


Setting the Turbotrimmer to the working position:

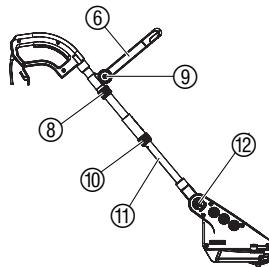

1. Push the extension cable (1) into the cable lock (2) on the handle (3).

2. Plug the plug (4) of the Turbotrimmer into the socket (5) of the extension cable.

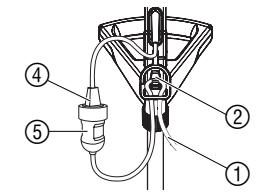

Working position:

Position the additional handle (6) so that the cutting head (7) is tilted slightly forward when you hold the Turbotrimmer in the working position.

1. Unscrew the tightening nut (8), move the additional handle (6) to the correct position and tighten the nut (8) by hand.


2. Unscrew the adjusting nut (9), set the additional handle (6) to the correct angle and tighten the adjusting nut (9) by hand.

3. Unscrew the tightening nut (10), adjust the handle (11) to the correct length and tighten the nut (10) by hand.


4. Press and hold down the adjusting button (12), set the cutting head (7) to the correct angle, then release the adjusting button (12).

1. Press the start button (13) on the handle (3). *The Turbotrimmer starts.*


2. Release the start button (13) on the handle (3). *The Turbotrimmer switches off.*

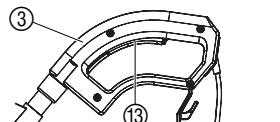

Starting your Turbotrimmer:

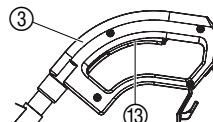

Trimming along lawn edges and in awkward places:

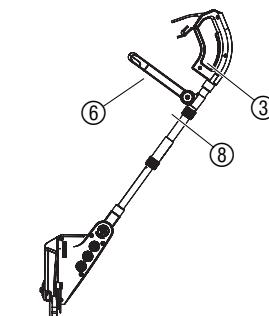


Filament feed (Tip mechanism for automatic filament feed):

1. For vertical cutting, loosen the tightening nut (8), turn the additional handle (6) 180° and then tighten the nut (8) again by hand.


2. Swivel the plant guard (14) backwards to the park position until it clicks into place.

3. Lift the Turbotrimmer by the handle (3) and additional handle (6) and turn to the cutting position.

4. When trimming between paving stones, hold the Turbotrimmer so that the cutting filament moves slightly above the paved ground.

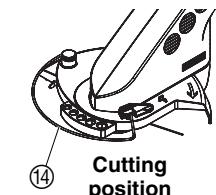


Cutting position

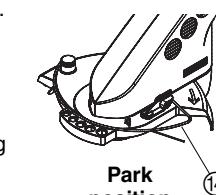


Park position

The filament is lengthened automatically **when the motor is running** using a tip mechanism. A clean cut is only achieved with the maximum filament length.

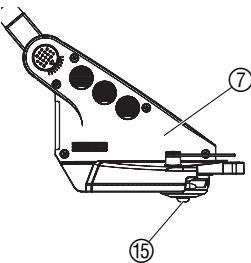

1. Leave the motor running.
2. Hold the cutting head (7) parallel to the ground and tap the filament cassette (15) of the Turbotrimmer on the ground several times in succession (approx. 3 times) (avoid applying sustained pressure to the Turbotrimmer).

The filament is lengthened automatically.
Listen for the audible switching action.
The filament limiter (16) adjusts the filament to the correct length.

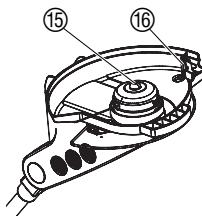

4. Maintenance

Risk of injury!



There is a risk of injury from the cutting filament!

→ Always unplug the mains plug of the Turbotrimmer before carrying out maintenance work!

Risk of injury!




Risk of injury and risk of damage to property!

→ Never clean the Turbotrimmer under running water or with a water jet (in particular a high pressure water jet).

Cleaning the cover and ventilation slots:

The ventilation slots must always be free of dirt.


→ Remove any grass and dirt from the cover (17) and ventilation slots (18) after each use.

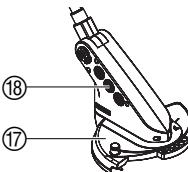

Replacing the filament cassette:

Risk of injury!

→ Never use metallic cutting elements or replacement parts and accessories not provided by GARDENA.

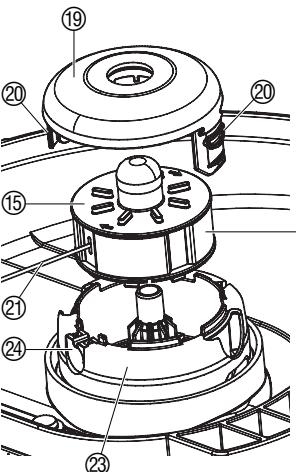

Only use original GARDENA Filament Cassettes. You can order Replacement Filament Cassettes from your GARDENA dealer or directly from the GARDENA Customer Service.

- Filament Cassette for Turbotrimmer powerCut: Art. No. 5367-20
- 1. Unplug the mains plug.
- 2. Turn over the Turbotrimmer and rest it on the rubber buffer of the handle.
- 3. Release the cassette cover (19) by pressing both locking clips (20) and remove the cover.
- 4. Remove the filament cassette (15).
- 5. Remove any dirt.
- 6. Pull approximately 5 cm of the filament (21) out of the new filament cassette (15) through the hole in the plastic ring (22).
- 7. Insert the filament cassette (15) in the filament cassette holder (23) so that the filament (21) is inside the metal case (24).
- 8. Fit the cassette cover (19) on the filament cassette holder (23) so that you hear both locking clips (20) click into place.

When replacing the cover, ensure that the filament is inside the metal case and is not trapped.
→ If the cassette cover (19) cannot be touched down, turn the filament cassette (15) to and fro, until the filament cassette (15) is completely in the filament cassette holder (23).

5. Trouble-Shooting

Risk of injury!






Risk of injury from the cutting filament!

→ Always unplug the mains plug of the Turbotrimmer before troubleshooting.

If a filament is drawn into the filament cassette you can pull it out again as described below.

Pulling the filament out of the filament cassette:

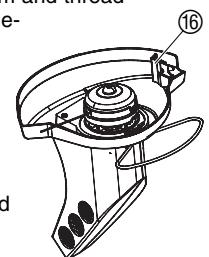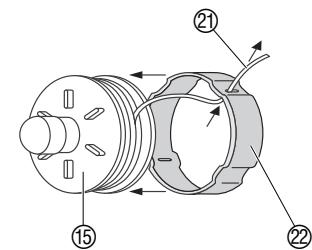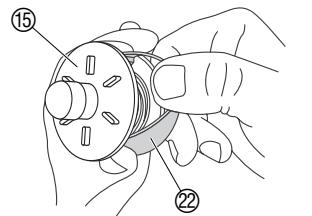

Fault

The Turbotrimmer no longer cuts.

Possible cause

Filament worn or too short.

Remedy

→ Lengthen the filament – see 3. Operation “Filament feed (Tip mechanism for automatic filament feed)”.

Filament cassette empty.

→ Replace the filament cassette – see 4. Maintenance “Replacing the filament cassette”.

Filament drawn into the cassette or stuck together.

→ Pull the filament out of the filament cassette (see above).

If you have any other problems please contact the GARDENA Customer Service.

6. Storage

The Turbotrimmer must be stored out of the reach of children.

→ Store your Turbotrimmer in a dry place where it is protected from frost.

Recommended storage:

We recommend that you hang your Turbotrimmer from the cable lock. Hanging storage helps avoid unnecessary stress on the cutting head.

7. Accessories

GARDENA Additional wheels for powerCut	Support the Trimmer from below for effortless trimming.	Art. No. 2410-20
---	---	-------------------------

8. Technical Data

powerCut (Art. 2404)	
Motor power consumption	500 W
Mains voltage / mains frequency	230 V / 50-60 Hz
Filament thickness	2 mm
Cutting width	270 mm
Filament supply	4.0 m
Filament feed	Tip mechanism
Weight	2.8 kg
Rpm of filament cassette	9,600 rpm
Work area related emission characteristic value $L_{pA}^1)$	85 dB (A)
Noise level $L_{WA}^2)$	95 dB (A)
Hand/arm vibration $a_{vhw}^1)$	< 2.5 m/s ²

Measuring method according to 1) EN 786 2) directive 2000/14/EC

9. Service**Warranty**

GARDENA guarantees this product for 2 years (from date of purchase). This guarantee covers all serious defects of the unit that can be proved to be material or manufacturing faults. Under warranty we will either replace the unit or repair it free of charge if the following conditions apply:

- The unit must have been handled properly and in keeping with the requirements of the operating instructions.
- Neither the purchaser or a non-authorised third party have attempted to repair the unit.

The filament cassette and cassette cover are wearing parts and are therefore not covered by the warranty.

This manufacturer's guarantee does not affect the user's existing warranty claims against the dealer/seller.

If a fault occurs with your Turbotrimmer, please return the faulty unit together with a copy of the receipt and a description of the fault, with postage paid to one of the GARDENA Service Centres listed on the back of these operating instructions.

D Produkthaftung	Wir weisen ausdrücklich darauf hin, dass wir nach dem Produkthaftungsgesetz nicht für durch unsere Geräte hervorgerufene Schäden einzustehen haben, sofern diese durch unsachgemäße Reparatur verursacht oder bei einem Teileaustausch nicht unsere Original GARDENA Teile oder von uns freigegebene Teile verwendet werden und die Reparatur nicht vom GARDENA Service oder dem autorisierten Fachmann durchgeführt wird. Entsprechendes gilt für Ergänzungsteile und Zubehör.
GB Product Liability	We expressly point out that, in accordance with the product liability law, we are not liable for any damage caused by our units if it is due to improper repair or if parts exchanged are not original GARDENA parts or parts approved by us, and, if the repairs were not carried out by a GARDENA Service Centre or an authorised specialist. The same applies to spare parts and accessories.
F Responsabilité	Nous vous signalons expressément que GARDENA n'est pas responsable des dommages causés par ses appareils, dans la mesure où ces dommages seraient causés suite à une réparation non conforme, dans la mesure où, lors d'un échange de pièces, les pièces d'origine GARDENA n'auraient pas été utilisées, ou si la réparation n'a pas été effectuée par le Service Après-Vente GARDENA ou l'un des Centres SAV agréés GARDENA. Ceci est également valable pour tout ajout de pièces et d'accessoires autres que ceux préconisés par GARDENA.
NL Productaansprakelijheid	Wij wijzen er nadrukkelijk op, dat wij op grond van de wet aansprakelijkheid voor producten niet aansprakelijk zijn voor schade ontstaan door onze apparaten, indien deze door onvakkundige reparatie veroorzaakt zijn, of er bij het uitwisselen van onderdelen geen gebruik gemaakt werd van onze originele GARDENA onderdelen of door ons vrijgegeven onderdelen en de reparatie niet door de GARDENA technische dienst of de bevoegde vakman uitgevoerd werd. Ditzelfde geldt voor extra-onderdelen en accessoires.
S Produktansvar	Tillverkaren är inte ansvarig för skada som orsakats av produkten om skadan beror på att produkten har reparerats felaktigt eller om, vid reparation eller utbytte, andra än Original GARDENA reservdelar har använts. Samma sak gäller för kompletteringsdelar och tillbehör.
I Responsabilità del prodotto	Si rende espressamente noto che, conformemente alla legislazione sulla responsabilità del prodotto, non si risponde di danni causati da nostri articoli se originati da riparazioni eseguite non correttamente o da sostituzioni di parti effettuate con materiale non originale GARDENA o comunque da noi non approvato e, in ogni caso, qualora l'intervento non venga eseguito da un centro assistenza GARDENA o da personale specializzato autorizzato. Lo stesso vale per le parti complementari e gli accessori.
E Responsabilidad de productos	Advertimos que conforme a la ley de responsabilidad de productos no nos responsabilizamos de daños causados por nuestros aparatos, siempre y cuando dichos daños hayan sido originados por arreglos o reparaciones indebidas, por recambios con piezas que no sean piezas originales GARDENA o bien piezas autorizadas por nosotros, así como en aquellos casos en que la reparación no haya sido efectuada por un Servicio Técnico GARDENA o por un técnico autorizado. Lo mismo es aplicable para las piezas complementarias y accesorios.
P Responsabilidade sobre o produto	Queremos salientar que segundo a lei da responsabilidade do fabricante, nós não nos responsabilizaremos por danos causados pelo nosso equipamento, quando estes ocorram em decorrência de reparações inadequadas ou da substituição de peças por peças não originais da GARDENA, ou peças não autorizadas. A responsabilidade tornar-se-á nula também depois de reparações realizadas por oficinas não autorizadas pela GARDENA. Esta restrição valerá também para peças adicionais e acessórios.
DK Produktansvar	Vi gør udtrykkeligt opmærksom på at i henhold til produktansvarsloven er vi ikke ansvarlige for skader forårsaget af vores udstyr, hvis det skyldes uautoriserede reparationer eller hvis dele er skiftet ud og der ikke er anvendt originale GARDENA dele eller dele godkendt af os, eller hvis reparationerne ikke er udført af GARDENA-service eller en autoriseret fagmand. Det samme gælder for ekstra udstyr og tilbehør.

D EU-Konformitätserklärung MaschinenVerordnung (9. GSGVO) / EMVG / Niedersp. RL	Bezeichnung des Gerätes: Turbotrimmer Description of the unit: Turbotrimmer Désignation du matériel : Turbofil Omschrijving van het apparaat: Turbotrimmer Produktbeskrivning: Turbotrimmer Descrizione del prodotto: Turbotrimmer Descripción de la mercancía: Turbotrimmer Descrição do aparelho: Turbotrimmer Beskrivelse af enhederne: Turbotrimmer
GB EU Certificate of Conformity	Typ: Art.-Nr.: Type: Art. No.: Type : Référence : Typ: Art. nr.: Typ: powerCut Art.nr. : 2404 Modell: Art. : Tipo: Art. N°: Tipo: Art. N°: Type: Varenr. :
F Certificat de conformité aux directives européennes	EU-Richtlinien: 98/37/EC EU directives: 98/37/EC Directives européennes : 89/336/EC EU-richtlijnen: 73/23/EC EU direktiv: 73/23/EC Directive UE: 93/68/EC Directrices da UE: 2000/14/EC EU Retningslinier: 2000/14/EC
NL EU-overeenstemmingsverklaring	Schall-Leistungspegel: gemessen / garantiert Noise level: measured / guaranteed Puissance acoustique : mesurée / garantie Geluidsniveau: gemeten / gegarandeerd Ljudnivå: uppmätt / garanterad Livello rumorosità: testato / garantito Nivel sonoro: medido / garantizado Nível de ruído: afmålt / garanti
S EU Tillverkarintyg	Anbringungsjahr der CE-Kennzeichnung: 95 dB (A) / 96 dB (A) Year of CE marking: Date d'apposition du marquage CE : Installatiejaar van de CE-aanduiding: CE-Märkningsår: 2002 Anno di rilascio della certificazione CE: Colocación del distintivo CE: Ano de marcação pela CE: CE-Mærkningsår:
I Dichiaraione di conformità alle norme UE	El que subscribe GARDENA International GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, declara que la presente mercancía, objeto de la presente declaración, cumple con todas las normas de la UE, en lo que a normas técnicas, de homologación y de seguridad se refiere. En caso de realizar cualquier modificación en la presente mercancía sin nuestra previa autorización, esta declaración pierde su validez.
E Declaración de conformidad de la UE	Os abaixo mencionados GARDENA International GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm, declara que la presente mercancía, objeto de la presente declaración, cumple con todas las normas de la UE, en lo que a normas técnicas, de homologación y de seguridad se refiere. En caso de realizar cualquier modificación en la presente mercancía sin nuestra previa autorización, esta declaración pierde su validez.
P Certificado de conformidade da UE	Ulm, den 09.07.2002 Ulm, 09.07.2002 Fait à Ulm, le 09.07.2002 Ulm, 09-07-2002 Ulm, 2002.07.09. Ulm, 09.07.2002 Ulm, 09.07.2002 Ulm, 09.07.2002 Ulm, 09.07.2002 Ulm, 09.07.2002 Thomas Heinl Technische Leitung Technical Dept. Manager Direction technique Hoofd technische dienst Technical Director Direzione Tecnica Dirección Técnica Director Técnico Teknisk direktør
DK EU Overensstemmelse certifikat	Undertegnede GARDENA International GmbH, Hans-Lorenser-Str. 40, D-89079 Ulm bekræfter hermed, at enhederne listet herunder, ved afsendelse fra fabrikken, er i overensstemmelse med harmoniserede EU retningslinier, EU sikkerhedsstandarder og produktspecifikationsstandarder. Dette certifikat træder ud af kraft hvis enhederne er ændret uden vor godkendelse.

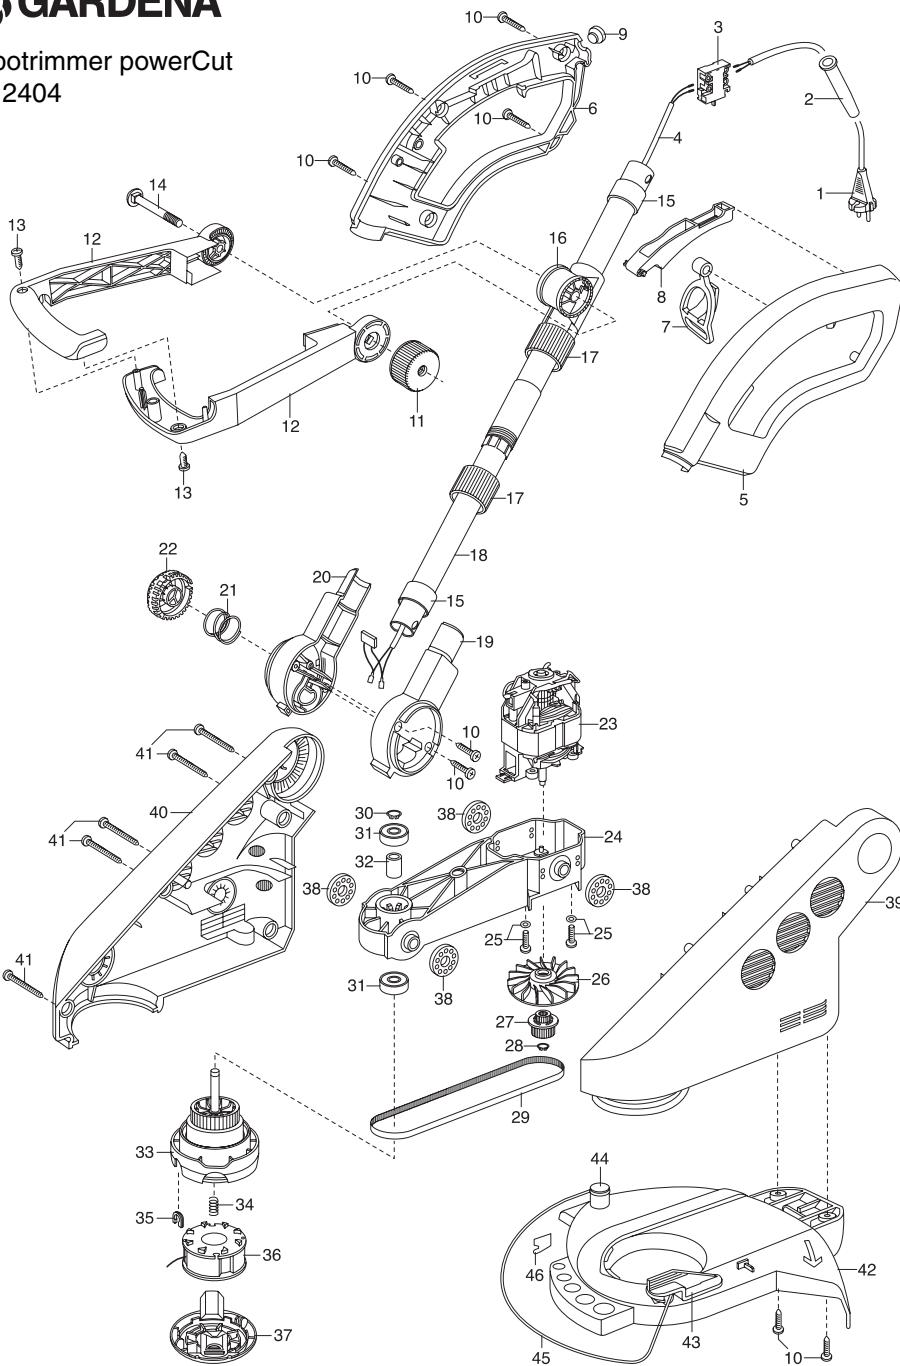
Turbotrimmer powerCut
Art. 2404


Bild Nr. Picture No.	Ersatzteil-Nr. Spare Part No.	Bezeichnung Turbotrimmer powerCut Art.-Nr. 2404	Description
1	2390-00.074.00 #	Netzkabel, vollst.	Mains lead, cpl.
2	2300-00.600.21	Knickschutzzüle	Bending safety socket
3	2402-00.600.52 #	Schalter	Switch
4		Spiralkabel	Helix cable
5	2402-00.600.16	Griff, links	Handle, left
6	2402-00.600.21	Griff, rechts	Handle, right
7	2402-00.600.31	Kabelzugentlastung	Cable pull relief
8	2402-00.600.26	Taste	Button
9	2390-00.070.16	Zargenpuffer	Border buffer
10	2546-00.600.28	Blechschraube 4,2x19-C-H	Sheet metal screw 4,2x19-C-H
11	2404-00.610.16	Spannmutter	Clamping nut
12	2404-00.610.01	Zusatzgriff, gross	Extension handle, big
13	410-00.000.38	Blechschraube 4,2x19-C-H	Sheet metal screw 4,2x19-C-H
14	2404-00.610.21	Flachrundschraube M8x70	Truss-head screw M8x70
15	2404-00.600.88	Kappe	Cap
16		Stellteil	Operating element
17	2404-00.610.11	Klemmutter	Lock nut
18	2404-00.600.16	Teleskopstiel, kpl.	Telescope handle, cpl.
19		Gelenk, links	Joint, left
20	2404-00.600.21	Gelenk, rechts	Joint, right
21	2179-00.600.65	Druckfeder	Pressure spring
22	2404-00.600.26	Rastknopf	Rest button
23	2404-00.600.76 #	Elektromotor	Electric motor
24		Traverse	Cross arm
25	2404-00.600.86	Kombischraube M4x12	Screw M4x12
26	2404-00.600.66	Lüfter	Ventilator
27	2404-00.600.77	Zahnriemenscheibe	Tooth lock washer
28	2404-00.600.87	Sicherungsring	Locking ring
29	2404-00.600.78	Zahnriemen	Toothed belt
30	4062-00.630.11	Sicherungsring 8x0,8	Locking ring 8x0,8
31	2548-00.612.05	Kugellager	Ball bearing
31/33-35	2404-00.788.00	Spulenhalter, kpl.	Reel holder, cpl.
32	4062-00.650.11	Hülse	Bush
34	2555-00.600.73	Druckfeder	Pressure spring
35	2402-00.600.57	Hülse für Schneidkopf	Bush
36	2404-00.640.00	Spule, kpl. (Art. 5367-20)	Reel, cpl. (Art. 5367-20)
37	2402-00.600.41	Deckel, rot	Cover, red
38	2404-00.600.98	Gummilager	Rubber bearing
39	2404-00.600.01	Gehäuse, links	Case, left
40	2404-00.700.06	Gehäuse, rechts	Case, right
41	1182-00.600.02	Blechschraube 4,2x38	Sheet metal screw 4,2x38
42-46	2404-00.710.00	Abdeckung, kpl.	Covering, cpl.
46	2555-00.600.23	Messer	Blade

Achtung!

Die mit # gekennzeichneten Ersatzteile dürfen ausschliesslich von einer Elektrofachkraft nach Vorgabe des Herstellers unter Berücksichtigung der gesetzlichen Vorschriften ersetzt werden.

Attention!

Those with # of marked spare parts may be replaced exclusively from an electrical specialist to default of the manufacturer with consideration of the laws.

Deutschland GARDENA International GmbH Service Center Hans-Lorenser-Str. 40 89079 Ulm Produktfragen: (07 31) 490-123 Reparaturen: (07 31) 490-290	Finland Habitec Oy Martinkyläntie 52 01720 Vantaa	Norway GARDENA Norge A/S Postboks 214 2013 Skjetten
Argentina Argensem S.A. Calle Colonia Japonesa s/n (1625) Loma Verde - Buenos Aires	France GARDENA France Service Après-Vente BP 50080 95948 ROISSY CDG Cedex	Poland GARDENA Polska Sp. z o.o. Szymanów 9 d 05-532 Baniocha
Australia NYLEX Consumer Division 76-88 Mills Road P.O. Box 722 Braeside 3195 Melbourne, Victoria	Great Britain GARDENA UK Ltd. 27-28 Brenkley Way Blizard Business Park Seaton Burn Newcastle upon Tyne NE13 6DS	Portugal GARDENA Portugal, Lda. Recta da Granja do Marquês Edif. GARDENA Algueirão 2725-596 Mem Martins
Austria GARDENA Österreich Ges. m.b.H. Stettnerweg 11-15 2100 Korneuburg	Greece Agrokip G. Psomadopoulos & Co. 33 A, Ifestou str. – 194 00 Industrial Area Koropi Athens	Russia / Россия АО АМИДА ТТЦ ул. Мосфильмовская 66 117330 Москва
Belgium MARKT (Belgium) NV/SA Sterrebeekstraat 163 1930 Zaventem	Hungary GARDENA Magyarország Kft. Késmárk utca 22 1158 Budapest	Singapore Hy - Ray Enterprises Block 1002 Toa Payoh Industrial Park #07-1433/1435/1451 Singapore 319074
Brazil RGS Comercial Ltda Av. Marginal do Rio Pinheiros, 5200 Edificio Montreal - Bloco e - Terreo 05693-000 - Sao Paulo - SP	Iceland Heimilistaeki hf Saetun 8 P.O. Box 5340 125 Reykjavik	Slowenia / Croatia Silk d.o.o. Trgovina Brodišće 15 1236 Trzin
Bulgaria / България ДЕНЕКС ООД Бул. "Г.М.Димитров" 16 ет.4 София 1797	Republic of Ireland Michael McLoughlin & Sons Hardware Limited Long Mile Road Dublin 12	South Africa GARDENA South Africa (Pty) Ltd. P.O. Box 11534 Vorna Valley 1686
Canada GARDENA Canada Ltd. 100 Summerlea Road Brampton, Ontario Canada L6T 4X3	Italy GARDENA Italia S.p.A. Via Donizetti 22 20020 Lainate (Mi)	Spain GARDENA IBÉRICA S.L.U. C/ Basauri, nº 6 La Florida 28023 Madrid
Chile Antonio Martinic Y CIA. LTDA. Gilberto Fuenzalida 185 Loc. Las Condes - Santiago de Chile	Japan KAKUDAI Mfg. Co. Ltd. 1-4-4, Itachibori Nishi-ku Osaka 550	Sweden GARDENA Norden AB Box 9003 20039 Malmö
Costa Rica Compania Exim Euroiberamericana S.A. Av. 12 bis Calle 16 y 18, Bodegas Keith y Ramirez San José	Luxembourg Magasins Jules Neuberg Grand Rue 30 Case Postale No. 12 Luxembourg 2010	Switzerland GARDENA AG Bitzberg 1 8184 Bachenbülach
Cyprus FARMOKIPIKI LTD P.O. Box 7098 74, Digeni Akrita Ave. 1641 Nicosia	Netherlands GARDENA Nederland B.V. Postbus 50176 1305 AD ALMERE	Ukraine / Украина АОЗТ АЛЬЦЕСТ ул. Гайдара 50 г. Киев 01033
Czech Republic GARDENA spol. s.r.o. Řípská 20a, č.p. 1153 62700 Brno	Neth. Antilles Jonka Enterprises N.V. Sta. Rosa Weg 196 P.O. Box 8200 Curaçao	Turkey GARDENA/Dost Diş Ticaret Mümessilik A.Ş. Yeşilbağlar Mah. Başkent Cad. No. 26 Pendik - İstanbul
Denmark GARDENA Danmark A/S Naverland 8 2600 Glostrup	New Zealand NYLEX New Zealand Limited Private Bag 94001 South Auckland Mail Centre 10 Offenhauser Drive East Tamaki, Manukau	USA GARDENA 3085 Shawnee Drive Winchester, VA 22604 2404-20.960.04/0031 © GARDENA Manufacturing GmbH D-89070 Ulm http://www.gardena.com