

GARMIN<sup>®</sup>

# nüvi<sup>®</sup> 2575R/ 2575 quick start manual



## Connecting the Device to Vehicle Power

### **WARNING**

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.

Charge your device before using it on battery power.

1. Fit the bottom of your device into the mount.
2. Tilt your device back until it snaps into place.





3. Plug the vehicle power cable  into the mini-USB connector  on the mount.



4. Plug the other end of the vehicle power cable into a power outlet in your vehicle.

5. If you are using a traffic receiver, connect the external antenna to the traffic receiver and secure it to the windshield using the suction cups.
6. There is an optional choice for video in connector ②, connecting rear view camera and driving recorder connector ③.

After the device has been connected to vehicle power, the following occurs.

- The device turns on.
- The device acquires satellite signals. When at least one of the  bars is green, your device has acquired satellite signals.
- **NOTE:** The device may need a clear view of the sky to acquire satellite signals.
- The device charges as you drive.  in the status bar indicates the status of the internal battery.

## Mounting Your Device

1. Remove the clear plastic from the suction cup.
2. Clean and dry your windshield and the suction cup with a lint-free cloth.
3. Press the suction cup to the windshield.
4. While pressing, flip the lever back toward the windshield.
5. Snap the mount ① onto the suction cup arm ②.



## Device Overview



①	Power key
②	microSD™ card slot
③	Analogue television receiver
④	External TV antenna connector

### Using the Power Key

1. Press and quickly release the **Power** key to view additional options.
2. Select an option:
  - To adjust screen brightness, touch and drag the scroll bar.


- To turn off your device, touch **Off**.
- To reset the device, hold the **Power** key for 10 seconds.
- To exit the menu, press and release the **Power** key.

## About Points of Interest

The detailed maps loaded in your device contain points of interest, such as restaurants, hotels, and auto services.

### Finding a Point of Interest by Category

1. From the Main menu, touch **Where To? > Points of Interest**.
2. Select a category.
3. If necessary, select a subcategory.
4. Select a destination.
5. Touch **Go!**.

Touch  > **Save** on this page to save the location to a Favorites folder on the device. Use the Favorites folder to save the location of your workplace, home, and other common destinations.

6. If necessary, select an option:
- Touch **Drive** to calculate a route you will navigate by driving.
  - Touch **Walk** to calculate a route you will navigate by walking.
  - Touch **Public Transit** to calculate a route that combines public transit and walking.

**NOTE:** You must have cityXplorer™ maps loaded to navigate using public transit. Go to [www.garmin.com](http://www.garmin.com) to purchase cityXplorer maps.

## Using the Main Menu



- Touch ① to select a transportation mode.
- Touch ② to find a destination.
- Touch ③ to view the map.
- Touch ④ to stop a route.
- Touch ⑤ to detour a route.
- Touch ⑥ to watch TV
- Touch ⑦ to adjust the volume.
- Touch ⑧ to open the menu of tools and settings.

 
## Your Route on the Map

### NOTICE

The speed limit icon feature is for information only and does not replace the driver's responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin will not be responsible for any traffic fines or citations that you may receive for failing to follow all applicable traffic laws and signs.

Your route is marked with a magenta line on the map. If you depart from the original route, your device recalculates the route. A speed limit icon could appear as you travel on major roadways.

## Using the Map Functions

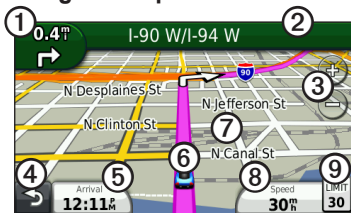

- Touch **1** to view the next turn. If a view of a junction exists, the junction view appears.
- Touch **2** to view the turn list.
- Touch **3** to zoom in and out.
- Touch **4** to return to the Main menu.
- Touch and hold **4** from any screen to return to the Main menu.
- Touch **5** to change the data field.
- Touch **6** to view the Where Am I? page.

- Touch and drag ⑦ to view a different area of the map.
- Touch ⑧ to view trip information.
- Touch ⑨ to change the speed limit if the speed limit shown on the map is incorrect.



## Portable Entertainment

nuvi 2575 is not only a GPS navigator. It builds in Analogue TV function, providing you an ultimate recreational experience. You'll never feel bored on the road.

## Analogue TV

Touch **TV** at main menu to enter television mode.



1. Exit menu: back to navigation page but not stop playing TV
2. Select region: select your current location
3. Mute button: cease volume  
Touch 3, when showing  means mute. Touch 3 again, showing  means volume on.
4. Volume down: lower down volume

5. Volume up: raise volume
6. Channel down
7. Channel up  
Touch ◀ and ▶ to change channel
8. TV signal: showing analogue TV signal strength
9. Battery: showing battery power remaining
10. Close TV function: close TV function and back to navigation page
11. Exit to navigation: go back to navigation page

## About Traffic

### **NOTICE**

Garmin is not responsible for the accuracy or timeliness of the traffic information.


---

The FM Traffic Message Channel (TMC) traffic subscription is automatically enabled and does not require an additional subscription purchase to activate. The FM TMC traffic receiver is available in retail shops

For information about traffic receivers and coverage areas, go to [www.garmin.com/traffic](http://www.garmin.com/traffic).




## Manually Avoiding Traffic on Your Route

1. From the map, touch .
2. Touch **Traffic On Route**.
3. If necessary, touch the arrows to view other traffic delays on your route.
4. Touch **Avoid**.

## Viewing the Traffic Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

1. From the map, touch .
2. Touch **Traffic Map** to view the traffic incidents on a map.

## Driving Recorder (Optional Item)

An optional subscription, Driving Recorder, is available at retail shop. Contact your local distributor for more information.

 
Touch **Tool**→ **Driving Recorder** to start.




Record the traffic or scenery while driving.



1. Touch ① to go back to menu page
2. Touch ② for Video Quality, Format and Software Update setting.

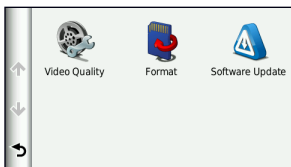


 System default provides Video Quality setup in High (pixel 1280x720) and Medium (pixel 640x480) to choose.

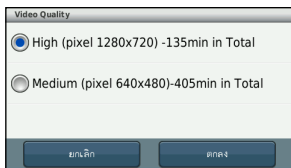


3. Touch ③ for playback
- 3-1 Category

 You can list recorded file by All, Single Date or Protected.

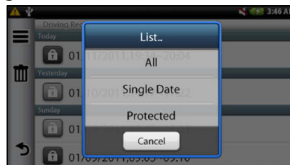





### 3-2 Delete record

Select the file you wish to delete, touch  and delete.



### 3-3 Changing Status from Play and Pause

Touch  to pause and touch  to play.

4. Touch ④ to choose recording voice or not.  means not to record voice;  means to record voice.
5. Touch ⑤ to save the file and the current recorded file will not be rewritten.
6. When ⑥ showing on the screen, represents system starts video recording.

## Hands-free Features

### Pairing Your Phone

Hands-free calling is available on some nüvi models. Before you can pair, your phone and the device must be turned on and within 33 ft. (10 m) of each other.

1. Enable the Bluetooth® component on your phone.
2. Touch **Tools > Settings > Bluetooth.**
3. Touch **Bluetooth > Enabled > Save.**
4. Touch **Add Phone > OK.**
5. Select your phone, and touch **OK.**
6. Enter the Bluetooth PIN (**1234**) for your device in your phone.

## Power Cables

Your device can be powered by the following ways:

- Vehicle power cable
- USB cable (optional accessory)
- AC adapter (optional accessory)

Federal Communications Commission (FCC)  
Statement

15.21

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

15.105(b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the

instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) this device may not cause harmful interference, and
- 2) this device must accept any interference received, including interference that may cause undesired operation of the device.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Garmin®, the Garmin logo, and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. cityXplorer™, myTrends™, and nüMaps Guarantee™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Mac® is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. microSD™ is a trademark of SD-3C, LLC.



© 2011 Garmin Ltd. or its subsidiaries