

GARMIN.

**GTU 10 Owner's
Manual**

DRAFT

© 2010 Garmin Ltd. or its subsidiaries

All rights reserved. Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express prior written consent of Garmin. Garmin hereby grants permission to download a single copy of this manual onto a hard drive or other electronic storage medium to be viewed and to print one copy of this manual or of any revision hereto, provided that such electronic or printed copy of this manual must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Information in this document is subject to change without notice. Garmin reserves the right to change or improve its products and to make changes in the content without obligation to notify any person or organization of such changes or improvements. Visit the Garmin Web site (www.garmin.com) for current updates and supplemental information concerning the use and operation of this and other Garmin products.

Garmin®, the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.

Getting Started

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

When using the device the first time, complete these tasks.

1. Charge the device (page 1).
2. Connect the device to your computer.
3. Register and activate your device.
4. Set up geofences.
5. Turn on the device.
6. Place the device.

Connecting to Your Computer

NOTICE

To prevent corrosion, thoroughly dry the contacts and the surrounding area before charging or connecting to a computer.

The device will not charge when the battery is outside the temperature range from 32°F to 113°F (0°C to 45°C).

1. Plug the USB end of the cable into the USB port on your computer.
2. Plug the mini-USB end of the cable into the device.

Activating and Registering Your Device

You must activate and register your device before you can use it.

1. Connect the device to your computer (XX).
2. Go to www.my.garmin.com.
3. Follow the onscreen instructions to set up an account and register your device.



Geofences

A geofence is a safe area you set. You can set alerts to notify you when the device is outside of your geofence. To set alerts, go to www.my.garmin.com.

Turning On the Device

Press and hold .

Putting the Device on Your Dog

NOTE: This unit should only be used with the provided case.

1. Turn on the device.
2. Place the device in the case.
3. Use the velcro strap to thread the collar through the case and secure.
4. Attach the collar to your pet.

Attaching the Device Using the Carabiner Clip

NOTE: Do not use the carabiner clip to attach the device to your pet.

1. XXX
2. XXX

3.XXX

Device Modes

Continuous Tracking

Query

Other mode

Tips

Specifications

Battery	675 mAh rechargeable lithium-ion
Battery life	See page 3
Operating temperature range	From -4°F to 140°F (from -20°C to 60°C)
Battery charging temperature range	from 32°F to 113°F (0°C to 45°C)

About the Battery

WARNING

This product contains a lithium-ion battery. See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Battery Life

Battery Life*	Device Use
---------------	------------

*The actual battery life of a fully charged battery depends on how much time you use GPS, the backlight, and power save mode. Exposure to extremely cold temperatures will also reduce battery life.

Power Save

After a period of inactivity, the device goes into power save mode. The device displays the time and date but does not use GPS. You can press **OK** to exit power save mode.

Troubleshooting

Resetting the Device

If the keys or screen stop responding, you may need to reset the device.

1. Press and hold **power** until the screen goes blank.
2. Press and hold **power** until the screen turns on.

Clearing User Data

Press and hold **menu** and **down** simultaneously.

Registering Your Device

Help us better support you by completing our online registration today:

- Go to <http://my.garmin.com>.
- Keep the original sales receipt, or a photocopy, in a safe place.

Getting More Information

You can find more information about this product on the Garmin Web site.

- Go to www.garmin.com/intosports.
- Go to www.garmin.com/learningcenter.
- Go to <http://buy.garmin.com>, or contact your Garmin dealer for information about optional accessories and replacement parts.

Contacting Garmin Product Support

You can contact Garmin Product Support if you have any questions about this product.

- In the USA, go to www.garmin.com/support, or contact Garmin USA by phone at (913) 397.8200 or (800) 800.1020.
- In the UK, contact Garmin (Europe) Ltd. by phone at 0800 2380000.
- In Europe, go to www.garmin.com/support and click **Contact Support** for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241.

Caring for Your Device

NOTICE

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Avoid chemical cleaners and solvents that can damage plastic components.

Cleaning the Device

1. Use a cloth dampened with a mild detergent solution.
2. Wipe it dry.

For the latest free software updates (excluding map data) throughout the life of your Garmin products, visit the Garmin Web site at www.garmin.com.

**GARMIN.**



© 2010 Garmin Ltd. or its subsidiaries

Garmin International, Inc.
1200 East 151st Street, Olathe, Kansas 66062, USA

Garmin (Europe) Ltd.
Liberty House, Hounsdown Business Park, Southampton, Hampshire, SO40 9LR UK

Garmin Corporation
No. 68, Jangshu 2nd Road, Sijhih, Taipei County, Taiwan